



# HI208B INSTRUCTION MANUAL

## Contents

Warnings and Precautions .....	2
Important Safety Instructions.....	3
In the Box & Features.....	4
Powering the Unit .....	4
Changing the Remote Battery & Connecting the Speakers .....	5
Setting the Clock & Tuning the AM/FM Radio .....	6
Connecting to an Audio Player using the Line In Jacks .....	6
Docking an iPod & Playing an iPod.....	7
Locations of Controls & Control Definitions .....	8-11
Service Information.....	12

# Warnings and Precautions

---

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

**WARNING:** Danger of explosion if the remote control’s batteries are incorrectly installed. Replace only with the same or equivalent battery.

**WARNING:** The remote control’s button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

**WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Important Safety Instructions

1. Read Instructions - All the safety and operating instruction should be read before the product is operated.

2. Retain Instructions - The safety and operating instruction should be retained for future reference.

3. Heed Warnings - All warning on the product and in the operating instructions should be adhered to.

4. Follow instructions - All operating and use instructions should be followed.

5. Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6. Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.

7. Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like.

8. Accessories - Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



10. Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.

11. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.

12. Grounding or Polarization - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.


Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

13. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.

14. Protective Attachment Plug - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

15. Outdoor Antenna Grounding - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

See figure:

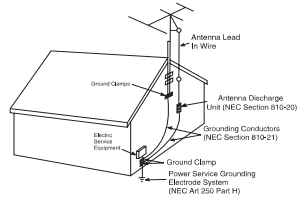

16. Lightning - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

17. Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

18. Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

19. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

20. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged,
- If liquid has been spilled, or objects have fallen into the product,
- If the product has been exposed to rain or water,
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way, and
- If when the product exhibits a distinct change in performance - this indicates a need for service.

22. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

23. Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.


24. Wall or Ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

25. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## In the Box

---

- HI208B
- Remote Control
- Documentation

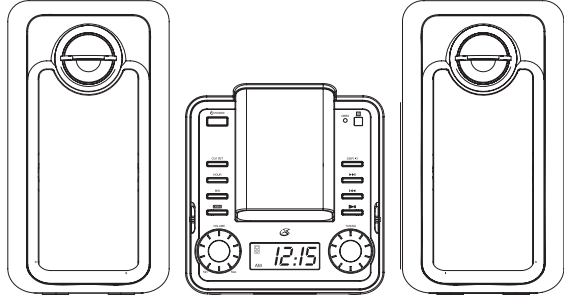

## Features


---

- Certified iPod Connector installed for iPod docking
- Recharge Circuit for iPod/mini/nano/photo/video
- Controls connected iPod players
- AM/FM Radio with Digital Readout
- Rotary Volume Control
- Backlit LCD Display
- Digital Clock
- Dual Speakers
- Line In Jacks
- Remote Control
- AC-Powered

## Powering the Unit

---


Power the unit by connecting it to a standard AC outlet (120V ~ 60Hz) via the attached AC cord.

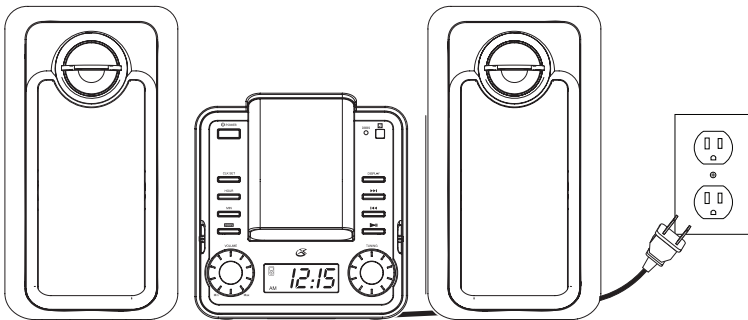

## Changing the Remote Battery

---

**WARNING:** Danger of explosion if the remote control's batteries are incorrectly installed. Replace only with the same or equivalent battery.

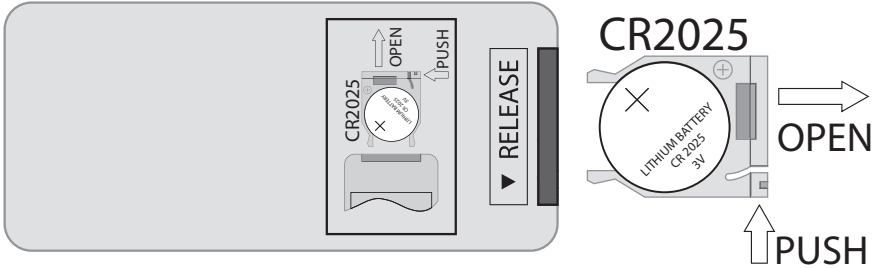


1. Push the Release Button and pull out the Battery Compartment to access the battery.
2. Replace the old battery with an equivalent new battery (CR2025).
3. The positive side of the battery, as indicated by a plus symbol, must be facing up when inserted into the remote.

## Connecting the Speakers

---

1. Connect the external speakers to the unit by plugging the speaker cables into the corresponding speaker jacks on the unit.

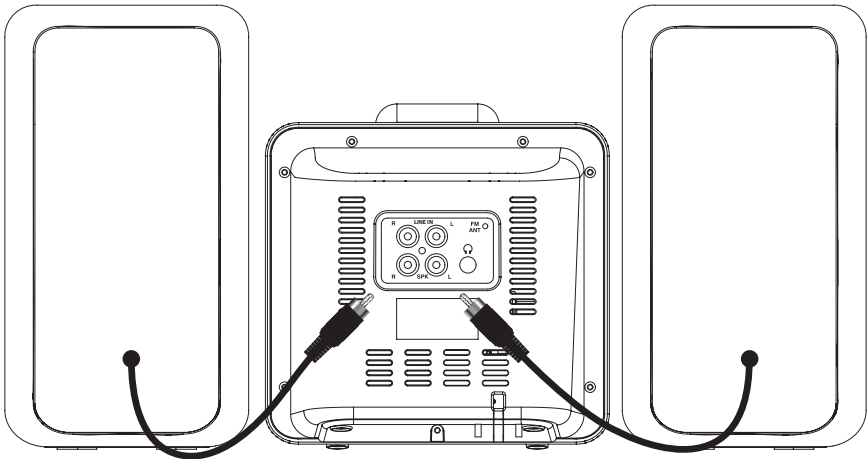

## Setting the Clock

---

1. Turn the unit off by pressing the **Power Button**.
  2. Press and hold the **Clk Set Button**.
  3. While holding the **Clk Set Button**, press the **Hour Button** to adjust the hour and the **Minute Button** to adjust the minute.
  4. Release the **Clk Set Button** to set the time.
- 

## Tuning the AM/FM Radio

---

1. Turn the unit on by pressing the **Power Button**.
  2. Adjust the **Radio/iPod/Line In Switch** to radio mode.
  3. Adjust the **FM/AM Switch** to AM or FM.
  4. Turn the **Tuning Dial** to adjust the AM or FM radio station.
- 

## Connecting to an Audio Player using the Line In Jacks

---

*When connecting two products using an RCA Cable, match the colored ports with the same colored connection. (Red to Red, White to White, and Yellow to Yellow)*

---

1. Plug one end of a Stereo RCA Cable (not included) into the **Line In Jacks** on the unit.
  2. Plug the other end of the Stereo RCA Cable into the audio output/headphone output on an Mp3 Player or Other Audio Source.
  3. Press the **Power Button** to turn the unit on.
  4. Adjust the **Radio/iPod/Line In Switch** to the line in mode.
- 

*Note, an iPod can remain docked and charging while the unit is in line in mode.*

---

5. Audio played from the connected Mp3 Player or Other Audio Source will now be heard on the unit.
- 

*If connecting to the headphone output of an audio source, the source's volume controls may need to be adjusted for optimal sound.*

---

## Docking an iPod

---

1. Locate the numbered *Bracket* that fits the iPod that will be docked.

*Each included Bracket has a number on it, indicating which iPod model that bracket is compatible with. See the separate bracket chart page to identify which bracket is needed.*

 


2. Snap the *Bracket* into place over the iPod connector in the **Docking Station**.

*All Brackets will only fit one way onto the Dock.*

*When inserting an iPod nano (first or second generation), slide the Dock connection on the unit so that it matches the opening on the iPod nano (first or second generation).*

3. Connect the iPod to the iPod connector inside the **Docking Station**.

Once an iPod is connected to the **Docking Station**, the unit will charge the docked iPod.

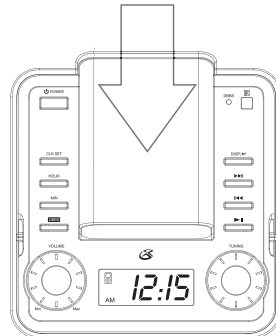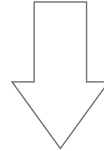
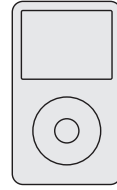


## Playing an iPod

---

1. Dock an iPod to the unit by following the “Docking an iPod” directions.
  2. Turn the unit on by pressing the **Power Button**.
  3. Adjust the **Radio/iPod/Line In Switch** to iPod mode.
  4. Press the **Play/Pause Button** to play the docked iPod.
  5. Press the **Skip/Search Buttons** to skip through tracks on an iPod or search through individual tracks on an iPod.
-

# Locations of Controls

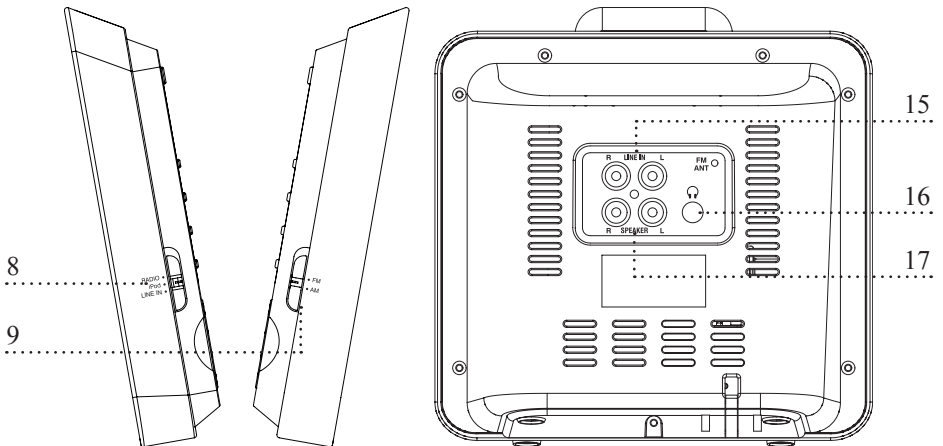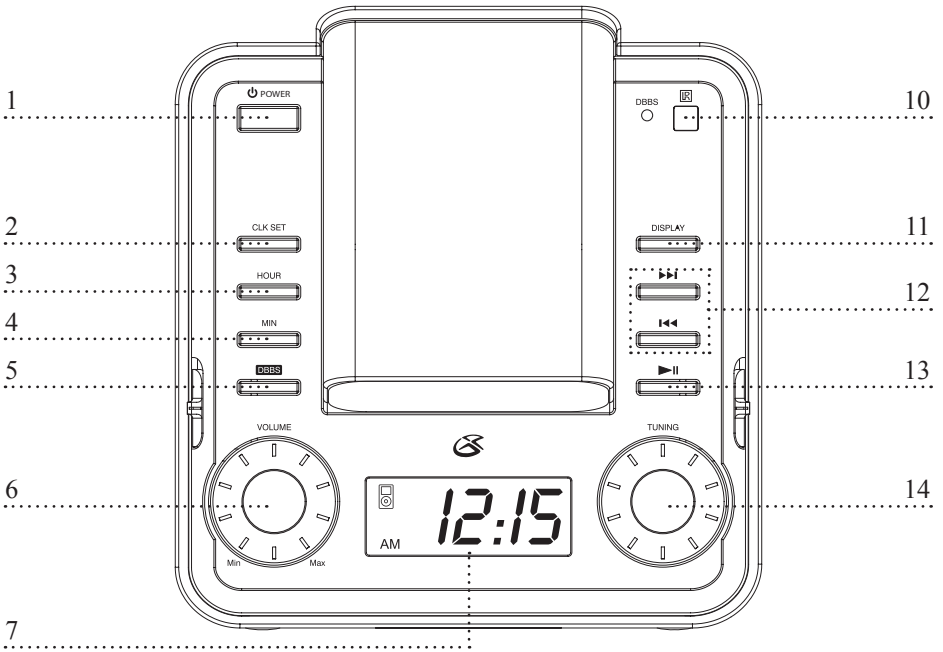



# Control Definitions

---

## 1 Power Button

Press the Power Button to turn the unit off and on.

---

## 2 Clk Set Button

Press and hold the Clk Set Button, with the unit powered off, to set the time.

---

## 3 Hour Button

Press the Hour Button to adjust the hour when setting the clock.

---

## 4 Minute Button

Press the Minute Button to adjust the minute when setting the clock.

---

## 5 DBBS Button (Dynamic Bass Boost System)

Press the DBBS Button to turn the Dynamic Bass Boost System off and on.

---

## 6 Volume Dial

Turn the Volume Dial to adjust the volume of audio output from the unit.

---

## 7 LCD Display

Use the LCD Display to view the time and current function of the unit.

---

## 8 Radio/iPod/Line In Switch

Adjust the Radio/iPod/Line In Switch to switch between radio mode, iPod mode, and line in mode.

---

## 9 FM/AM Switch

Adjust the FM/AM Switch to switch between AM and FM radio.

---

## 10 Infrared Receiver

The Infrared Receiver receives signals sent to the unit from the remote control.

---

## 11 Display Button

Press the Display Button to display the time when in radio mode.

---

## 12 Skip/Search Buttons

Press the Skip/Search Buttons to skip tracks on a docked iPod.

Press and hold the Skip/Search Buttons to search through individual tracks on a docked iPod.

---

## 13 Play/Pause Button

Press the Play/Pause Button to play and pause a docked iPod.

---

## 14 Tuning Dial

Turn the Tuning Dial to adjust the AM and FM radio station in radio mode.

---

## 15 Line In Jacks

Use the Line In Jacks to connect an MP3 player or other audio device to the unit.

*The Radio/iPod/Line In Switch must be adjusted to "Line In" when connecting an MP3 player or other audio device to the unit.*

---

## 16 Headphone Jack

Use the Headphone Jack to connect a set of earbuds or headphones to the unit.


---

## 17 Speaker Jacks

Use the Speaker Jacks to connect external speakers to the unit.

---

# Location of Controls

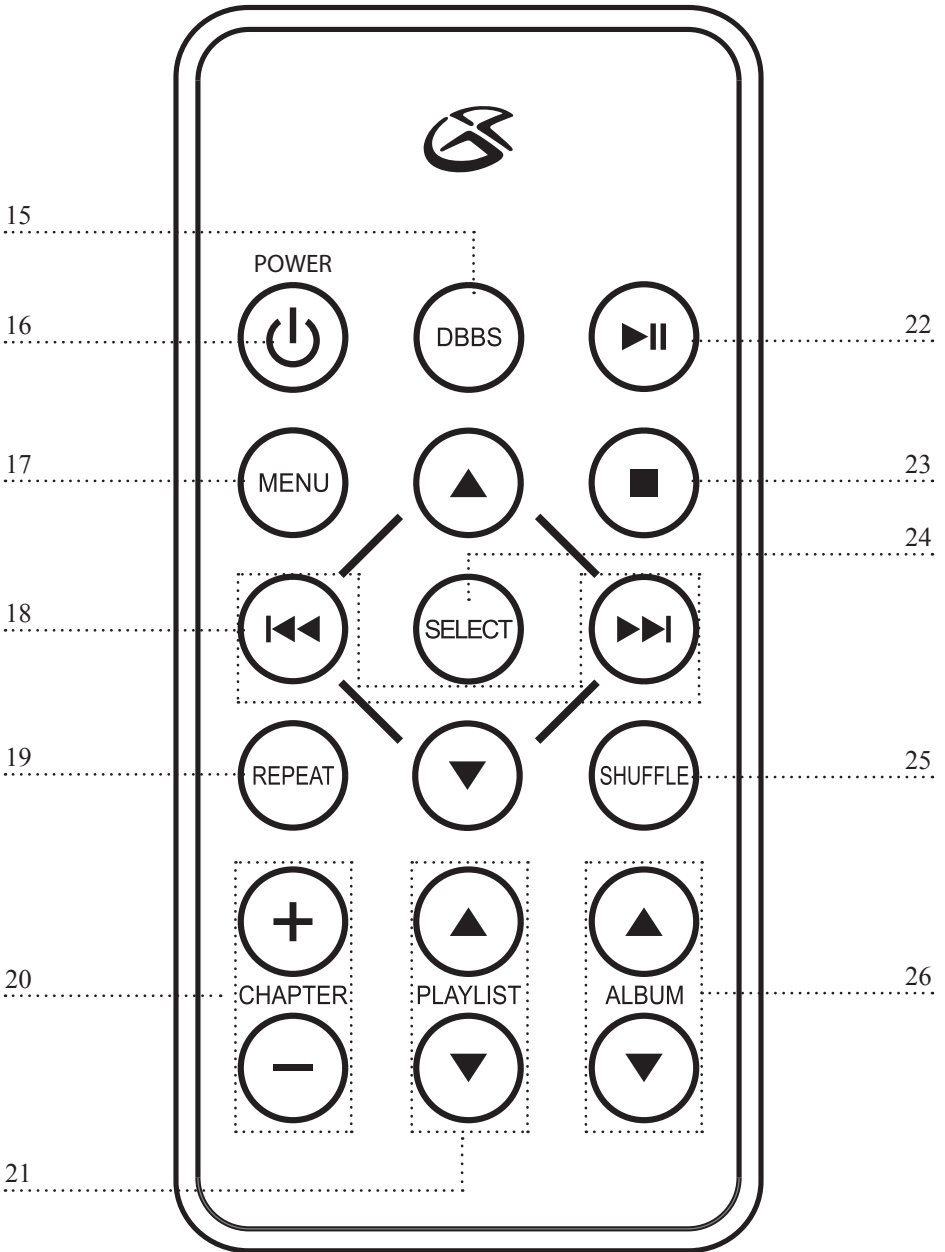

## Control Definitions

---

### **15 DBBS Button (Dynamic Bass Boost System)**

Press the DBBS Button to turn the Dynamic Bass Boost System off and on.

---

### **16 Power Button**

Press the Power Button to turn the unit off and on.

---

### **17 Menu Button**

Press the Menu Button to skip to a previous menu on a docked iPod.

---

### **18 Skip/Search Buttons**

Press the Skip/Search Buttons to skip tracks on a docked iPod.

---

Press and hold the Skip/Search Buttons to search through individual tracks on a docked iPod.

---

### **19 Repeat Button**

Press the Repeat Button once to repeat an individual song on a docked iPod.

---

Press the Repeat Button twice to repeat an album or playlist on a docked iPod.

---

### **20 Chapter Buttons**

Press the Chapter Buttons to cycle through chapters on a docked iPod.

---

### **21 Playlist Buttons**

Press the Playlist Buttons to cycle through playlists on a docked iPod.

---

### **22 Play/Pause Button**

Press the Play/Pause Button to play and pause a docked iPod.

---

### **23 Stop Button**

Press the Stop Button to stop a docked iPod during play.

---

### **24 Select Button**

Press the Select Button to make selections on a docked iPod.

---

### **25 Shuffle Button**

Press the Shuffle Button to play songs on a docked iPod in a random order.

---

### **26 Album Buttons**

Press the Album Buttons to cycle through albums on a docked iPod.

---



## Service Information

---

**Address** 2116 Carr Street, St. Louis MO, 63106

**Phone** 1-314-621-2881

**Fax** 1-314-588-1805

**Email** [prodinfo@gpx.com](mailto:prodinfo@gpx.com)

**Website** [www.gpx.com](http://www.gpx.com)

---

To download this Instruction Manual in English, Spanish, or French visit the Support section at [www.gpx.com](http://www.gpx.com).

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en [www.gpx.com](http://www.gpx.com).

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à [www.gpx.com](http://www.gpx.com).

---

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>