


# JVC

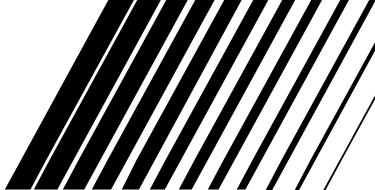

ENGLISH



ESPAÑOL



FRANÇAIS



## KD-R328/KD-R320

CD RECEIVER / RECEPTOR CON CD /  
RÉCEPTEUR CD



For canceling the display demonstration, see page 4. / Para cancelar la demostración en pantalla, consulte la página 4. / Pour annuler la démonstration des affichages, référez-vous à la page 4.

For installation and connections, refer to the separate manual.  
Para la instalación y las conexiones, refiérase al manual separado.  
Pour l'installation et les raccordements, se référer au manuel séparé.

**For customer Use:**  
Enter below the Model No. and Serial No. which are located on the top or bottom of the cabinet.  
Retain this information for future reference.  
Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

## INSTRUCTIONS

MANUAL DE INSTRUCCIONES  
MANUEL D'INSTRUCTIONS

GET0669-001A  
[J]

Thank you for purchasing a JVC product.

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

## **INFORMATION (For U.S.A.)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Caution:**

Changes or modifications not approved by JVC could void the user's authority to operate the equipment.

## **IMPORTANT FOR LASER PRODUCTS**

### 1. CLASS 1 LASER PRODUCT

2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.

3. **CAUTION:** (For U.S.A.) Visible and/or invisible class II laser radiation when open. Do not stare into beam.

(For Canada) Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments.

### 4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

<b>CAUTION</b> VISIBLE AND/OR INVISIBLE CLASS 1M LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. IEC60825-1:2001 (ENG)	<b>ATTENTION</b> RAYONNEMENT LASER VISIBLE ET/OU INVISIBLE DE CLASSE 1M UNE FOIS OUVERT. NE PAS REGARDER DIRECTEMENT AVEC DES INSTRUMENTS OPTIQUES. (FRA)	<b>AVISO</b> RADIACIÓN LÁSER DE CLASE 1M VISIBLE Y/O INVISIBLE CUANDO ESTA ABIERTO. NO MIRAR DIRECTAMENTE CON INSTRUMENTAL ÓPTICO. (ESP)	<b>WARNING</b> SYNLIG OCH/ELLER OSYNLIG LASERSTRÅLNING, KLASS 1M, NAR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÅLEN MED OPTISKA INSTRUMENT. (SWE)	<b>注意</b> ここを開くと可視 及び/または不可視 のクラス 1M レーザー放射が 出ます。 光学装置で直接 見ないでください。 (JPN)	<b>CAUTION</b> VISIBLE AND/OR INVISIBLE CLASS II LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR (ENG)
--	---	--	--	---	--



[European Union only]



### **Caution:**

Adjust the volume so that you can hear sounds outside the car. Driving with the volume too high may cause an accident.


### **WARNING:**

Stop the car before operating the unit.


### **Caution on volume setting:**

Discs produce very little noise compared with other sources. Lower the volume before playing a disc to avoid damaging the speakers by the sudden increase of the output level.

## How to attach/detach the control panel

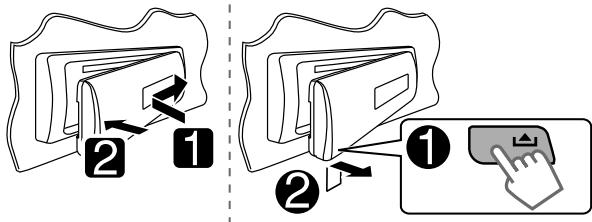

## How to reset your unit

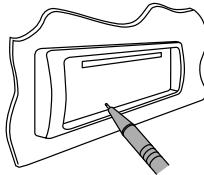

Your preset adjustments will also be erased.

## How to forcibly eject a disc



- Be careful not to drop the disc when it ejects.
- If this does not work, reset your unit.

## Maintenance

### Cleaning the unit

Wipe off the dirt on the panel with a dry silicon or soft cloth. Failure to observe this precaution may result in damage to the monitor or unit.

### Cleaning the connector

Wipe off dirt on the connector of the unit and panel. Use a cotton swab or cloth.

### Caution for DualDisc playback:

The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

# CONTENTS

- 3 How to attach/detach the control panel
- 3 How to reset your unit
- 3 How to forcibly eject a disc
- 3 Maintenance
- 4 Canceling the display demonstration
- 4 Setting the clock
- 5 Preparing the remote controller
- 5 About discs
- 6 Basic operations
- 7 Listening to the radio
- 8 Listening to a disc
- 9 Connecting the other external components
- 9 Listening to the other external components
- 10 Selecting a preset sound mode
- 10 Menu operations
- 13 Troubleshooting
- 14 Using Bluetooth® devices
- 15 Specifications

**Condensation :** When the car is air-conditioned, moisture may collect on the laser lens. This may cause disc read errors. In this case, remove the disc and wait for the moisture to evaporate.

**Temperature inside the car :** If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

# Cancelling the display demonstration

Display demonstration will be activated automatically if no operation is done for about 20 seconds.

## 1 Turn on the power.



## 2 Press the MENU button [Hold].



## 3 Press the dial.



## 4 Select <DEMO OFF>.



## 5 Press the dial.



## 6 Finish the procedure.



# Setting the clock

## 1 Turn on the power.



## 2 Press the MENU button [Hold].



## 3 Select <CLOCK>.



## 4 Select <CLOCK SET>.



## 5 Adjust the hour.



## 6 Adjust the minute.




## 7 Finish the procedure.



# Preparing the remote controller

When you use the remote controller for the first time, pull out the insulation sheet.

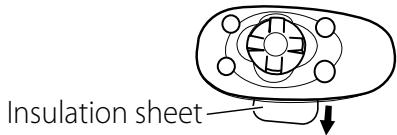


For USA-California Only:

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material—special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)

**If the effectiveness of the remote controller decreases, replace the battery.**

## Replacing the lithium coin battery

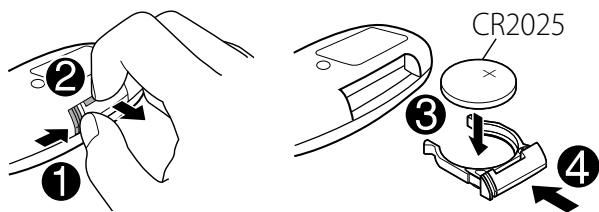

### **Caution:**

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

### **Warning (to prevent accidents and damage):**

- Do not install any battery other than CR2025 or its equivalent.
- Do not leave the remote controller in a place (such as dashboards) exposed to direct sunlight for a long time.
- Store the battery in a place where children cannot reach.
- Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire.
- Do not leave the battery with other metallic materials.
- Do not poke the battery with tweezers or similar tools.
- Wrap the battery with tape and insulate when throwing away or saving it.

# About discs

This unit can only play the CDs with:




## **Discs that cannot be used:**

- Discs that are not round.
- Discs with coloring on the recording surface or discs that are dirty.
- You cannot play a Recordable/ReWritable disc that has not been finalized. (For the finalization process refer to your disc writing software, and your disc recorder instruction manual.)
- 3-inch CD cannot be used. Attempt to insert using an adapter can cause malfunction.

## **Handling discs:**

- Do not touch the recording surface of the disc.
- Do not stick tape etc. on the disc, or use a disc with tape stuck on it.
- Do not use any accessories for the disc.
- Clean from the center of the disc and move outward.
- Clean the disc with a dry silicon or soft cloth. Do not use any solvents.
- When removing discs from this unit, pull them out horizontally.
- Remove the rims from the center hole and disc edge before inserting a disc.

# Basic operations

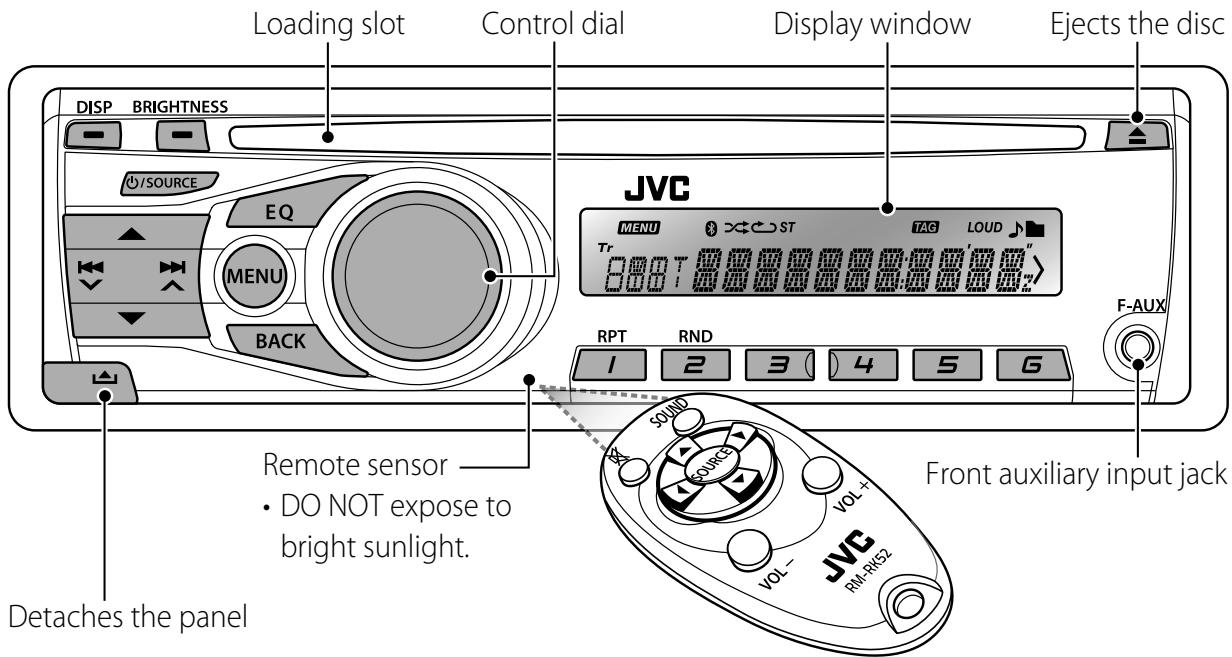

When you press or hold the following button(s)...

Main unit	Remote controller	General operation
⊕/SOURCE	—	<ul style="list-style-type: none"> <li>• Turns on.</li> <li>• Turns off [Hold].</li> </ul>
	SOURCE	<ul style="list-style-type: none"> <li>Selects the sources (FM, CD, F-AUX, BT AUDIO or R-AUX or BT PHONE, AM).</li> <li>• "CD" is selectable only when a disc is loaded.</li> </ul>
Control dial (turn)	VOL - / +	<ul style="list-style-type: none"> <li>• Adjusts the volume level.</li> </ul>
	—	<ul style="list-style-type: none"> <li>• Selects items.</li> </ul>
Control dial (press)	🔇	<ul style="list-style-type: none"> <li>Mutes the sound during playback. If the source is "CD," playback pauses.</li> <li>• Press the button again to cancel muting or resume playback.</li> </ul>
	—	Confirms selection.
EQ	SOUND	<ul style="list-style-type: none"> <li>Selects the sound mode.</li> <li>• Hold the EQ button on the main unit to enter tone level adjustment directly. (page 10)</li> </ul>
Number buttons (1 – 6)	—	<ul style="list-style-type: none"> <li>Selects preset stations.</li> <li>• Stores the current station into the selected number button [Hold].</li> <li>• Press number button <b>1 (RPT)</b> or <b>2 (RND)</b> to enter REPEAT/ RANDOM setting directly. (page 8)</li> </ul>
BRIGHTNESS	—	Enters <BRIGHTNESS> menu directly. (page 11)
BACK	—	<ul style="list-style-type: none"> <li>• Returns to the previous menu.</li> <li>• Exit from the menu [Hold].</li> </ul>
DISP	—	<ul style="list-style-type: none"> <li>• Changes the display information.</li> <li>• Scrolls the display information [Hold].</li> </ul>

# Listening to the radio




⇒ "FM" or "AM"



"ST" lights up when receiving an FM stereo broadcast with sufficient signal strength.

- Auto search [Press].
- Manual search [Hold].
- "M" flashes, then press the button repeatedly.

## Improving the FM reception

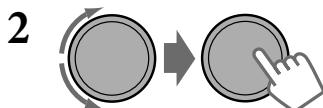

⇒ <TUNER> ⇒ <MONO> ⇒ <MONO ON>  
Reception improves, but stereo effect  
will be lost.


**To restore the stereo effect,** repeat the same procedure to select <MONO OFF>.

## Automatic presetting (FM) —

### SSM (Strong-station Sequential Memory)

You can preset up to 18 stations for FM.

While listening to a station...

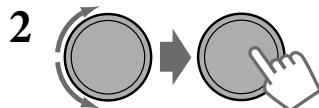

⇒ <TUNER> ⇒ <SSM> ⇒  
<SSM 01 – 06 / 07 – 12 / 13 – 18>  
"SSM" flashes and local stations with the  
strongest signal are searched and stored  
automatically.

**To preset another 6 stations,** repeat the  
above procedure by selecting one of the other  
6 SSM setting ranges.

## Changing the display information

DISP



Frequency ↔ Clock

## Manual presetting (FM/AM)


You can preset up to 18 stations for FM and 6 stations for AM.



⇒ Tune in to a station you want to  
preset.




"PRESET MODE" flashes.

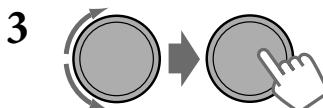

⇒ Selects preset number.  
Preset number flashes and "MEMORY"  
appears.

- Pressing and holding the number buttons (1 – 6) can also store the current station to the selected number buttons (1 – 6).

## Selecting a preset station

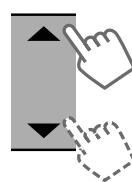

- Pressing the number buttons (1 – 6) can also select the preset stations (1 – 6).

## Using the remote controller

▲/▼ : Changes the preset stations.

◀/▶ : Searches for stations.

# Listening to a disc



Playback starts automatically.


All tracks will be played repeatedly until you change the source or eject the disc.

## Stopping playback and ejecting the disc



If the ejected disc is not removed within 15 seconds, it is automatically inserted into the loading slot.

## Selecting a track/folder

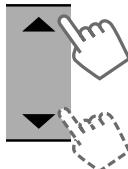

Selects folder of the MP3/WMA




[Press] Selects track.  
[Hold] Fast-forwards or reverses the track.

## Using the remote controller

- ▲/▼ : Selects folder of the MP3/WMA.
- ◀/▶ : [Press] Selects track.  
[Hold] Fast-forwards or reverses the track.


## Changing the display information

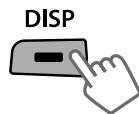

Disc title/Album name/performer (folder name)\* → Track title (file name)\* → Current track number with the elapsed playing time → Current track number with the clock time → (back to the beginning)

\* "NO NAME" appears for conventional CDs or if not recorded.

## Selecting a track/folder from the list

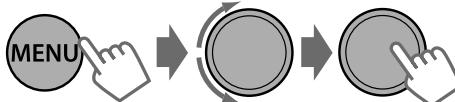


- If the MP3/WMA disc contains many tracks, you can fast search ( $\pm 10$ ,  $\pm 100$ ) through the disc by turning the control dial quickly.
- To return to the previous menu, press BACK.

## Selecting the playback modes


You can use only one of the following playback modes at a time.



- [Hold]
- Pressing number button **1 (RPT)** or **2 (RND)** can enter REPEAT/RANDOM setting directly. Then, perform step **3**.

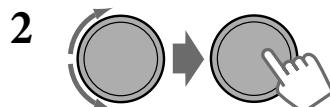

⇒ "REPEAT" ↔ "RANDOM"

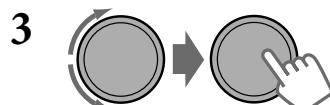

- REPEAT** ↗
- TRACK RPT : Repeats current track
  - FOLDER RPT : Repeats current folder
- RANDOM** ↗
- FOLDER RND : Randomly plays all tracks of current folder, then tracks of next folders
  - ALL RND : Randomly plays all tracks

To cancel repeat play or random play, select "RPT OFF" or "RND OFF."

# Connecting the other external components


You can connect an external component to the auxiliary input jack on the control panel (F-AUX) and/or on the rear side of the unit (R-AUX).

Summary of using the external components through the auxiliary input jacks:



External component	Auxiliary input jack	Preparation			Source name	Connecting cable/device (not supplied)
		Menu setting item	Sub-item	Setting		
Portable audio player	Front	SRC SELECT	F-AUX	ON	F-AUX	See below.
	Rear	SRC SELECT	R-AUX	ON	R-AUX	
Bluetooth device	Rear	SRC SELECT	R-AUX	BT ADAPTER	BT AUDIO/BT PHONE*	KS-BTA100 (page 14)

\* "BT PHONE" appears when a Bluetooth phone is in use.

## On the control panel (F-AUX):

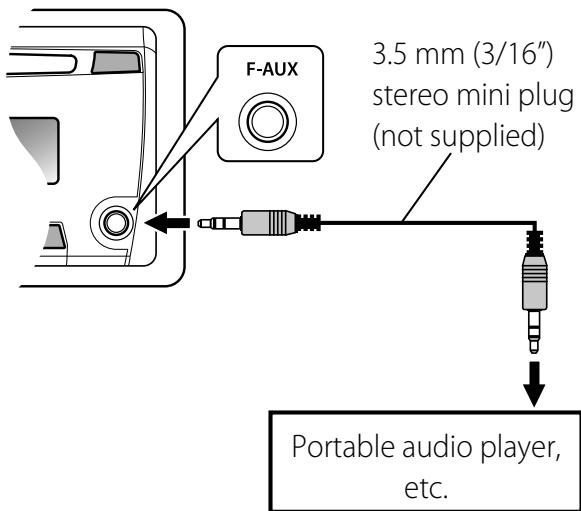

## On the rear panel (R-AUX):

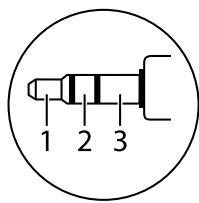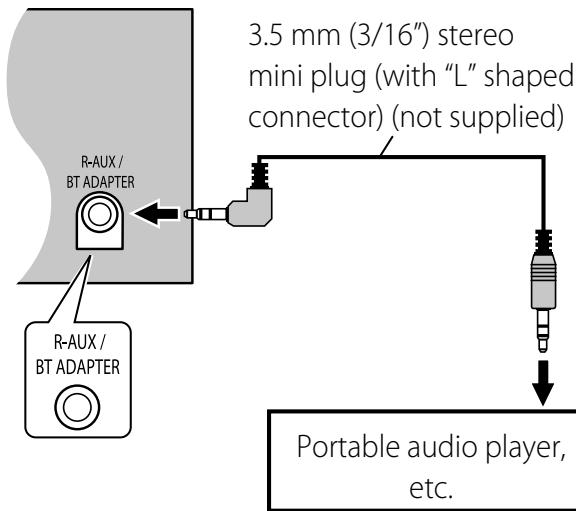

Recommended to use a 3-terminal plug head stereo mini plug for optimum audio output.

# Listening to the other external components

For details, refer also to the instructions supplied with the external components.

1



⇒ "F-AUX" or "R-AUX"

2

Turn on the connected component and start playing the source.


# Selecting a preset sound mode

You can select a preset sound mode suitable for the music genre.



**FLAT → NATURAL →  
DYNAMIC → VOCAL BOOST →  
BASS BOOST → USER →** (back to the beginning)

While listening, you can adjust the tone level of the selected sound mode.

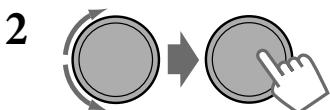


Adjust the level (-06 to +06) of the selected tone (BASS/ MID/ TRE).


The sound mode is automatically stored and changed to "USER."

## Storing your own sound mode

You can store your own adjustments in memory.

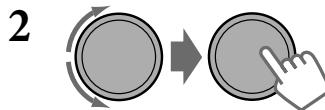

⇒ <PRO EQ> ⇒ <BASS/ MIDDLE/ TREBLE>

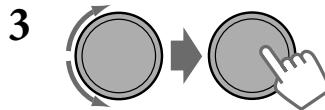

Adjust the sound elements of the selected tone.

**BASS** [Initial: 80 Hz, 00, Q1.0]

Frequency: 60/ 80/ 100/ 200 Hz

Level: -06 to +06

Q: Q1.0/ 1.25/ 1.5/ 2.0

**MIDDLE** [Initial: 1.0 kHz, 00, Q1.25]

Frequency: 0.5/ 1.0/ 1.5/ 2.5 kHz

Level: -06 to +06

Q: Q0.75/ 1.0/ 1.25

**TREBLE** [Initial: 10.0 kHz, 00, Q FIX]

Frequency: 10.0/ 12.5/ 15.0/ 17.5 kHz

Level: -06 to +06

Q: Q FIX


4 Repeat steps 2 and 3 to adjust other tones.

The adjustments made is automatically stored and changed to "USER."

# Menu operations



If no operation is done for about 60 seconds, the operation will be canceled.

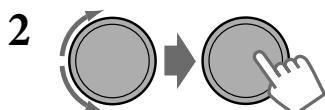

3 Repeat step 2 if necessary.  
• To return to the previous menu, press **BACK**.  
• To exit from the menu, press **DISP** or **MENU**.

Menu item	Selectable setting, [Initial: <u>Underlined</u> ]
<b>DEMO</b>	For settings, see page 4.
<b>CLOCK</b>	

Menu item		Selectable setting, [Initial: <u>Underlined</u> ]
DIMMER	<b>DIMMER SET</b>	<b>AUTO</b> : Dims the display to the previous setting when you turn on the car headlights.* <sup>1</sup> / <b>ON</b> : Dims the display and button illumination (50% of the selected brightness level). / <b>OFF</b> : Cancels (100% of the selected brightness level).
	<b>BRIGHTNESS</b>	<b>DAY</b> [ <u>31</u> ] / <b>NIGHT</b> [ <u>15</u> ] : Selects the display and button illumination brightness level [ <b>00</b> — <b>31</b> ] for day and night.
DISPLAY	<b>SCROLL</b> * <sup>2</sup>	<b>ONCE</b> : Scrolls the displayed information once. / <b>AUTO</b> : Repeats scrolling (at 5-second intervals). / <b>OFF</b> : Cancels. (Pressing <b>DISP</b> for more than one second can scroll the display regardless of the setting.)
	<b>TAG DISPLAY</b>	<b>ON</b> : Shows the Tag information while playing MP3/WMA tracks. / <b>OFF</b> : Cancels.
<b>PRO EQ</b>		See page 10.
AUDIO	<b>FADER</b> * <sup>3,*4</sup>	<b>R06 — F06</b> [ <u>00</u> ] : Adjusts the front and rear speaker output balance.
	<b>BALANCE</b> * <sup>4</sup>	<b>L06 — R06</b> [ <u>00</u> ] : Adjusts the left and right speaker output balance.
	<b>LOUD</b>	<b>ON</b> : Boost low and high frequencies to produce a well-balanced sound at a low volume level. / <b>OFF</b> : Cancels.
	<b>VOL ADJUST</b>	<b>-05 — +05</b> [ <u>00</u> ] : Presets the volume adjustment level of each source (except "FM"), compared to the FM volume level. The volume level will automatically increase or decrease when you change the source. Before adjustment, select the source you want to adjust. ("VOL ADJ FIX" appears on the display if "FM" is selected as the source.)
	<b>L/O MODE</b>	<b>SUB.W</b> : Selects if the REAR/SW terminals are used for connecting a subwoofer (through an external amplifier). / <b>REAR</b> : Selects if the REAR/SW terminals are used for connecting the speakers (through an external amplifier).
	<b>SUB.W LPF</b> * <sup>5</sup>	<b>LOW 55Hz</b> / <b>LOW 85Hz</b> / <b>LOW 120Hz</b> : Frequencies lower than 55 Hz/85 Hz/120 Hz are sent to the subwoofer.
	<b>SUB.W LEVEL</b> * <sup>5</sup>	<b>00 — 08</b> [ <u>04</u> ] : Adjusts the subwoofer output level.
	<b>HPF</b>	<b>ON</b> : Activates the High Pass Filter. The unit selects the cutoff frequency to the rear speakers. / <b>OFF</b> : Deactivates (all signals are sent to the rear speakers).
	<b>BEEP</b>	<b>ON</b> / <b>OFF</b> : Activates or deactivates the keypress tone.
	<b>TEL MUTING</b> * <sup>6</sup>	<b>ON</b> : Mutes the sounds while using the cellular phone (not connected through KS-BTA100). / <b>OFF</b> : Cancels.

\*<sup>1</sup> The illumination control lead connection is required. (See "Installation/Connection Manual.") This setting may not work correctly on some vehicles (particularly on those having a control dial for dimming). In this case, change the setting to any other than <DIMMER AUTO>.

\*<sup>2</sup> Some characters or symbols will not be shown correctly (or will be blanked) on the display.

\*<sup>3</sup> If you are using a two-speaker system, set the fader level to "00."

\*<sup>4</sup> This adjustment will not affect the subwoofer output.

\*<sup>5</sup> Displayed only when <L/O MODE> is set to <SUB.W>.

\*<sup>6</sup> This setting does not work if <BT ADAPTER> is selected for <R-AUX> of the <SRC SELECT>.

Continued...

Menu item		Selectable setting, [Initial: <u>Underlined</u> ]
AUDIO	AMP GAIN* <sup>7</sup>	<b>LOW POWER</b> : VOLUME 00 – VOLUME 30 (Selects if the maximum power of each speaker is less than 50 W to prevent damaging the speakers.) / <b>HIGH POWER</b> : VOLUME 00 – VOLUME 50
TUNER	SSM* <sup>8</sup>	See page 7.
	AREA	<b>US</b> : When using in North/Central/South America. AM/FM intervals are set to 10 kHz/200 kHz. / <b>EU</b> : When using in any other areas. AM/FM intervals are set to 9 kHz/50 kHz (50 kHz during auto search). / <b>SA</b> : When using in South American countries where FM interval is 50 kHz. AM interval is set to 10 kHz.
	MONO* <sup>8</sup>	See page 7.
	IF BAND	<b>AUTO</b> : Increases the tuner selectivity to reduce interference noises between adjacent stations. (Stereo effect may be lost.) / <b>WIDE</b> : Subject to interference noises from adjacent stations, but sound quality will not be degraded and the stereo effect will remain.
SRC SELECT	AM* <sup>9</sup>	<b>ON</b> / <b>OFF</b> : Enable or disable "AM" in source selection.
	F-AUX* <sup>9</sup>	<b>ON</b> / <b>OFF</b> : Enable or disable "F-AUX" in source selection.
	R-AUX* <sup>9</sup>	<b>ON</b> / <b>OFF</b> : Enable or disable "R-AUX" in source selection. / <b>BT ADAPTER</b> * <sup>10</sup> : Selects if the rear auxiliary input jack is connected to the Bluetooth adapter, KS-BTA100. (page 9)

\*<sup>7</sup> The volume level automatically changes to "VOLUME 30" if you change to <LOW POWER> with the volume level set higher than "VOLUME 30."

\*<sup>8</sup> Displayed only when the source is "FM."

\*<sup>9</sup> Displayed only when any source other than "AM/F-AUX/R-AUX/BT AUDIO" is selected separately.

\*<sup>10</sup> When <BT ADAPTER> is selected, source name is changed to "BT AUDIO" from "R-AUX."

## Additional information

- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- This unit can play back files with the extension code <.mp3> or <.wma> (regardless of the letter case—upper/lower).
- This unit can play back the files meeting the conditions below:
  - Bit rate: MP3/WMA: 8 kbps — 320 kbps
  - Sampling frequency:  
MP3: 48 kHz, 44.1 kHz, 32 kHz  
24 kHz, 22.05 kHz, 16 kHz  
12 kHz, 11.025 kHz, 8 kHz
  - WMA: 48 kHz, 44.1 kHz, 32 kHz, 22.05 kHz
- This unit can show WMA Tag and ID3 Tag Version 1.0/1.1/2.2/2.3/2.4 (for MP3).
- The search function works but search speed is not constant.
- The maximum number of characters for file/folder names vary depending on the disc format used (includes 4 extension characters—<.mp3> or <.wma>). ISO 9660 Level 1 and 2, Romeo: 64 characters, Joliet: 32 characters, Windows long file name: 64 characters
- This unit can play back files recorded in VBR (variable bit rate). (Files recorded in VBR have a discrepancy in elapsed time indication.)
- This unit cannot play back the following files:
  - MP3 files: encoded in MP3i and MP3 PRO format; an inappropriate format; layer 1/2.
  - WMA files: encoded in lossless, professional, and voice format; not based upon Windows Media® Audio; copy-protected with DRM.
  - Files which have data such as AIFF, ATRAC3, etc.

# Troubleshooting

	Symptom	Remedy/Cause
General	Sound cannot be heard from the speakers.	<ul style="list-style-type: none"> <li>• Adjust the volume to the optimum level.</li> <li>• Make sure the unit is not muted/paused. (page 6)</li> <li>• Check the cords and connections.</li> </ul>
	"MISWIRING CHK WIRING THEN RESET UNIT" appears on the display and no operations can be done.	Check to be sure the terminals of the speaker leads are covered with insulating tape properly, then reset the unit. (page 3) If the message does not disappear, consult your JVC car audio dealer or a company supplying kits.
	The unit does not work at all.	Reset the unit. (page 3)
	"F-AUX" or "R-AUX" cannot be selected.	Check the <SRC SELECT> → <F-AUX / R-AUX> setting. (page 12)
	Sound is sometimes interrupted while listening to an external component connected to the auxiliary input jack.	Check to be sure the recommended stereo mini plug is used for connection. (page 9)
FM/AM	SSM automatic presetting does not work.	Store stations manually.
	Static noise while listening to the radio.	Connect the antenna firmly.
	"AM" cannot be selected.	Check the <SRC SELECT> → <AM> setting. (page 12)
Disc playback	Disc cannot be played back.	Insert the disc correctly.
	CD-R/CD-RW cannot be played back and track cannot be skipped.	Insert a finalized CD-R/CD-RW (finalize with the component which you used for recording).
	Disc sound is sometimes interrupted.	Stop playback while driving on rough roads. / Change the disc. / Check the cords and connections.
	"NO DISC" appears on the display.	Insert a playable disc into the loading slot.
	"PLEASE" and "EJECT" appear alternately on the display.	Press ▲, then insert a disc correctly.
	"IN DISC" appears on the display.	The disc cannot be ejected properly. Make sure nothing is blocking the loading slot.
MP3/WMA playback	Disc cannot be played back.	<ul style="list-style-type: none"> <li>• Use a disc with MP3/WMA tracks recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet.</li> <li>• Add the extension code &lt;.mp3&gt; or &lt;.wma&gt; to the file names.</li> </ul>
	Noise is generated.	Skip to another track or change the disc.
	"READING" keeps flashing on the display.	A longer readout time is required. Do not use too many hierarchical levels and folders.
	Tracks do not play back in the order you have intended them to play.	The playback order is determined when the files are recorded.
	The elapsed playing time is not correct.	This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc.
	The correct characters are not displayed (e.g. album name).	This unit can only display letters (upper case), numbers, and a limited number of symbols.

# Using Bluetooth® devices

For Bluetooth operations, it is required to connect the Bluetooth adapter, KS-BTA100 (not supplied) to the auxiliary input jack (R-AUX/BT ADAPTER) on the rear of the unit. (page 9)

- For details, refer also to the instructions supplied with the Bluetooth adapter and the Bluetooth device.

## Preparation

### 1 Register (pair) a Bluetooth device with KS-BTA100.

Refer to the instructions manual supplied with KS-BTA100.

### 2 Change the <SRC SELECT> settings of this unit.



⇒ <SRC SELECT> ⇒ <R-AUX> ⇒  
<BT ADAPTER>

## Using the Bluetooth mobile phone

**Adjusting the microphone volume**  
Volume level: High/ Normal (initial)/ Low

(Low) (High)

- **Receiving a call**  
When a call comes in...
- **Making a call**  
Making a call to the last connected number from your phone.
- **Switching between handsfree and phone**  
While talking...
- **Ends/rejects call**
- **Voice dialing**  
Voice dialing is available only when the connected mobile phone has the voice recognition system. To use this, speak the name you want to call clearly.

[Hold] (< 5 seconds)

## Using the Bluetooth audio device

1 ⇒ "BT AUDIO"  
(CD receiver)

2

If playback does not start, operate the Bluetooth audio player to start playback.



[Press] Selects track.

[Hold] Fast-forwards or reverses the track.

### About microphone volume:

- When you turn off the power of the CD receiver, the volume level changes to Normal.

# Specifications

## AUDIO AMPLIFIER SECTION



**Power Output:** 20 W RMS × 4 Channels at 4 Ω and ≤ 1% THD+N

**Signal-to-Noise Ratio:** 80 dBA (reference: 1 W into 4 Ω)

**Load Impedance:** 4 Ω (4 Ω to 8 Ω allowance)

**Frequency Response:** 40 Hz to 20 000 Hz

**Line-Out or Subwoofer-Out Level/**

**Impedance:** 2.5 V/20 kΩ load (full scale)

**Output Impedance:** 1 kΩ

## TUNER SECTION

**Frequency Range:**

**FM:**

–with channel interval set to 200 kHz :

87.9 MHz to 107.9 MHz

–with channel interval set to 50 kHz :

87.5 MHz to 108.0 MHz

**AM:**

–with channel interval set to 10 kHz : 530 kHz to 1 700 kHz

– with channel interval set to 9 kHz : 531 kHz to 1 611 kHz

**FM Tuner:**

**Usable Sensitivity:** 9.3 dBf (0.8 µV/75 Ω)

**50 dB Quieting Sensitivity:** 16.3 dBf

(1.8 µV/75 Ω)

**Alternate Channel Selectivity (400 kHz):**

65 dB

**Frequency Response:** 40 Hz to 15 000 Hz

**Stereo Separation:** 40 dB

**AM Tuner:**

**Sensitivity>Selectivity:** 20 µV/40 dB

## CD PLAYER SECTION

**Type:** Compact disc player

**Signal Detection System:** Non-contact optical pickup (semiconductor laser)

**Number of Channels:** 2 channels (stereo)

**Frequency Response:** 5 Hz to 20 000 Hz

**Signal-to-Noise Ratio:** 98 dB

**Wow and Flutter:** Less than measurable limit

**MP3 Decoding Format (MPEG1/2 Audio**

**Layer 3):** Max. Bit Rate: 320 kbps

**WMA (Windows Media® Audio) Decoding**

**Format:** Max. Bit Rate: 192 kbps

## GENERAL

**Power Requirement:** Operating Voltage :

DC 14.4 V (11 V to 16 V allowance)

**Grounding System:** Negative ground

**Allowable Operating Temperature:**

0°C to +40°C (32°F to 104°F)

**Dimensions (W × H × D) : (approx.)**

–Installation Size :

182 mm × 52 mm × 159 mm  
(7-3/16" × 2-1/16" × 6-5/16")

–Panel Size :


188 mm × 59 mm × 9 mm  
(7-7/16" × 2-3/8" × 3/8")

**Mass :** 1.2 kg (2.8 lbs) (excluding accessories)

Subject to change without notice.

If a kit is necessary for your car, consult your telephone directory for the nearest car audio speciality shop.

Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

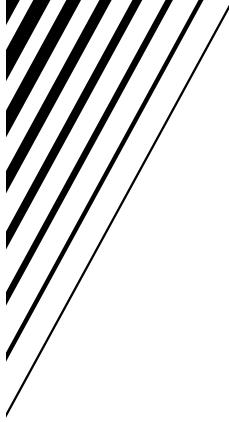

**Having TROUBLE with operation?**

**Please reset your unit**

Refer to page of How to reset your unit

**Still having trouble??**

**USA ONLY**

**Call 1-800-252-5722**

**<http://www.jvc.com>**

**We can help you!**

**JVC**



**EN, SP, FR**

© 2010 Victor Company of Japan, Limited

0910DTSMDTJEIN



ENGLISH / ESPAÑOL / FRANÇAIS

## WARNINGS / ADVERTENCIAS / AVERTISSEMENTS


- You need the installation kits which corresponds to your car.
- If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.
- The unit can only be installed in a car with a 12 V DC power supply, negative ground.
- Disconnect the battery's negative terminal and make all electrical connections before installing the unit.
- Connect speakers with a maximum power of more than 50 W (impedance of 4 Ω to 8 Ω). Otherwise, change the <AMP GAIN> setting. (See page 12 of the INSTRUCTIONS.)
- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- If the fuse blows, first make sure the wires are not touching to cause a short circuit, then replace the old fuse with one that has the same rating.
- Install this unit in the console of your vehicle.
- Mount the unit so that the mounting angle is 30° or less.
- Be sure to ground this unit to the car's chassis again after installation.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot.

- Necesitará los kits de instalación que corresponden con su vehículo.
- Si tiene alguna pregunta o necesita información acerca de las herramientas para instalación, consulte con su concesionario de JVC de equipos de audio para automóviles o a una compañía que suministra tales herramientas.
- La unidad puede instalarse solamente en un automóvil con fuente de alimentación de 12 V CC, negativo a masa.
- Desconecte el terminal negativo de la batería y realice todas las conexiones eléctricas antes de instalar la unidad.
- Conecte los altavoces con una potencia máxima de más de 50 W (impedancia de 4 Ω a 8 Ω). De lo contrario, cambie el ajuste <AMP GAIN>. (Véase la página 12 del MANUAL DE INSTRUCCIONES.)
- Aisle los cables no conectados con cinta de vinilo u otro material similar. Para prevenir los cortocircuitos, no quite las tapas de los extremos de los cables o terminales no conectados.
- Si se funde un fusible, asegúrese primero de que los cables no estén en contacto pues pueden ocañar un cortocircuito, luego reemplace el fusible dañado por uno de las mismas características.
- Instale esta unidad en la consola de su vehículo.
- Instale la unidad en un ángulo de montaje de 30° o menos.
- Asegúrese de volver a conectar a masa esta unidad al chasis del automóvil después de la instalación.
- Después de haber instalado la unidad, compruebe que las luces de freno, los intermitentes, los limpiaparabrisas, etc. del automóvil funcionan correctamente.
- No toque la parte metálica de esta unidad durante e inmediatamente después de usar la unidad. Las partes metálicas tal como el disipador de calor y la carcasa estarán calientes.

- Vous avez besoin des kits d'installation correspondants à votre voiture.
- Si vous avez des questions ou avez besoin d'information sur des kits d'installation, consulter votre revendeur d'autoradios JVC ou une compagnie d'approvisionnement.
- L'appareil peut uniquement être installé dans une voiture avec une alimentation de 12 V CC, à masse négative.
- Déconnectez la borne négative de la batterie et réalisez toutes les connexions avant d'installer l'appareil.
- Connectez des enceintes avec une puissance maximum de 50 W (impédance de 4 Ω à 8 Ω). Sinon, changez le réglage <AMP GAIN>. (Voir la page 12 du MANUEL D'INSTRUCTIONS.)
- Isolez les câbles non-connectés avec un ruban de vinyle ou d'un autre matériel similaire. Pour éviter les courts-circuits, ne retirez pas non plus les capuchons à l'extrémité des câbles non-connectés ou des prises.
- Si un fusible saute, assurez-vous d'abord que les câbles n'ont pas causé de court-circuit puis remplacez le vieux fusible par un nouveau de même valeur.
- Installez cet appareil dans la console de votre véhicule.
- Monter l'unité de façon à ce que l'angle de montage soit de 30° ou moins.
- Assurez-vous de raccorder de nouveau la mise à la masse de cet appareil au châssis de la voiture après l'installation.
- Après avoir installé l'appareil, vérifiez si les lampes de frein, les indicateurs, les clignotants, etc. de la voiture fonctionnent correctement.
- Ne touchez pas la partie métallique de cet appareil pendant ou juste après son utilisation. Les parties métalliques, comme le dissipateur de chaleur et le boîtier, deviennent chaudes.


## PRECAUTIONS on power supply and speaker connections

- DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

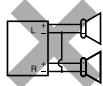


## PRECAUCIONES sobre las conexiones de la fuente de alimentación y de los altavoces

- NO conecte los conductores de altavoz del cable de alimentación a la batería de automóvil, pues podrían producirse graves daños en la unidad.
- ANTES de conectar a los altavoces los conductores de altavoz del cable de alimentación, verifique el conexionado de altavoz de su automóvil.

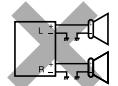


## PRECAUTIONS sur l'alimentation et la connexion des enceintes

- NE CONNECTEZ PAS les fils d'enceintes du cordon d'alimentation à la batterie; sinon, l'appareil serait sérieusement endommagé.
- AVANT de connecter les fils d'enceintes du cordon d'alimentation aux enceintes, vérifiez le câblage des enceintes de votre voiture.

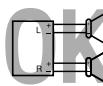


## INSTALLATION / INSTALACION / INSTALLATION

### In-dash mounting / Montaje en el tablero / Montage encastré

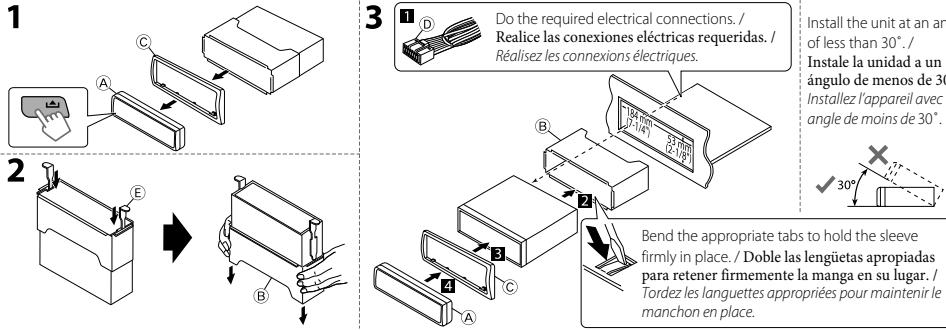

### When installing the unit without using the sleeve / Instalación de la unidad sin utilizar la cubierta / Lors de l'installation de l'appareil sans utiliser de manchon

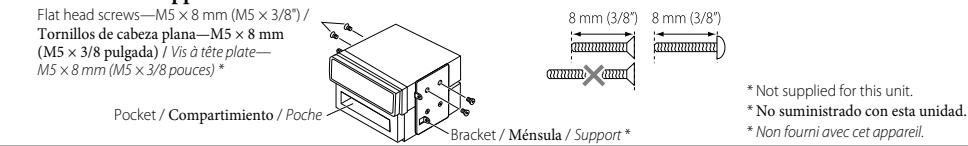

Install the unit at an angle of less than 30°. /  
Instale la unidad a un ángulo de menos de 30°. /  
Installez l'appareil avec un angle de moins de 30°.


Bend the appropriate tabs to hold the sleeve firmly in place. / Doble las lengüetas apropiadas para retener firmemente la manga en su lugar. / Tordez les languettes appropriées pour maintenir le manchon en place.

### Part list / Lista de componentes / Liste de pièces

- (A) Control panel / Panel de control / Panneau de commande (x1)
- (B) Sleeve / Cubierta / Manchon (x1)
- (C) Trim plate / Placa de garnición / Plaque d'assemblage (x1)
- (D) Power cord / Cordón de alimentación / Cordon d'alimentation (x1)
- (E) Handles / Manijas / Poignées (x2)

### Removing the unit / Extracción de la unidad / Retrait de l'appareil


Release the rear section first... / Primero libere la sección trasera... / Ouvrez la section arrière en premier...

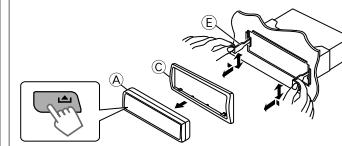


## TROUBLESHOOTING / LOCALIZACIÓN DE AVERIAS / EN CAS DE DIFFICULTÉS

- The fuse blows. ⇒ Are the red and black leads connected correctly?
- Power cannot be turned on. ⇒ Is the yellow lead connected?
- No sound from the speakers. ⇒ Is the speaker output lead short-circuited?
- "MISWIRING CHK WIRING THEN RESET UNIT" appears on the display and no operation can be done. ⇒ Is the speaker output lead short-circuited or touches the chassis of the car/head unit? ; Have you reset your unit?
- Sound is distorted. ⇒ Is the speaker output lead grounded? ; Are the "-" terminals of L and R speakers grounded in common?
- Noise interfere with sounds. ⇒ Is the rear ground terminal connected to the car's chassis using shorter and thicker cords?
- This unit becomes hot. ⇒ Is the speaker output lead grounded? ; Are the "-" terminals of L and R speakers grounded in common?
- This unit does not work at all. ⇒ Have you reset your unit?
- El fusible se quema. ⇒ ¿Están los conductores rojo y negro correctamente conectados?
- No es posible conectar la alimentación. ⇒ ¿Está el cable amarillo conectado?
- No sale sonido de los altavoces. ⇒ ¿Está el cable de salida del altavoz cortocircuitado?
- Aparece "MISWIRING CHK WIRING THEN RESET UNIT" en la pantalla y no se puede realizar ninguna operación. ⇒ ¿El conductor de salida de altavoz está en cortocircuito o en contacto con el chasis del automóvil/auriculares? ; ¿Reinicializó la unidad?
- El sonido presenta distorsión. ⇒ ¿Está el cable de salida del altavoz conectado a masa? ; ¿Están los terminales "-" de los altavoces L y R conectados a una masa común?
- Perturbación de ruido. ⇒ ¿El terminal de tierra trasero está conectado al chasis del automóvil utilizando los cordones más corto y más grueso?
- Esta unidad se calienta. ⇒ ¿Está el cable de salida del altavoz conectado a masa? ; ¿Están los terminales "-" de los altavoces L y R conectados a una masa común?
- Esta unidad no funciona en absoluto. ⇒ ¿Reinicializó la unidad?
- Le fusible saute. ⇒ Les fils rouge et noir sont-ils raccordés correctement?
- L'appareil ne peut pas être misé sous tension. ⇒ Le fil jaune est-il raccordé?
- Pas de son des enceintes. ⇒ Le fil de sortie d'enceinte est-il court-circuité?
- "MISWIRING CHK WIRING THEN RESET UNIT" apparait sur l'affichage et aucune opération ne peut être réalisée. ⇒ Est-ce qu'un fil de sortie d'enceinte est court-circuité ou touche le châssis de la voiture/appareil principal? ; Avez-vous réinitialisé votre appareil?
- Le son est déformé. ⇒ Le fil de sortie d'enceinte est-il à la masse? ; Les bornes "-" des enceintes gauche et droite sont-elles mises ensemble à la masse?
- Intéférence avec les sons. ⇒ La prise arrière de mise à la terre est-elle connectée au châssis de la voiture avec un cordon court et épais?
- Cet appareil devient chaud. ⇒ Le fil de sortie d'enceinte est-il à la masse? ; Les bornes "-" des enceintes gauche et droite sont-elles mises ensemble à la masse?
- Cet appareil ne fonctionne pas du tout. ⇒ Avez-vous réinitialisé votre appareil?

## ELECTRICAL CONNECTIONS / CONEXIONES ELECTRICAS / RACCORDEMENTS ELECTRIQUES

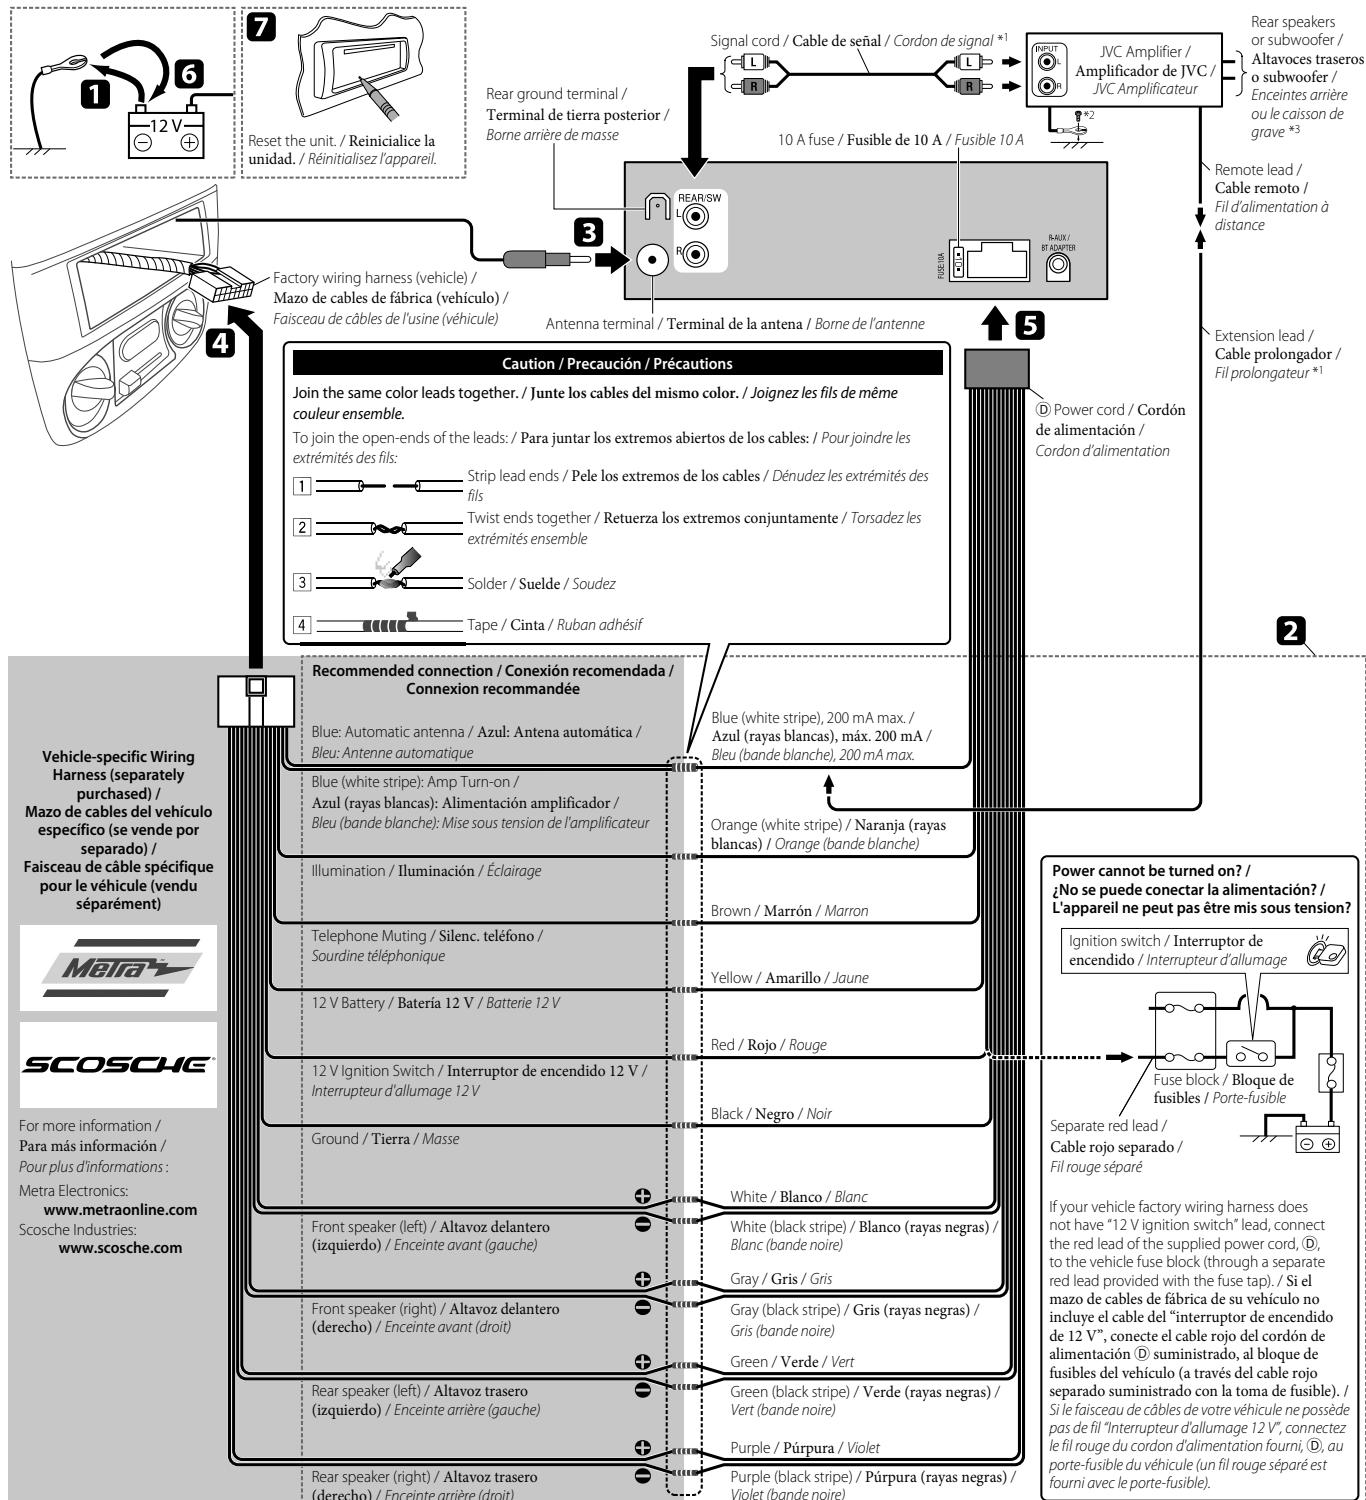

### Connecting the Bluetooth adapter or portable audio player / Conexión del adaptador Bluetooth o del reproductor de audio portátil / Connexion de l'adaptateur Bluetooth ou d'un lecteur audio portable

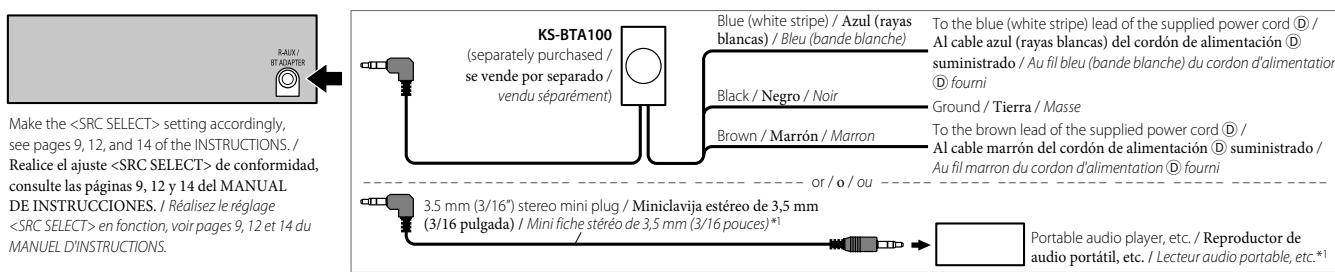

\*1 Not supplied for this unit.

\*2 Firmly attach the ground wire to the metallic body or to the chassis of the car—to the place uncoated with paint.

\*3 Make the <L/O MODE> setting accordingly, see page 11 of the INSTRUCTIONS.

\*1 Non fourni avec cet appareil.

\*2 Fixe firmemente el cable de tierra a la carrocería metálica o al chasis—a un lugar no cubierto con pintura.

\*3 Realice el ajuste <L/O MODE> de conformidad, consulte la página 11 del MANUAL DE INSTRUCCIONES.

\*1 Non fourni avec cet appareil.

\*2 Attachez solidement le fil de mise à la masse au châssis métallique de la voiture—à un endroit qui n'est pas recouvert de peinture.

\*3 Réalisez le réglage <L/O MODE> en fonction, voir page 11 du MANUEL D'INSTRUCTIONS.

# ERRATA / DRUCKFEHLERLISTE / ERRATA / FE DE ERRATAS / ERRATA CORRIGE / ERRATA / ERRATA / RÄTTELSE / ERRATA / PAINOVIRHEET

**Menu operations / Menü-Bedienungen / Menu-bediening / Operaciones de los menús / Operazioni con il menu /  
Operações com o Menu / Utilisation des menus / Menyfunktioner / Menufunktioner / Valikkotoiminnot**


				X	OK
ENGLISH	DEUTSCH	NEDERLANDS	ESPAÑOL	Menu item	
				DIMMER	AUDIO
				<b>DIMMER SET</b>	<p><b>AUTO</b>: Dims the display to the previous setting when you turn on the car headlights. / <b>ON</b>: Dims the display and button illumination (50% of the selected brightness level). / <b>OFF</b>: Cancels (100% of the selected brightness level).</p>
				<b>HPF</b>	<p><b>ON</b>: Activates the High Pass Filter. The unit selects the cutoff frequency to the rear speakers. / <b>OFF</b>: Deactivates (all signals are sent to the rear speakers).</p>
				<b>Menügegenstand</b>	<p><b>DIMMER SET</b> <b>AUTO</b>: Blendet das Display auf die vorherige Einstellung ab, wenn Sie die Autосcheinwerfer einschalten. / <b>ON</b>: Blendet die Display- und Tastenbeleuchtung ab (50% des gewählten Helligkeitspegels). / <b>OFF</b>: Aufheben (100% des gewählten Helligkeitspegels).</p>
				<b>HPF</b>	<p><b>ON</b>: Aktiviert den Hochpassfilter. Das Gerät wählt die Schwellenfrequenz zu den hinteren Lautsprechern. / <b>OFF</b>: Deaktiviert (alle Signale werden zu den hinteren Lautsprechern geleitet).</p>
				<b>Menu-onderdeel</b>	<p><b>DIMMER SET</b> <b>AUTO</b>: Het display wordt tot de voorgaande instelling gedimd wanneer u de autokoplampen aanzet. / <b>ON</b>: Het display en de toetsverlichting worden gedimd (tot 50% van het gekozen helderheidsniveau). / <b>OFF</b>: Geannuleerd (100% van het gekozen helderheidsniveau).</p>
				<b>HPF</b>	<p><b>ON</b>: Activeren van het hoogdoorlaatfilter. Het toestel kiest de drempelfrequentie voor de achterluidsprekers. / <b>OFF</b>: Uitgeschakeld (alle signalen worden naar de achterluidsprekers gestuurd).</p>
				<b>Opción del menú</b>	<p><b>DIMMER SET</b> <b>AUTO</b>: La pantalla se oscurece hasta el ajuste anterior al encender los faros del automóvil. / <b>ON</b>: Se oscurecen la pantalla y la iluminación de los botones (50% del nivel de brillo seleccionado). / <b>OFF</b>: Se cancela (100% del nivel de brillo seleccionado).</p>
				<b>HPF</b>	<p><b>ON</b>: Activa el filtro pasaaltos. La unidad selecciona la frecuencia de corte para los altavoces traseros. / <b>OFF</b>: Se desactiva (todas las señales se envían a los altavoces traseros).</p>
				<b>Voce del menu</b>	<p><b>DIMMER SET</b> <b>AUTO</b>: Quando si accendono le luci del veicolo la luce del display ritorna all'impostazione precedente. / <b>ON</b>: Attenua la luminosità del display e dei tasti al 50% del livello di luminosità selezionato. / <b>OFF</b>: Annulla l'attenuazione riportando la luminosità al 100% del livello selezionato.</p>
				<b>HPF</b>	<p><b>ON</b>: Attiva il filtro passa - alto. L'apparecchio seleziona la frequenza di taglio per i diffusori posteriori. / <b>OFF</b>: Disattiva il filtro (i diffusori posteriori ricevono i segnali audio completi).</p>
				<b>Opção de menu</b>	<p><b>DIMMER SET</b> <b>AUTO</b>: Escurece o ecrã para a definição anterior ao acender os faróis do automóvel. / <b>ON</b>: Escurece o ecrã e a iluminação dos botões (50% do nível de brilho selecionado). / <b>OFF</b>: Cancela (100% do nível de brilho selecionado).</p>
				<b>HPF</b>	<p><b>ON</b>: Activa o filtro passa-alto. O aparelho selecciona a frequência de corte para os altifalantes traseiros. / <b>OFF</b>: Desactiva (todos os sinais são enviados aos altifalantes traseiros).</p>
				<b>Article de menu</b>	<p><b>DIMMER SET</b> <b>AUTO</b>: Assombrit l'affichage au réglage précédent quand vous allumez les feux de la voiture. / <b>ON</b>: Assombrit l'affichage et l'éclairage des touches (50% du niveau de luminosité choisi). / <b>OFF</b>: Annule le réglage (100% du niveau de luminosité choisi).</p>
				<b>HPF</b>	<p><b>ON</b>: Met en service le filtre passe haut. L'appareil choisit la fréquence de coupure des enceintes arrière. / <b>OFF</b>: Met le réglage hors service (tous les signaux sont envoyés aux enceintes arrière).</p>
				<b>Menyalternativ</b>	<p><b>DIMMER SET</b> <b>AUTO</b>: Belysningen av teckenfönstret dämpas till föregående inställning när strålkastarna tänds. / <b>ON</b>: Belysningen av teckenfönstret och knapparna dämpas (50 % av vald ljussyrkenivå). / <b>OFF</b>: Avbländning kopplas ur (100 % av vald ljussyrkenivå).</p>
				<b>HPF</b>	<p><b>ON</b>: Högpassfiltret aktiveras. Bilstereo väljer gränsfrekvensen för bakre högtalare. / <b>OFF</b>: Avaktiveras (alla signaler skickas till bakre högtalare).</p>
				<b>Menuposter</b>	<p><b>DIMMER SET</b> <b>AUTO</b>: Nedbländer displayet til den foregående indstilling, når du tænder bilens forlygter. / <b>ON</b>: Nedbländer displayet og knapbelysningen (50% af det valgte lysstyrkeniveau). / <b>OFF</b>: Annulerer (100% af det valgte lysstyrkeniveau).</p>
				<b>HPF</b>	<p><b>ON</b>: Aktiverer højpasfilteret. Enheden vælger afskæringsfrekvensen til baghøjtalerne. / <b>OFF</b>: Deaktiverer (alle signaler sendes til baghøjtalerne).</p>
				<b>Valikkokohta</b>	<p><b>DIMMER SET</b> <b>AUTO</b>: Hiimittää näytön aiemmalle asetukselle, kun auton ajovalot kytketään päälle. / <b>ON</b>: Hiimittää näytön ja painikkeiden valaisusta (50 % valitusta kirkkaustasosta). / <b>OFF</b>: Peruuuttaa (100% valitusta kirkkaustasosta).</p>
				<b>HPF</b>	<p><b>ON</b>: Käynnistää ylipäästösuoittimen. Laite valitsee takakaiuttimen rajataajuuden. / <b>OFF</b>: Ottaa pois käytöstä (Kaikki signaalit lähetetään takakaiuttimiin).</p>
					<p><b>AUTO</b>: Changes the display and button illumination between the Day/Night adjustments in &lt;BRIGHTNESS&gt; setting when you turn off/on the car headlights. / <b>ON</b>: Selects the Night adjustments in &lt;BRIGHTNESS&gt; setting for the display and button illumination. / <b>OFF</b>: Selects the Day adjustments in &lt;BRIGHTNESS&gt; setting for the display and button illumination.</p>
					<p><b>ON</b>: Activates the High Pass Filter. Low frequency signals are cut off from the front/rear speakers. / <b>OFF</b>: Deactivates (all signals are sent to the front/rear speakers).</p>
					<p><b>AUTO</b>: Schaltet das Display und die Tastenbeleuchtung zwischen den Einstellungen für Tag/Nacht in der Einstellung &lt;BRIGHTNESS&gt; um, wenn Sie die Autoscheinwerfer aus-/einschalten. / <b>ON</b>: Wählt die Nacht-Einstellungen in der Einstellung &lt;BRIGHTNESS&gt; für das Display und die Tastenbeleuchtung. / <b>OFF</b>: Wählt die Tag-Einstellungen in der Einstellung &lt;BRIGHTNESS&gt; für das Display und die Tastenbeleuchtung.</p>
					<p><b>ON</b>: Aktiviert den Hochpassfilter. Niederfrequenzsignale werden von den vorderen/hinteren Lautsprechern ausgefiltert. / <b>OFF</b>: Deaktiviert (alle Signale werden zu den vorderen/hinteren Lautsprechern geleitet).</p>
					<p><b>AUTO</b>: Het verlichting van het display en de toetsen verandert automatisch naar de dag-/nachtfunctie met de &lt;BRIGHTNESS&gt;-instelling wanneer u de koplampen van de auto aan-/uitzet. / <b>ON</b>: De nachtfunctie met de &lt;BRIGHTNESS&gt;-instelling voor de verlichting van het display en de toetsen wordt gekozen. / <b>OFF</b>: De dagfunctie met de &lt;BRIGHTNESS&gt;-instelling voor de verlichting van het display en de toetsen wordt gekozen.</p>
					<p><b>ON</b>: Activeren van het hoogdoorlaatfilter. De lage frequentiesignalen worden niet naar de voor-/achterluidsprekers gestuurd. / <b>OFF</b>: Uitgeschakeld (alle signalen worden naar de voor-/achterluidsprekers gestuurd).</p>
					<p><b>AUTO</b>: Cambia la iluminación de la pantalla y de los botones entre los ajustes diurno/nocturno en &lt;BRIGHTNESS&gt; cuando usted apaga/enciende los faros del vehículo. / <b>ON</b>: Selecciona el ajuste nocturno en &lt;BRIGHTNESS&gt; para la iluminación de la pantalla y de los botones. / <b>OFF</b>: Selecciona el ajuste diurno en &lt;BRIGHTNESS&gt; para la iluminación de la pantalla y de los botones.</p>
					<p><b>ON</b>: Activa el filtro pasaaltos. Las señales de baja frecuencia se suprimen de los altavoces delanteros/traseros. / <b>OFF</b>: Se desactiva (todas las señales se envian a los altavoces delanteros/traseros).</p>
					<p><b>AUTO</b>: Commuta l'illuminazione diurna/notturna del display e dei tasti secondo l'impostazione &lt;BRIGHTNESS&gt; quando si accendono o spengono i fanali del veicolo. / <b>ON</b>: Seleziona l'illuminazione notturna del display e dei tasti secondo l'impostazione &lt;BRIGHTNESS&gt;. / <b>OFF</b>: Seleziona l'illuminazione diurna del display e dei tasti secondo l'impostazione &lt;BRIGHTNESS&gt;.</p>
					<p><b>ON</b>: Attiva il filtro passa-alto. Ai diffusori anteriori e posteriori non vengono inviate le basse frequenze. / <b>OFF</b>: Disattiva il filtro (i diffusori anteriori e posteriori ricevono tutte le frequenze).</p>
					<p><b>AUTO</b>: Muda a iluminação do visor e dos botões entre os ajustes de dia/noite na definição &lt;BRIGHTNESS&gt; quando os faróis do automóvel são desligados/ligados. / <b>ON</b>: Seleciona o ajuste de noite na definição &lt;BRIGHTNESS&gt; para a iluminação do visor e dos botões. / <b>OFF</b>: Seleciona o ajuste de dia na definição &lt;BRIGHTNESS&gt; para a iluminação do visor e dos botões.</p>
					<p><b>ON</b>: Activa o filtro passa-alto. Os sinais de frequência baixa são cortados os altifalantes frontais/traseiros. / <b>OFF</b>: Desativa (todos os sinais são enviados aos altifalantes frontais/traseiros).</p>
					<p><b>AUTO</b>: Change l'éclairage de l'affichage et des touches entre les réglages Jour et Nuit dans le réglage &lt;BRIGHTNESS&gt; quand vous allumez ou éteignez les feux du véhicule. / <b>ON</b>: Choisis le réglage Nuit dans le réglage &lt;BRIGHTNESS&gt; pour l'éclairage de l'affichage et des touches. / <b>OFF</b>: Choisis le réglage Jour dans le réglage &lt;BRIGHTNESS&gt; pour l'éclairage de l'affichage et des touches.</p>
					<p><b>ON</b>: Met en service le filtre passe haut. Les signaux basse fréquence sont coupés des enceintes avant/arrière. / <b>OFF</b>: Met le réglage hors service (tous les signaux sont envoyés aux enceintes avant/arrière.)</p>
					<p><b>AUTO</b>: Muda a iluminação do visor e dos botões entre os ajustes de dia/noite na definição &lt;BRIGHTNESS&gt; quando os faróis do automóvel são desligados/ligados. / <b>ON</b>: Seleciona o ajuste de noite na definição &lt;BRIGHTNESS&gt; para a iluminação do visor e dos botões. / <b>OFF</b>: Seleciona o ajuste de dia na definição &lt;BRIGHTNESS&gt; para a iluminação do visor e dos botões.</p>
					<p><b>ON</b>: Activa o filtro passa-alto. Os sinais de frequência baixa são cortados os altifalantes frontais/traseiros. / <b>OFF</b>: Desativa (todos os sinais são enviados aos altifalantes frontais/traseiros).</p>
					<p><b>AUTO</b>: Change l'éclairage de l'affichage et des touches entre les réglages Jour et Nuit dans le réglage &lt;BRIGHTNESS&gt; quand vous allumez ou éteignez les feux du véhicule. / <b>ON</b>: Choisis le réglage Nuit dans le réglage &lt;BRIGHTNESS&gt; pour l'éclairage de l'affichage et des touches. / <b>OFF</b>: Choisis le réglage Jour dans le réglage &lt;BRIGHTNESS&gt; pour l'éclairage de l'affichage et des touches.</p>
					<p><b>ON</b>: Met en service le filtre passe haut. Les signaux basse fréquence sont coupés des enceintes avant/arrière. / <b>OFF</b>: Met le réglage hors service (tous les signaux sont envoyés aux enceintes avant/arrière.)</p>
					<p><b>AUTO</b>: Teckenfönstrets och knapparnas belysning ändras mellan lägerna för dagsljus/mörker enligt inställningen &lt;BRIGHTNESS&gt;, när strålkastarna släcks/ränds. / <b>ON</b>: Läget för mörker enligt inställningen &lt;BRIGHTNESS&gt; väljs för teckenfönstrets och knapparnas belysning. / <b>OFF</b>: Läget för dagsljus enligt inställningen &lt;BRIGHTNESS&gt; väljs för teckenfönstrets och knapparnas belysning.</p>
					<p><b>ON</b>: Högpassfiltret aktiveras. Lågfrekventa signaler utestängs från främre/bakre högtalare. / <b>OFF</b>: Avaktiveras (alla signaler skickas till främre/bakre högtalare).</p>
					<p><b>AUTO</b>: Skifter display- og knapbelysning mellom dag/nat-indstillingen i &lt;BRIGHTNESS&gt; indstilling, når du slukker/tænder bilens forlygter. / <b>ON</b>: Vælger nat-indstillingen i &lt;BRIGHTNESS&gt; indstilling for display- og knapbelysningen. / <b>OFF</b>: Vælger dag-indstillingen i &lt;BRIGHTNESS&gt; indstilling for display- og knapbelysningen.</p>
					<p><b>ON</b>: Aktiverer højpasfilteret. Lavfrekvenssignaler afskæres fra front/baghøjtalerne. / <b>OFF</b>: Deaktiverer (alle signaler sendes til front/baghøjtalerne).</p>
					<p><b>AUTO</b>: Muuttaa näytön ja painikkeiden valaistusta päivä/yösalajien väliin asetuksella &lt;BRIGHTNESS&gt; kytettäessä auton ajovalot pois/päälle. / <b>ON</b>: Valitsee yösalajien asetuksella &lt;BRIGHTNESS&gt; näytölle ja painikkeiden valaistukselle. / <b>OFF</b>: Valitsee päiväsalajien asetuksella &lt;BRIGHTNESS&gt; näytölle ja painikkeiden valaistukselle.</p>
					<p><b>ON</b>: Käynnistää korkeitten ohitusuoittimen. Matalataajuiset signaalit leikataan etu/takakaiuttimista. / <b>OFF</b>: Lopettaa (kaikki singaalit lähetetään etu/takakaiuttimiin).</p>

# СПИСОК ОПЕЧАТОК / ERRATA / غلط نامه / ERRATA / ПАРОРАМАТА / ARATP / ERRATA / OPRAVENKA / ERRATA / ПЕРЕЛІК ПОМИЛОК

**Операции с меню / Menü işlemleri / عمليات منو / Funkcje menu / Λειτουργίες μενού / Operațiile meniului /  
Операции в менюто / Ovládání nabídky / Menüümüveletek / Работа з меню**

			<b>X</b>	<b>OK</b>	
РУССКИЙ	Элемент меню	DIMMER SET	<b>AUTO</b> : Затемнение дисплея в соответствии с предыдущей настройкой при включении фар. / <b>ON</b> : Снижается яркость подсветки дисплея и кнопок (на 50% от выбранного уровня яркости). / <b>OFF</b> : Отмена (100% выбранного уровня яркости).		
			<b>AUTO</b> : Изменение подсветки дисплея и кнопок между значениями "Day"/"Night" в настройке <BRIGHTNESS> при выключении или включении фар автомобиля. / <b>ON</b> : Выбор значения "Night" в настройке <BRIGHTNESS> для подсветки дисплея и кнопок. / <b>OFF</b> : Выбор значения "Day" в настройке <BRIGHTNESS> для подсветки дисплея и кнопок.		
TÜRKÇE	Menü öğesi	DIMMER	<b>ON</b> : Включение настройки пропускного фильтра высоких частот "High Pass Filter". Устройство выбирает частоту отсечки для задних динамиков. / <b>OFF</b> : Выключение (все сигналы передаются в задние динамики).	<b>ON</b> : Включение пропускного фильтра высоких частот. Осуществляется отсечка низкочастотных сигналов для передних или задних динамиков. / <b>OFF</b> : Выключение (все сигналы передаются в передние или задние динамики).	
		AUDIO	<b>HPF</b>	<b>ON</b> : Araban farlarını açtıktan sonra ekran önceki ayara kararır. / <b>OFF</b> : Iptal eder (Seçilen parlaklık düzeyinin %100'ü).	<b>ON</b> : Araç farını açtıktan sonra ekran ve dükme aydınlatmasını Gece/Gündüz arası arasında değiştirir. / <b>ON</b> : Ekran ve dükme aydınlatması için <BRIGHTNESS> ayarından Night (Gece) ayarını seçer. / <b>OFF</b> : Ekran ve dükme aydınlatması için <BRIGHTNESS> ayarından Day (Gündüz) ayarını seçer.
فارسی	نحوه نمودار	DIMMER	<b>HPF</b>	<b>ON</b> : Yüksek Geçiş Filtresini etkinleştirir. Ünite arka hoparlörlerde giden kesme frekansını seçer. / <b>OFF</b> : Devre dışı bırakır (tüm sinyaller arka hoparlörler gönderilir).	<b>ON</b> : Yüksek Geçiş Filtresini etkinleştirir. Ön/arka hoparlörlerden düşük frekanslı sinyaller kesilir. / <b>OFF</b> : Devre dışı bırakır (ön/arka hoparlörler tüm sinyaller gönderilir).
		AUDIO	<b>HPF</b>	<b>AUTO</b> : هنگامی که چراغهای آتو می‌بیل را شف تغییر می‌دهد. در حالت <BRIGHTNESS> هنگامی که چراغهای آتو می‌بیل را خاموش با روشن می‌کند. / <b>ON</b> : تغییرات شف در حالت <BRIGHTNESS> را برای روشنایی صفحه نمایش و دکمه انتخاب می‌کند. / <b>OFF</b> : تغییرات شف در حالت <BRIGHTNESS> را برای روشنایی صفحه نمایش و دکمه انتخاب می‌کند.	<b>ON</b> : روشنایی صفحه نمایش و دکمه را بین تغییرات روز یا شب تغییر می‌دهد. در حالت <BRIGHTNESS> هنگامی که چراغهای آتو می‌بیل را خاموش با روشن می‌کند. / <b>ON</b> : تغییرات شف در حالت <BRIGHTNESS> را برای روشنایی صفحه نمایش و دکمه انتخاب می‌کند. / <b>OFF</b> : تغییرات شف در حالت <BRIGHTNESS> را برای روشنایی صفحه نمایش و دکمه انتخاب می‌کند.
POLSKI	Pozycja menu	DIMMER	<b>HPF</b>	<b>ON</b> : Filtr "Maj Pas" (High Pass) (Rafał mi knd. Dostęga frakcji filtra krdn blndgk hāi qubr rātāx mi knd. (Hēm̄ sibgħaliha b blndgħi hāi glu uqab fil-filtri mi shuñon). / <b>OFF</b> : Filtr "Maj Pas" (High Pass) (Rafał mi knd. Filtri mi knd. (Hēm̄ sibgħaliha b blndgħi hāi glu uqab ar-salmi mi shuñon).	<b>ON</b> : Filtr "Maj Pas" (High Pass) (Rafał mi knd. Filtri mi knd. (Hēm̄ sibgħaliha b blndgħi hāi glu uqab ar-salmi mi shuñon). / <b>OFF</b> : Filtr "Maj Pas" (High Pass) (Rafał mi knd. Filtri mi knd. (Hēm̄ sibgħaliha b blndgħi hāi glu uqab ar-salmi mi shuñon).
		AUDIO	<b>HPF</b>	<b>ON</b> : Aktywacja filtra niskich częstotliwości. Urządzenie wybiera częstotliwość wycinaną w tylnych głośnikach. / <b>OFF</b> : Wyłączenie (wszystkie sygnały przesypane są do tylnych głośników).	<b>ON</b> : Aktywacja filtra niskich częstotliwości. Niskie częstotliwości zostają wycięte w przednich/tylnych głośnikach. / <b>OFF</b> : Wyłączenie (wszystkie sygnały przesypane są do przednich/tylnych głośników).
ΕΛΛΗΝΙΚΑ	Στοχείο ιερού	DIMMER	<b>HPF</b>	<b>ON</b> : Μειώνει το φωτισμό της οθόνης στην προηγούμενη ρύθμιση όταν αναβέτε τους προβολείς. / <b>ON</b> : Μειώνει το φωτισμό της οθόνης και των κουμπίων (50% του επιλεγμένου επιπέδου φωτεινότητας). / <b>OFF</b> : Ακυρώνει (100% του επιλεγμένου επιπέδου φωτεινότητας).	<b>ON</b> : Επιλέγει της φωτισμό οθόνης και των κουμπίων μεταξύ των ρυθμίσεων Ημέρα/Νύχτας στη ρύθμιση <BRIGHTNESS> όταν πλευρούποτείτε/επιλέγετε τους προβολείς του αυτοκινήτου. / <b>ON</b> : Επιλέγει της φωτισμό οθόνης και των κουμπίων μεταξύ της φωτισμό οθόνης και των κουμπίων στη ρύθμιση <BRIGHTNESS> για το φωτισμό οθόνης και κουμπίων. / <b>OFF</b> : Επιλέγει της φωτισμό οθόνης και κουμπίων στη ρύθμιση <BRIGHTNESS> για το φωτισμό οθόνης και κουμπίων.
		AUDIO	<b>HPF</b>	<b>ON</b> : Ενεργοποιεί το φίλτρο υψηλής διέλευσης. Η μονάδα επιλέγει τη συχνότητα αποκοπής προς τα πιο χειρά. / <b>OFF</b> : Απενεργοποίηση (όλα τα σήματα στέλνονται στα πιο χειρά).	<b>ON</b> : Ενεργοποιεί το φίλτρο υψηλής διέλευσης. Τα σήματα χαρμής συχνότητας διακόπονται από τα μπροστινά/πίσω χειρά. / <b>OFF</b> : Απενεργοποίηση (όλα τα σήματα στέλνονται στα μπροστινά/πίσω χειρά).
ROMÂNĂ	Element de meniu	DIMMER	<b>HPF</b>	<b>ON</b> : Activează filtrul de frecvențe înalte. Unitatea selectează frecvența de filtrare a boxelor din spate. / <b>OFF</b> : Deactivează (toate semnalele sunt trimise la boxele din spate).	<b>ON</b> : Activează filtrul de frecvență joasă și setarea de la boxele din față/spate. / <b>OFF</b> : Deactivează (toate semnalele sunt trimise la boxele din față/spate).
		AUDIO	<b>HPF</b>	<b>ON</b> : Reduce luminozitatea ecranului la setările anterioare când porniți farurile. / <b>ON</b> : Reduce luminozitatea ecranului și a butoanelor (50% din nivelul de luminozitate selectat). / <b>OFF</b> : Anulează (100% din nivelul de luminozitate selectat).	<b>ON</b> : Modifică iluminarea ecranului și a butonului între reglajele Noapte/Zi la setarea <BRIGHTNESS> când opriți/porniți farurile mașinii. / <b>ON</b> : Selectează reglajele de Noapte în setarea <BRIGHTNESS> pentru iluminarea ecranului și a butonului. / <b>OFF</b> : Selectează reglajele de Zi în setarea <BRIGHTNESS> pentru iluminarea ecranului și a butonului.
БЪЛГАРСКИ	Елемент на меню	DIMMER	<b>HPF</b>	<b>ON</b> : Активира ВЧ филтър. Уредът избира разпределението на честота към задните високоговорители. / <b>OFF</b> : Деактивира (всички сигнали се изпращат към задните високоговорители).	<b>ON</b> : Активира ВЧ филтър. Нискочестотните сигнали се отграждат от предните/задните високоговорители. / <b>OFF</b> : Деактивира (всички сигнали се изпращат към предните/задните високоговорители).
		AUDIO	<b>HPF</b>	<b>ON</b> : Затъмнява дисплея до предишната настройка, когато включите фаровете на колата. / <b>ON</b> : Затъмнява светенето на дисплея и бутоните (на 50% от избраното ниво на яркост). / <b>OFF</b> : Отмена (100% избраното ниво на яркост).	<b>ON</b> : Сменя осветлението на дисплея и бутоните между дневни и нощи настройки в настройка <BRIGHTNESS>, когато изключвате/включвате фаровете на колата. / <b>ON</b> : Избира нощи настройки в настройка <BRIGHTNESS> за осветлението на дисплея и бутоните. / <b>OFF</b> : Избира дневни настройки в настройка <BRIGHTNESS> за осветлението на дисплея и бутоните.
ČESKÝ	Polohá menu	DIMMER	<b>HPF</b>	<b>ON</b> : Zapíná filtr vysokého průchodu. Tato jednotka zvolí mezní frekvenci pro zadní reproduktory. / <b>OFF</b> : Vypnutí (všechny signály jsou posílány do zadních reproduktorů).	<b>ON</b> : Zapíná filtr vysokého průchodu. U předních/zadních reproduktorů jsou využity signály nízké frekvence. / <b>OFF</b> : Vypnutí (všechny signály jsou posílány do předních/zadních reproduktorů).
		AUDIO	<b>HPF</b>	<b>ON</b> : A: gépjármű fényszóróinak bekapsolásakor a kijelzőt a korábbi beállításnak megfelelően elhalványítja. / <b>ON</b> : Csökkenti a kijelző és a gombok megvilágítását (a kiválasztott fényerő 50%-ára). / <b>OFF</b> : Megszakítás (a kiválasztott fényerő 100%-al).	<b>ON</b> : Vált a kijelzőt és a gombok nappali/éjszakai megvilágításának <BRIGHTNESS> beállításai között, ha ki- és bekapsolja a gépjármű fényszóróit. / <b>ON</b> : Kiválasztja a kijelzőt és a gombok éjszakai megvilágításának <BRIGHTNESS> beállításait. / <b>OFF</b> : Kiválasztja a kijelzőt és a gombok nappali megvilágításának <BRIGHTNESS> beállításait.
MAGYAR	Menüelem	DIMMER	<b>HPF</b>	<b>ON</b> : Aktiválja a felüláteresztsz szűrőt. A készülék kiválasztja a hátsó hangszórók határfrekvenciáját. / <b>OFF</b> : Deaktiválás ( minden jel a hátsó hangszóróra kerül).	<b>ON</b> : Aktiválja a felüláteresztsz szűrőt. Az alacsonyfrekvenciás jelek az előlő/hátsó hangszórók nem kapják meg. / <b>OFF</b> : Deaktiválás ( minden jel az előlő/hátsó hangszóróra kerül).
		AUDIO	<b>HPF</b>	<b>ON</b> : Zmenšuje jaskravosť displeja do pôvodnej nastavenky pri vklodení pôsobivosti napäčky. / <b>ON</b> : Zmenšenie osvetlenia displeja a tlačítok medzi nastavením Den/noc v nastavení <BRIGHTNESS>, když rozsvítíte/zhasnete svetlo automobilu. / <b>ON</b> : V nastavení <BRIGHTNESS> zvolí rovnomenné osvetlenie displeja a tlačítok nastavení Noc. / <b>OFF</b> : V nastavení <BRIGHTNESS> zvolí rovnomenné osvetlenie displeja a tlačítok nastavení Den.	<b>ON</b> : Zmena osvetlenia displeja a tlačítok medzi nastavením Day/Night v nastavení <BRIGHTNESS>, když rozsvítíte/zhasnete svetlo automobilu. / <b>ON</b> : Vybera nočné nastavenie v naštreyke <BRIGHTNESS> za osvetlenie displeja a tlačítok. / <b>OFF</b> : Vybera deňské nastavenie v naštreyke <BRIGHTNESS> za osvetlenie displeja a tlačítok.
УКРАЇНА	Пункт меню	DIMMER	<b>HPF</b>	<b>ON</b> : Активізація фільтра низьких частот. Автомагнітола обирає граничну частоту задніх колонок. / <b>OFF</b> : Вимкнення (всі сигнали відтворюються через задні колонки).	<b>ON</b> : Активізація фільтра низьких частот. Сигнали низьких частот з сигналами граничної частоти передніх/задніх колонок. / <b>OFF</b> : Вимкнення (всі сигнали відтворюються через передні/задні колонки).
		AUDIO	<b>HPF</b>	<b>ON</b> : Включение пропускного фильтра высоких частот. Устройство выбирает частоту отсечки для задних динамиков. / <b>OFF</b> : Выключение (все сигналы передаются в задние динамики).	<b>ON</b> : Включение пропускного фильтра высоких частот. Осуществляется отсечка низкочастотных сигналов для передних или задних динамиков. / <b>OFF</b> : Выключение (все сигналы передаются в передние или задние динамики).

REQUINED  
TO ATTACH THE FRONT CONTROL  
PANEL FOR THE MAIN UNIT,  
USE THE PROVIDED SCREW TO  
ATTACH THE CONTROL PANEL TO  
THE MAIN UNIT.

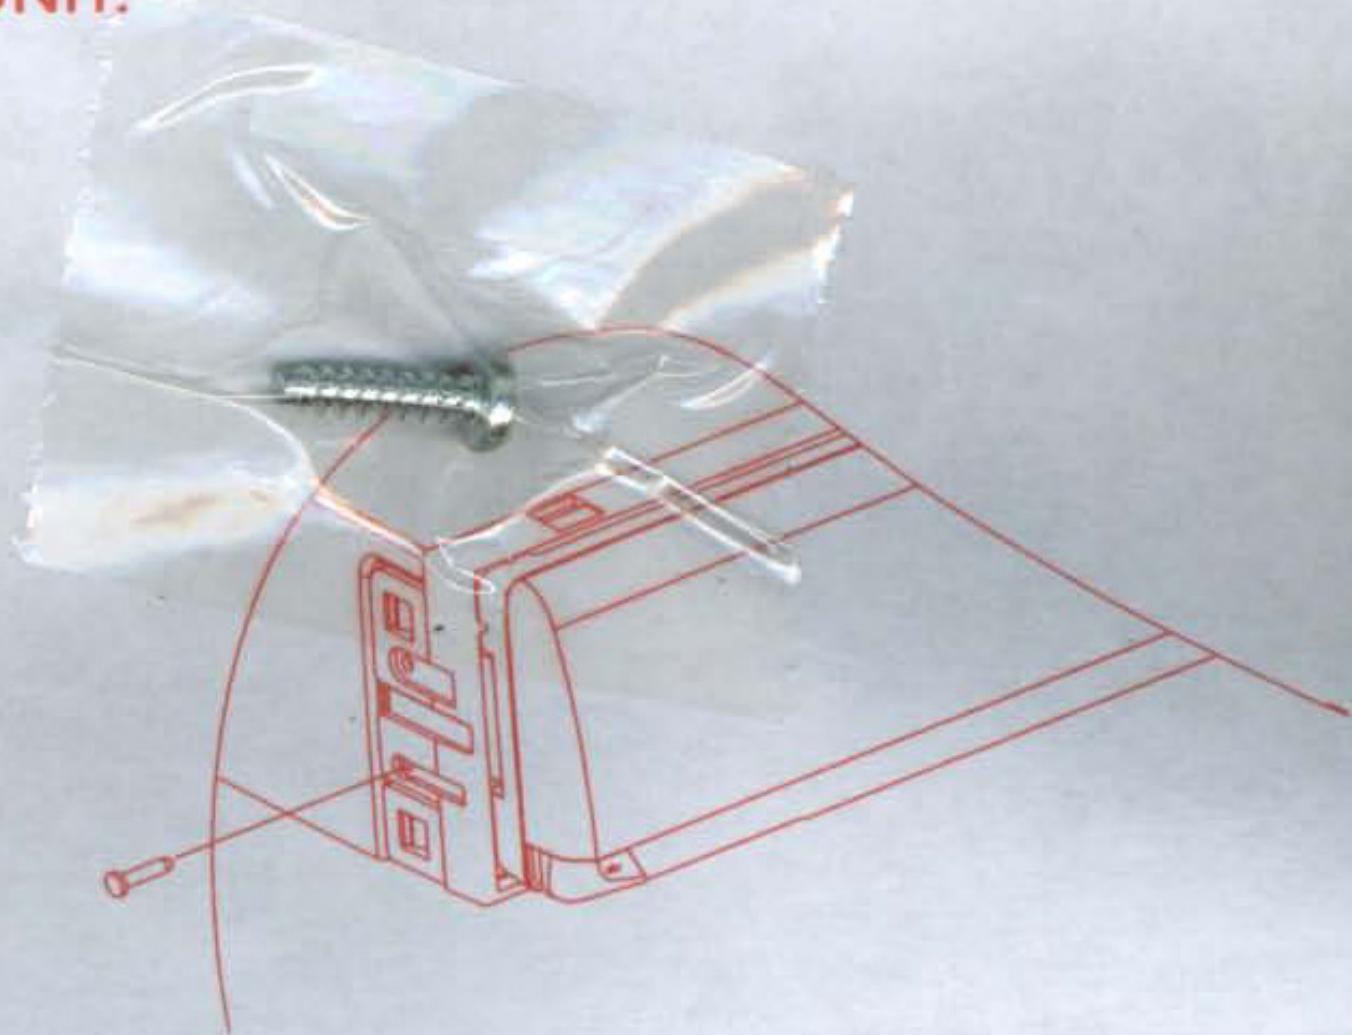

GE40401-001A

**REMOVE THIS LABEL FROM CABLE BEFORE USE.**

**RETIRO LA ETIQUETA DEL CABLE ELÉCTRICO ANTES DE USAR.**

**RETIROZ CETTE ÉTIQUETTE DU CÂBLE AVANT UTILISATION.**




## **CAUTION**

**CONNECT BLACK WIRE (① GND) TO GROUND FIRST.  
OTHERWISE, DAMAGE TO YOUR UNIT MAY OCCUR.**

**INCORRECT CONNECTION CAUSES SERIOUS DAMAGE TO THIS UNIT  
PLEASE READ INSTALLATION/CONNECTION MANUAL CAREFULLY.**

**①**


**CONNECT GROUND FIRST**

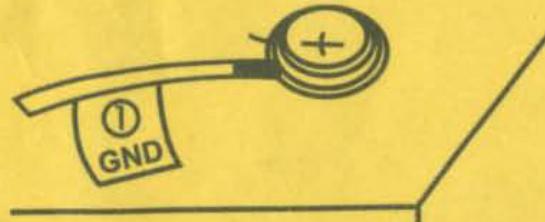

**METALLIC BODY OR CHASSIS  
OF THE CAR**


**②**

**CONNECT OTHER WIRES**

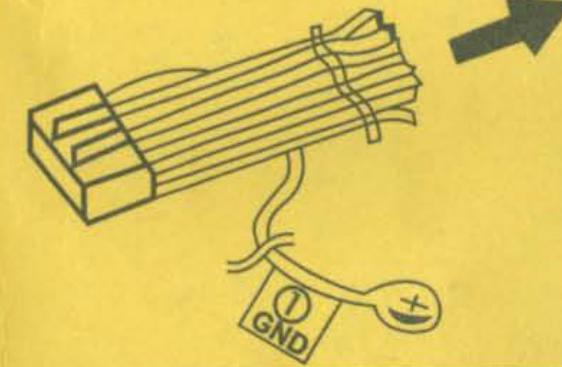


**③**

**CONNECT ANTENNA TERMINAL**

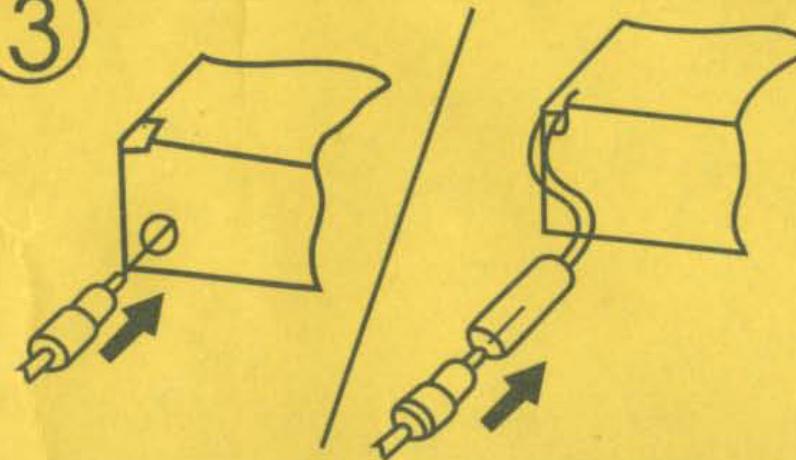

**④**

**CONNECT POWER CORD TO  
THE UNIT**

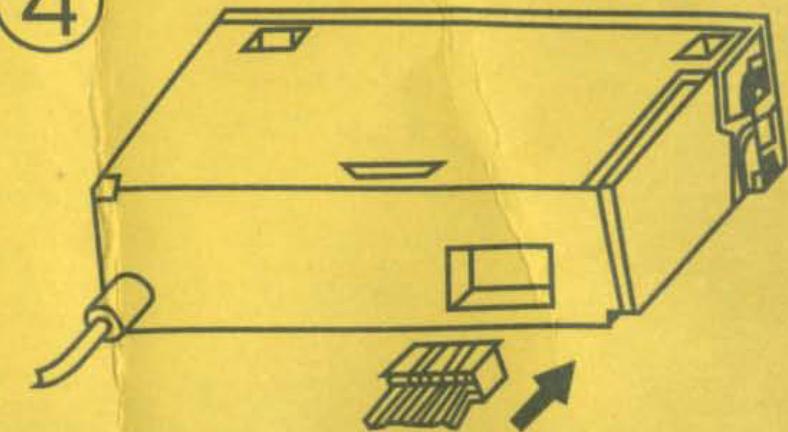

Please do not send products or other correspondence to this address.

JVC AMERICAS CORP.  
1700 Valley Road  
Wayne, NJ 07470

PLEASE  
PLACE  
STAMP  
HERE



PO BOX 1189  
BEDFORD, TX 76095-1189



## PRODUCT REGISTRATION CARD / QUESTIONNAIRE

### ***USA CUSTOMERS ONLY***

Registering your product will allow us to contact you in the unlikely event a product safety notification is required.

This form is for Product Registration purposes only. Failure to return this form does not diminish your rights during the warranty period.

**THANK YOU FOR PURCHASING THIS JVC PRODUCT**

**REGISTER ONLINE AT: *REGISTER.JVC.COM***



Register online at REGISTER.JVC.COM  
and receive a special offer!

## PRODUCT REGISTRATION

First Name: \_\_\_\_\_

Last Name: \_\_\_\_\_

Address: \_\_\_\_\_

Apt.# \_\_\_\_\_

City: \_\_\_\_\_

State: \_\_\_\_\_

Zip Code: \_\_\_\_\_

Phone Number: \_\_\_\_\_

E-Mail Address: \_\_\_\_\_

- |   |     |    |
|---|-----|----|
| 1) Would you like to receive the JVC Community e-mail newsletter? | Yes | No |
| 2) Would you like to receive special offers from JVC?             | Yes | No |
| 3) Have you purchased an extended warranty for this product?      | Yes | No |

Date of Purchase \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Purchase Price: \_\_\_\_\_

Dealer: \_\_\_\_\_

On a scale of 1 to 5, with 5 being the best, please rate each of the following attributes about your new JVC product.

Performance	1	2	3	4	5
Features	1	2	3	4	5
Ease of use	1	2	3	4	5
Design	1	2	3	4	5
Value	1	2	3	4	5

### COMMENTS:

---

---

---

Thank You  
for completing  
this questionnaire.

CANADA  
ONLY

JVC

CANADA  
SEULEMENT

**OWNER'S COPY OF WARRANTY CARD**  
**COPIE D'ENREGISTREMENT DE LA GARANTIE**  
**DU PROPRIÉTAIRE**

(Save sales docket together with this warranty card, as a proof of date of purchase.  
La facture et cette garantie sont vos preuves de la date d'achat; rangez-les.)

MODEL :  SERIAL NO. :   
MODÈLE :  NO DE SÉRIE :   
Purchase from:  Date purchased :   
Acheté chez :  Date acheté :   
Dealer's Address :   
Adresse du Vendeur :   
No.  Street   
No.  Rue   
City or Town  Prov.  Postal Code   
Ville  Prov.  Code Postal   
Owner's Name   
Nom du Propriétaire :   
Owner's Address :   
Adresse du Propriétaire :   
No.  Street  Apt.   
No.  Rue  App.   
City or Town  Prov.  Postal Code   
Ville  Prov.  Code Postal

BT-52008-1  
(1007)

Detach here.

à découper ici

Printed in Indonesia

**WARRANTY CONTROL CARD**  
**CARTE DE CONTRÔLE DE LA GARANTIE**

**IMPORTANT:** This warranty control card must be filled in and posted to the address indicated on the back hereof or register via internet within 7 (seven) days from the date of purchase.

**IMPORTANT:** Cette carte doit être renvoyée dûment remplie à l'adresse indiquée au verso, dans les 7 jours de la date d'achat ou aller sur le site par internet pour l'enregistrement.

(PLEASE PRINT/EN LETTRES MOULÉES)

MODEL :  SERIAL NO. :   
MODÈLE :  NO DE SÉRIE :   
Purchased from:  Date purchased :   
Acheté chez :  Date acheté :   
Dealer's Address :   
Adresse du Vendeur :   
No.  Street   
No.  Rue   
City or Town  Prov.  Postal Code   
Ville  Prov.  Code Postal   
Owner's Name   
Nom du Propriétaire :   
Owner's Address :   
Adresse du Propriétaire :   
No.  Street  Apt.   
No.  Rue  App.   
City or Town  Prov.  Postal Code   
Ville  Prov.  Code Postal

You may also register on-line  
at:[www.jvc.ca](http://www.jvc.ca)

Vous pouvez également vous  
inscrire par internet à:[www.jvc.ca](http://www.jvc.ca)

Warranty applies only  
to PRODUCT distributed  
in Canada by JVC Canada  
Inc.

JVC

La garantie s'applique  
seulement aux PRODUITS  
distribués au Canada par  
JVC Canada Inc.

# WARRANTY GARANTIE

JVC CANADA INC.

21 Finchdene Square, Toronto, ON M1X 1A7

TEL: (416) 293-1311 FAX: (416) 293-8208

<http://www.jvc.ca>

JVC CANADA INC. (hereafter called "JVC") gives the following express warranty for each new JVC product distributed in Canada by JVC and sold by an authorized JVC dealer.

JVC warrants that this JVC product is free, under normal use and maintenance, from any defects in material and workmanship subject to the following terms and conditions:

1. To Obtain Warranty Service:
  - (a) The JVC Warranty Control Card herein provided must be completed in full and posted or registered via internet within 7 days of date of purchase of the JVC product.
  - (b) This JVC Warranty Control Card must be completed in full and presented together with proof of purchase of the JVC product requiring service.
  - (c) The JVC product must be brought in for service to an authorized JVC Service Centre.
2. Limitation:  
This Warranty shall not apply to:
  - (a) Repair or replacement of any cabinets, batteries, plates, connection cords, antennas, dust covers, knobs, speaker grills, speaker cones, projection screens, projection screen savers, and all accessories.
  - (b) Any defects caused or repairs required as a result of misuse, abusive operation, negligence, improper use and/or insufficient care.
  - (c) Any defect caused or repairs required as a result of not following the instructions in the operation manual.
  - (d) Any JVC product tampered with, adjusted or repaired by any party other than JVC or authorized JVC Service Centre personnel.
2. Restrictions:  
Cette garantie ne s'applique pas aux:
  - (a) Réparation ou remplacement de tout cabinet, batteries, panneau avant, cordons de raccord, antennes, housses de protection, boutons, couverts de haut-parleur, cônes de haut-parleur, écrans de projection, protecteurs d'écran de projection et tous les accessoires.
  - (b) Tous défauts occasionnés ou réparations requises suite à une utilisation abusive, mauvaise, négligente et/ou une utilisation incorrecte.
  - (c) Tous défauts occasionnés ou réparations requises suite à l'omission de suivre les recommandations du manuel d'instruction.
  - (d) Tout produit JVC altéré, ajusté ou réparé par tout autre entreprise que JVC ou un centre de service d'entretien ou de service autorisé JVC.

- (e) Any JVC products on which the serial number has been defaced, modified or removed.
- (f) Maintenance, cleaning or periodic check-up
- (g) Conversion to foreign or domestic voltage or frequency.
- (h) Any JVC product without the Canadian Electrical Safety Regulations ID.
- (i) Any JVC products used for commercial or institutional, rental, or display purposes.
  - Parts.....1 year (except video head - 90 days)
  - Labour... 90 days
- (j) Any JVC product which has been resold and no longer owned by the original purchaser.
- (k) Product purchased from "outside Canada", "bankruptcy" or "liquidator".

**WARRANTY TERM (VALID FROM THE DATE OF PURCHASE)  
CONDITIONS DE GARANTIE (VALABLE à PARTIR DE LA DATE D'ACHAT)**

PRODUCT PRODUIT	PARTS (Years) PIECES (années)	Labour (Years) MAIN-D'OEUVRE (années)
Projection TV In-Home Service Colour TV In-Home (25" and above) D-ILA Rear Projection In-Home Service LCD TV In-Home Service (25" and above) Écrans de projection Service à Domicile Écrans de TV Couleur Service à Domicile (25" et plus) TV projection arrière D-ILA Service à Domicile Écrans de LCD Service à Domicile (25" et plus)	1	1
* In-home service to be provided where available Where it is not available, the Purchaser must assume the responsibility and expense for the proper packing, shipment and all costs associated with the delivery of the equipment to and from the closest JVC Authorized Service Centre.		
* Service à domicile fourni par un détaillant disponible. S'il n'y a pas de service JVC disponible à proximité, l'acheteur doit assumer la responsabilité et les coûts pour un emballage adéquat, l'expédition, ainsi que tous les coûts associés à la livraison de l'équipement chez et depuis le détaillant JVC autorisé le plus près pour un service d'entretien.		
Receivers and Home Speakers purchased separately, Front Projection and Car Audio "ARSENAL" Series Récepteurs et Hauts-Parleurs achetés séparément, Projecteur Avant et Audio d'Auto de Série « ARSENAL »	2	2
AC Adapters, Remote Controls, Headphones, Microphones and Projector Lamps Adaptateurs AC, Télécommande, Casque D'écoute, Microphones et Lampe de Projecteur	90 DAYS 90 JOURS	90 DAYS 90 JOURS
Wood Cone Speakers Enceinte à Cône en Bois	5	5
All Other Categories Toutes les autres catégories	1	1

- (l) Any defects caused by fire, flood, lightning, power surge, or other events beyond the control of JVC.
- (m) FOR AUTO PRODUCTS  
Warranty does not cover elimination of car static or electrical interferences, cleaning of head, adjustments, or labour cost for the removal or reinstallation of the unit for repair.

**3. Standards:**

If any defects should be found in a JVC product within the applicable terms, necessary repairs shall be made at no cost to the purchaser for parts or labour when JVC acknowledges that such defects are due to faulty material or workmanship.

**4. Exclusion of All Other Express Warranties:**  
This warranty constitutes the entire express warranty given by JVC for JVC products and no dealer or service centre personnel or his, its or their agent or employee is, or are authorized to extend or enlarge this warranty on behalf of JVC.

**5. Disclaimer of Consequential Damage:**  
To the extent the law permits JVC disclaims any responsibility for loss of time or use of its product, transportation costs, or any other indirect, incidental or consequential damage or inconvenience.

And mail to the address below.  
**You may also register on-line  
at:[www.jvc.ca](http://www.jvc.ca)**

New

Detach here.

- (l) Tout dommage causé par le feu, une inondation, un éclair, une surtension ou tout autre événement hors du contrôle de JVC.
- (m) POUR LES PRODUITS D'AUTOMOBILE  
La garantie ne couvre pas l'élimination d'interférences statiques ou électriques de la voiture, le nettoyage de tête, les ajustements et les coûts de main d'œuvre associés à l'enlèvement ou à la réinstallation de l'unité pour réparation.

**3. Critères:**

Si un produit JVC s'avérait défectueux, selon les conditions applicables, les réparations nécessaires seront effectués sans coûts additionnels à l'acheteur pour les pièces et la main d'œuvre lorsque JVC reconnaît que de telles défectuosités sont causées par une défectuosité de matériel ou de fabrication.

**4. Exclusion de toutes autres garanties expresses :**  
Cette garantie constitue l'entièvre garantie express donnée par JVC pour les produits JVC. Nul représentant ou employé d'un détaillant ou d'un service d'entretien n'est autorisé à prolonger cette garantie au nom de JVC.

**5. Dénégation des dommages indirects :**  
Dans la mesure permise par la loi, JVC nie toute responsabilité pour perte de temps ou d'usage de ses produits, des coûts de transport ou tout autre dommage ou inconvenient indirect, accidentel et conséquent.

Veuillez poster à l'adresse ci-dessous.

**Nouveau**  
Vous pouvez également vous  
enregistrer par internet à; [www.jvc.ca](http://www.jvc.ca)

à découper ici

Place stamp  
here  
Placez votre  
timbre ici

**JVC CANADA INC.**

21 Finchdene Square  
Toronto, ON M1X 1A7

# **TO OUR VALUED CUSTOMER**

---

**THANK YOU FOR PURCHASING THIS JVC PRODUCT.  
WE WANT TO HELP YOU ACHIEVE A PERFECT EXPERIENCE.**

**NEED HELP ON HOW TO HOOK UP?  
NEED ASSISTANCE ON HOW TO OPERATE?  
NEED TO LOCATE A JVC SERVICE CENTER?  
LIKE TO PURCHASE ACCESSORIES?**

**JVC<sup>®</sup> IS HERE TO HELP!**

**TOLL FREE: 1(800)252-5722  
<http://www.jvc.com>**

Remember to retain your Bill of Sale for Warranty Service.

---

**Do not attempt to service the product yourself**

---

**Caution**

To prevent electrical shock, do not open the cabinet.  
There are no user serviceable parts inside.  
Please refer to qualified service personnel for repairs.

---



# LIMITED WARRANTY

ONLY FOR PRODUCT PURCHASED IN U.S.A.

1-1 USA ONLY

JVC Americas Corp. (JVC) warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL RETAIL PURCHASER to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of original purchase for the period shown below. ("The Warranty Period")

PARTS	1 YR	LABOR	1 YR
-------	------	-------	------

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN THE COMMONWEALTH OF PUERTO RICO.

## WHAT WE WILL DO:

If this product is found to be defective within the warranty period, JVC will repair or replace defective parts with new or rebuilt equivalents at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products may be brought to a JVC authorized service center on a carry-in basis. Color televisions with a screen size of 37" class or greater qualify for in-home service. In such cases, a technician will come to your home and either repair the TV there or remove and return it if it cannot be repaired in your home.

## WHAT YOU MUST DO FOR WARRANTY SERVICE:

Please do not return your product to the retailer

Instead, return your product to the JVC authorized service center nearest you. If shipping the product to the service center, please be sure to package it carefully, preferably in the original packaging, and include a brief description of the problem(s). Please call 1-800-252-5722 to locate the nearest JVC authorized service center. Service locations can also be obtained from our website <http://www.jvc.com>. If your product qualifies for in-home service, the service representative will require clear access to the product.

If you have any questions concerning your JVC Product, please contact our Customer Care Center at 800-252-5722

## WHAT IS NOT COVERED:

This limited warranty provided by JVC does not cover:

1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model or serial number has been altered, tampered with, defaced or removed;
2. Initial installation, installation and removal from cabinets or mounting systems;
3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning;
4. Damage that occurs in shipment, due to act of God, and cosmetic damage;
5. Signal reception problems and failures due to line power surge;
6. User Removal Memory Devices/Video Pick-up Tubes/CCD Image Sensors are covered for 90 days from the date of purchase;
7. Accessories;
8. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase);
9. Products used for commercial purposes, including, but not limited to rental;
10. Loss of data resultant from malfunction of hard drive or other data storage device;

There are no express warranties except as listed above.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE, OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

JVC AMERICAS CORP.  
1700 Valley Road, Wayne, New Jersey 07470  
<http://www.jvc.com>

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAIL OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

## For customer use:

Enter below the Model No. and Serial No. which is located either on the rear, bottom or side of the cabinet.  
Retain this information for future reference.

Model No. :

Serial No. :

Purchase date :

Name of dealer :

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>