

DVI-D-CatX-KVM-Extender Single-Head and Dual-Head Singlelink and Duallink

Manual

<http://www.blackbox.com>

Welcome to the ACS110A-ACS211A (ACS1xxA)- Extender Family!

Thank you for purchasing a ACS1xxA KVM-Extender! We appreciate your business, and we think you'll appreciate the many ways that our ACS1xxA KVM-Extender will save you money, time, and effort.

That's because our ACS1xxA KVM-Extender is all about breaking away from the traditional model of attaching a new display to DVI graphic source. Using the ACS1xxA KVM-Extender, you can remotely locate monitor, keyboard and mouse up to 10.000m away from your CPU.

Wherever long distances are usual, e.g. airports, industrial plants, call-centres or in distributed computer centres, the ACS1xxA KVM-Extender is the best way to solve all problems in remotely locating your console.

Available in eight different versions, the ACS1xxA KVM-Extender will fit all your requirements. Four versions support transmission of one or two DVI Singlelink (up to 1920x1200) signals plus USB HID (Keyboard/Mouse) or USB 2.0 (transparent). Two versions support transmission of one DVI Duallink (up to 2560x2048) signal plus USB HID (Keyboard/Mouse) or USB 2.0 (transparent). Finally, two versions supporting DVI Singlelink or DVI Duallink, with USB HID) are available with a 2:1 KVM Switch in the Local Unit.

The devices are adapted for Multimode data transfer.

This manual will tell you all about your new ACS1xxA KVM-Extender, including how to install, operate, and troubleshoot it. For an introduction to the Converter, see **Chapter 2**. The Converter product codes covered in this manual are:

For Multimode-Fibre 50/125µ or 62,5/125µ:

ACS110A:	ACS1xxA KVM- Extender for 1x DVI Singlelink, USB HID (Keyboard/Mouse)
ACS120A:	ACS1xxA KVM- Extender for 2x DVI Singlelink, USB HID (Keyboard/Mouse)
ACS112A:	ACS1xxA KVM- Extender for 1x DVI Singlelink, USB 2.0 (transparent)
ACS122A:	ACS1xxA KVM- Extender for 2x DVI Singlelink, USB 2.0 (transparent)
ACS201A:	ACS1xxA KVM- Extender for 1x DVI Duallink, USB HID (Keyboard/Mouse)
ACS202A:	ACS1xxA KVM- Extender for 1x DVI Duallink, USB 2.0 (transparent)
ACS111A:	ACS1xxA KVM- Extender for 1x DVI Singlelink, USB HID (Keyboard/Mouse) with KVM- Switch in Local Unit
ACS211A:	ACS1xxA KVM- Extender for 1x DVI Duallink, USB HID (Keyboard/Mouse) with KVM- Switch in Local Unit

Copyrights and Trademarks

©2008. All rights reserved. This information may not be reproduced in any manner without the prior written consent of the manufacturer.

All trademark and trade names mentioned in this document are acknowledged to be the property of their respective owners.

Disclaimer

While every precaution has been taken in the preparation of this manual, the manufacturer assumes no responsibility for errors or omissions. Neither does the manufacturer assume any liability for damages resulting from the use of the information contained herein. The manufacturer reserves the right to change the specifications, functions, or circuitry of the product without notice.

The manufacturer cannot accept liability for damage due to misuse of the product or due to any other circumstances outside the manufacturer's control (whether environmental or installation related). The manufacturer shall not be responsible for any loss, damage, or injury arising directly, indirectly, or consequently from the use of this product.

Cautions and Notes

The following symbols are used in this guide:



CAUTION: This indicates an important operating instruction that should be followed to avoid any potential damage to hardware or property, loss of data, or personal injury.



NOTE. This indicates important information to help you make the best use of this product.

Eye Safety (Laser) with ACS1XXA – Products

Related Norm:

DIN EN 60825-2 ; 11/2007; Safety of optical fibre communication systems (OFCS)

The optical transceivers inside the device have a typical output performance of approx. 5mW. As per EN 60825-2, this corresponds to Hazard Class 1M.

Accordingly, this device can be operated at unrestricted locations and requires no laser warning labelling.

The laser ports inside the device will be switched off upon detection of the removal of the fibre plugs from the sockets (ALV)!

The devices may only be operated with the following warning instruction:



Please observe the following instructions:

Caution

Laser Radiation Hazard Class 1M
Do not view directly
with optical instruments

EUROPEAN UNION DECLARATION OF CONFORMITY

This is to certify that, when installed and used according to the instructions in this manual, together with the specified cables and the maximum cable length <3m, the Units:

ACS110A, ACS120A, ACS112A, ACS122A
ACS201A, ACS202A, ACS111A, ACS211A

are shielded against the generation of radio interferences in accordance with the application of Council Directive 89/336/EEC as well as these standards:

EN 55022:	1999	Class A
EN 55024:	1999	
IEC 61000-4-2:	2001	
IEC 61000-4-3:	2001	
IEC 61000-4-4:	2001	
EN 61000-3-2	2001	
EN 61000-3-3	2002	

The device was tested in a typical configuration with PC.



This equipment has been found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Safety Precautions and Installation Guidelines

To ensure reliable and safe long-term operation, please note the following installation guidelines:

- Only use in dry, indoor environments.
- The Remote unit, Local unit and any power supplies can get warm. Do not locate them in an enclosed space without any airflow.
- Do not place power supplies directly on top of a unit.
- Do not obstruct a unit's ventilation existing holes.



To safeguard against personal injury and avoid possible damage to equipment or property, please observe the following:


- **Only use power supplies originally supplied with the product or manufacturer-approved replacements. Do not attempt to dismantle or repair any power supply. Do not use a power supply if it appears to be defective or has a damaged case.**
- **Connect all power supplies to grounded outlets. In each case, ensure that the ground connection is maintained from the outlet socket through to the power supply's AC power input.**
- **Do not attempt to modify or repair this product.**

Contents

1. Quick Setup	7
2. Overview	8
2.1 Introduction	8
2.2 Glossary	8
2.3 Example of a System	9
2.4 Features	10
2.5 Product Range	11
2.6 Compatibility	12
2.7 How to Use This Guide	13
3. Installation	14
3.1 Package Contents	14
3.2 Interconnection Cable Requirements	15
3.3 System Setup	16
3.4 Device Views	17
3.5 Diagnostic LEDs	21
4. Service Setup	23
4.1 DIP Switch	23
5. Troubleshooting	24
Appendix A: Example Applications	25
Appendix B: Rack Mount Options	29
Appendix C: Calling Technical Support	31
Appendix D: List of supported USB devices (for USB HID versions only)	32
Appendix E: Specifications	33
Appendix F: Connectors	35

1. Quick Setup

This section briefly describes how to install your KVM extender system. Unless you are an experienced user, we recommend that you follow the full procedures described in the rest of this manual.

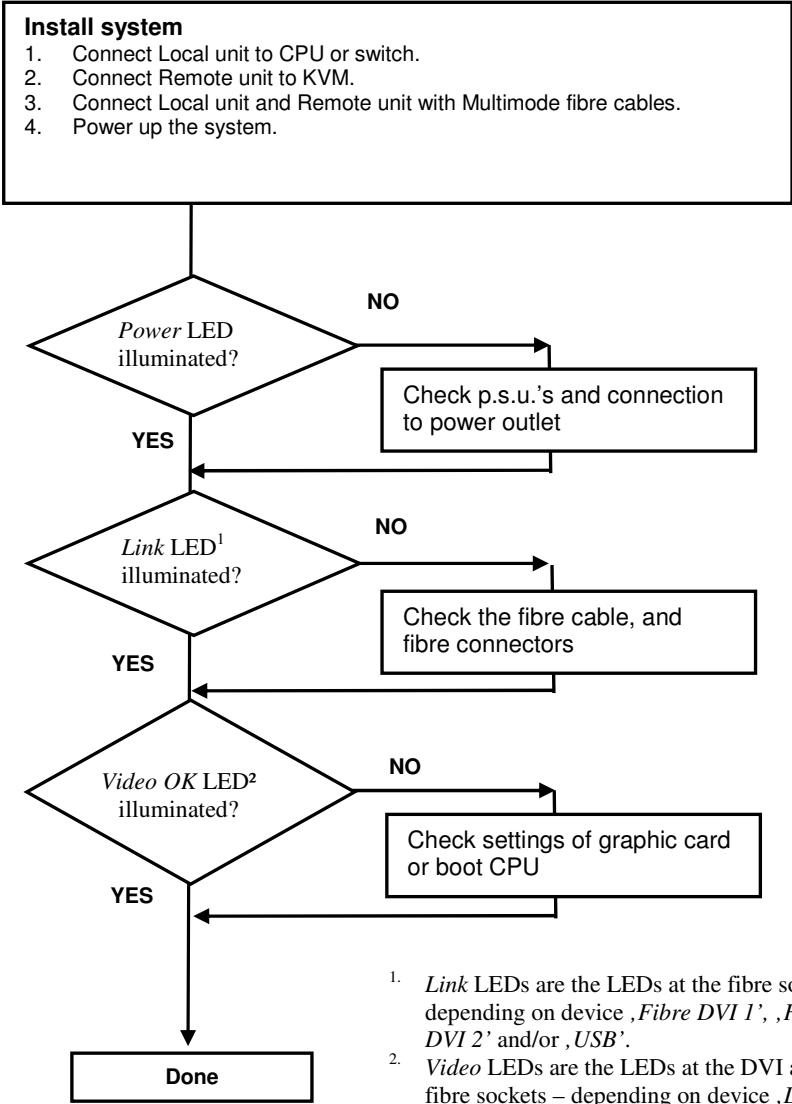

2. Overview

2.1 Introduction

A fibre KVM Extender is mainly used to extend the maximum distance between a CPU and his Keyboard / Monitor / Mouse considerably. In addition, they are indispensable for installations in electromagnetic hazardous environments (EMI). Normal Keyboard-/ Monitor-/ Mouse extender cables (and Extender using traditional cables) cannot go so far and EMI interferences may reduce the maximum distance and/or reliability. Using a ACS1xxA Extender system, these limitations are past. Remain your CPU in a secure rack cabinet or data center while accessing from an up to 10.000m remotely located place.

A basic KVM extension system comprises a *Local* unit (transmitter) and a *Remote* unit (receiver). The Local unit connects directly to the computer (or a KVM switch system) using the supplied cable(s). The user *console* (keyboard, mouse and monitor) attaches to the Remote unit. The Remote and Local units communicate video and data information along the interconnecting cable (Multimode fibre).

2.2 Glossary

The following terms are used in this guide:

<i>Fibre</i>	Singlemode or Multimode fibre cable
<i>Multimode</i>	62,5µ Multimode- or 50µ Multimode-fibre cable
<i>KVM</i>	Keyboard, Video and Mouse.
<i>Console</i>	Keyboard, Mouse and Monitor
<i>Single Head</i>	An extender system that supports one monitor + Keyboard/Mouse
<i>Dual Head</i>	An extender system that supports two monitors + Keyboard/Mouse
<i>DDC</i>	Display Data Channel – Communication Interface between CPU and monitor to retrieve the monitor configuration and to control the monitor, introduced by Video Electronics Standards Association (VESA) . DDC2B is supported to retrieve the EDID Information.
<i>DVI</i>	Digital Video standard, installed by Digital Display Working Group (www.ddwg.org) R, G, B, CLOCK in a data stream with up to 3x 1,6 Gbit/sec. Signals are TMDS Level.
<i>PSU</i>	The desktop power supply connected to the Local/Remote unit.
<i>HID</i>	Human Interface Devices are units, which are used for human access to the CPU. They are a USB-device class of its own (e.g. Memory Devices etc.). Besides of keyboard and mouse also touch screen, light pen, fingerprint sensor, graphic tablets etc. are HID devices.

2.3 Example of a System



ACS1xxA – KVM Extender system (example)

2.4 Features

All members of the ACS1xxA KVM Extender Series offer the following features:

- Support for DVI-D Singlelink Graphic cards and for USB-Keyboards/Mouse (all devices)



Devices with USB-HID connectors support ONLY Keyboard and Mouse. It's possible that other HID devices (Human Interface Device) like touch-screens, graphics tablets, barcode readers or similar are supported – but there is no guarantee for this! The ACS1xxA KVM-Extender with USB HID is NOT suitable for use with other USB devices like Scanner, WEB- Cams, data sticks etc.



The ACS1xxA KVM-Extender with USB HID never supports more than two devices – Keyboard and Mouse or Keyboard and Touchscreen, etc. but not e.g. Keyboard, Mouse and Touchscreen simultaneously. A Hub is allowed but does not increase the number of simultaneously supported devices

- Support for DVI-D Duallink Graphic cards (ACS201A and ACS202A)
- Support for USB-2.0 transparent (ACS112A, ACS122A and ACS202A)
- Support for two monitors per system (ACS120A and ACS122A)
- Maximum resolution:
 - DVI Singlelink: 1920x1200@60Hz bzw. 1280x1024@75Hz;
 - DVI Duallink: 2560x2048@60Hz (max. 330MPixel/sec)
- Supporting 24 Bit- color depth @ Singlelink and more @ Duallink.
- Status indicator LEDs on each device.
- Small footprint chassis.
- 19'' Rack mount options available.
- CPU (DVI and USB) cables + Adapters included.

2.5 Product Range

There are 8 products in the range and various upgrade kits:

<i>ACS1xxA – Extender (fibre)</i>	
ACS110A	ACS1xxA KVM- Extender for 1x DVI Singlelink, USB HID (Keyboard/Mouse)
ACS120A	ACS1xxA KVM- Extender for 2x DVI Singlelink, USB HID (Keyboard/Mouse)
ACS112A	ACS1xxA KVM- Extender for 1x DVI Singlelink, USB 2.0 (transparent)
ACS122A	ACS1xxA KVM- Extender for 2x DVI Singlelink, USB 2.0 (transparent)
ACS201A	ACS1xxA KVM- Extender for 1x DVI Duallink, USB HID (Keyboard/Mouse)
ACS202A	ACS1xxA KVM- Extender for 1x DVI Duallink, USB 2.0 (transparent)
ACS111A	ACS1xxA KVM- Extender for 1x DVI Singlelink, USB HID (Keyboard/Mouse) with KVM- Switch in Local Unit
ACS211A	ACS1xxA KVM- Extender for 1x DVI Duallink, USB HID (Keyboard/Mouse) with KVM- Switch in Local Unit
<i>Upgrade Kits</i>	
RMK253A	19"/1HE Rackmount- Kit to mount up to 3 Single-Head devices

2.6 Compatibility

Interface Compatibility

- **Digital Video (DVI-D) Singlelink:** Digital Video standard, installed by Digital Display Working Group (www.ddwg.org) R, G, B, CLOCK in a data stream with up to 3x1,6 Gbit/sec. Signals are TMDS Level. Maximum Resolution is 1920x1200.
- **Digital Video (DVI-D) Duallink:** Digital Video standard, installed by Digital Display Working Group (www.ddwg.org) RR, GG, BB, CLOCK in a data stream with up to 6x1,6 Gbit/sec. Signals are TMDS Level. Maximum Resolution is 2560x2048.
- **USB Keyboard:** Compatible with all standard keyboards. Certain keyboards with enhanced features may also be supported with custom firmware. Keyboards with built-in hub are also supported – but there are never more than two HDI devices supported.
- **USB Mouse:** Compatible with all standard 2-button, 3-button and wheel mice.



Devices with USB- connectors support ONLY Keyboard and Mouse. It's possible, that other HID devices (Human Interface Device) like touch-screens, graphics tablets, barcode readers or similar are supported – but there is no guarantee for this! The DVI-D Cat X KVM-Extender is NOT suitable for use with other USB devices like Scanner, WEB- Cams, data sticks etc.



The device never supports more than two devices – Keyboard and Mouse or Keyboard and Touchscreen, etc. but not e.g. Keyboard, Mouse and Touchscreen simultaneously. A Hub is allowed but does not raise the number of supported devices

- **USB 2.0 transparent** (ACS112A, ACS122A and ACS202A only):
Compatible with all USB 2.0 compliant devices.

2.7 How to Use This Guide

This guide describes the installation and configuration of the ACS1xxA – Extender. Although the connection and operation of the system is relatively straightforward, you should consider the following before getting started:

Connection & Compatibility

If you have purchased an *Extender Kit*, this will contain all the cables required to connect the Local unit of your ACS1xxA KVM- Extender to your PC or KVM switch. Please see also:

Package Contents (page 14)

For information about connection and installation, see **Installation**, page 14.

DDC Information

Normally, it is not necessary to make any adjustments to the ACS1xxA - Extender. DDC Information is continuously transmitted from the remote monitor to the CPU graphic card.

Compatibility

Devices with USB HID connectors are **NOT** compatible to devices with USB-2.0 connectors.

Devices with DVI Singlelink and DVI Duallink are compatible if the second fibre is not used. Only one DVI Singlelink signal will be transmitted in this case.

3. Installation

For first-time users, we recommend that you carry out a test placement, confined to a single room, before commencing full installation. This will allow you to identify and solve any cabling problems, and experiment with the KVM extender system more conveniently.

 
3.1 Package Contents

You should receive the following items in your extender package:

- ACS1xxA KVM-Extender- pair (Local Unit + Remote Unit)
- 2x 5V DC universal power supply for the ACS1xxA - Extender
- 2x German type power cord
- User manual (Quick Setup)
- 1 pc. DVI (1,8m) video cable (DVI-I male-to-male)




- 1 pc. USB (1,8m) cable (USB type A to type B)



ACS120A, ACS122A, ACS111A and ACS211A (additionally):

 - 2nd pc. DVI (1,8m) video cable (DVI-I male-to-male)



ACS111A and ACS211A (additionally):

- 2nd pc. USB (1,8m) cable (USB type A to type B)



If anything is missing, please contact our Technical Support (see **Appendix F – Calling Technical Support**).

3.2 Interconnection Cable Requirements

To connect the Local and Remote units you will need:

- **DVI:** Connect the supplied DVI cable(s) to your CPU(s) (KVM - Switch, etc.). Please ensure that the connection is tension-free!
- **USB-Keyboard, USB-Mouse, USB 2.0:** Connect the supplied USB cable(s) to your CPU (USB-A to USB-B). Please ensure that the connection is tension-free!
- **Fibre Cables:**
 - **Multimode:** Two fibres 50µm or 62.5µm. E.g. I-V(ZN)H 2G50 (In house patch cable) or I-V(ZN)HH 2G62,5 (In house Breakout cable) or I/AD(ZN)H 4G50 (In house OR Outdoor Breakout cable, stress resistant) or A/DQ(ZN)B2Y 4G62,5 (Outdoor cable, stress resistant with protection against animal biting). All notations acc. to VDE specification.

1 fibre:	ACS110A and ACS111A
2 fibre:	ACS120A, ACS112A, ACS201A and ACS211A
3 fibre:	ACS122A and ACS202A



A point to point connection is required. Having one or more patch panels in the line is possible and allowed. Not allowed is a connection from the fibre link interface to any other products, especially telecommunications or network equipment.

- **Power Supply:** Connect the supplied 5V/DC power supplies to the **Plug** terminal on the rear of both the local and the remote unit.

3.3 System Setup

To install your ACS1xxA – Extender system:

1. Switch off all devices.
2. Connect your keyboard, monitor(s) and mouse to the Remote unit (depending on device type).
3. Using the supplied CPU KVM cable(s), connect the local unit to your computer (or KVM switch).
4. Connect the interconnect cable (fibre cable) to the local and the remote unit.



To ensure a stable data connection you must hear the SC plugs of the fibre cable snap into the sockets and the Link LEDs must be on.


5. Connect the 5V power supply to power the unit.




Only use the power supply originally supplied with this equipment or a manufacturer-approved replacement.

6. Power up the system.


3.4 Device Views

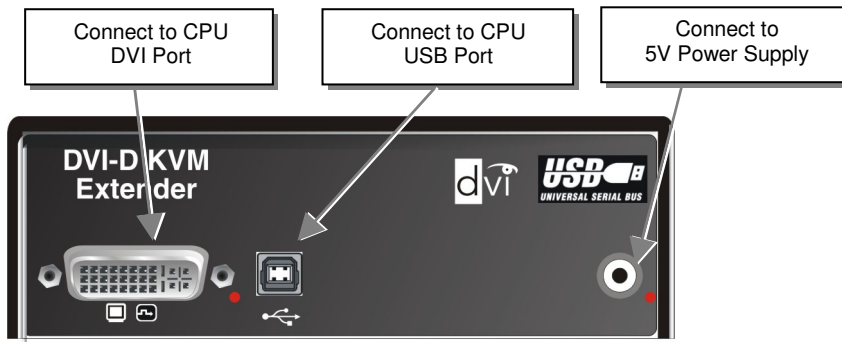

Local Unit – Type ACS110A, ACS112A, ACS201A and ACS202A

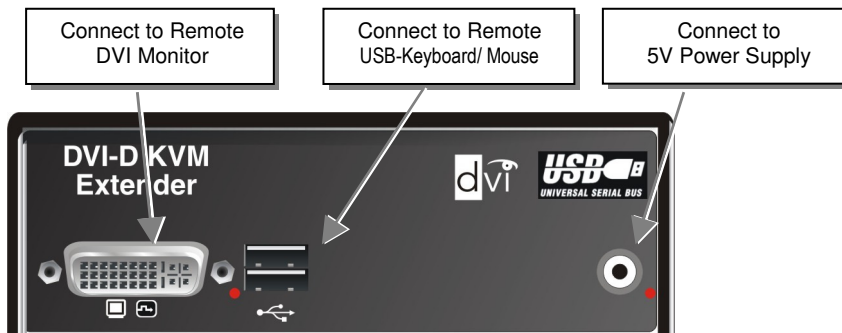


Remote Unit HID – Type ACS110A and ACS201A

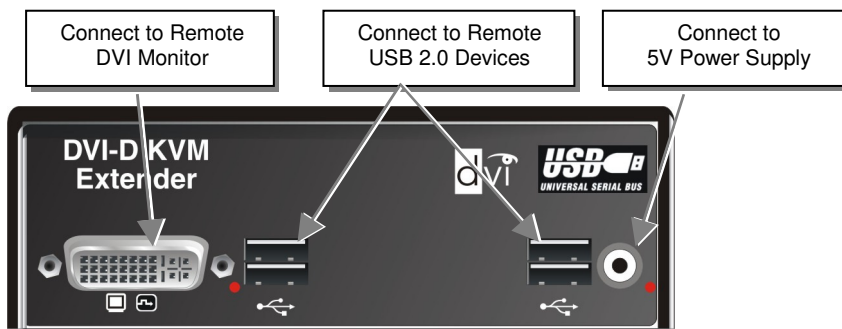


Remote Unit USB 2.0 – Type ACS112A and ACS202A


ACS110A-ACS211A -EXTENDER

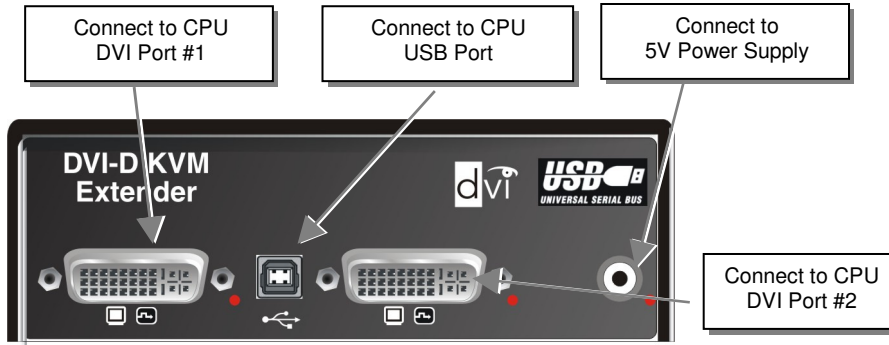

Local Unit – Type ACS120A and ACS122A

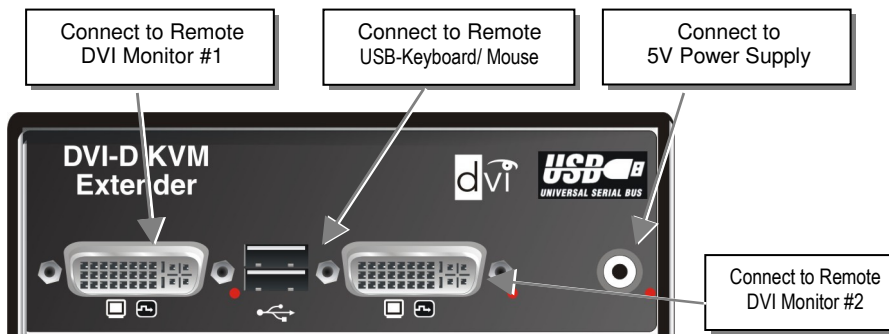


Remote Unit HID – Type ACS120A

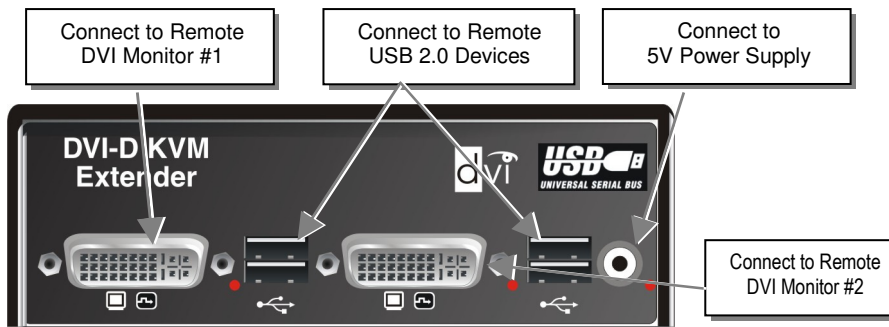


Remote Unit USB 2.0 – Type ACS122A

INSTALLATION

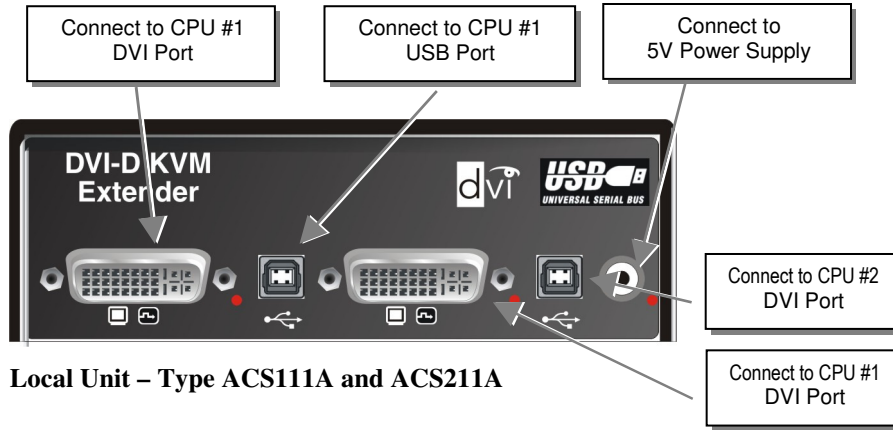

Local Unit – Type ACS111A and ACS211A

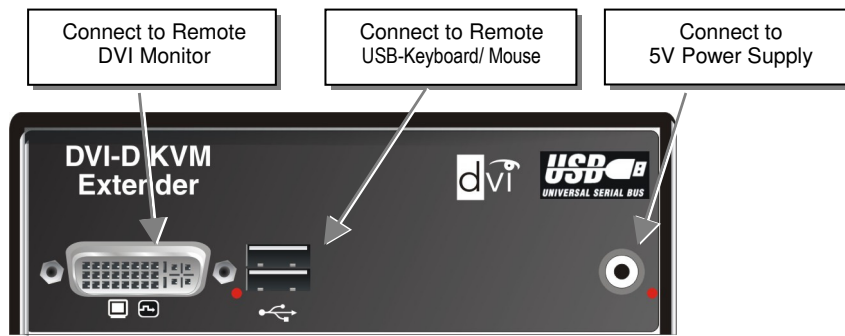


Remote Unit HID – Type ACS111A and ACS211A

ACS110A-ACS211A -EXTENDER




Multimode Fibre Connectors – Type ACS110A and ACS211A

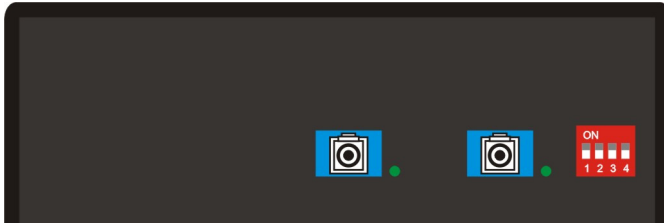

Multimode Fibre Connectors – Type ACS120A, ACS201A and ACS211A




Multimode Fibre Connectors – Type ACS112A

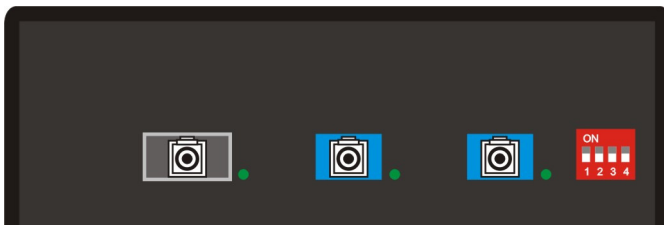

Multimode Fibre Connectors – Type ACS122A and ACS202A


3.5 Diagnostic LEDs

Each ACS1xxA KVM-Extender is fitted with up to six indicator LEDs: *Power, Video OK, and Link Status*. The location of the LEDs is shown below:

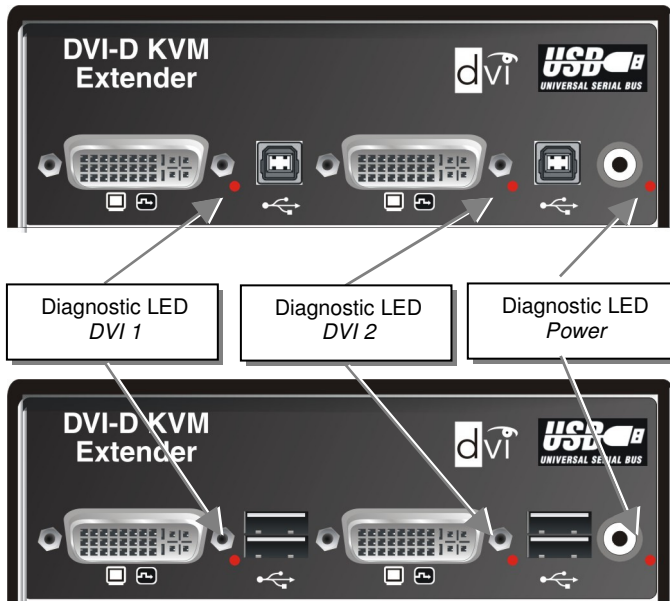


Diagnostic LEDs at the ACS1xxA – Extender (DVI Sockets)

<i>LED</i>	<i>Appearance</i>	<i>Diagnostics</i>
Power LED (Red LED)	Off	Device not ready
	On	Device ready
DVI 1 (Red LED)	Off	DVI signal from video source NOT available
	On	DVI signal from video source available
	Blinking	Monitor DDC is being transmitted from Remote Unit to Local Unit and stored there (only if video source switched off or not connected)
DVI 2 (Red LED)	Off	DVI signal from video source NOT available
	On	DVI signal from video source available
	Blinking	Monitor DDC is being transmitted from Remote Unit to Local Unit and stored there (only if video source switched off or not connected)

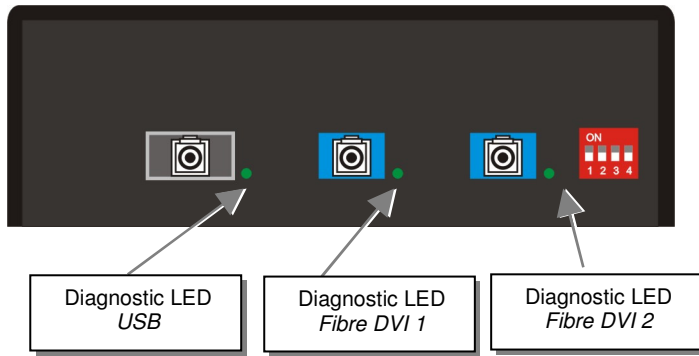

Diagnostic LEDs at the ACS1xxA – Extender (Fibre Sockets)

<i>LED</i>	<i>Appearance</i>	<i>Diagnostics</i>
Fibre DVI 1 (Green LED)	Off	No Connection to DVI 1 Port at Local/Remote Unit
	On	Connection to DVI 1 Port at Local/Remote Unit Ok
	Blinking	Connection to DVI 1 Port at Local/Remote Unit disturbed
Fibre DVI 2 (Green LED)	Off	No Connection to DVI 2 Port at Local/Remote Unit
	On	Connection to DVI 2 Port at Local/Remote Unit Ok
	Blinking	Connection to DVI 1 Port at Local/Remote Unit disturbed
USB (Green LED)	Off	No Connection to USB Port at Local/Remote Unit
	On	Connection to USB Port at Local/Remote Unit Ok
	Blinking	Connection to DVI 1 Port at Local/Remote Unit disturbed

 *To ensure a stable data connection you must hear the SC plugs of the fibre cable snap into the sockets and the Link LEDs must be permanent on.*

4. Service Setup

There are no adjustments required to set up your ACS1xxA KVM -Extender. You might be requested by our service technicians to setup a special configuration. In this case you will receive detailed instructions.

4.1 DIP Switch


Local Unit and Remote Unit contain a DIP Switch with 4 switch options.



All 4 switches of the DIP Switch must be ,OFF' during operation. Other switch configurations can lead to malfunction during operation!

During service you will receive detailed instructions by our service technicians, how and in which order you should set the switches.

Location and standard position of the DIP Switch are shown below:

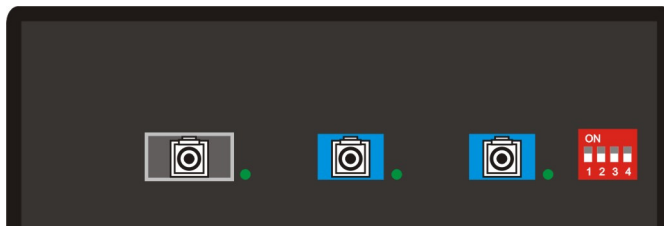

5. Troubleshooting

Monitor

There is no picture.

Check the power supply connection at the Local and Remote unit. Is the *Power* (Red LED) at the Local and Remote unit illuminated? If not, the internal power-supply may be damaged or there may be an internal error.

Check that the Interconnection cable is connected at the Local Unit and the Remote Unit. Is the *Link Status* LED illuminated? If not, there may be a problem with the Interconnection cable:



To ensure a stable data connection you must hear the SC plugs of the fibre cable snap into the sockets and the Link LEDs must be permanent on.

Are there Errors through data transmission over fibre Cable? Is the *Data Error* LED illuminated or blinking?

,DVI 1' and/or ,DVI 2' LED are off: CPU does not provide a video signal – Check settings of the graphic card.

USB-Keyboard/USB-Mouse

Your USB-keyboard/USB-mouse does not work

Although we tried to design the devices as transparent as possible, we can't ensure that all devices are running. Please check on page 32 the list of the tested devices.

USB-HID Device

Your USB-HID device does not work

Although our interface supports HID devices, we can't ensure that every connected device is running. In case of a malfunction please contact our technical support.

Other USB-devices

Your USB- device does not work (ACSIxxA without USB 2.0 only)

You have connected a non-HID device. Only HID devices are supported. All other devices are ignored.

Appendix A: Example Applications

This section illustrates some specific applications using the ACS1xxA KVM- Extender:



ACS1xxA KVM- (Singlelink-) Extender with optional, second screen.

ACS110A-ACS211A -EXTENDER

For highest resolution up to 2560x2048 – DVI- Duallink over 2 fibres



ACS1xxA KVM- Duallink Extender – Highest Resolution up to 2560x2048

APPENDIX A: EXAMPLE APPLICATIONS

Dual-Head Configuration with USB 2.0 transparent – DVI- Singlelink over 3 fibres



ACS1xxA KVM- Extender – with USB 2.0 for ALL USB Devices – FullSpeed!

ACS110A-ACS211A -EXTENDER

Application with KVM-Switch (Singlelink – shown here – or Duallink) in Local Unit




ACS1xxA KVM- Extender – with KVM- Switch in Local Unit

Appendix B: Rack Mount Options

ACS1XXA KVM-Extenders can be mounted into a 19"-Server Rack using the **DDXI-Rackmount Kit**.

The **DDXi Rackmount Kit** consists of the following parts:

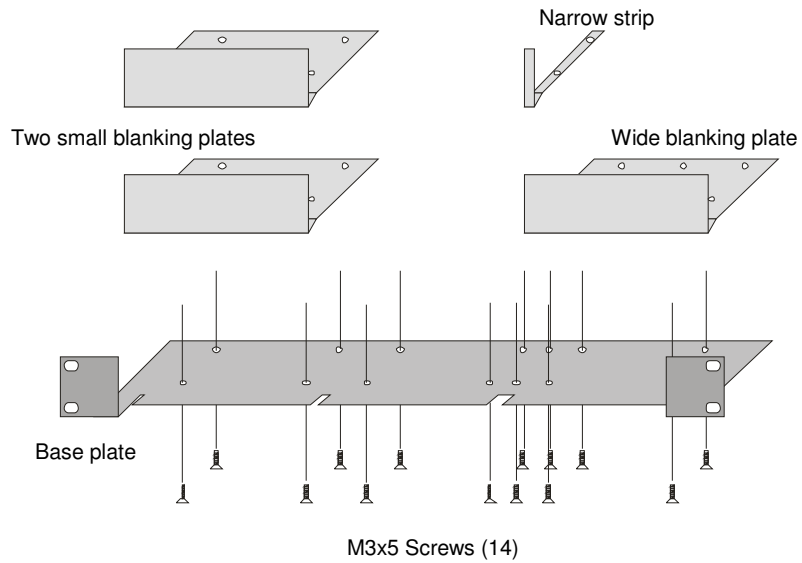

Mounting instruction:

1. Align the holes on the base plate with the vacant screw holes on the base of the device.
2. Fasten the base of the unit –*using only the supplied, short screws* – to the plate of the mounting kit.





Only use the supplied, short screws, to prevent damages on the PCB's

3. Close the remaining gaps with blanking plates.


ACS110A-ACS211A -EXTENDER

The 19" DDXI- Rackmount kit allows you to mount various numbers of devices into one housing:

1. One unit (using two small plates)
2. Two units (using one small plate)

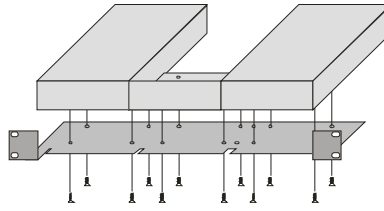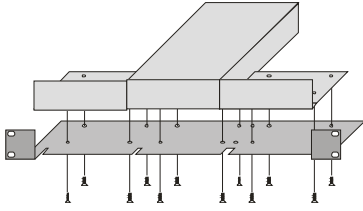

3. Three units

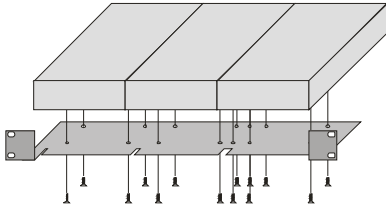

Appendix C: Calling Technical Support

If you determine that your DDXI - DVI KVM Extender is malfunctioning, *do not attempt to alter or to repair it*. It contains no user-serviceable parts. Please contact our Technical Support.

Please make a record of the history of the problem upfront. We will be able to provide more efficient and accurate assistance if you can provide a complete description, including:

- The firmware-revision level printed on the bottom of the Extender (very important):

Version Number Format:

Board: *xxLO/RE Myyy Pzzz Auuu Gvvvvvv*

Transceiver: *C/M/S xx Pyy Mzz*

Keyboard/Mouse: *P/U xx Vyyy*

- The nature and duration of the problem.
- When the problem occurs.
- The components involved in the problem—that is, what type of computers, what type of keyboard, brand of mouse, make and model of monitor, type and make of cable, etc.
- Any particular application that, when used, appears to create the problem or make it worse.
- The results of any testing you've already done.

To solve some problems, it might be necessary to upgrade the ACS1xxA KVM- Extender firmware. If this turns out to be the case for your difficulty, our Technical Support technicians will arrange for you to receive the new firmware and will tell you how to install it.

Shipping and Packaging

If you need to transport or ship your ACS1xxA KVM Extender:

- Package it carefully. We recommend that you use the original container.
- If you are shipping it for repair, please include the Unit's external power supplies. If you are returning it, please include everything you received with it. Before you ship the Extender back to your dealer for repair or return, contact him to receive a Return Authorization (RA) number.

Appendix D: List of supported USB devices (for USB HID versions only)

Although the USB connection's implementation allows all keyboards and Mice, we can not guarantee that all available keyboards/mice are running.

The implementation is constructed for "HID" devices. HID is a device class enabling inputs in a PC. Among others, touch screen, graphic tablet, fingerprint sensors are HID devices.

Some devices install additional devices, e.g. to set parameters. Such devices are NOT supported by our extenders. Please remark additionally that installing more than two devices is not possible even if you use a USB hub.

The following devices are tested and have been found correct:

Keyboards

-

Mice

-

Appendix E: Specifications

Power Supply

<i>Voltage</i>	90-240VAC-0.5A-47-63Hz/5VDC-2000 mA
<i>Power required</i>	Local Unit: max. 750mA Remote Unit: max. 750mA

Interface

(Depending on type of device)

<i>Video source/Monitor</i>	
Singlelink devices	DVI-D up to 1920x1200@60Hz
Duallink devices	DVI-D up to 2560x2048@60Hz
<i>Keyboard</i>	USB
<i>Mouse</i>	USB 2-/3-button and wheel mouse
<i>USB</i>	USB 2.0 (optional)

Maximum Length of Interconnection Cable

<i>Multimode 50µm</i>	400m (1,300ft)
<i>Multimode 62.5µm</i>	200m (650ft)

Type of Interconnection Cable

<i>Multimode 50µm</i>	Two fibres 50µm, E.g. I-V(ZN)H 2G50 (In house patch cable) or I/AD(ZN)H 4G50 (in house OR outdoor Breakout cable, stress resistant) All notations acc. VDE specification.
<i>Multimode 62.5µm</i>	Two fibres 62.5µm. E.g. I-V(ZN)HH 2G62,5 (In house Breakout cable) or A/DQ(ZN)B2Y 4G62,5 (outdoor cable, stress resistant with protection against animal biting) All notations acc. VDE specification.
<i>Plug type</i>	For all cables: SC

Size and Shipping Weight

<i>ACS1xxA Singlehead</i>	133 x 180 x 43mm (5.2"x7.1"x1.7") Weight Local/Remote Unit: 1,2kg (2.6lb)
<i>Shipping box</i>	460x250x65mm (18.1"x9.8"x2.6") Weight: 4,3kg (9.5lb)


Environmental Conditions

<i>Operating Temperature</i>	41 to 113°F (5 to 45 °C)
<i>Storage Temperature</i>	-13 to 140°F (-25 to 60 °C)
<i>Relative Humidity</i>	max. 80% non-condensing

Appendix F: Connectors

ACS1xxA KVM-Extender Connector Pinouts


DVI-I Socket (Singlelink)

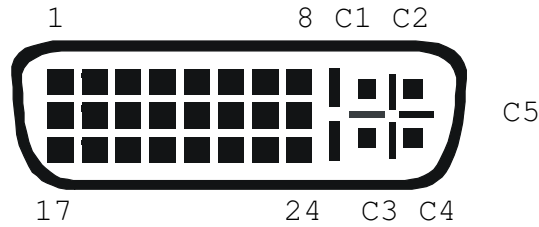

<i>Pin</i>	<i>Signal</i>	<i>Pin</i>	<i>Signal</i>	<i>Pin</i>	<i>Signal</i>
1	T.M.D.S data 2-	9	T.M.D.S data 1-	17	T.M.D.S data 0-
2	T.M.D.S data 2+	10	T.M.D.S data 1+	18	T.M.D.S data 0+
3	T.M.D.S data 2 GND	11	T.M.D.S data 1 GND	19	T.M.D.S data 0 GND
4	n.c.	12	n.c.	20	n.c.
5	n.c.	13	n.c.	21	n.c.
6	DDC Input (SCL)	14	+5V high impedance	22	T.M.D.S clock GND
7	DDC Output(SDA)	15	GND	23	T.M.D.S clock +
8	Internal use	16	Hot Plug recognition	24	T.M.D.S clock -
C1	Internal use			C3	Internal use
C2	n.c.	C5	GND	C4	Internal use

ACS110A-ACS211A -EXTENDER


DVI-I Socket (Duallink)

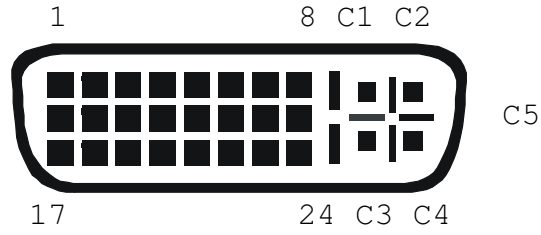

<i>Pin</i>	<i>Signal</i>	<i>Pin</i>	<i>Signal</i>	<i>Pin</i>	<i>Signal</i>
1	T.M.D.S data 2-	9	T.M.D.S data 1-	17	T.M.D.S data 0-
2	T.M.D.S data 2+	10	T.M.D.S data 1+	18	T.M.D.S data 0+
3	T.M.D.S data 2,4 GND	11	T.M.D.S data 1,3 GND	19	T.M.D.S data 0,5 GND
4	T.M.D.S data 4-	12	T.M.D.S data 3-	20	T.M.D.S data 5-
5	T.M.D.S data 4+	13	T.M.D.S data 3+	21	T.M.D.S data 5+
6	DDC Input (SCL)	14	+5V high impedance	22	T.M.D.S clock GND
7	DDC Output(SDA)	15	GND	23	T.M.D.S clock +
8	Internal use	16	Hot Plug recognition	24	T.M.D.S clock -
C1	Internal use			C3	Internal use
C2	n.c.	C5	GND	C4	Internal use

Keyboard/Mouse Socket, USB Type B


(Socket at Local Unit)

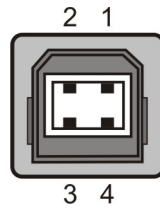

<i>Pin</i>	<i>Signal</i>	
1	VCC (+5V)	Red
2	Data -	White
3	Data +	Green
4	GND	Black


Keyboard/Mouse Socket, USB Type A

(Socket at Remote Unit)

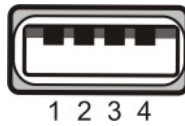

<i>Pin</i>	<i>Signal</i>	
1	VCC (+5V)	Red
2	Data -	White
3	Data +	Green
4	GND	Black

Power – 2.5mm barrel type

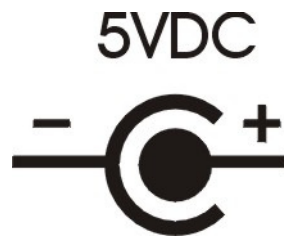

<i>Pin</i>	<i>Signal</i>
inner	+5V
outer	GND

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>