

 
BLACK+ DECKER™

6-BOTTLE, 8-BOTTLE CAPACITY WINE CELLAR

INSTRUCTION MANUAL

CATALOG NUMBER

BD60016 BD60026

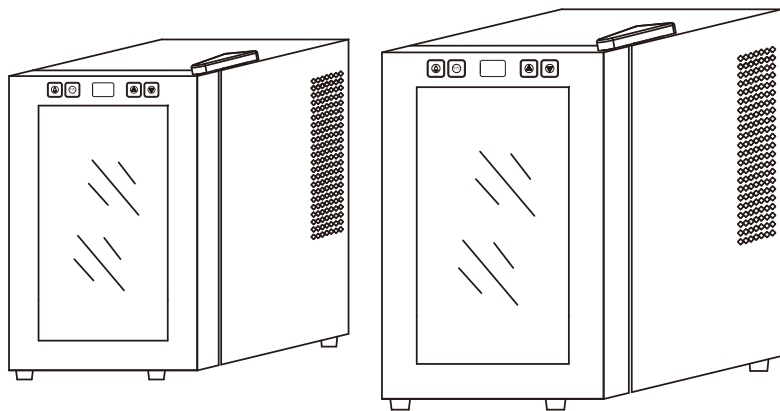

Thank you for choosing BLACK+DECKER!

PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON.

If you have a question or experience a problem with your BLACK+DECKER purchase, go to www.blackanddecker.com/instantanswers

If you can't find the answer or do not have access to the Internet, call 844-299-0879 from 10:30 a.m. to 6:30 p.m. EST Mon. - Fri. to speak with an agent. Please have the catalog number available when you call.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

CONTENTS

SAFETY INFORMATION

Important Safety Instructions.....	4-6
Grounding Instructions.....	5

SET UP & USE

Parts & Features	7-8
Installation Guide	9
Operation Guide	9-10
Benefits of Thermal Electric Cooling	10

CLEANING & CARE.....	11
----------------------	----

TROUBLE SHOOTING & WARRANTY.....12-13

Before You Call For Service	12
Customer Service.....	12
Troubleshooting.....	12
Limited Warranty.....	13

PRODUCT REGISTRATION

Thank you for purchasing our BLACK+DECKER product. This easy-to-use manual will guide you in getting the best use of your wine cellar.

Remember to record the model and serial numbers. They are on a label on the back of the product.

Staple your receipt to your manual. You will need it to obtain warranty service.

Model number

Serial number

Date of purchase

SAFETY INFORMATION

DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death

WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death

CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using electrical appliances, basic safety precautions should be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING THE UNIT

1. Read all of the instructions before using this appliance.
2. This wine cellar must be properly installed in accordance with the installation instructions before is it used. See grounding instructions in the installation section.
3. Never unplug the wine cellar by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
4. Repair or replace immediately, all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
5. Unplug the wine cellar before cleaning or before making any repairs.
NOTE: If for any reason this product requires service, we strongly recommend that a certified technician performs the service.
6. If the wine cellar is not being used, we recommend to remove the door and leave the shelves in place. This will reduce the possibility of danger to children.
7. This wine cellar should not be recessed or built-in an enclosed cabinet. It is designed for freestanding installation only.
8. Do not operate wine cellar in the presence of explosive fumes.
9. Do not store foods in wine cellar as interior temperature may not be cool enough to prevent spoilage.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

DANGER

Risk of child entrapment. Before disposing of any refrigerator or freezer, remove all doors. Leave any shelves in place so that children may not easily climb inside.

SAFETY INFORMATION

GROUNDING INSTRUCTIONS

 
 
ELECTRICAL REQUIREMENTS

In the event of malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. The appliance must be connected to a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠ DANGER - Improper connection of the equipment grounding conductor can result in a risk of electric shock. The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment grounding conductor. If repair or replacement of the cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal. Check with a qualified electrician or service person if the grounding instructions are not completely understood, or if in doubt as to whether the [tool/appliance] is properly grounded. Do not modify the plug connected to the [tool/appliance] - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

FOR GROUNDED, CORD-CONNECTED [TOOL/APPLIANCE] RATED LESS THAN 15A AND INTENDED FOR USE ON A NOMINAL 120V SUPPLY CIRCUIT

The appliance is for use on a nominal 120V circuit and should be connected to a grounding outlet that looks like the one illustrated below. The use of a temporary adaptor is not recommended.

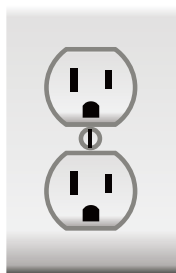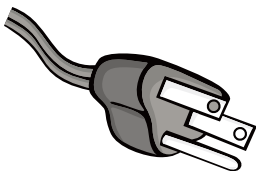

SAFETY INFORMATION

POWER SUPPLY CORD


1. Avoid the use of an extension cord because of potential safety hazards under certain conditions. Have a qualified electrician or serviceman to install an outlet near the appliance.
2. If it is absolutely necessary to use an extension cord, extreme care must be exercised.
 - a) Use only a grounding type 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the appliance.
 - b) The marked electrical rating of the extension cord must equal to or greater than the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

NOTE: Neither **BLACK+DECKER** nor the dealer can accept any liability for damage to the product or personal injury resulting from failure to observe the electrical connection procedures.

SET UP & USE

PARTS & FEATURES


Model	Bottle Capacity	Number of Shelves	Temperature Range
BD60016	6	2	46° - 65°F

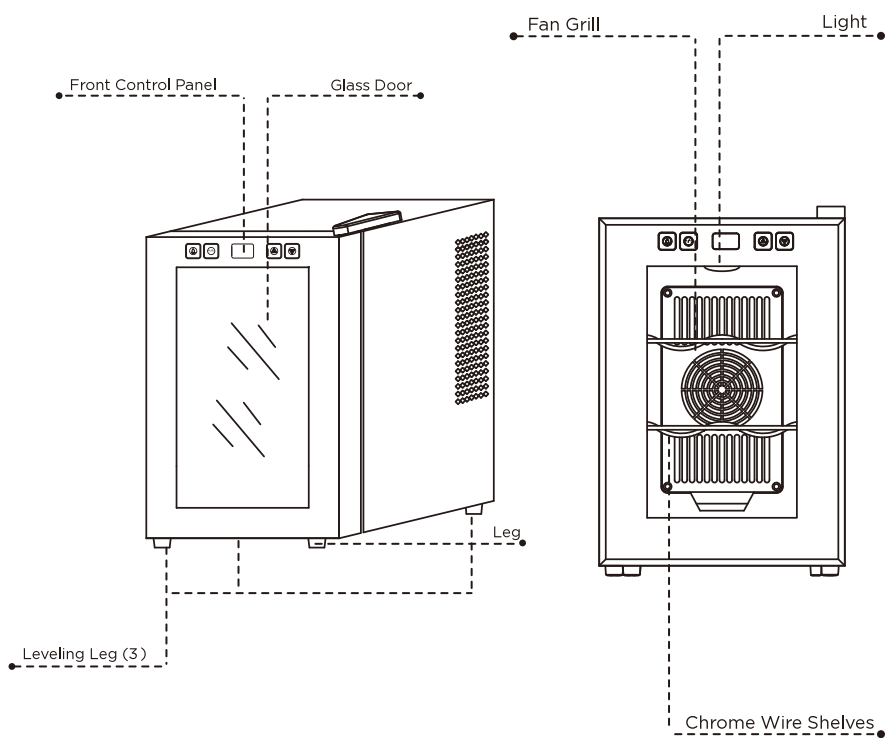 

SET UP & USE

PARTS & FEATURES

Model	Bottle Capacity	Number of Shelves	Temperature Range
BD60026	8	3	46° - 65°F

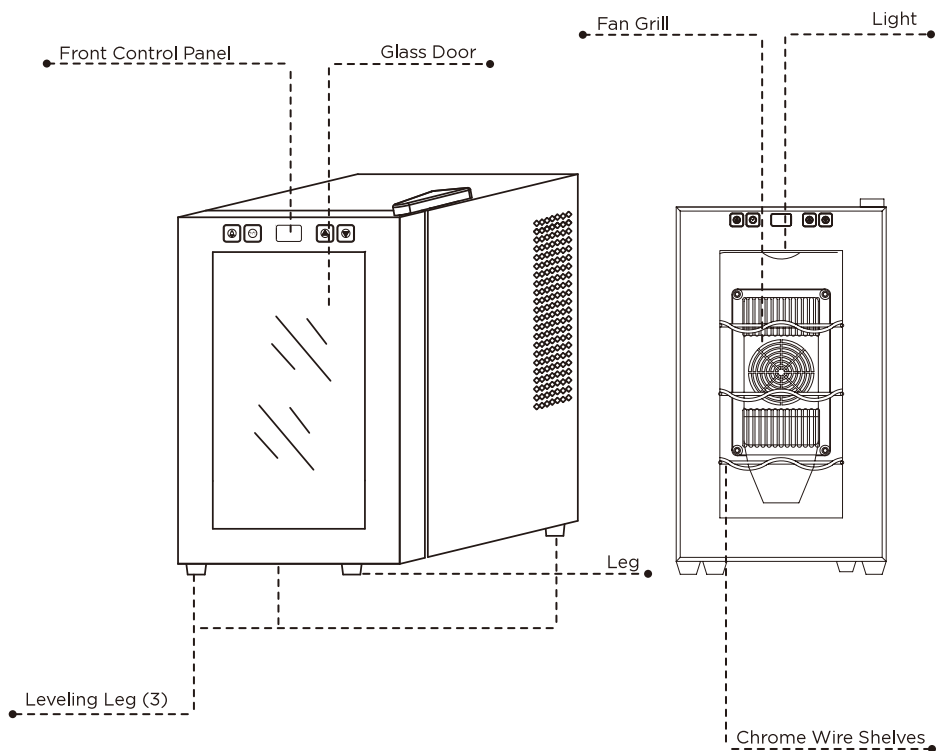 

SET UP & USE

INSTALLATION GUIDE

1. Unpack your wine cellar by removing all packaging materials like carton, base, foams, adhesive tape, etc.
2. Remove all accessories, internal packaging material that was used to hold shelves, etc., in place during transport.
3. Clean the remains of all adhesive tape used and remove all printed material supplied.
4. Install the wine cellar in a convenient location away from extreme heat and cold. Allow sufficient clearance between the wine cellar and side wall so the door(s) will open without obstruction. Wine cellar is not designed for recessed or built-in installation.
5. The floor on which the wine cellar should be placed must be flat, hard, solid, and even. The wine cellar should not be placed on any soft material such as carpet, foam, plastic, etc.
6. To level your wine cellar, use the two leveling legs in the rear and one in the front left of your wine cellar. Adjust by turning the legs counter clockwise to raise or counterclockwise to lower your wine cellar.
NOTE: The front right leg that is part of the door hinge bracket is not adjustable.
7. The following are recommended minimum clearances around the wine cellar for proper air circulation:
Sides: 2" (50mm)
Top: 4" (100mm)
Back: 2" (50mm)
Proper air circulation will help your wine cellar work at maximum efficiency.

NOTE: Allow enough space in the front of the unit to open door to at least 120°.

OPERATION GUIDE

1. Plug in the wine cellar to power the unit on.
2. Press the °C/°F button to select the temperature display in Fahrenheit or Celsius.
3. You may choose a temperature setting for your wine cellar within the range of 46° to 65° Fahrenheit. The temperature of your wine cellar can be set by pressing the up arrow (▲) on the exterior of the glass door you can raise the temperature. By pressing the down arrow (▼) on the exterior of the glass door you can lower the temperature. Once you have completed your set temperature selection, the temperature readout will revert to the actual temperature.

SET UP & USE



Interior
Light
Switch



°C / °F



Temperature
display



Warmer
setting



Colder
setting

Please note that the actual interior cabinet temperature in a thermal electric unit is dependent on the ambient (room) temperature. You may set the cabinet temperature within the operational range but due to high ambient temperature the unit may not reach the selected temperature.

As an example, when the ambient temperature is 77°F, the lowest interior cabinet temperature that can be reached is 50-52°F. When the ambient temperature is 72°F, the lowest interior cabinet temperature that can be reached is 46-48°F.

NOTE: When the ambient (room) temperature is below the set temperature, the wine cellar will not operate until the ambient temperature increases higher than the set temperature.

4. Allow the wine cellar to operate empty for approximately one hour. This should allow the unit to reach the desired temperature.
5. Fill the wine cellar with your choice of wine bottles. Allow 1-2 hours of operation to reach the desired temperature.
6. Your wine cellar has a light to display your wine bottles. The manually operated light switch  is located on the touch control panel.

BENEFITS OF THERMAL ELECTRIC COOLING

Thermal Electric or semiconductor technology is an environmentally friendly cooling process which does not use any CFC, HCFC or HCF-type of refrigerants which are harmful to the environment.

The absence of a compressor reduces the noise and vibration usually associated with refrigerated appliances.

CLEANING AND CARE

CLEANING AND MAINTENANCE

⚠ WARNING: To avoid electric shock always unplug the wine cellar before cleaning. Ignoring this warning may result in death or injury.

⚠ CAUTION: Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

- General:**
- Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution to wipe down your wine cellar.
 - Rinse with clean warm water and dry with a soft cloth.
 - Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrate detergents, solvents or metal scouring pads, SOME of these chemicals may dissolve, damage and / or discolor your wine cellar.

Power Interruptions

Occasionally there may be power interruptions due to thunderstorms or other events. Remove the power cord from AC outlet when a power outage occurs. When power has been restored, replug power cord to AC outlet.

Vacation and Moving Care

For long vacations or absences, unplug the unit, empty contents from wine cellar and clean the wine cellar and door gaskets according to "General Cleaning" section. Prop doors open, so air can circulate inside. When moving always move the wine cellar vertically. **Do not move or store the unit on its side.**

TROUBLESHOOTING & WARRANTY

BEFORE YOU CALL FOR SERVICE

IF THE UNIT FAILS TO OPERATE:

- A) Check to make sure that the unit is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE WINE CELLAR YOURSELF

IMPORTANT

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the **BLACK+DECKER Customer Satisfaction Center** at **844-299-0879** or **service@equitybrands.com**

DATED PROOF OF PURCHASE, MODEL # AND SERIAL # REQUIRED FOR WARRANTY SERVICE

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the unit still does not work properly, contact customer service center or the nearest authorized service center. Customer must never troubleshoot internal components.

SYMPTOMS	POSSIBLE CAUSE	SOLUTIONS
The wine cellar does not work.	There is a power failure. A circuit breaker has activated.	Ensure the cellar is plugged in and the power socket is turned on. Reset circuit breaker.
Wine cellar is not reaching the desired temperature	The cellar is placed too close to a heat source No sufficient ventilation The door is opened too frequently or for a long period of time.	Keep the cellar away from sunshine or other heat sources. Place the wine cellar in good ventilation and keep any items away from the fans. Close the door tightly and do not open the door too frequently or for a long period of time.
Frost forming in the wine cellar	Too much humidity. The ambient temperature is too low.	Unplug to defrost, plug again after the frost thaws.

LIMITED WARRANTY

LIMITED WARRANTY

Any repair, replacement, or warranty service, and all questions about this product should be directed to BLACK+DECKER at **844-299-0879** from the USA or Puerto Rico.

BLACK+DECKER warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)**. BLACK+DECKER agrees that it will, at its option, replace the defective product with either a new or remanufactured unit equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If there is damaged due to power line surge, user damage to the AC power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On units that have been transferred from the original owner.
7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. Transportation and shipping costs associated with the replacement of the unit.
12. Service calls to instruct you how to use your product.
13. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; BLACK+DECKER. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call **844-299-0879** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

BLACK+DECKER does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. BLACK+DECKER has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of BLACK+DECKER. BLACK+DECKER reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **844-299-0879**.

W Appliance Co.
1356 Broadway
New York, NY 10018

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names and the orange and black color scheme are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

Product in this box may differ slightly from that pictured. Does not affect function. Not all accessories shown in photography are included in this package.

Imported by W Appliance, Inc., 1356 Broadway, New York, NY 10018

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>