




---

SAVE THIS USE AND CARE BOOK

---

# \*SpaceMaker® Electric Knife

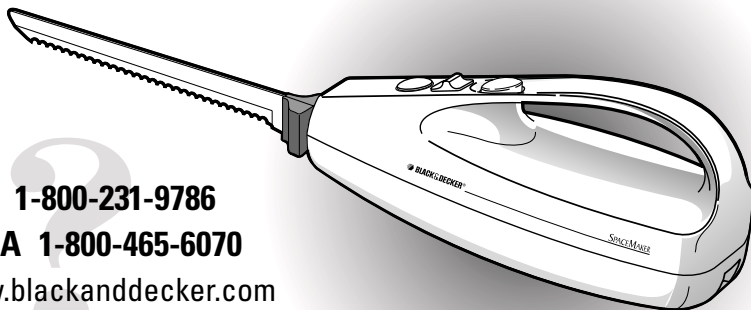

U.S.A 1-800-231-9786

CANADA 1-800-465-6070


<http://www.blackanddecker.com>

**Series EK970**
 
# IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including the following:

- **Read all instructions.**
- To protect against risk of electric shock do not immerse plug, cord, or handle in water or other liquid. Do not operate knife in water or under running water.
- Close supervision is necessary when any appliance is used by or near children.
- Turn off and unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Disconnect when changing blades.
- Do not install the can opener over a sink or basin or any electrical or gas heating appliance.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, electrical repair, mechanical repair or adjustment.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

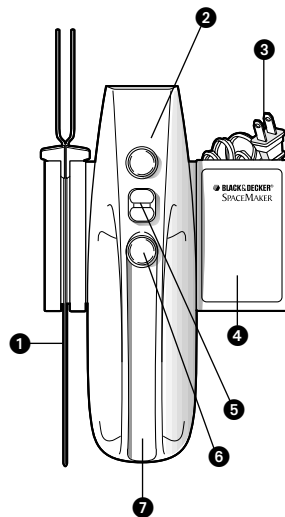

1. Stainless steel blades with grease guards
2. Blade release
3. Detachable cord set
4. Mountable storage bracket
5. Ready/Eject Button
6. Control switch
7. Contoured handle

- Make sure operating bar safety lock is in safety position so bar cannot be accidentally activated.
- Blades are sharp. Handle carefully. Always handle blades with hand away from the cutting edge. Always store blades with cutting edge away from you. Store out of reach of children.
- Do not operate in the presence or explosive and/or flammable fumes.
- This product is intended for household use only and not for commercial or industrial use.

## SAVE THESE INSTRUCTIONS

### **POLARIZED PLUG**

This appliance has a polarized plug - one blade is wider than the other. To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way. The detachable cord will fit onto the unit only one way. If the cord does not fit onto the prongs, reverse it.

### **ELECTRICAL CORD**

The cord length of this knife was selected to reduce safety hazards that may occur with a longer cord. If more cord length is needed, an extension cord with a polarized plug may be used. It should be rated not less than 10 amperes, 120 Volts, and have Underwriters Laboratories and Canadian Standards Association (CSA) listing. Handle cord carefully; avoid jerking it at outlet and appliance connections.



### **MOUNTING INSTRUCTIONS**

Before mounting, consider the best location for convenience and accessibility.

1. Hold the storage bracket against the wall in the desired location. Mark the location of the screw holes. Be sure to allow enough space for the blades above and below the bracket.
2. Set the bracket aside and drill a 3/16" (5mm) hole through one of the marks. Check to see if the mark is correct and level. Adjust, if necessary, and drill the second hole.
3. If mounting the unit on drywall or plaster, push the wall anchors all the way into the two drilled holes.

4. Place screws through the bracket and into the anchors or wall. Hand twist to hold, then tighten with a screwdriver. Do not over-tighten.

 
 

### INSERTING THE BLADES

The blades are precision honed and are extremely sharp. Always handle blades from the sides opposite the serrated edges. Always unplug the knife before inserting or removing the blades from the unit. Do not connect or release safety button (READY/EJECT) until ready to use.

1. Always use both blades together. One blade has a key hole slot, the other has a raised rivet (A). Place the round key hole slot over the rivet, and slide the rivet down into the narrow portion of the slot.
2. Carefully, hold the grease guards (plastic ends) and slide the blades into the motor handle with the cutting edges down toward the underside of the handle. Insert the blades until they click into place (B). Plug into any 120 volt 60 Hz outlet.

### HOW TO USE

1. Release the safety lock by sliding the READY/EJECT button forward to its unlock/ready position.
2. To operate, press the CONTROL SWITCH (button closest to the handle). The knife will stop as soon as the switch is released.
3. It's not necessary to use a back and forth motion as you guide the blades through food. When carving thin slices, slant the cutting edge of the blade toward the food.
4. Always keep the safety lock on when the knife isn't in use. This locks it so the knife cannot be turned on accidentally.
5. To remove blades for cleaning, slide the safety lock button (READY/EJECT button) back (C), press the RELEASE button, grasp the grease guards (plastic ends), and pull the blades out.

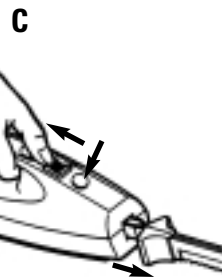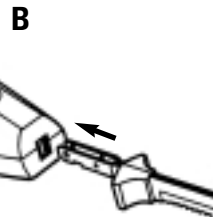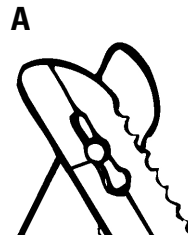

## **FULL TWO-YEAR WARRANTY**

Black & Decker warrants this product against any defects that are due to faulty material or workmanship for a two-year period after the original date of consumer purchase or receipt as a gift. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. We will return your product, transportation charges prepaid, provided it is delivered prepaid to any Black & Decker Household Appliance Company-Owned or Authorized Service Center. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Answers to any questions regarding warranty or service locations may be obtained by calling Consumer Assistance and Information toll free, in the U.S.: 1-800-231-9786; in Canada: 1-800-465-6070.

Listed by Underwriters Laboratories, Inc.

Copyright © 1989 - 1997 Black & Decker

Pub. No. 168633-63-RV00

Printed in People's Republic of China

\*SpaceMaker® is a trademark of General Electric Company, U.S.A.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>