

BLACK+DECKER

COUNTERTOP OVEN

use and care manual

TOD3300 Series



Thank you for your purchase!



Register online at

www.prodprotect.com/applica



Rate and review your products at

www.BlackAndDeckerAppliances.com



Share your pictures & stories with us online



Should you have any questions or concerns with your new product, please call our Customer Service Line at 1-800-231-9786 (US and Canada). Please do not return to the store.

CONTENTS

Important Safeguards 4

Getting to Know Your Countertop Oven 6

How to Use. 7

Toasting 7

Baking 8

Broiling. 8


Warm 9

Stay-On Mode 9

Care and Cleaning 9

Function Chart. 10

Warranty and Customer Service Information 11

 <small>ELBOL.COM 800-226-0642 No. 8005H-IGD</small>	<h1>CAUTION</h1>
	<p>THIS OVEN GETS HOT. WHEN IN USE, ALWAYS USE OVEN MITTS OR POT HOLDERS WHEN TOUCHING ANY OUTER OR INNER SURFACE OF THE OVEN.</p>

Please Read and Save this Use and Care Book.

IMPORTANT SAFEGUARDS.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- READ ALL INSTRUCTIONS BEFORE USING.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow time to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner. Contact consumer support at the toll-free number listed in the warranty section.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, press Start/Stop button until the Indicator Light is flashing for Bake, Broil, or Toast. Then unplug from wall outlet.
- Do not use appliance for other than intended use.
- Use caution when removing tray or disposing of hot grease.
- Do not clean oven with metal scouring pads. Pieces can break off the pad and touch electrical parts, causing risk of electric shock.
- Do not attempt to clean the heating elements.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the unit while in operation.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and other items not constructed of oven safe metal and glass pans.
- Do not cover crumb tray or any part of this oven with metal foil. This will cause overheating in the oven.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not leave unattended while in operation. Food ignition may occur. If this happens, unplug the unit, but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and other combustible materials.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

1. A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
2. Extension cords are available and may be used if care is exercised in their use.
3. If an extension cord is used:
 - a) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b) The extension cord should be a grounding-type 3-wire cord.
 - c) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Note: If the power cord is damaged, please contact the warranty department listed in these instructions.

GETTING TO KNOW YOUR COUNTERTOP OVEN



1. Door handle
2. Easy view glass door
3. 3 positions for wire racks
4. Slide out crumb tray
(Part# 129001-007)
5. Baking pan
(Part# 129001-304)
6. Wire rack
(Part# 129001-013)
7. Function/Temperature knob
8. Indicator Lights:
Bake, Broil, Toast
9. Digital display
10. Time knob
11. Start/Stop button
(Turns unit ON or OFF)
12. Rubber foot pads, 4pcs
(Part # TOD3300-01)

Product may vary slightly from what is illustrated.

HOW TO USE

This appliance is intended for household use only.

Getting Started

- Remove all packing material, any stickers, and the plastic band around the power plug.
- Remove and save literature.
- Please go to www.prodprotect.com/applica to register your warranty.
- Wash all removable parts as instructed in Care and Cleaning Section.
- Select a location where this unit is to be used, allowing enough space from the back of the unit and wall to allow heat to flow without damage to cabinets and walls.

Important information about using your oven

1. This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven.
2. When using the oven for the first time, you may notice smoke or a slight odor during the first few minutes. This is normal.
3. Be sure food or baking pan does not come within 1 ½ inches (3.8 cm) of the top heating elements.
4. Food should not extend beyond the edges of the baking pan to avoid drippings from falling onto the heating elements.
5. Many factors influence cook times such as altitude, humidity and variations in electrical grids. For best results, monitor the end of the cook cycle.
6. You can put food on both wire racks at once, in the top and bottom positions. This arrangement is best for keeping warm or reheating food.
7. **Cooking Containers:** Metal, ovenproof glass or ceramic bakeware can be used in your oven. Follow the manufacturer's instructions. Be sure the top edge of the container is at least 1 ½ inches (3.81cm) away from the upper heating elements.

TOASTING

It is not necessary to preheat the oven for toasting.

1. Open oven door and insert slide rack in the middle slot.
2. Place items to be toasted directly on slide rack in the bottom slot and close the door.
3. Set Function/Temperature selector knob to Toast position. The Toast indicator light will blink.
4. Use the Time knob to select desired toast shade on digital display, with 1 being the lightest and 7 being the darkest.
5. Press the Start/Stop button to begin toasting. The light will turn solid while toasting.
6. There will be 2 audible beeps once the cooking cycle is complete. The digital display will read "00" and the toast indicator light will blink to indicate standby mode. After 60 seconds the unit will turn off.
7. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
8. Unplug appliance when not in use.

BAKING

Note: This oven has been designed to cook faster. Please inspect your items earlier than the prescribed cook time for a conventional oven to ensure that they do not get overcooked.

Note: For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Open oven door and insert slide rack to center position.
2. Place items to be baked directly on wire rack or place pan on wire rack.
3. Set Temp selector knob to desired temperature. The Bake indicator light will blink, indicating the oven is on stand by.
4. Turn the Time knob to set cook time on digital display.
5. Press the Start/Stop button to begin baking. The digital display will count down while cooking, showing the time remaining.
6. There will be 2 audible beeps once the cooking cycle is complete. The digital display will read "00" and the bake indicator light will blink to indicate standby mode. After 60 seconds the unit will turn off.
7. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the food.
8. Unplug appliance when not in use.

BROILING

Note: When broiling, preheat oven for 10 minutes.

1. Place wire rack in the top rack position.
2. If the items are going to be placed directly on the wire rack, slide the baking pan into the guide under the wire rack to catch drippings during broiling.
3. Place items to be broiled directly on wire rack, or in the baking pan on top of the wire rack.
4. Set Temp selector knob to Broil position. The Broil indicator light will blink, indicating the oven is on stand by.
5. Turn the Time knob to set Broil time on digital display.
6. Press the Start/Stop button to begin broiling. The digital display will count down while cooking, showing the time remaining.

Note: For best results when broiling meat, turn over the meat half-way through broiling.

7. There will be 2 audible beeps once the cooking cycle is complete. The digital display will read "00" and the broil indicator light will blink to indicate standby mode. After 60 seconds the unit will turn off.
8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the food.
9. Unplug the appliance when not in use.

WARM

1. Place wire rack in the middle rack position.
2. Set Temp selector knob to Warm position. The Bake indicator light will blink, indicating the oven is on stand by.
3. Turn the Temp knob to adjust to desired temperature.
4. Turn the Time knob to set cook time on digital display.
5. Place food on rack or in pan. Press the Start/Stop button to begin cooking. The digital display will count down while cooking, showing the time remaining.
6. There will be 2 audible beeps once the cooking cycle is complete. The digital display will read "00" and the bake indicator light will blink to indicate standby mode. After 60 seconds the unit will turn off.
7. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the food.
8. Unplug appliance when not in use.

STAY-ON MODE

The Baking, Broiling, and Warm functions can be used without the timer.

Caution: In the Stay-on mode the oven will stay on until turned off.

1. •If baking or warming, set Temp selector knob to the desired temperature. The Bake indicator light will blink, indicating the oven is on stand by.

•If broiling, set Temp selector knob to Broil position. The Broil indicator light will blink, indicating the oven is on stand by.
2. Turn the Time knob to "on". It's to the left of "01" and to the right of "90".
3. Press the Start/Stop button to begin cooking. The digital display will show "on" and the indicator light will stay lit while cooking. It will stay on until turned off externally.
4. Press the Start/Stop button to end cooking. There will be 2 audible beeps and the indicator light will blink to indicate standby mode. After 60 seconds the unit will turn off.
5. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the food.
6. Unplug the appliance when not in use.

CARE AND CLEANING

This product contains no user serviceable parts. Refer to service qualified service personnel.

Cleaning

Important: Before cleaning any part, be sure the oven is off, unplugged, and cool.

Note: Do not allow food debris to accumulate in oven cavity. Do not use aerosol or spray oven cleaners.

1. Clean the glass door with a sponge, soft cloth, or nylon pad and dish soap and warm water. Do not use a spray cleaner.
2. Remove wire rack and bake pan; wash in hot water with dish soap. To remove stubborn spots, use a polyester or nylon pad.
3. Pull out crumb tray and dispose of crumbs. Wipe tray with a damp cloth and dry thoroughly before placing back into the oven.
Note: *The racks, are dishwasher safe. We recommend washing the bake pan and crumb tray by hand with hot water and dish soap.*
4. Wipe the outside of the oven with a damp cloth or sponge. Dry thoroughly.
5. Do not attempt to clean the heating elements. Any food that comes into contact with the elements will burn off on its own.

FUNCTION CHART

FUNCTION	Default Settings**		Function Ranges	
	TEMPERATURE	TIME	TEMPERATURE	MAXIMUM TIME
Toast	-	Shade 4	-	1-7 Shades
Convection/ Bake*	200°F-450°F 93°C-230°C	15 min	200°F-450°F 93°C-230°C	90 min Stay-on Available
Broil	475°F 245°C	15 min	475°F 245°C	90 min Stay-on Available
Keep Warm	150°F 65°C	15 min	150°F 65°C	90 min Stay-on Available

*Convection Baking is default on the Bake Setting.

**Default settings apply only after the unit has been unplugged and plugged back in (Bake Function is Default). Once a setting has been used, the last function, time and temperature selections will be saved.

If additional assistance is needed, please contact our consumer service team at
1-800-231-9786.

WARRANTY INFORMATION

For service, repair or any questions regarding your appliance, call the appropriate 800 number listed within this section. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Two-Year Limited Warranty (Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands, Inc.'s liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applica, or call toll-free **1-800-231-9786**, for general warranty service.
- If you need parts or accessories, please call **1-800-738-0245**.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

BLACK+DECKER

®

www.BlackAndDeckerAppliances.com



BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

Made in China.

© 2017 The Black & Decker Corporation and Spectrum Brands, Inc., Middleton, WI 53562

17885-02

T22-5003776

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>