 


QUICK START GUIDE

PhotoShare Frame

QSG November 2018 | Designed in the USA

- 1 Turn on the PhotoShare Frame by plugging it into a power outlet.



- 2 Connect your frame to Wifi: Tap the screen once and then hit the back arrow in the upper left corner to get to the frame Main Menu, tap Settings, then Wireless Settings and select the WiFi network from the list and input your WiFi password.

- 3 Go to the Google Play or Apple App Store to download the SimplySmart Photoshare App.

 


Download on the
App Store



ANDROID APP ON
Google play

- 4 Launch the Photoshare App and select "Create New Account" and complete the new account process: enter your name, email address, and input the frame ID to complete the registration in the App. Go to Main Menu on the frame again and then Settings and the frame ID is displayed on the top of the first Settings screen.



- 5 There are 3 simple ways to get photos and messages into your frame:

- Using the app, tap the destination frame icon at the top, then tap the photos thumbnails you want to send to the frame, then tap **send**.
- Email photos directly to the frame's unique email address that was set up during registration.
- Auto sync Facebook albums: send photos from your facebook

account by using our web app on PhotoShareFrame.com. Simply log in, click on the Facebook icon to log into your FB account and select the photos to send to the frame.

- 6 Give your frame email address to your friends and family so that they can email photos directly to your frame. You can also share your frame ID with your friends and family and they can also download the app to send photos to your frame. To stop your friends and family from sending photos to the frame, go to **SETTINGS - MANAGE USER** and delete them from the permission list.

Navigating Your PhotoShare Frame



Photos

View photos or start a slide show with photos stored on the frame. During the slideshow tap the screen once to display the photo menu to perform other functions. After tapping the screen you can also slide your finger to move to the next photos in single picture mode, or press play button to enter auto slide show mode



SD/USB Photos

Insert a SD card or USB drive into the side of the frame for additional external storage and manage photos, music, and video once stored on the frame



Website Frame Management

Go to PhotoShareFrame.com to manage your frame from our frame website



Weather

View your calendar and weather with 1 tap



Videos

Store and watch your favorite recordings



Alarm

Set multiple alarms



Music

Play your favorite songs while enjoying a slide show



Clock

Optional clock displays



Setting

Customize your frame's settings

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>