

LS-123T 使用说明书 INSTRUCTIONS



E-IM-2788

电子计算器
Electronic Calculator

运算例子/Calculation Examples

计算 / CALCULATION 	按键 / OPERATION 	显示 / DISPLAY
▼ 混合运算 / Mixed 140-35+22=127 2x 2 ^③ =6 -7x99 ^④ =-63 (2+4)÷3x8.1=16.2	ON CA 140 [-] 35 + 22 = 2 x 2 2 3 = 7 [-] 99 99 = 2 + 4 ÷ 3 x 8.1 = 8 1 =	(0.) (127.) (6.) (-63.) (16.2)
▼ 常数运算 / Constant 2+3=5 4+3=7 1-2=-1 2-2=0 2x3=6 2x4=8 6÷3=2 9÷3=3	2 + 3 = 4 = 1 [-] 2 = 2 = 2 x 3 = 4 = 6 ÷ 3 = 9 ÷ 3 =	(5.) (7.) (-1.) (0.) (6.) (8.) (2.) (3.)
▼ 份数 / Power, Fraction 3 ⁴ =81 1/5=0.2 1/(2x3+4)=0.1	3 x = = = = 5 ÷ = 2 x 3 + 4 ÷ =	(81.) (0.2) (0.1)
▼ 平方根运算 / Square Root $\sqrt{3} = 1.73205080756$	3 √	(1.73205080756)
▼ 百分比运算 / Percent 1200x $\frac{12}{100}$ =144 1200x $\frac{15}{100}$ =180 1200+(1200x20%)=1,440 1200-(1200x20%)=960	1200 x 12 % 15 % 1200 + 20 % 1200 [-] 20 %	(144.) (180.) (1'440.) (960.)

计算 / CALCULATION 	按键 / OPERATION 	显示 / DISPLAY
▼ 记忆运算 / Memory 3x4= 12 -) 6-0.2= 30 ----- -18 +) 200 ----- 182	ON CA 3 x 4 M 6 [-] 0.2 = M MR 200 M MR (重呼记忆/Recall Memory) MC (清除记忆/Clear Memory)	(0.) (M 12.) (M 30.) (M -18.) (M 200.) (M 182.) (182.)
▼ 总和运算 / Grand Total 30x40= 1,200 50x60= 3,000 +) 25x30= 750 ----- 4,950 +) 235x35= 8,225 ----- 13,175	ON CA 30 x 40 = 50 x 60 = 25 x 30 = GT 235 x 35 = GT (重呼总和/Recall Grand Total) GT (清除总和/Clear Grand Total)	(0.) (GT 1'200.) (GT 3'000.) (GT 750.) (GT 4'950) (GT 8'225.) (GT 13'175.) (GT 13'175.)
▼ 税项 / Tax 税项设定 / Tax Rate Set 税率 / Tax Rate = 5% 重呼税率 / Recall Tax Rate 税率增加 / Add the Tax Amount 成本 \$2,000 不包税率 Price \$2,000 without tax 卖价包税率 (\$2,100) Selling price with tax? (\$2,100) 税率 / Tax = (\$100) 税率减少 / Deduct Tax Amount 卖价#3,150 包税率 Selling price \$3,150 with tax 成本不包税率 (\$3,000) Price without tax? (\$3,000) 税率 / Tax = (\$150)	ON CA SET 5 SET ON CA RECALL 2000 TAX+ TAX+ 3150 TAX- TAX-	(TAX% 5.) (TAX% 5.) (2'000.) (TAX+ 2'100.) (TAX 100.) (3'150.) (TAX- 3'000.) (TAX 150.)
▼ 溢出运算 / Overflow 1) 123456789x78900 =9740740652100 (溢出 / ERROR) ——— 2) 999999999999 (记忆加算) (Add to Memory) 123 (记忆加算) (Add to Memory) 3) 6÷0=0 (溢出 / ERROR)	123456789 x 78900 = CE CE 999999999999 M 123 M CE CE MR MR MR MR 6 ÷ 0 = CE CE	(E 9.74074065210) (9.74074065210) (M 999'999'999'999.) (M 1.00000000012) (M 1.00000000012) (999'999'999'999.) (E 0.) (0.)

佳能电子香港有限公司

香港新界葵涌货柜码头路82-100号永得利广场第一期17楼

北京博怡嘉业科技股份有限公司

北京市西城区北展北街华远企业中心D座1单元505室

■ 在使用本产品前，请务必先仔细阅读本使用说明书。

供电电源

本计算器配有两种电源。扣式电池的使用时间完全取决于个别的使用情况。电池耗尽后，您仍然可使用太阳能电池给计算器供电。

（注：不要试图自行更换电池，请到佳能维修服务中心，专业人员为您更换电池。）

■ 电磁干扰或静电释放可引起显示故障或内存中的内容丢失或改变。如果发生这种情况，请按 **ON/CA** 键重新开始计算。

自动关闭电源功能

当本机开关处于“ON”（意“开启”）状态下时，在七分钟以上的情况下不按任何键，计算器将会自动关闭电源以节电。欲重启计算器请按 **ON/CA** 键。此时显示屏上显示“0”字样。

总计运算

GT 在计算时，结果会累积在总计记忆当中。当按 **GT** 键时，便会显示出总计结果，连续按下 **GT** 键两次，便会清除总计。

税金计算

ON/CA **SET** **存储税率**：按 **ON/CA** **SET**，再输入税率数字，然后按 **SET** 储存。

ON/CA **RECALL** **召回税率**：按 **ON/CA** **RECALL**，以召回当前税率。

TAX+ **加税键**：用于向显示的数字增加税金。

TAX- **减税键**：用于从显示的数字减少税金。

取消款项

请按 **CE** 键来取消错误输入的款项，再输入正确的款项。连续按下 **CE** 键两次，便会清除所有运算记录，记忆运算除外。

要转移或改正已输入的款项，可按 **→** 键，最右边的数字会被除。

溢出功能

在以下的情况时，显示屏上将显示出“E”字样。键盘会被锁定，无法进行进一步计算。

按下 **CE** 键可清除溢出。可导致溢出的情况如下：

1. 计算结果或存储内容超过12位数。
2. 进行除以“0”的计算。

规格

电源：太阳能电池及扣式电池 (LR44 x 1)

工作温度范围：0°C - 40°C

尺寸：145毫米 (长) x 104毫米 (阔) x 25毫米 (高)

重量：119克

（规格如有改动恕不另行通知）

■ Before using this product, please read this manual carefully.

POWER SUPPLY

This calculator comes with a dual power source. The duration of alkaline battery depends entirely on individual usage. When the battery is exhausted, you can still use the solar cell to power the calculator.

(NOTE: Do not attempt to change the battery by yourself. Visit a Canon Service Center to change the battery for you).

■ Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. If this occur, press the **ON/CA** key and restart your calculation from the beginning.

AUTOMATIC POWER-OFF FUNCTION

When the power is turned "ON" and none of the keys are pressed for more than 7 minutes, the calculator turns off automatically to save power. Press **ON/CA** key to re-start the calculator.

GRAND TOTAL FUNCTION

GT The totals are accumulated in the grand total memory. Press **GT** to get the grand total. Press **GT** twice to clear the grand total memory.

TAX FUNCTION

ON/CA **SET** **Store the tax rate**: Press **ON/CA** **SET** and enter the tax rate figure, then press **SET** to store.

ON/CA **RECALL** **Recall the tax rate**: Press **ON/CA** **RECALL** to recall the current tax rate.

TAX+ **Add tax key**: Used for adding the tax amount to the display figure.

TAX- **Deduct tax key**: Used for deducting the tax amount from the displayed figure.

CANCELLING THE ENTRIES

Press **CE** key to clear mis-entered number and re-enter correctly. Press **CE** twice to clear all registered calculation except memory.

For shifting and correcting an entered number, press the **→** key. The right most digit of a number will be deleted.

OVERFLOW FUNCTIONS

In the following cases, "E" will be shown on the display. The keyboard is electronically locked, and further operation is impossible. Press **CE** key to clear the overflow.

The overflow occurs when:

1. The result or the memory contents exceeds 12 digits.
2. Dividing by "0".

SPECIFICATION

Power Source: Solar cell and alkaline battery (LR44 x 1)

Usable Temperature: 0°C to 40°C

Dimension: 145mm (L) x 104mm (W) x 25mm (H)

Weight: 119g

(Subject to change without notice)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>