

# Canon

PUB. DIM-0915-000

Digital Video Camcorder  
**Instruction Manual**

Caméscope numérique  
**Manuel d'instruction**

Videocámara digital  
**Manual de Instrucciones**

---

**ZR960**

---

•

---

•

---

•

---

English

Français

Español



**NTSC**

Mini **DV** Digital  
Video  
Cassette

## Cleaning the Video Heads

Digital video camcorders record video signals onto the tape in very thin lines (as thin as 1/8 the width of a hair). The following anomalies may appear if the video heads are even slightly dirty.

- Mosaic or other blocky video artifacts (Fig. 1) or banding (Fig. 2) appear on the picture during playback.
- Sound becomes distorted, or there is no sound during playback.
- The message [HEADS DIRTY, USE CLEANING CASSETTE] appears.



Fig. 1

If such symptoms appear, clean the video heads with the Canon DVM-CL Digital Video Head Cleaning Cassette\* or a commercially available dry cleaning cassette.

If the symptoms reappear shortly after cleaning, the videocassette may be defective. Stop using it.

\* Availability differs from area to area.



Fig. 2

### Video heads may become dirty under the following conditions:

- Using the camcorder in humid or hot places.
- Using cassettes with damaged or dirty tapes.
- Using the camcorder in dusty places.
- Using the video heads for a long time without cleaning them.

### NOTES

---

- Before you make important recordings, clean the video heads and make a test recording in advance. We also recommend cleaning the video heads after use, before storing the camcorder.
- Do not use wet type cleaning cassettes as this may damage the camcorder.
- Even after cleaning the video heads you may not be able to correctly play back tapes that were recorded with dirty video heads.

# Important Usage Instructions

## WARNING!



**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.**

For Canada only:

**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO DRIPPING OR SPLASHING.**

## WARNING!



**TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.**

## COPYRIGHT WARNING:

**Unauthorized recording of copyrighted materials may infringe on the rights of copyright owners and be contrary to copyright laws.**

Digital Video Camcorder, ZR960 A systems

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and use in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with class B limits in Subpart B of Part 15 of FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual.

If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A., Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516)328-5600

The Mains plug is used as the disconnect device. The Mains plug shall remain readily operable to disconnect the plug in case of an accident.

## Important Warning



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.

## CAUTION:

**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

# IMPORTANT SAFETY INSTRUCTIONS

In these safety instructions the word “apparatus” or “product” refers to the Canon Digital Video Camcorder ZR960 A and all its accessories.

- 1** Read these instructions.
- 2** Keep these instructions.
- 3** Heed all warnings.
- 4** Follow all instructions.
- 5** Do not use this apparatus near water.
- 6** Clean only with dry cloth.
- 7** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 9** Unplug this apparatus during lightning storms or when unused for long periods of time.
- 10** Read instructions — All the safety and operating instructions should be read before the product is operated.
- 11** Retain instructions — The safety and operating instructions should be retained for future reference.
- 12** Heed Warnings — All warnings on the product and in the operating instructions should be adhered to.
- 13** Follow instructions — All operating and maintenance instructions should be followed.
- 14** Cleaning — Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. The product should be cleaned only as recommended in this manual.
- 15** Avoid magnetic or electric fields — Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camera.
- 16** Water and Moisture — Hazard of electric shock — Do not use this product near water or in rainy/moist situations.
- 17** Placing or Moving — Do not place on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
- 18** Power Sources — The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. Regarding other power sources such as battery power, refer to instructions in this manual.
- 19** Overloading — Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- 20** Objects and Liquid Entry — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Be careful not to spill liquid of any kind onto the product.
- 21** Servicing — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 22** Power Sources — The CA-590 Compact Power Adapter should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. Regarding other power sources such as battery power, refer to instructions in this manual.
- 23** Lightning — For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, disconnect it from the wall outlet and disconnect the antenna. This will prevent damage to the product due to lightning and power-line surges.
- 24** Damage Requiring Service — Disconnect this product from the wall outlet and all power sources including battery, and refer servicing to qualified service personnel under the following conditions:
  - a. When the plug is damaged.
  - b. If any liquid has been spilled onto, or objects have fallen into, the product.
  - c. If the product has been exposed to rain or water.
  - d. If the product does not operate normally even if you follow the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.

- e. If the product has been dropped or the cabinet has been damaged.
- f. When the product exhibits a distinct change in performance. This indicates a need for service.

**25** Replacement Parts — When replacement parts are required, be sure the service technician has used replacement parts that are specified by Canon or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

**26** Safety Check — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating order.

When replacement of the power supply is required, please return it to the responsible nearest Canon Service Center and please replace it with the same type number CA-590.

The adapter can be used with a power supply between 100 and 240 V AC. For areas where 120 V AC power is not used, you will need a special plug adapter. Contact your nearest Canon Service Center for further information. The adapter is not intended to be serviced. Should the product cease to function in its intended manner, it should be returned to the manufacturer or be discarded.

This Class B digital apparatus complies with Canadian ICES-003.

# Table of contents

## Introduction

---

- 9 About this Manual
- 10 Getting to Know the Camcorder**
- 10 Supplied Accessories
- 11 Names of Parts
- 13 Screen Displays



## Preparations

---

### **15 Getting Started**

- 15 Charging the Battery Pack
- 17 Installing the Backup Battery
- 17 Preparing the Accessories

### **18 Basic Operation of the Camcorder**

- 18 Joystick and Joystick Guide
- 18 Using the Menus

### **19 First Time Settings**

- 19 Changing the Language
- 20 Changing the Time Zone
- 20 Setting the Date and Time

### **20 Getting Ready to Start Recording**

- 20 Opening the Lens Cover and Adjusting the LCD Screen
- 21 Inserting and Removing a Tape



## Video

---

### **23 Basic Recording**

- 23 Shooting Video
- 24 Changing the Aspect Ratio of the Recordings (Widescreen / 4:3)
- 25 Zooming: Optical, Advanced and Digital Zoom
- 25 Quick Start Function
- 26 Reviewing the Last Scene Recorded

### **27 Basic Playback**

- 27 Playing Back Video
- 28 Locating the End of the Last Scene
- 28 On-Screen Displays (Data Code)

## **29 Advanced Functions**

- 29 [P] : Special Scene Recording Programs
- 31 [P] Flexible Recording: Changing the Shutter Speed
- 32 LCD Video Light
- 32 Self Timer
- 32 Manual Focus Adjustment
- 33 Manual Exposure Adjustment
- 34 White Balance
- 35 Image Effects
- 35 Digital Effects
- 36 Using an External Microphone
- 37 Audio Playback Modes



## **External Connections**

---

### **38 Connecting to a TV or VCR**

- 39 Connection Diagrams
- 40 Playback on a TV Screen
- 40 Copying your Recordings to an External Video Recorder
- 41 Digital Video Dubbing

### **43 Connecting to a Computer**

- 43 PC Connection Diagram
- 44 Transferring Video Recordings



## **Additional Information**

---

### **45 Appendix: Menu Options Lists**

- 45 FUNC. Menu
- 46 Setup menus
  - 46 Camera Setup (Advanced Zoom, Image Stabilizer, etc.)
  - 46 VCR Setup (Recording Mode, TV Type, etc.)
  - 47 Audio Setup (Wind Screen, Output Channel, etc.)
  - 47 Display Setup (LCD Brightness, Language, etc.)
  - 49 System Setup (Beep, Power Save, etc.)
  - 49 Date/Time Setup

### **50 Trouble?**

- 50 Troubleshooting
- 52 List of Messages

### **53 Do's and Don'ts**

- 53 Handling Precautions
- 56 Maintenance/Others
- 57 Using the Camcorder Abroad

<b>58</b>	<b>General Information</b>
58	System Diagram
59	Optional Accessories
62	Product Codes
63	Specifications
65	Index



## About this Manual

Thank you for purchasing the Canon ZR960. Please read this manual carefully before you use the camcorder and retain it for future reference. Should your camcorder fail to operate correctly, refer to *Troubleshooting* (□ 50).


### Conventions Used in this Manual

- **!** IMPORTANT: Precautions related to the camcorder's operation.
- **i** NOTES: Additional topics that complement the basic operating procedures.
- **✓** POINTS TO CHECK: Restrictions that apply if the function described is not available in all operating modes (the operating mode to which the camcorder should be set, etc.).
- **□** : Reference page number.
- “Screen” refers to the LCD and the viewfinder screen.
- The terms “photo” and “still image” are used interchangeably with the same meaning.
- The photos included in the manual are simulated pictures taken with a still camera.

The camcorder's operating mode is determined by the **POWER** switch. In this manual, **CAMERA** indicates that a function is available and **CAMERA** indicates that the function is not available.


Brackets [ ] are used to refer to menu options and other displays, exactly as they appear on the screen.

Names of buttons and switches other than the joystick are indicated within a “button” frame.  
For example **FUNC.**.

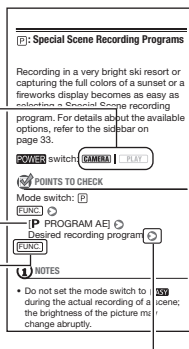


In this manual, the **➤** arrow is used to abbreviate menu selections. For a detailed explanation refer to *Using the Menus* (□ 18).

## Supplied Accessories

 

CA-590 Compact Power Adapter\*

 


BP-2L5 Battery Pack

Lithium Button Battery  
(CR1616)



 STV-250N Stereo Video  
Cable



\* CA-590E including power cord, in Asia.

### Online product registration for USA Customers only.

Register your product online at [www.registercanon.com](http://www.registercanon.com)

#### ✓ **Protect your product**

We will keep the model number and date of purchase of your new Canon product on file to help you refer to this information in the event of an insurance claim such as loss or theft.

#### ✓ **Receive information on new products and promotions**

Upon your request, we will send you information on Canon new products and promotions.

The serial number of this product can be found at the battery attachment unit of the camcorder. Write down the number and other information here and retain this book as a permanent record of your purchase to aid identification in case of theft.

Date of Purchase:

Model Name: ZR960 A

Purchased From:


Serial No.:

Dealer Address:

Dealer Phone No.:


## Names of Parts

### Left side view

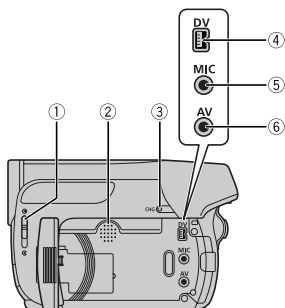


- ① Lens cover switch (☐ 23)  
(☞ open, ☹ closed)
- ② Speaker (☐ 27)
- ③ CHG (charge) indicator (☐ 15)
- ④ DV terminal (☐ 39, 43)
- ⑤ MIC (microphone) terminal (red) (☐ 36)
- ⑥ AV terminal (☐ 39)
- ⑦ Lock button
- ⑧ **POWER** switch
- ⑨ Mode switch (☐ 24)  
**EASY** Easy recording  
☐ Recording programs
- ⑩ Grip belt (☐ 17)
- ⑪ Stereo microphone


### Right side view

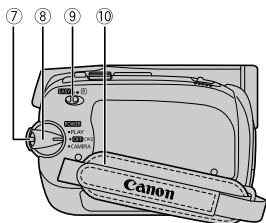


### Front view

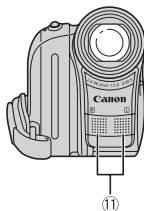


## Back view

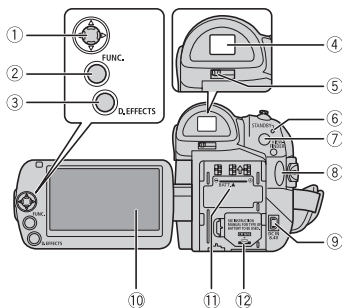

## Top view

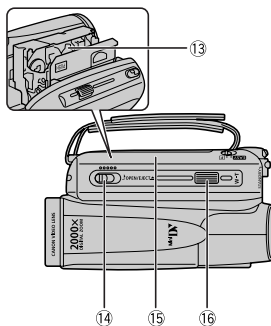


## Bottom view

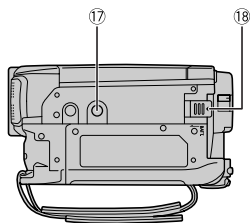


- ① Joystick ( 18 )
- ② FUNC. button ( 18, 45 )
- ③ D.EFFECTS button ( 35 )
- ④ Viewfinder ( 23 )
- ⑤ Dioptic adjustment lever ( 23 )
- ⑥ STANDBY indicator ( 25 )
- ⑦ VIEWFINDER button ( 23 )
- ⑧ Start/Stop button ( 23 )
- ⑨ DC IN terminal ( 15 )
- ⑩ LCD screen ( 20 )
- ⑪ Serial number/  
Battery attachment unit ( 15 )
- ⑫ Backup battery compartment ( 17 )
- ⑬ Cassette compartment ( 21 )
- ⑭ OPEN/EJECT ▲ switch ( 21 )
- ⑮ Cassette compartment cover ( 21 )
- ⑯ Zoom lever ( 25 )
- ⑰ Tripod socket ( 53 )
- ⑱ BATT. (battery release) switch ( 16 )




# Screen Displays
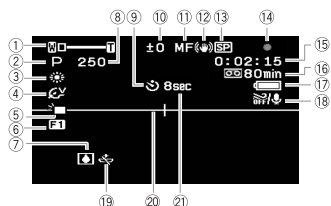
## CAMERA Recording Movies

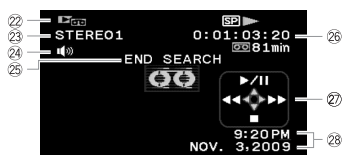

## PLAY Playing Movies




 
- ① Zoom ( [ ] 25), Exposure  ( [ ] 33)
- ② Recording program ( [ ] 29)
- ③ White balance ( [ ] 34)
- ④ Image effects ( [ ] 35)
- ⑤ LCD video light ( [ ] 32)
- ⑥ Digital effects ( [ ] 35)
- ⑦ Condensation warning ( [ ] 56)
- ⑧ Shutter speed ( [ ] 31)
- ⑨ Self timer ( [ ] 32)
- ⑩ Manual exposure ( [ ] 33)
- ⑪ Manual focus ( [ ] 32)
- ⑫ Image stabilizer ( [ ] 46)
- ⑬ Recording mode ( [ ] 46)
- ⑭ Tape operation ( [ ] 14)
- ⑮ Time code (hours : minutes : seconds)
- ⑯ Remaining tape ( [ ] 14)
- ⑰ Remaining battery charge ( [ ] 14)
- ⑱ Wind screen off ( [ ] 47)
- ⑲ Backup battery warning ( [ ] 17)
- ⑳ Level marker ( [ ] 48)
- ㉑ Recording reminder ( [ ] 14)
- ㉒ Operating mode
  -  (**CAMERA** mode):
  - Recording movies ( [ ] 23)
  -  (**PLAY** mode):
  - Playing back movies ( [ ] 27)
- ㉓ Audio playback mode ( [ ] 37)
- ㉔ Speaker volume ( [ ] 27)
- ㉕ Searching for the end of the last scene ( [ ] 28)
- ㉖ Playback time (hours : minutes : seconds : frames)
- ㉗ Joystick guide ( [ ] 18)
- ㉘ Data code ( [ ] 28)

#### ⑭ Tape operation

- Record, ● ||| Record pause,
- Stop, ▲ Eject,
- ▶▶ Fast forward, ◀◀ Rewind,
- ▶ Playback, ▶ ||| Playback pause,
- ▶▶ Fast forward playback,
- ◀◀ Rewind playback

#### ⑮ Remaining tape


Indicates the remaining time of the tape in minutes.

( moves while recording.) When the tape reaches its end, the display changes to " END".

- When the time left is less than 15 seconds, the remaining tape time may not appear.
- Depending on the tape used, the remaining time displayed may not be accurate. In any case, you will be able to record on the tape the number of minutes that appears on the cassette's label (for example, 85 minutes).

#### ⑰ Remaining battery charge



- When  starts flashing in red, replace the battery pack with a fully charged one.
- When you attach an empty battery pack, the power may turn off without displaying the icon.
- Depending on the conditions under which the camcorder and the battery pack are used, the actual battery charge may not be indicated accurately.

#### ⑱ Recording reminder

The camcorder counts from 1 to 10 seconds when you start recording. This is helpful to avoid scenes that are too short.



# Preparations

This chapter describes basic operations, such as navigating the menus, and first time settings to help you learn more about your camcorder.


## Getting Started

### Charging the Battery Pack


The camcorder can be powered with a battery pack or directly using the compact power adapter. Charge the battery pack before use.

For approximate charging times and recording/playback times with a full battery pack, refer to the tables on pages 59, 60.

Remove the battery terminal cover before attaching the battery

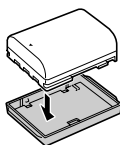


DC IN terminal

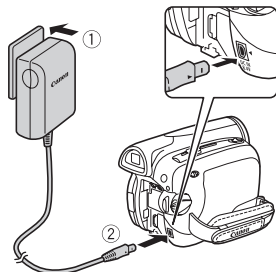

### 1 Plug the compact power adapter into a power outlet.

Depending on the region of purchase, a power cord for the compact power adapter may have been supplied as well. In that case, connect the power cord to the compact power adapter before plugging it into the power outlet.

### 2 Connect the compact power adapter to the camcorder's DC IN terminal.

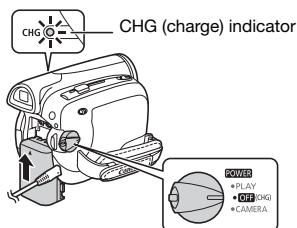

### 3 Attach the battery pack to the camcorder.

Press the battery pack lightly and slide it up until it clicks.

### 4 Charging will start when the POWER switch is turned to OFF (CHG).

The CHG (charge) indicator starts flashing. The indicator goes out when charging is completed.

## TO REMOVE THE BATTERY PACK



BATT. switch

- 1 Slide **BATT.** in the direction of the arrow and hold it pressed down.
- 2 Slide the battery pack down and then pull it out

### **i** IMPORTANT

- We recommend charging the battery pack in temperatures between 10 °C and 30 °C (50 °F and 86 °F). Outside the temperature range of 0 °C to 40 °C (32 °F to 104 °F), charging will not start.
- Do not connect to the camcorder's DC IN terminal or to the compact power adapter any electrical equipment that is not expressly recommended for use with this camcorder.
- To prevent equipment breakdowns and excessive heating, do not connect the supplied compact power adapter to voltage converters for overseas travels or special power sources such as those on aircraft and ships, DC-AC inverters, etc.

### **i** NOTES

- The battery pack will be charged only when the camcorder is off.
- If remaining battery time is an issue, you can power the camcorder using the compact power adapter so the battery pack will not be consumed.

- The CHG (charge) indicator also serves as a rough estimate of the battery charge status.

Two quick flashes at 1-second intervals:

Battery pack at least 50% charged. If the indicator flashes quickly but not exactly in this pattern, refer to *Troubleshooting* (□ 50).

One flash at 1-second intervals: Battery pack less than 50% charged.


- Charged battery packs continue to discharge naturally. Therefore, charge them on the day of use, or the day before, to ensure a full charge.
- We recommend that you prepare battery packs 2 to 3 times longer than you think you might need.
- **USA and Canada only:** The Lithium ion/polymer battery that powers the product is recyclable. Please call 1-800-8-BATTERY for information on how to recycle this battery.






## Installing the Backup Battery

The backup battery (CR1616 lithium button battery) allows the camcorder to retain the date, time (□□ 20) and other camcorder settings while the power source is disconnected. Connect a power source to the camcorder when replacing the backup battery to retain the settings.

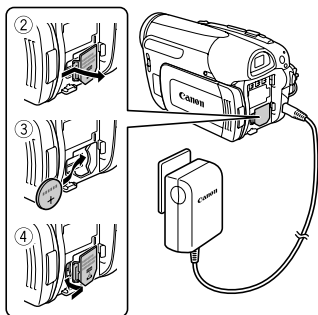

 - 1 Remove the battery pack, if one is attached.
- 2 Open the backup battery cover.
- 3 Insert the backup battery with the + side facing out.




- 4 Close the cover.

### **i** NOTES

The battery life of the backup battery is about one year. flashes in red when the lithium button battery is not installed, or when it needs to be replaced.


## Preparing the Accessories

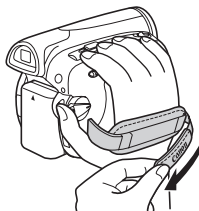

### Fasten the grip belt.

Adjust the grip belt so that you can reach the zoom lever with your index finger, and the **Start/Stop** button with your thumb.

### TO ATTACH A SHOULDER STRAP

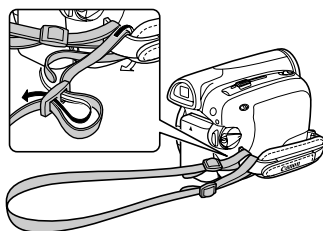


Pass the ends of the optional shoulder strap through the strap mount on the grip belt and adjust the length of the strap.

## Basic Operation of the Camcorder
 
### Joystick and Joystick Guide

Use the joystick to operate the camcorder's menus.

Push the joystick up, down, left or right (▲▼, ◀▶) to select an item or change settings.




Press the joystick itself (⊗) to save the settings or confirm an action. On menu screens, this is indicated by the icon **SET**.

Press ⊗ to display/hide the joystick guide (when recording, the joystick guide will appear only when the mode switch is set to [P]). The functions that appear on the joystick guide will change depending on the operating mode.

### Using the Menus

Many of the camcorder's functions can be adjusted from the menus that open after pressing **FUNC.**

For details about the available menu options and settings, refer to the appendix *Menu Options Lists* (□ 45).

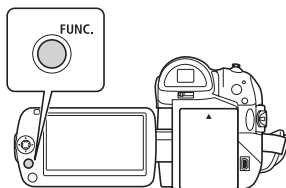


### Selecting an Option from the FUNC. Menu



- 1 Press **FUNC.**
- 2 Select (▲▼) the icon of the function you want to change from the left side column.  
Menu items not available will appear grayed out.
- 3 Select (◀▶) the desired setting from the available options at the bottom bar.
  - The selected option will be highlighted in light blue.
  - With some settings you will need to make further selections and/or press ⊗. Follow the additional operation guides that will appear on the screen (such as the joystick icon ⊗, small arrows, etc.).
- 4 Press **FUNC.** to save the settings and close the menu.  
You can press **FUNC.** to close the menu at any time.



## Selecting an Option from the Setup Menus

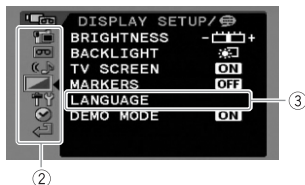

- 1 Press **[FUNC.]**.
- 2 Select **(▲▼)** [**≡** MENU] and press **(⊗)** to open the setup menu.

You can also hold **[FUNC.]** pressed down for more than 1 second to open directly the setup menu screen.

- 3 Select **(▲▼)** the desired menu from the left side column and press **(⊗)**.

The title of the selected menu appears on top of the screen and under it the list of settings.

- 4 Select **(▲▼)** the setting you want to change and press **(⊗)**.

- An orange frame will indicate the menu item currently selected. Menu items not available will appear grayed out.
- To return to the menu selection screen, select **(▼)** [**↩** RETURN] and press **(⊗)**.

- 5 Select **(▲▼)** the desired option and press **(⊗)** to save the setting.

- 6 Press **[FUNC.]**.

You can press **[FUNC.]** to close the menu at any time.

## First Time Settings

### Changing the Language

The language for on-screen and menu displays can be changed. The list of available languages depends on the region where you purchased the camcorder.

**POWER** switch: **[CAMERA]** | **[PLAY]**


◆ Default value

#### Language Set A

German, English◆, Spanish, French, Italian, Polish, Portuguese, Russian, Simplified Chinese and Japanese.

#### Language Set B

English◆, Simplified Chinese, Traditional Chinese and Korean.

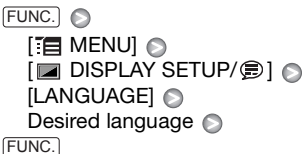

### **i** NOTES

- If you changed the language by mistake, follow the **(⊗)** mark next to the menu item to change the setting.
- The display **[FUNC.]** that appears in some menu screens refers to the name of the button on the camcorder and will not change, regardless of the language selected.

---

## Changing the Time Zone

Change the time zone to match your location. The default setting is New York or Singapore, depending on the region of purchase.


**POWER** switch: **CAMERA** | **PLAY**

**FUNC.** 


 **MENU** 

 **DATE/TIME SETUP** 

**[T.ZONE/DST]** 

Desired time zone\* 

**FUNC.**

\* To adjust for daylight saving time, select the area name marked with a .

---

## Setting the Date and Time

**POWER** switch: **CAMERA** | **PLAY**

### 1 Open the date and time setup screen.

**FUNC.**   **MENU** 

 **DATE/TIME SETUP** 

**[DATE/TIME]**


Blinking arrows will be displayed around the first field of the date.

### 2 Change each field of the date and time with the joystick () and move () to the next field.

### 3 Press to start the clock.

### 4 Press **FUNC.** to close the menu.

## NOTES

You can also change the date format ( 49).


---

## Getting Ready to Start Recording

---

### Opening the Lens Cover and Adjusting the LCD Screen

Before you start recording, open the lens cover.

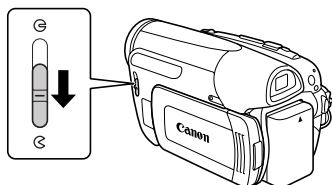


Move the lens cover switch down to  to open the lens cover.


---


### Rotating the LCD Panel

Open the LCD panel 90 degrees.

You can rotate the panel 90 degrees downward.

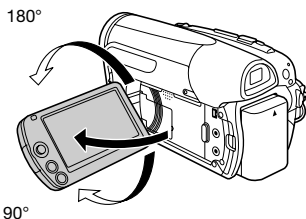

You can rotate the panel 180 degrees toward the lens (allowing the subject to monitor the LCD screen while you use the viewfinder ( 23)). Rotating the LCD panel 180 degrees can be useful also when you wish to include yourself in the picture when recording with the self timer.

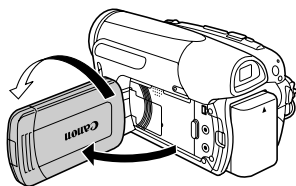

Subject can monitor the LCD screen






## **i** NOTES

**About the LCD and viewfinder screen:** The screens are produced using extremely high-precision manufacturing techniques, with more than 99.99% of the pixels operating to specification. Less than 0.01% of the pixels may occasionally misfire or appear as black, red, blue or green dots. This has no effect on the recorded image and does not constitute a malfunction.

## LCD Backlight

You can set the brightness of the LCD screen to normal or bright.

**POWER** switch: **CAMERA** | **PLAY**


- FUNC. 
- [MENU] 
- [DISPLAY SETUP/ ] 
- [BACKLIGHT]  Desired option 
- FUNC.

## **i** NOTES

- This setting does not affect the brightness of the recordings or the viewfinder screen.
- Using the [BRIGHT] setting will shorten the effective usage time of the battery pack.

## Inserting and Removing a Tape

Use only videocassettes marked with the Mini DV logo.

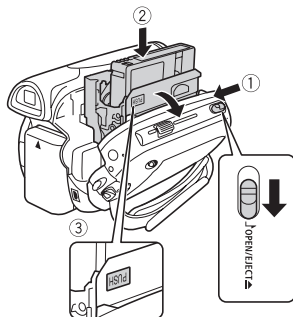


**1** Slide **OPEN/EJECT**  fully in the direction of the arrow and open the cassette compartment cover.

The cassette compartment opens automatically.

**2** Insert the cassette.

- Insert the cassette with the window facing the grip belt.
- To remove a cassette pull it straight out.

- 3** Press the **PUSH** mark on the cassette compartment until it clicks.

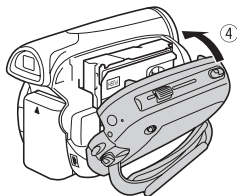

- 4** Wait for the cassette compartment to retract automatically and close the cassette compartment cover.

### **!** IMPORTANT

---

- Do not interfere with the cassette compartment while it is opening or closing automatically, or attempt to close the cover before the cassette compartment has fully retracted.
- Be careful not to get your fingers caught in the cassette compartment cover.

### **i** NOTES

---

If the camcorder is connected to a power source, cassettes can be inserted/removed even if the **POWER** switch is set to **OFF** (CHG).



# Video

This chapter covers functions related to shooting and playing back movies – from basic recording and zooming to more advanced manual picture adjustments.


## Basic Recording

### Shooting Video

#### Before You Begin Recording

Make a test recording first to check if the camcorder operates correctly. If necessary, clean the video heads (▢ 2).

**POWER** switch: **CAMERA** | **PLAY**

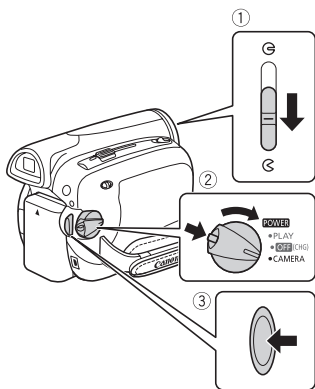

- 1 Move the lens cover switch down to to open the lens cover.
- 2 Holding the lock button pressed down, set the **POWER** switch to **CAMERA**.

- 3 Press **Start/Stop** to begin recording.


Press **Start/Stop** again to pause the recording.

### WHEN YOU HAVE FINISHED RECORDING

- 1 Close the lens cover and the LCD panel.
- 2 Turn off the camcorder.
- 3 Remove the tape.
- 4 Disconnect the power source and remove the battery pack.


#### Using the Viewfinder

When recording in bright places it may be difficult to use the LCD screen. In such case, change the brightness of the LCD screen (▢ 21, 48) or use the viewfinder instead. Press **VIEWFINDER** to activate the viewfinder along with the LCD panel. Close the LCD panel to use only the viewfinder.

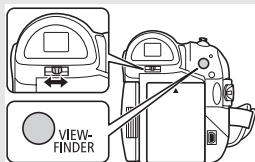

Adjust the viewfinder as necessary with the diopter adjustment lever.




## NOTES



- **About the recording time:** By changing the recording mode you can change the video quality and as a result, also the available recording time (□ 46).
- Previous recordings overwritten by a new recording cannot be recovered. Before you start recording, search for the end of the last recording (□ 28).
- To protect the tape and video heads, the camcorder will enter the stop mode (■) if left in record pause (● ||) mode for 4 minutes 30 seconds. To resume recording press .
- **About the Power Save mode:** If [POWER SAVE] is set to [ON ON] (□ 49), the camcorder will shut off automatically to save power when it is powered by a battery pack and is left without any operation for 5 minutes. To restore the power, turn the camcorder off and then on again.
- When recording in very loud places (such as fireworks shows or concerts), sound may become distorted or it may not be recorded at the actual levels. This is not a malfunction.



## Changing the Aspect Ratio of the Recordings (Widescreen / 4:3)

The default aspect ratio of movies is 16:9 (widescreen). Follow the procedure below to change it to 4:3.

**POWER** switch: **CAMERA** | **PLAY**

**FUNC.**   **[MENU]** 

 **[CAMERA SETUP]** 

**[WIDESCREEN]**  **[OFF OFF]** 

**FUNC.**

## NOTES

- **Playing back a widescreen recording:** TV sets compatible with the Video ID-1 system will switch automatically to 16:9 mode. Otherwise, change the aspect ratio of the TV manually.
- To play back on a TV with normal aspect ratio (4:3) change the [TV TYPE] setting accordingly (□ 47).

### About the mode switch and recording programs

Set the mode switch to **EASY** to let the camcorder adjust all the settings for you, allowing you to just point the camcorder and start shooting.



Set the mode switch to **P** to select one of the recording programs. The Special Scene recording programs (□ 29) offer a convenient way to select the optimal settings to match special recording conditions. The [P PROGRAM AE] recording program (□ 31), on the other hand, allows you to set the shutter speed manually and enjoy the flexibility to change other settings.







## Zooming: Optical, Advanced and Digital Zoom

The camcorder offers three types of zoom: optical, advanced and digital zoom. You can also change the zoom speed.









**POWER** switch: **CAMERA** | **PLAY**

### Selecting the Zoom Type

#### Options

♦ Default value


<b>[OPTICAL] (37x)</b>
The zoom range is limited to the optical magnification ratio of the lens.
<b>[ADVANCED]♦ (41x)</b>
When recording movies with a 16:9 aspect ratio, in addition to the optical zoom range, the camcorder processes the image digitally to obtain a larger zoom range without any deterioration in image quality. Note that the angle of view will be wider at both full telephoto and full wide-angle.
<b>[DIGITAL] (2000x)</b>
When this option is selected, the camcorder will switch to digital zoom (light blue area on the zoom indicator) when you zoom in beyond the optical zoom range (white area on the zoom indicator). With the digital zoom, the image is processed digitally so image quality will deteriorate the more you zoom in.

**FUNC.**   **MENU**   
 **CAMERA SETUP**   
**[ZOOM TYPE]**  Desired option   
**FUNC.** 


#### NOTES

The advanced zoom cannot be selected if [WIDESCREEN] is set to [OFF OFF].

## Using the Zoom

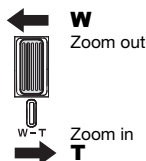

**Move the zoom lever toward W to zoom out (wide-angle). Move it toward T to zoom in (telephoto).**

Press gently for slower zooms; press harder for faster zooms. You can also set [ZOOM SPEED] ( 46) to one of three constant speeds (3 is the fastest, 1 the slowest).

#### NOTES

- Keep at least 1 m (3.3 ft.) to the subject. At full wide-angle, you can focus on a subject as close as 1 cm (0.39 in.).
- When [ZOOM SPEED] is set to [VAR VARIABLE], the zoom speed will be faster in record pause mode than when actually recording.

## Quick Start Function

When you close the LCD panel in **[CAMERA]** mode, the camcorder enters the standby mode. In standby mode the camcorder consumes only about half the power used when recording, saving energy when you are using a battery pack. Additionally, when you open the LCD panel, the camcorder is ready to start recording in approximately 1

second\*, ensuring you do not miss important shooting opportunities.

\* The actual time required varies depending on the shooting conditions.

**POWER** switch: **CAMERA** | **PLAY**

## 1 With the camcorder on, close the LCD panel.

- If you are using the viewfinder and the LCD panel is closed, press **VIEWFINDER** to enter the standby mode.
- A beep will sound and the orange **STANDBY** indicator will turn on to indicate the camcorder entered standby mode.

## 2 When you wish to resume recording, open the LCD panel.

- **STANDBY** indicator goes out and the camcorder is ready to record.
- You can also press **VIEWFINDER** to resume recording using the viewfinder with the LCD panel closed.

### ! IMPORTANT

Do not disconnect the power source while the camcorder is in standby mode (**STANDBY** indicator is lit in orange).

### i NOTES

- If you close the LCD panel under some circumstances (for example, while a menu is being displayed), the camcorder may not enter standby mode. Check that the orange **STANDBY** indicator turns on.
- The camcorder will shut off if left in standby mode for 10 minutes, regardless of the **[POWER SAVE]** setting (□ 49). To restore the power if the camcorder shut off, turn the camcorder off and then on again.


- You can select the length of time until shut-off or turn off the Quick Start function altogether with the **[QUICK START]** setting (□ 49).
- Opening the cassette compartment cover while the camcorder is in standby mode will reactivate the camcorder.








---

---

## Reviewing the Last Scene Recorded

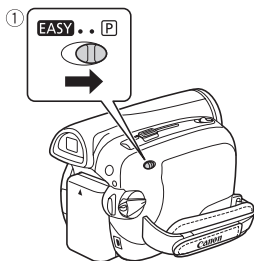**POWER** switch: **CAMERA** | **PLAY**

     


- 1 Set the mode switch to **P**.
- 2 Press  to display the joystick guide.
- 3 Push the joystick () momentarily toward  and release it.
  - The camcorder will play back a few seconds of the last recording made and return to record pause mode.
  - You can also hold the joystick pressed down ( toward  or ( toward ) to play back the tape (backward or forward respectively) in order to locate the point where you want to start recording.








 
 


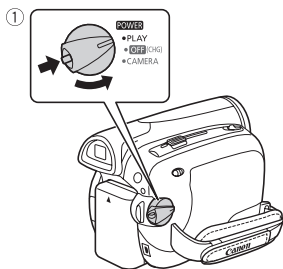

## Basic Playback

### Playing Back Video

**POWER** switch: **CAMERA** | **PLAY**



- 1 Holding the lock button pressed down, set the **POWER** switch to **PLAY**.**
- 2 Press  to display the joystick guide.**
- 3 Locate the point where you want to begin the playback.**  
Push the joystick () toward  to rewind the tape or () toward  to fast forward.
- 4 Push the joystick () toward  to begin the playback.**
  - Push the joystick () toward  again to pause the playback.
  - Push the joystick () toward  to stop the playback.





 
### TO ADJUST THE VOLUME

During the playback of a scene:



 

 
**FUNC.**   
[] **SPEAKER VOLUME**   
Adjust () the volume 

**FUNC.**

### FAST PLAYBACK

Press  to display the joystick guide. Push the joystick () toward  or () toward  and hold it pressed down to play back while rewinding or fast forwarding the tape, respectively. During fast playback you may notice some anomalies (blocky video, artifacts, banding, etc.) in the playback picture.

### NOTES

- You can display the date and time of the recording ( 28).
- To protect the tape and video heads, the camcorder will enter the stop mode () if left in playback pause () mode for 4 minutes 30 seconds. To resume the playback push the joystick () toward .
- Sound from the speaker will be muted when the LCD panel is closed in order to use the viewfinder for playback.

---

## Locating the End of the Last Scene

After playing back a tape, use this function to locate the end of the last scene recorded in order to continue recording from that point.

**POWER** switch: **CAMERA** | **PLAY**



### POINTS TO CHECK

---

Stop the playback before using this function.

**FUNC.** 

[ END SEARCH]  [EXECUTE]

- [END SEARCH] appears.
- The camcorder rewinds/fast forwards the tape, plays back the last few seconds of the recording and stops the tape.
- To cancel the end search push the joystick ( toward .

### NOTES

---

- End search cannot be used once you remove the cassette.
- If there are blank sections between recordings, the end search may not work correctly.

---





## On-Screen Displays (Data Code)

The camcorder keeps a data code containing the date and time of recording. You can select the data to be displayed.

**POWER** switch: **CAMERA** | **PLAY**

### Options

◆ Default value

[  OFF ] ◆
No data code display.
[  DATE ], [  TIME ]
Displays the date or time when the scene was recorded.
[  DATE & TIME ]
Displays both the date and time of the recording.

**FUNC.** 

[ MENU] 

[ DISPLAY SETUP/] 

[DATA CODE]  Desired option 

**FUNC.**



## Advanced Functions

### **P**: Special Scene Recording Programs

Recording in a very bright ski resort or capturing the full colors of a sunset or a fireworks display becomes as easy as selecting a Special Scene recording program. For details about the available options, refer to the sidebar on page 30.

**POWER** switch: **CAMERA** | **PLAY**

#### POINTS TO CHECK

Mode switch: **P**

**FUNC.**

**[P PROGRAM AE]**

Desired recording program

**FUNC.**

#### NOTES

- Do not set the mode switch to **EASY** during the actual recording of a scene; the brightness of the picture may change abruptly.
- **[P PORTRAIT]/[SPORTS]/[BEACH]/[SNOW]**
  - The picture may not appear smooth during playback.
- **[PORTRAIT]**
  - The blur effect of the background increases the more you zoom in (**T**).
- **[NIGHT]**
  - Moving subjects may leave a trailing afterimage.
  - Picture quality may not be as good as in other modes.
  - White points may appear on the screen.

- Autofocus may not work as well as in other modes. In such case, adjust the focus manually.
- **[SNOW]/[BEACH]**
  - The subject may become overexposed on cloudy days or in shaded places. Check the image on the screen.
- **[FIREWORKS]**
  - To avoid camcorder blur (blur due to the camcorder moving), we recommend using a tripod.

### [P PROGRAM AE]

The camcorder sets the aperture and shutter speed.



### [👤 PORTRAIT]

The camcorder uses a large aperture, achieving a focus on the subject while blurring other distracting details.



### [🎾 SPORTS]

Use this mode to record sports scenes such as tennis or golf.



### [🌙 NIGHT]

Use this mode to record in low-light conditions.



### [🌨 SNOW]

Use this mode to record in bright ski resorts. It prevents the subject from being underexposed.



 
### [🏖 BEACH]

Use this mode to record on a sunny beach. It prevents the subject from being underexposed.



### [🌅 SUNSET]

Use this mode to record sunsets in vibrant colors.



### [🎯 SPOTLIGHT]

Use this mode to record spotlit scenes.



### [🎆 FIREWORKS]

Use this mode to record fireworks.





## **P Flexible Recording: Changing the Shutter Speed**

Use the automatic exposure (AE) program to use functions like the white balance or image effects, or to select the shutter speed.

Use faster shutter speeds to record subjects moving quickly. Use slower shutter speeds to add motion blur, emphasizing the feel of movement.

**POWER** switch: **CAMERA** | **PLAY**

### **POINTS TO CHECK**

Mode switch: **P**

**1 Press** **[FUNC.]**.

**2 Select the [P PROGRAM AE] recording program** ( 29).

[P PROGRAM AE] is the default value; proceed directly to step 3 if you have not changed the recording program.

**3 Select the shutter speed from the setup menus.**

**[FUNC.]** **[MENU]**

**[CAMERA SETUP]**

**[SHUTTER]** Desired shutter speed **[FUNC.]**

### **Shutter speed guidelines**

Note that on screen only the denominator is displayed – [P 250] indicates a shutter speed of 1/250 second, etc.

1/60
To record under most ordinary conditions.
1/100
To record indoor sports scenes.

1/250, 1/500, 1/1000

To record from within a moving car or train or to shoot fast-moving subjects such as roller coasters.

1/2000

To record outdoor sports scenes on sunny days.

### **NOTES**

- Do not set the mode switch to **EASY** during the actual recording of a scene; the brightness of the picture may change abruptly.
- **[P PROGRAM AE]**
  - When setting the shutter speed, the number displayed will flash if the value selected is not appropriate for the recording conditions. In such case, select a different value.
  - If you use a slow shutter speed in dark places, you can obtain a brighter image, but the image quality may be lower, and the autofocus may not work well.
  - The image may flicker when recording with high shutter speeds.
  - **Recording movies under fluorescent lights:** If the screen starts to flicker, select [P PROGRAM AE] and set the shutter speed to 1/100.
  - The shutter speed resets to **[A AUTO]** when you set the mode switch to **EASY** or change the recording program.

---

## LCD Video Light

You can use the brightness of the LCD screen (LCD video light) to record in completely dark places. For a brighter picture, we recommend keeping a distance of about 20 cm - 60 cm (8 in. - 2 ft.) from the subject and/or using the [NIGHT] recording program.

**POWER** switch: **CAMERA** | **PLAY**

### 1 Turn on the LCD video light.

[FUNC.] ➤

[OFF] LCD LIGHT OFF ➤

[ON] LCD LIGHT ON ➤

Press  ➤

[FUNC.] ➤

### 2 Rotate the LCD panel toward the lens and point it in the direction of the subject.

### 3 Press [VIEWFINDER] to turn on the viewfinder.

Use the viewfinder to continue recording.

---

## TO TURN OFF THE LCD VIDEO LIGHT

### 1 Using the viewfinder, repeat step 1 above, selecting [OFF] LCD LIGHT OFF] instead.

Closing the LCD panel will also turn off the LCD video light.

### 2 Press [VIEWFINDER] to turn off the viewfinder's display.

---

## Self Timer

**POWER** switch: **CAMERA** | **PLAY**

### 1 Activate the self timer.

[FUNC.] ➤ [MENU] ➤

[CAMERA SETUP] ➤

[SELF TIMER] ➤ [ON ON] ➤

### 2 Press [FUNC.] to close the menu.

☺ appears.

### 3 Press [Start/Stop] to start recording.

The camcorder starts recording after a 10-second countdown. The countdown appears on the screen.

## NOTES

Once the countdown has begun, you can press [Start/Stop] again or turn off the camcorder to cancel the self timer.

---

## Manual Focus Adjustment

Autofocus may not work well on the following subjects. In such case, focus manually.

- Reflective surfaces
- Subjects with low contrast or without vertical lines
- Fast moving subjects
- Through wet windows
- Night scenes

**POWER** switch: **CAMERA** | **PLAY**


## POINTS TO CHECK

Adjust the zoom before you start the procedure.

Mode switch: [P]





- 1 Press  to display the joystick guide.
- 2 Push the joystick (▼) toward [FOCUS] to activate the manual focus.  
[FOCUS] on the joystick guide will be displayed in light blue and [MF] appears on the screen.
- 3 Adjust (◀▶) the focus as necessary.
  - Push the joystick (▶) toward ▲ for a farther focal distance or push it (◀) toward ■ for a closer focal distance.
  - Pushing the joystick (▼) toward [FOCUS] again will return the camcorder to autofocus.
- 4 Push the joystick (▲) toward [BACK] to save the focus adjustment.

### Infinity Focus

Use this function when you wish to focus on faraway subjects such as mountains or fireworks.

#### POINTS TO CHECK

Adjust the zoom before you start the procedure.  
Mode switch: [P]



- 1 Keep the joystick pushed (▼) toward [FOCUS] for more than 2 seconds.
  - [MF] changes to ∞.

- Pushing the joystick (▼) toward [FOCUS] again will return the camcorder to autofocus.
- If you operate the zoom or the joystick (◀▶), ∞ changes back to [MF] and the camcorder returns to manual focusing mode.

- 2 Push the joystick (▲) toward [BACK] to save the focus adjustment.

#### NOTES

The camcorder will automatically return to autofocus when you set the mode switch to [EASY].

---

### Manual Exposure Adjustment



At times, backlit subjects may appear too dark (underexposed) or subjects under very strong lights may appear too bright or glaring (overexposed). To correct this, you can manually adjust the exposure.

POWER switch: [CAMERA] | [PLAY]

#### POINTS TO CHECK

Mode switch: [P] (except for the [FIREWORKS] recording program).



- 1 Press  to display the joystick guide.
- 2 Push the joystick (▲) toward [EXP].  
[EXP] on the joystick guide changes to light blue and the exposure adjustment indicator  and the

neutral value “±0” appear on the screen.

### 3 Adjust (◀▶) the brightness of the image as required.

- The adjustment range and the length of the exposure adjustment indicator will vary depending on the initial brightness of the picture.
- Pushing the joystick (▲) toward [EXP] again will return the camcorder to automatic exposure.

### 4 Push the joystick (▼) toward [BACK] to lock and save the exposure setting.

If you operate the zoom during exposure lock, the brightness of the image may change.

---

---

## White Balance

The white balance function helps you accurately reproduce colors under different lighting conditions so that white objects will always look truly white in your recordings.



**POWER** switch: **CAMERA** | **PLAY**



### POINTS TO CHECK

Recording program: [P PROGRAM AE]

#### Options

◆ Default value

 
[  <b>AWB AUTO</b> ]◆
The camcorder automatically sets the white balance for natural looking colors.
[  <b>DAYLIGHT</b> ]
For recording outdoors on a bright day.

[  <b>TUNGSTEN</b> ]
For recording under tungsten and tungsten type (3-wavelength) fluorescent lighting.
[  <b>SET</b> ]
Use the custom white balance setting to make white objects appear white under colored lighting.



[FUNC.] 

[  **AWB AUTO** ]  Desired option\* 


 
[FUNC.]

\* When you select [  **SET** ], do not press [FUNC.] and continue instead with the procedure below.

## TO SET THE CUSTOM WHITE BALANCE

- 1 Point the camcorder at a white object, zoom in until it fills the whole screen and press .**  
When the adjustment is completed,  stops flashing and stays on.
- 2 Press [FUNC.] to save the setting and close the menu.**  
The camcorder retains the custom setting even if you turn off the camcorder.

### NOTES

- **When you select the custom white balance:**
  - Set the custom white balance in a sufficiently illuminated place.
  - Select a zoom type other than [2000] DIGITAL] (□ 25).
  - Reset the white balance when the lighting conditions change.
  - Depending on the light source,  may keep flashing. The result will still be better than with [  **AWB AUTO** ].



- In the following cases, if the colors on the screen do not look natural using the [AUTO] setting, try using the custom white balance.
  - Changing lighting conditions
  - Close-ups
  - Subjects in a single color (sky, sea or forest)
  - Under mercury lamps and certain types of fluorescent lights

## Image Effects

You can use the image effects to change the color saturation and contrast to record images with special color effects.

**POWER** switch: **CAMERA** | **PLAY**

### POINTS TO CHECK

Recording program: [P] PROGRAM AE

**Options** ♦ Default value

[ <b>IMAGE EFFECT OFF</b> ] <sup>♦</sup>
Records with no image enhancing effects.
[ <b>VIVID</b> ]
Emphasizes the contrast and color saturation.
[ <b>NEUTRAL</b> ]
Tones down the contrast and color saturation.
[ <b>SOFT SKIN DETAIL</b> ]
Softens the details in the skin tone area for a more complimentary appearance.

FUNC.

[ **IMAGE EFFECT OFF**]   
Desired option

FUNC.

## Digital Effects

**POWER** switch: **CAMERA** | **PLAY**

### POINTS TO CHECK

Mode switch: [P]

**Options** ♦ Default value

[ <b>D.EFFECT OFF</b> ] <sup>♦</sup>
Select this setting when you do not intend to use the digital effects.
[ <b>F1</b> FADE-T] (fade trigger), [ <b>F2</b> WIPE]
Select one of the faders to begin or end a scene with a fade from or to a black screen.
[ <b>E1</b> BLK&WHT]
Records images in black and white.
[ <b>E2</b> SEPIA]
Records images in sepia tones for an "old" look.
[ <b>E3</b> ART], [ <b>E4</b> MOSAIC]
Select one of these digital effects to add "flavor" to your recordings.

## Setting

FUNC.


[ **D.EFFECT OFF**]   
Desired option\*

FUNC.\*\*

\* While making the selection, you can preview the effect on the screen.

\*\* The icon of the selected effect appears.

## Applying

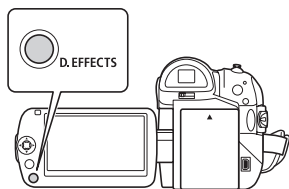

Press **D.EFFECTS** to activate the fader/effect.

- The icon of the selected digital effect turns green.
- Press **D.EFFECTS** again to deactivate the digital effect.

### TO FADE IN

Press **D.EFFECTS** ...

**CAMERA** : ...in record pause mode, then press **Start/Stop** to start recording with a fade in.

**PLAY** : ...in playback pause mode, then push the joystick (**▲**) toward **▶/||** to fade in and start the playback.

### TO FADE OUT

Press **D.EFFECTS** ...

**CAMERA** : ...while recording, then press **Start/Stop** to fade out and pause the recording.

**PLAY** : ...during playback, then push the joystick (**▲**) toward **▶/||** to fade out and pause the playback.

### TO ACTIVATE AN EFFECT

Press **D.EFFECTS** ...

**CAMERA** : ...while recording or in record pause mode.

**PLAY** : ...during playback.

### **i** NOTES


- When you apply a fader, not only the picture but also the sound will fade in or out. When you apply an effect, the sound will be recorded normally.
- The camcorder retains the last setting used even if you turn off the digital effects or change the recording program.
- The digital effects are not available when [TV TYPE] is set to [NORMAL TV] and the stereo video cable is connected to the AV terminal.

## Using an External Microphone

You can use a commercially available microphone, for example to record audio more accurately.

**POWER** switch: **CAMERA** | **PLAY**

Connect the external microphone to the MIC terminal.

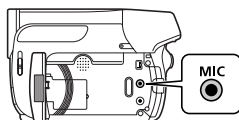

### **i** NOTES

- Use commercially available condenser microphones with their own power supply. You can connect almost any stereo microphone with a  $\varnothing$  3.5 mm plug but audio recording levels may vary.



- When an external microphone is connected to the camcorder, [WIND SCREEN] will automatically be set to [OFF OFF ].

## Audio Playback Modes

### Selecting the Audio Channel

You can select what audio channel to play back when playing back a tape with audio recorded on two channels (either stereo sound or bilingual audio signals).

**POWER** switch: **CAMERA** | **PLAY**

**Options** ♦ Default value

[  L/R ]♦
Left and right channels (stereo) / Main and sub signals (bilingual).
[  L/L ]
Left channel only (stereo) / Main signal only (bilingual).
[  R/R ]
Right channel only (stereo) / Sub signal only (bilingual).

FUNC.

[ MENU ]

[ AUDIO SETUP ]

[OUTPUT CH] Desired option

FUNC.

### Selecting the Audio Track on a Tape with Dubbed Audio

You can select the audio track to play back when playing back a tape that has a dubbed audio track (Stereo 2) in

addition to the original recorded audio (Stereo 1).

**POWER** switch: **CAMERA** | **PLAY**

**Options** ♦ Default value

[ ST-1 STEREO1 ]♦
Original sound only.
[ ST-2 STEREO2 ]
Dubbed audio only.
[ 1:1 MIX/FIXED ]
Mixed audio with the original sound and the dubbed audio at the same level.
[  MIX/VAR. ]
Mixed audio where the balance between the original sound ( ST-1 ) and the dubbed audio ( ST-2 ) can be adjusted.

FUNC.

[ MENU ]

[ AUDIO SETUP ]

[12bit AUDIO] Desired option\*

FUNC.

\* When you select [ MIX/VAR. ], adjust the mix balance with the [MIX BALANCE] setting ( 47 ).




3



## External Connections

This chapter explains step-by-step how to connect your camcorder to an external device such as a TV, VCR, or computer.

### Connecting to a TV or VCR

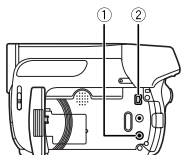

Open the LCD panel to access.

AV



#### ① AV Terminal

 
 
Sound from the built-in speaker will be muted while the STV-250N Stereo Video Cable is connected to the camcorder.

DV



#### ② DV Terminal

Check the type and orientation of the terminal and make sure you connect the DV cable properly.




## Connection Diagrams

Turn off all the devices when making the connections and refer also to the instruction manual of the connected device.


Terminal on the Camcorder	Connecting Cable	Terminal on the Connected Device
---------------------------	------------------	----------------------------------

**1** Output connection (signal flow →) to a TV or VCR with AV Terminals.

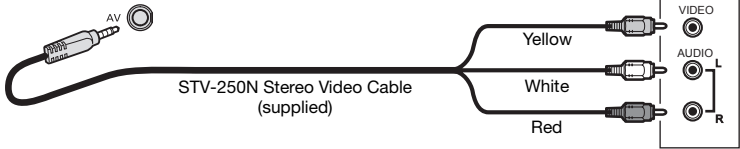

**2** Output connection (signal flow →) to a high-definition TV with a DV (IEEE1394) terminal.

Input connection (signal flow ←) from a TV or other digital video source with a DV (IEEE1394) output.

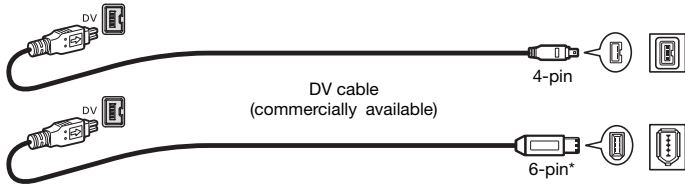

\* Be careful to correctly insert the 6-pin plug into the DV terminal. Inserting it in the wrong direction can result in damage to the camcorder.

---

## Playback on a TV Screen

The quality of the playback picture will vary depending on the connected TV and the type of connection used.

**POWER** switch: **CAMERA** | **PLAY**



### POINTS TO CHECK

Before making the connections, select the [TV TYPE] setting according to the TV set to which you will connect the camcorder (□ 47).

---

## Connecting

Connect the camcorder to the TV following one of the connection diagrams shown in *Connection Diagrams* (□ 39).

---

## Playback

### 1 Turn on the camcorder and the connected TV or VCR.

On a TV: Select as the video input the same terminal to which you connected the camcorder.

On a VCR: Set the input selector to the external video input (usually labeled LINE IN).

### 2 Start the playback (□ 27).



### NOTES

- Turn off all the devices before starting the connections.
- We recommend powering the camcorder using the compact power adapter.

---

## Copying your Recordings to an External Video Recorder

You can copy your recordings by connecting the camcorder to a VCR or a digital video device. When recording to a digital video recorder using the DV terminal, you can copy recordings with virtually no generation loss in video and sound quality.

**POWER** switch: **CAMERA** | **PLAY**

---

## Connecting

Connect the camcorder to a VCR or other analog device using connection type **1**, or to a DVD recorder or other digital recording device using connection type **2**, as shown in *Connection Diagrams* (□ 39).

---

## Recording

- 1 This camcorder: Load the recorded cassette.**
- 2 Connected device: Load a blank cassette or disc and set the device to record pause mode.**
- 3 This camcorder: Locate the scene you wish to copy and pause the playback shortly before the scene.**
- 4 This camcorder: Resume the movie playback.**

When using an analog connection you can include in the copy also the date/time of the original recording (□ 28).
- 5 Connected device: Begin recording when the scene you wish to copy appears. Stop recording when copying is complete.**
- 6 This camcorder: Stop playback.**





## **i** NOTES

- We recommend powering the camcorder using the compact power adapter.
- When recording to a VCR using an analog connection –connection type **1** (□ 39)–, the quality of the edited tape will be lower than the original.
- When recording to a digital video recorder using the DV terminal –connection type **2** (□ 39)–:
  - If the picture does not appear, disconnect the DV cable and restore the connection after a short while or turn the camcorder off and then on again.
  - Proper operation cannot be guaranteed for all digital devices equipped with a DV terminal. If the operation does not work, use the AV terminal.

## Digital Video Dubbing

You can input video from other digital video devices and record the input video on the tape in the camcorder.

**POWER** switch: **CAMERA** | **PLAY**

### Connecting

Connect the camcorder to the video input source using the digital connection –connection type **2** (□ 39)– shown in *Connection Diagrams*.

### Dubbing

- 1 Load a blank tape in the camcorder and load the recorded (source) tape or disc in the connected device.**

## **2 Set the camcorder in record pause mode.**

**[FUNC.]** **[●/|| REC PAUSE]**   
**[EXECUTE]**

## **3 Connected device: Start the playback.**

In record pause mode and while recording you can check the picture on the camcorder's screen.



## **4 When the scene you wish to record appears, push the joystick (▲) toward ●/|| to begin recording.**

Recording starts.

## **5 While recording, push the joystick (▲) toward ●/|| to record pause.**

In record pause mode, push the joystick (▲) toward ●/|| again to resume recording.

## **6 Push the joystick (▼) toward ■ to stop recording.**

## **7 Connected device: Stop the playback.**

## **!** IMPORTANT

- Blank sections may be recorded as anomalous picture.
- If the picture does not appear, disconnect the DV cable and restore the connection after a short while or turn the camcorder off and then on again.
- You can only record video signals in DV standard (standard definition, SP or LP mode) from devices carrying the **DV** logo. Note that signals from identically shaped DV (IEEE1394) terminals may be in different video standards.

## NOTES

---


We recommend powering the camcorder using the compact power adapter.

### **Copyright Signal**

---

Certain software tapes are copyright protected. If you attempt to play back such tape, [COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED] appears and you will not be able to view the contents of the tape. If you attempt to record from such tape via the DV terminal, [COPYRIGHT PROTECTED DUBBING RESTRICTED] appears and you will not be able to record the contents of the tape.

## Connecting to a Computer

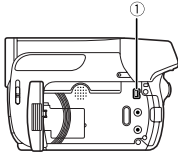

Open the LCD panel to access




### ① DV Terminal

Check the type and orientation of the terminal and make sure you connect the DV cable properly.

## PC Connection Diagram

Terminal on the Camcorder	Connecting Cable	Terminal on the Connected Device
<b>1</b> Output connection (signal flow →) to a computer with a DV (IEEE1394) terminal or a DV capture board.		

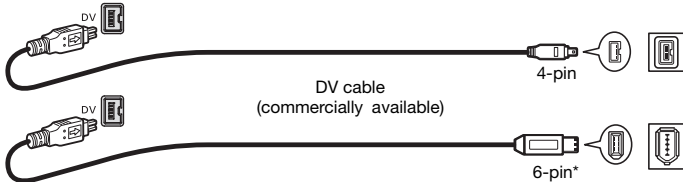

\* Be careful to correctly insert the 6-pin plug into the DV terminal. Inserting it in the wrong direction can result in damage to the camcorder.

---

## Transferring Video Recordings

You can transfer recordings to a computer using the DV terminal.

---


### Equipment and System Requirements

- A computer equipped with an IEEE1394 (DV) terminal or an IEEE1394 (DV) capturing board.
- A DV cable (commercially available).
- Video editing software.
- The appropriate driver.

A driver is preinstalled on Windows operating systems later than Windows 98 Second Edition and Mac operating systems later than Mac OS 9, and will be installed automatically.


---

### Connecting

- 1 Start the computer.**
- 2 Connect the camcorder to the computer using the DV connection –connection type 1 (□ 43)– shown in *PC Connection Diagram*.**
- 3 Set the camcorder to  mode.**
- 4 Start the video editing software.**  
Refer to the instruction manual of the editing software.

---

### IMPORTANT

- The video transfer may not work correctly depending on the software and the specifications/settings of your computer.
- If the computer freezes while the camcorder is connected to it, disconnect the DV cable and turn off the camcorder and the computer. After a short while, turn them on again, set the camcorder to  mode and restore the connection.

- Before connecting the camcorder to the computer using a DV cable, make sure that no other IEEE1394 device is connected to the computer.
- Depending on the video editing software, you may need to set the **POWER** switch on the camcorder to a mode other than PLAY. Refer to the instruction manual of the editing software.

---

### NOTES

- We recommend powering the camcorder using the compact power adapter.
- Refer also to the instruction manual of the computer.



# 4



## Additional Information

This chapter contains troubleshooting advice, screen messages, handling and maintenance tips, and other information.

### Appendix: Menu Options Lists



Menu items not available appear grayed out. For details about how to select an item, refer to *Using the Menus* (□ 18). For details about each function, see the reference page. Menu options without a reference page are explained after the tables.

#### FUNC. Menu

Menu item	Setting options	CAMERA	PLAY	□
Recording programs <sup>1</sup>	[P PROGRAM AE], [PORTRAIT], [SPORTS], [NIGHT], [SNOW], [BEACH], [SUNSET], [SPOTLIGHT], [FIREWORKS]	●	–	29, 31
White balance <sup>1</sup>	[AUTO], [DAYLIGHT], [TUNGSTEN], [SET]	●	–	34
Image effects <sup>1</sup>	[IMAGE EFFECT OFF], [VIVID], [NEUTRAL], [SOFT SKIN DETAIL]	●	–	35
LCD video light	[LCD LIGHT OFF], [LCD LIGHT ON]	●	–	32
Digital effects	[D.EFFECT OFF], [FADE-T], [WIPE], [BLK&WHT], [SEPIA], [ART], [MOSAIC]	● <sup>1</sup>	●	35
[SPEAKER VOLUME]	—.....     +	–	●	27
[REC PAUSE]	Press [RECORD] to enter the record pause mode.	–	●	41
[END SEARCH]	Press [SEARCH] to search.	–	●	28

<sup>1</sup> Option available only when the mode switch is set to [P].

## CAMERA SETUP

Menu item	Setting options	CAMERA	
[SHUTTER] <sup>1</sup>	[ <b>A</b> <b>AUTO</b> ], [1/60], [1/100], [1/250], [1/500], [1/1000], [1/2000]	●	31
[A.SL SHUTTER] <sup>2</sup>	[ <b>ON</b> <b>ON</b> ], [ <b>OFF</b> <b>OFF</b> ]	●	–
[ZOOM TYPE]	[ <b>37x</b> <b>OPTICAL</b> ], [ <b>41x</b> <b>ADVANCED</b> ], [ <b>2000x</b> <b>DIGITAL</b> ]	●	25
[ZOOM SPEED]	[ <b>VAR</b> <b>VARIABLE</b> ], [ <b>&gt;&gt;&gt;</b> <b>SPEED 3</b> ], [ <b>&gt;&gt;</b> <b>SPEED 2</b> ], [ <b>&gt;</b> <b>SPEED 1</b> ]	●	25
[IMG STAB] <sup>3</sup>	[ <b>ON</b> <b>ON</b> ], [ <b>OFF</b> <b>OFF</b> ]	●	–
[WIDESCREEN]	[ <b>ON</b> <b>ON</b> ], [ <b>OFF</b> <b>OFF</b> ]	●	24
[SELF TIMER]	[ <b>ON</b> <b>ON</b>  ], [ <b>OFF</b> <b>OFF</b> ]	●	32

<sup>1</sup> Option available only when the recording program is set to [ **P** **PROGRAM AE**].

<sup>2</sup> Option available when the mode switch is set to **EASY** or [ **P** ] (only when the recording program is set to [ **P** **PROGRAM AE**]).

<sup>3</sup> Option available only when the mode switch is set to [ **P** ].


**[A.SL SHUTTER]:** The camcorder automatically uses slow shutter speeds to obtain brighter recordings in places with insufficient lighting.

- The camcorder uses shutter speeds down to 1/30.
- If a trailing afterimage appears, set the slow shutter to [ **OFF** **OFF**].

**[IMG STAB]:** The image stabilizer compensates for camcorder shake even at full telephoto.

- The image stabilizer is designed to compensate for a normal degree of camcorder shake. The image stabilizer may also not be able to compensate for all movement when recording moving subjects.
- The image stabilizer may not be effective when recording in dark places with [A.SL SHUTTER] set to [ **ON** **ON**] or using the [ **NIGHT**] recording program.
- The image stabilizer may not work well on subjects with low contrast, with a recurring, repetitive pattern or without vertical lines.
- The image stabilizer cannot be turned off when the mode switch is set to **EASY**.
- We recommend setting the image stabilizer to [ **OFF** **OFF**] when using a tripod.

## VCR SETUP

Menu item	Setting options	CAMERA	PLAY	
[REC MODE]	[ <b>SP</b> <b>STD PLAY</b> ], [ <b>LP</b> <b>LONG PLAY</b> ]	●	●	–
[TV TYPE]	[ <b>4:3</b> <b>NORMAL TV</b> ], [ <b>16:9</b> <b>WIDE TV</b> ]	●	●	–

**[REC MODE]:** Select the video recording mode.

- Recording in LP mode extends the available recording time on the tape 1.5 times.
- Depending on the condition of the tape (long usage, imperfections, etc.) you may notice some video anomalies (blocky video artifacts, banding, etc.) in the playback picture when playing back recordings made in LP mode. We recommend using the SP mode for important recordings.



- If you make recordings in both SP and LP modes on the same tape, during playback you may notice some video anomalies in the picture at the point where the recording mode changes.
- When playing back in this camcorder tapes recorded in LP mode with other devices or vice versa, you may notice some anomalies in the playback picture or the sound may stop briefly.

**[TV TYPE]:** In order to display the picture in full and in the correct aspect ratio, select the setting according to the type of television to which you will connect the camcorder.

**[NORMAL TV]:** TV sets with 4:3 aspect ratio.

**[WIDE TV]:** TV sets with 16:9 aspect ratio.

## ⏮️ AUDIO SETUP<sup>1</sup>

Menu item	Setting options	CAMERA	PLAY	📖
[WIND SCREEN]	[ <b>A</b> AUTO ], [ OFF OFF ]	●	–	–
[OUTPUT CH]	[  L/R ], [  L/L ], [  R/R ]	–	●	37
[12bit AUDIO]	[ ST-1 STEREO1 ], [ ST-2 STEREO2 ], [ 1:1 MIX/FIXED ], [  MIX/VAR. ]	–	●	37
[MIX BALANCE]	ST-1  ST-2	–	●	–

<sup>1</sup> Menu available only when the mode switch is set to **P**.

**[WIND SCREEN]:** The camcorder automatically reduces the background sound of wind when recording outdoors (only while using the built-in microphone).

- The wind screen cannot be turned off when the mode switch is set to **EASY**.

**[MIX BALANCE]:** When [12bit AUDIO] is set to [ MIX/VAR. ], adjust ( ) the sound balance with the joystick.

- The camcorder will retain the audio balance adjustment, however if you turn off the camcorder, [12bit AUDIO] will be reset to [ ST-1 STEREO1 ].

## 📺 DISPLAY SETUP

Menu item	Setting options	CAMERA	PLAY	📖
[BRIGHTNESS]	–  +	●	●	–
[BACKLIGHT]	[  NORMAL ] <sup>1</sup> , [  BRIGHT ]	●	●	21
[TV SCREEN]	[ ON ON ], [ OFF OFF ]	●	–	–
	[ ON ON ], [ OFF OFF ]	–	●	–
[MARKERS]	[ OFF OFF ], [  LEVEL ], [  GRID ]	●	–	–
[DISPLAYS]	[ ON ON ], [ OFF OFF <PLAYBK> ]	–	●	–
[6SEC.DATE]	[ ON ON ], [ OFF OFF ]	–	●	–

Menu item	Setting options	CAMERA	PLAY	
[DATA CODE]	[ <b>OFF OFF</b> ], [  DATE ], [  TIME ], [  DATE & TIME ]	–	●	28
[LANGUAGE] <sup>2</sup>	<b>Language Set A:</b> [DEUTSCH], [ENGLISH], [ESPAÑOL], [FRANÇAIS], [ITALIANO], [POLSKI], [PORTUGUÊS], [РУССКИЙ], [簡體中文], [日本語] <b>Language Set B:</b> [ENGLISH], [簡體中文], [繁體中文], [한국어]	●	●	19
[DEMO MODE]	[ <b>ON ON</b> ], [ <b>OFF OFF</b> ]	●	–	–

<sup>1</sup> The default setting is [ BRIGHT ] when you power the camcorder using the compact power adapter.

<sup>2</sup> The list of languages available depends on the region of purchase.

**[BRIGHTNESS]:** Adjust (◀▶) the brightness of the LCD display with the joystick.

- Changing the brightness of the LCD display does not affect that of the viewfinder or the recordings.

**[TV SCREEN]:** When set to [ **ON ON** ], the camcorder's on-screen displays will appear also on the screen of a connected TV or monitor.

When the date and time are displayed on the camcorder's screen they will also appear on a connected TV regardless of the [TV SCREEN] setting. Turn off the date/time display with the [DATA CODE] setting (□ 28).

**[MARKERS]:** You can display a grid or a horizontal line at the center of the screen. Use the markers as a reference to make sure your subject is framed correctly (vertically and/or horizontally).

- Using the markers will not affect the recordings on the tape.

**[DISPLAYS]:** You can hide the on-screen displays to show only the playback picture on the full screen.

- Tape operation displays appear for 2 seconds.
- Warning messages and the data code (if activated) will appear, even when set to [ **OFF OFF**<PLAYBK> ].
- All on-screen displays will appear while a digital effect is activated.

**[6SEC.DATE]:** When you start playing back a tape or when the date of the recording changes, the date and time will be displayed for 6 seconds.

**[DEMO MODE]:** The demonstration mode displays the camcorder's main features. It starts automatically when the camcorder is powered with the power adapter if you leave it turned on without loading a recording media for more than 5 minutes.

- To cancel the demo mode once it started, press any button, turn off the camcorder or insert a videocassette.



## SYSTEM SETUP

Menu item	Setting options	CAMERA	PLAY	
[BEEP]	[] HIGH VOLUME], [] LOW VOLUME], [ OFF]	●	●	–
[POWER SAVE]	[ ON], [ OFF]	●	–	–
[QUICK START]	[ OFF], [ 10 min], [ 20 min], [ 30 min]	●	–	–

**[BEEP]:** A beep will accompany some operations like turning on the camcorder, the self-timer countdown, etc. It also serves as a warning beep under unusual conditions.

**[POWER SAVE]:** In order to save power when the camcorder is powered by a battery pack, it will automatically shut off if left without any operation for 5 minutes. Approximately 30 seconds before the camcorder shuts off, the message “ AUTO POWER OFF” will appear.

**[QUICK START]:** Select whether to activate the Quick Start function when you close the LCD panel in **CAMERA** mode ( 25) and the length of time after which the camcorder will end the standby mode and shut off automatically.

## DATE/TIME SETUP

Menu item	Setting options	CAMERA	PLAY	
[T.ZONE DST]	List of world time zones.	●	●	20
[DATE/TIME]	–	●	●	20
[DATE FORMAT]	[Y.M.D (2009.1.1 AM 12:00)], [M.D,Y (JAN. 1, 2009 12:00 AM)], [D.M.Y (1.JAN.2009 12:00 AM)]	●	●	–

**[DATE FORMAT]:** Changes the date format for on-screen displays.

## Troubleshooting

If you have a problem with your camcorder, refer to this section. Consult your dealer or a Canon Service Center if the problem persists.

### Power Source


 
**The camcorder will not turn on or it turns off by itself.**

**The cassette compartment cover will not open or it stops halfway while you insert or remove a tape.**

**The LCD/viewfinder switches on and off.**

- The battery pack is exhausted. Replace or charge the battery pack (□ 15).
- Attach the battery pack correctly.
- Use the compact power adapter.

**The charge indicator flashes rapidly.**

-  (one flash at 0.5-second intervals)  
Charging has stopped because the compact power adapter or the battery pack is faulty. Consult a Canon Service Center.
-  (two quick flashes at 1-second intervals)  
Battery pack at least 50% charged (□ 16). This is not a malfunction.

**Battery pack will not charge.**

- Charge the battery pack in temperatures between 0 °C and 40 °C (32 °F and 104 °F).
- Battery packs become hot with use and may not charge. When the battery pack is outside the charging temperature range, the CHG (charge) indicator will flash irregularly. Charging will start once the battery pack temperature is below 40 °C (104 °F).
- The battery pack is damaged. Use a different battery pack.
- If you connect a faulty power adapter or battery pack, the CHG (charge) indicator flashes approx. twice per second and charging stops.
- Check that the compact power adapter is correctly connected to the camcorder.

### Recording/Playback

**Buttons will not work.**

- Turn on the camcorder.
- Load a cassette (□ 21).

**Abnormal characters appear on the screen. The camcorder does not operate properly.**

- Disconnect the power source and reconnect it after a short time. If the problem still persists, disconnect all power sources (including the battery pack and the backup battery). This will reset all the camcorder's settings.

 **flashes on the screen.**

- Load a cassette (□ 21).

 **flashes on the screen.**

- Battery pack is exhausted. Replace or charge the battery pack (□ 15).

 **flashes on the screen.**

- Condensation is detected. Refer to *Condensation* (□ 56).

**[REMOVE THE CASSETTE] appears on the screen.**

- Remove the cassette and reinsert it (□ 21).

**Video noise appears on screen.**

- When using the camcorder in a room where a plasma TV is located, keep a distance between the camcorder and the plasma TV.

**Video noise appears on the TV screen.**

- When using the camcorder in a room where a TV is located, keep a distance between the compact power adapter and the power or antenna cables of the TV.

**The tape stops during record pause or playback pause.**

- To protect the tape and video heads, the camcorder will enter the stop mode (■) if left in playback pause (▶||) or record



pause (●||) mode for 4 minutes 30 seconds. To resume the operation press **[Start/Stop]** (when recording) or push the joystick (▲) toward ►/|| (during playback).

## Recording

---

### Image will not appear on the screen.

- Set the camcorder to **[CAMERA]** mode (□ 23).

### [SET THE TIME ZONE, DATE AND TIME] appears on the screen.

- Set the time zone, date and time (□ 20).
- Replace the backup lithium battery (□ 17) and set the time zone, date and time.

### Pressing **[Start/Stop]** will not start recording.

- Set the camcorder to **[CAMERA]** mode (□ 23).
- Load a cassette (□ 21).
- Tape reached the end (“END” appears on the screen). Rewind the tape or replace the cassette (□ 21).
- Cassette is protected (Ⓢ flashes on the screen). Change the position of the protect switch (□ 55).

### Camcorder will not focus.

- Autofocus does not work on that subject. Focus manually (□ 32).
- If you are using the viewfinder, adjust it with the dioptic adjustment lever (□ 23).
- Lens is dirty. Clean the lens with a soft lens-cleaning cloth (□ 56). Never use tissue paper to clean the lens.

### Sound is distorted.

- When recording near loud sounds (such as fireworks or concerts), sound may become distorted.

### Viewfinder picture is blurred.

- Adjust the viewfinder with the dioptic adjustment lever (□ 23).

## Playback

---

### During playback there is video noise.

- Video heads are dirty. Clean the video heads (□ 2).

### Playback does not start.

- Load a cassette (□ 21).
- Set the camcorder to **[PLAY]** mode (□ 27).
- Tape reached the end (“END” appears on the screen). Rewind the tape (□ 21).

### No sound from the built-in speaker.

- Open the LCD panel.
- Speaker volume is turned off. Adjust the volume with the [SPEAKER VOLUME] setting (□ 27).

### Image will not appear on the TV screen.

- Check again that the camcorder is properly connected to the TV (□ 39).

### Tape is running, but image will not appear on the TV screen.

- TV/VIDEO selector on the TV is not set to VIDEO. Set the selector to VIDEO (□ 40).
- Video heads are dirty. Clean the video heads (□ 2).
- You attempted to play back or dub a copyright protected tape (□ 42). Stop playback/dubbing.

## Editing

---

### Cannot record with this camcorder video input from an external video device connected using a DV cable.

- Wrong signal standard. Refer also to the instruction manual of the connected device.

---

---

## List of Messages (in alphabetical order)

### **CHANGE THE BATTERY PACK**

- Battery pack is exhausted. Replace or charge the battery pack (□ 15).

### **CHECK THE CASSETTE [INCORRECT TAPE SPECIFICATION]**

- You attempted to play back a tape recorded in HD (high definition) standard.

### **CHECK THE INPUT**

- The DV cable is not correctly connected to the DV terminal (□ 39), or the connected digital device is turned off.

### **CONDENSATION HAS BEEN DETECTED**

- Condensation has been detected in the camcorder (□ 56).

### **CONDENSATION HAS BEEN DETECTED REMOVE THE CASSETTE**

- Condensation has been detected in the camcorder (□ 56). Remove the cassette.

### **COPYRIGHT PROTECTED DUBBING RESTRICTED**

- You attempted to dub a copyright protected tape (□ 42).

### **COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED**

- You attempted to play back a copyright protected tape (□ 42).

### **HEADS DIRTY, USE CLEANING CASSETTE**

- Video heads are dirty. Clean the video heads (□ 2).

### **INCORRECT TAPE SPECIFICATION PLAYBACK IS RESTRICTED**

- You attempted to play back a tape recorded in a different television system (PAL or SECAM) or in a recording standard not supported by this camcorder.

### **INPUT SIGNAL NOT SUPPORTED**

- The digital device connected with the DV cable is incompatible with the camcorder.

### **REMOVE THE CASSETTE**

- Camcorder stopped operating to protect the tape. Remove the cassette and reinsert it (□ 21).

### **SET THE TIME ZONE, DATE AND TIME**

- You have not set the time zone, date and time. This message appears each time you turn the power on until you set the time zone, date and time (□ 20).

### **TAPE END**

- Tape reached the end. Rewind the tape or replace the cassette.


### **THE TAPE IS SET FOR ERASURE PREVENTION**

- Cassette is protected. Replace the cassette or change the position of the protect switch (□ 55).

## Handling Precautions

### Camcorder

- Do not carry the camcorder by the LCD panel. Be careful when closing the LCD panel.
- Do not leave the camcorder in places subject to high temperatures (like the inside of a car under direct sunlight), or high humidity.
- Do not use the camcorder near strong electromagnetic fields such as above TVs, near plasma TVs or mobile phones.
- Do not point the lens or viewfinder at strong light sources. Do not leave the camcorder pointed at a bright subject.
- Do not use or store the camcorder in dusty or sandy places. The camcorder is not waterproof – avoid also water, mud or salt. If any of the above should get into the camcorder it may damage the camcorder and/or the lens.
- Be careful of heat generated by lighting equipment.
- Do not disassemble the camcorder. If the camcorder does not function properly, consult qualified service personnel.
- Handle the camcorder with care. Do not subject the camcorder to shocks or vibration as this may cause damage.
- When mounting the camcorder on a tripod, make sure that the tripod's fastening screw is shorter than 5.5 mm (0.2 in.). Using other tripods may damage the camcorder.

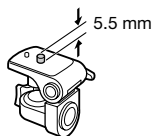

- **When recording movies, try to get a calm, stable picture.**

Excessive camcorder movement while shooting and extensive use of fast zooms and panning can result in jittery scenes. In extreme cases, the playback of such scenes may result in visually induced motion sickness. If you experience such a reaction, immediately stop the playback and take a rest break as necessary.

### Long-term storage

If you do not intend to use the camcorder for a long time, store it in a place free of dust, in low humidity, and at temperatures not higher than 30 °C (86 °F).

---

## Battery Pack

### DANGER!

#### Treat the battery pack with care.

- Keep it away from fire (or it might explode).
  - Do not expose the battery pack to temperature higher than 60 °C (140 °F). Do not leave it near a heater or inside a car in hot weather.
  - Do not try to disassemble or modify it.
  - Do not drop it or subject it to shocks.
  - Do not get it wet.
- 
- Attach the terminal cover whenever a battery pack is not in use. Contact with metallic objects may cause a short circuit and damage the battery pack.
  - Dirty terminals may cause a poor contact between the battery pack and the camcorder. Wipe the terminals with a soft cloth.

### Long-term storage

---

 
- Store battery packs in a dry place at temperatures no higher than 30 °C (86 °F).
- To extend the battery life of the battery pack, discharge it completely before storing it.
- Charge and discharge all your battery packs fully at least once a year.

### About the battery terminal cover


---

The battery terminal cover has a [□]-shaped hole. This is useful when you wish to differentiate between charged and uncharged battery packs.

Back side of the battery pack



Terminal cover attached

 

Charged



Uncharged

---


## Cassette

- Rewind tapes after use. A slack or damaged tape may cause video problems and/or audio distortions during playback.
- Return cassettes to the case and store them upright. Rewind tapes from time to time if they are stored for a long time.
- Do not leave the cassette in the camcorder after use.
- Do not use spliced tapes or nonstandard cassettes as they may damage the camcorder.
- Do not use tapes that have been jammed as video heads may become dirty.
- Do not insert anything into the small holes of the cassette, or cover them with cellophane tape.
- Handle cassettes with care. Do not drop or subject them to severe impact as this may damage the cassettes.

- With cassettes equipped with a memory function, metal plated terminals may become dirty with use. Clean the terminals with a cotton swab after about 10 times of removing and reinserting the cassette. The memory function is not supported by the camcorder.

### Protecting Tapes from Accidental Erasure

To protect your recordings from accidental erasure, slide the tab on the cassette to SAVE or ERASE OFF.

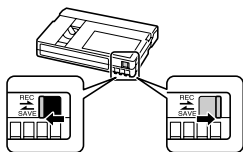

## Lithium Button Battery

### WARNING!

- The battery used in this device may present a fire or chemical burn hazard if mishandled.
- Do not disassemble, modify, immerse in water, heat above 100 °C (212 °F) or incinerate the battery.
- Replace with a CR1616 battery made by Panasonic, Hitachi Maxell, Sony, Toshiba, Varta or Renata. Use of other batteries may present a risk of fire or explosion.
- Do not insert the battery into the mouth. If swallowed, seek medical assistance immediately. The battery case may break and the battery fluids may cause internal damage.
- Keep the battery out of the reach of children.
- Do not recharge, short-circuit or insert the battery in the wrong direction.
- Dispose of the used battery according to applicable recycling regulations.

- Do not pick up the battery using tweezers or other metal tools, as this will cause a short circuit.
- Wipe the battery with a clean dry cloth to ensure proper contact.
- **For California, USA only:** Included lithium battery contains Perchlorate Material – special handling may apply. For details see [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

## Maintenance/Others

---

---

### Cleaning

#### Camcorder Body

- Use a soft, dry cloth to clean the camcorder body. Never use chemically treated cloth or volatile solvents such as paint thinner.

#### Lens and Viewfinder

- If the lens surface is dirty, the autofocus may not work properly.
- Remove any dust or dirt particles using a non-aerosol type blower brush.
- Use a clean, soft lens-cleaning cloth to gently wipe the lens or viewfinder. Never use tissue paper.

#### LCD Screen

- Clean the LCD screen using a clean, soft lens-cleaning cloth.
- Condensation may form on the surface of the screen when the temperature changes suddenly. Wipe it with a soft dry cloth.

---

---

### Condensation

Moving the camcorder rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its internal surfaces. Stop using the camcorder if condensation is detected. Continued use may damage the camcorder.



### Condensation may form in the following cases:

- When the camcorder is moved quickly from cold to warm places
- When the camcorder is left in a humid room
- When a cold room is heated rapidly

### TO AVOID CONDENSATION

- Do not expose the camcorder to sudden or extreme changes in temperature.
- Remove the cassette, place the camcorder in an airtight plastic bag and let it adjust to temperature changes slowly before removing it from the bag.

### WHEN CONDENSATION IS DETECTED

- The camcorder automatically shuts off, the warning message [CONDENSATION HAS BEEN DETECTED] appears for approx. 4 seconds and  starts flashing.
- If a cassette is loaded, the warning message [REMOVE THE CASSETTE] appears and  starts flashing. Remove the cassette immediately and leave the cassette compartment open. Leaving the cassette in the camcorder may damage the tape.
- A cassette cannot be loaded when condensation is detected.

### RESUMING USE

The precise time required for water droplets to evaporate will vary depending on the location and weather conditions. After the condensation warning stops flashing, wait for 1 more hour before resuming use.





---

---

## Using the Camcorder Abroad

### Power Sources

You can use the compact power adapter to operate the camcorder and to charge battery packs in any country with power supply between 100 and 240 V AC, 50/60 Hz. Consult the Canon Service Center for information on plug adapters for overseas use.

### Playback on a TV Screen


You can only play back your recordings on TVs compatible with the NTSC system. NTSC is used in the following regions/countries:

**Americas:** All of North America and Central America; most Caribbean islands (except in French territories like Guadeloupe and Martinique); most of South America (except in Argentina, Brazil and Uruguay). **Asia:** Only in Japan, the Philippines, South Korea, Taiwan and Myanmar. **Oceania:** US territories (Guam, American Samoa, etc.) and some Pacific islands like Micronesia, Samoa and Tonga.

## Trademark Acknowledgements

- Mini **IX** is a trademark.
- Microsoft, Windows and Windows Vista are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- Other names and products not mentioned above may be trademarks or registered trademarks of their respective companies.

## System Diagram (Availability differs from area to area)

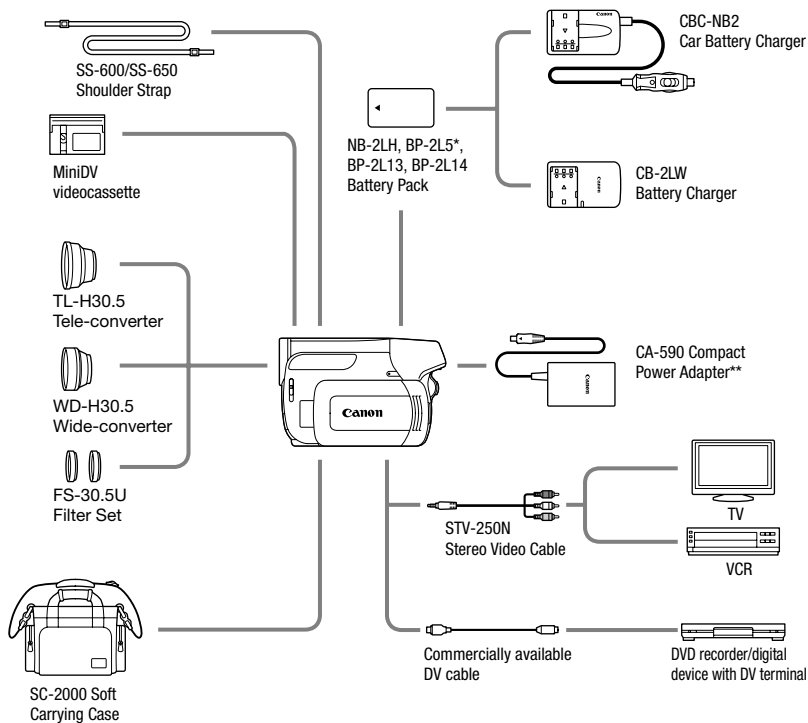

\* The BP-2L5 is not available as a separate optional accessory.

\*\* CA-590E including power cord, in Asia.

## Optional Accessories


Call or visit your local retailer/dealer for genuine Canon video accessories. You can also obtain genuine accessories for your Canon camcorder by calling: 1-800-828-4040, Canon U.S.A. Information Center.

### Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.


### Battery Packs

When you need extra battery packs, select the NB-2LH, BP-2L13 or BP-2L14.

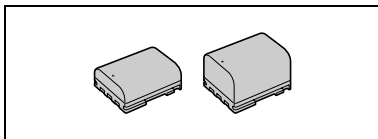

### CB-2LW Battery Charger

Use the battery charger to charge battery packs. It plugs directly into a power outlet without a cable.

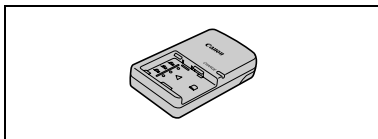

### Charging Times

The charging times given in the following table are approximate and vary according to charging conditions and initial charge of the battery pack.

Battery Pack →	BP-2L5	NB-2LH	BP-2L13	BP-2L14
Charging Conditions ↓				
Using the camcorder	145 min.	155 min.	250 min.	285 min.
Using the CB-2LW Battery Charger	105 min.	160 min.	175 min.	205 min.

## Recording and Playback Times


The recording and playback times given in the following table are approximate and vary according to recording mode and charging, recording or playback conditions. The effective usage time of the battery pack may decrease when recording in cold surroundings, when using the brighter screen settings, etc.

Battery pack	BP-2L5	NB-2LH	BP-2L13	BP-2L14
Maximum recording time				
Viewfinder	100 min.	140 min.	250 min.	300 min.
LCD screen	100 min.	135 min.	250 min.	300 min.
Typical recording time*				
Viewfinder	55 min.	75 min.	130 min.	155 min.
LCD screen	50 min.	75 min.	130 min.	155 min.
Playback time	115 min.	160 min.	285 min.	330 min.

\* Approximate times for recording with repeated operations such as start/stop, zooming, and power on/off.

### CBC-NB2 Car Battery Charger


Use the car battery charger to charge battery packs on the go. The car battery cable plugs into your car's cigarette lighter and runs off a 12-24 V DC negative ground battery.

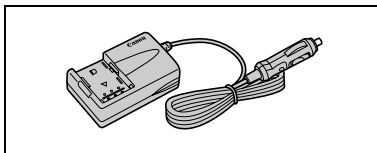

### TL-H30.5 Tele-converter


This Tele-converter lens increases the focal length of the camcorder lens by a factor of 1.7.

- The image stabilizer is not as effective when the Tele-converter is attached.
- The minimum focusing distance with the TL-H30.5 attached is 3 m (9.8 ft.) at full telephoto; 3 cm (1.2 in.) at full wide angle.

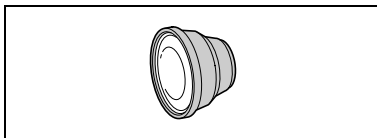

### WD-H30.5 Wide-converter


This lens decreases focal length by a factor of 0.7, giving you a wide perspective for indoor shots or panoramic views.

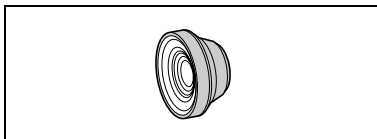




### FS-30.5U Filter Set

Neutral density and MC protector filters help you to control difficult lighting conditions.

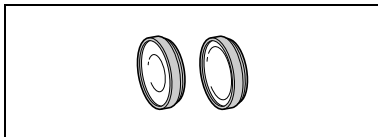


### Shoulder Strap

You can attach a shoulder strap for more security and portability. Pass the ends through the strap mount and adjust the length of the strap.

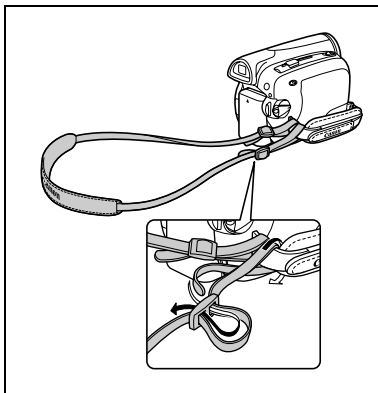

### SC-2000 Soft Carrying Case

A handy camcorder bag with padded compartments and plenty of space for accessories.

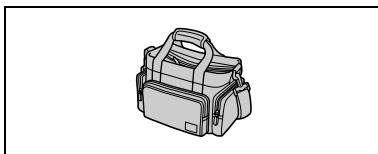

This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.



---

---

## Product Codes

### Provided Accessories

CA-590 Compact Power Adapter	D85-1671-000
BP-2L5 Battery Pack	D85-1632-000
STV-250N Stereo Video Cable	D82-0590-002

### Optional Accessories

NB-2LH Battery Pack	9612A001AA
BP-2L13 Battery Pack	2069B002AA
BP-2L14 Battery Pack	9582A002AA
CB-2LW Battery Charger	0763B001AA
CBC-NB2 Car Battery Charger	7873A002AA
WD-H30.5 Wide-converter	9065A001AA
TL-H30.5 Tele-converter	9064A001AA
FS-30.5U Filter Set	6738A002AA
SC-2000 Soft Carrying Case	9389A001AA
DVM-CL DV Cleaning Cassette	3134A002AA (D36-0032-201)



## Specifications

### ZR960

#### System

<b>Video Recording System</b>	2 rotary heads, helical scanning DV system (consumer digital VCR SD system), digital component recording	
<b>Audio Recording System</b>	PCM digital sound: 16 bit (48 kHz/2 channels)	
<b>Television System</b>	EIA standard (525 lines, 60 fields) NTSC color signal	
<b>Image Sensor</b>	1/6-inch CCD, approx. 680,000 pixels Effective pixels <sup>1</sup> (all figures are approximate values) 16:9 Movies (advanced zoom) 360,000 (T) / 450,000 (W) pixels (optical zoom) 360,000 pixels 4:3 Movies 340,000 pixels	
<b>Compatible Tapes</b>	Videocassettes bearing the <sup>Mini</sup> DV mark	
<b>Tape Speed</b>	SP: 18.81 mm/s (0.74 ips); LP: 12.56 mm/s (0.49 ips)	
<b>Maximum Recording Time (60 min. tape)</b>	SP: 60 minutes; LP: 90 minutes	
<b>LCD Screen</b>	2.7 in., wide, TFT color, approx. 112,000 pixels	
<b>Viewfinder</b>	0.27 in., wide, TFT color, approx. 123,000 pixels	
<b>Microphone</b>	Stereo electret condenser microphone	
<b>Lens</b>	f=2.6–96.2 mm, F/2.0–5.2, 37x optical zoom 35 mm equivalent (all figures are approximate values) 16:9 Movies (advanced zoom) 41.3–1,695 mm (optical zoom) 45.8–1,695 mm 4:3 Movies 49.8–1,843 mm	
<b>Lens Configuration</b>	10 elements in 8 groups (1 double-sided, aspheric element)	
<b>AF system</b>	TTL autofocus, manual focus available	
<b>Filter Diameter</b>	30.5 mm	
<b>White Balance</b>	Auto white balance, preset white balance (DAYLIGHT, TUNGSTEN) or custom white balance	
<b>Minimum Illumination</b>	5 lx (EASY mode, Auto slow shutter [ON], Shutter speed 1/30) 1.3 lx (NIGHT) recording program, Shutter speed 1/8)	
<b>Minimum Focusing Distance</b>	1 m (3.3 ft); 1 cm (0.39 in.) at full wide angle	
<b>Recommended Illumination</b>	More than 100 lx	
<b>Image Stabilization</b>	Electronic	

<sup>1</sup> When two values are given, the first indicates the value at full telephoto (T) and the second indicates the value at full wide-angle (W).

## Input/Output Terminals

<b>AV Terminal</b>	∅ 3.5 mm minijack, output only Video: 1 V <sub>p</sub> -p/75 Ω unbalanced Audio: -10 dBV (47 kΩ load/3 kΩ or less)
<b>DV Terminal</b>	4 pin (IEEE1394 standard); input/output
<b>MIC Terminal</b>	∅ 3.5 mm stereo minijack -57 dBV (with 600 Ω mic)/5 Ω or more

## Power/Others

<b>Power supply (rated)</b>	7.4 V DC (battery pack), 8.4 V DC (compact power adapter)
<b>Power consumption</b>	2.1 W (viewfinder), 2.2 W (LCD screen, normal brightness)
<b>Operating Temperature</b>	0 – 40 °C (32 – 104 °F)
<b>Dimensions (W x H x D)</b>	68 x 83 x 123 mm (2.7 x 3.3 x 4.8 in.) excluding the grip belt
<b>Weight (camcorder body only)</b>	390 g (13.8 oz.)

---

---

## CA-590 Compact Power Adapter

<b>Power input</b>	100 – 240 V AC, 50/60 Hz, 0.14 – 0.08 A
<b>Rated output</b>	8.4 V DC, 0.6 A
<b>Operating temperature</b>	0 – 40 °C (32 – 104 °F)
<b>Dimensions</b>	46 x 26 x 70 mm (1.8 x 1.0 x 2.8 in.)
<b>Weight</b>	95 g (3.4 oz.)

---

---

## BP-2L5 Battery Pack

<b>Battery type</b>	Rechargeable Lithium Ion Battery
<b>Rated voltage</b>	7.4 V DC
<b>Operating temperature</b>	0 – 40 °C (32 – 104 °F)
<b>Battery capacity</b>	530 mAh
<b>Dimensions</b>	33.3 x 16.2 x 45.2 mm (1.3 x 0.64 x 1.8 in.)
<b>Weight</b>	40 g (1.4 oz.)

Weight and dimensions are approximate. Errors and omissions excepted.  
The information in this manual is verified as of January 2009. Subject to change without notice.





## Index

6-second auto date .....48

### A

Abroad, using the camcorder .....57

Aspect ratio

of a connected TV (TV type) .....47

of movies (Widescreen) .....24

Audio output channel .....37

Auto slow shutter .....46

AV terminal .....38

### B

Backup battery .....17

Battery pack

Charging .....15

Remaining charge indicator .....14

Beach (recording program) .....30

Beep .....49

### C

Compact power adapter .....15

Condensation .....56

Connections

to a computer .....43

to a TV/VCR .....38

### D

Data code .....28

Date and time

Date format .....49

Daylight saving time .....20

Time zone .....20

Digital effects .....35

Digital video input (DV dubbing) .....41

DV terminal .....39

### E

EASY (recording program) .....24

End search .....28

Error messages .....52

Exposure .....33

### F

Fireworks (recording program) .....30

FUNC. menu .....18, 45

### G

Grip belt .....17

### I

Image effects .....35

Image stabilizer .....46

### J

Joystick .....18

Joystick guide .....18

### L

Language .....19

LCD screen .....20

LCD video light .....32

LP mode .....46

### M

Maintenance .....56

Manual exposure adjustment .....33

Manual focus .....32

Markers .....48

MIC terminal .....36

Microphone .....36

Mode switch .....24

### N

Night (recording program) .....30

### O

Onscreen display selection .....28

### P

P (recording program) .....31

Playback .....27

Portrait (recording program) .....30

Power save .....49

### Q

Quick Start function .....25

<b>R</b>	
Recording	23
Recording mode	46
Recording programs	29, 31
Recording reminder	14
Remaining tape indicator	14
Reviewing movies (Record review)	26

<b>S</b>	
Screen icons	13
Self timer	32
Serial number	12
Setup menus	19, 46
Shutter speed	31
Snow (recording program)	30
SP mode	46
Special scene (recording programs)	29
Sports (recording program)	30
Spotlight (recording program)	30
Sunset (recording program)	30

<b>T</b>	
Telephoto	25
Transferring movies to a computer	44
Tripod	53
Troubleshooting	50

<b>V</b>	
Video heads, cleaning	2
Videocassettes	21, 54
Viewfinder	23
Volume	27

<b>W</b>	
White balance	34
Wide angle	25
Widescreen 16:9	24
Wind screen	47

<b>Z</b>	
Zoom	
Advanced zoom	25
Zoom speed	46
Zoom type	25

**U.S.A.**

## **CANON CONSUMER DIGITAL VIDEO EQUIPMENT LIMITED WARRANTY FOR THE UNITED STATES**

The limited warranty set forth below is given by Canon U.S.A., Inc. ("Canon USA") with respect to Canon Consumer Digital Video Equipment (the "Equipment") purchased in the United States. This limited warranty is only effective upon presentation of your Bill of Sale or other proof of purchase.

The Equipment is warranted under normal, non-commercial, personal use, against defective materials or workmanship as follows:

Parts: Defective parts will be exchanged for new parts or comparable rebuilt parts for a period of ONE YEAR from the date of original purchase, except for a defective Video Head, which will be exchanged for a period of three months from the date of purchase.

Labor: For a period of ONE YEAR from the date of original purchase, labor will be provided free of charge by our factory service centers or designated service facilities located in the United States.

When returning Equipment under this warranty, you must pre-pay the shipping charges, and you must enclose the Bill of Sale or other proof of purchase with a complete explanation of the problem. During the ONE-YEAR warranty period, repairs will be made and the Equipment will be return-shipped to you free of charge. For repairs after the warranty period is over, you will be given an estimate of the cost of repair and an opportunity to approve or disapprove of the repair expense before it is incurred. If you approve, repairs will be made and the Equipment will be return-shipped to you. (shipping charges apply). If you disapprove, we will return-ship the equipment at no charge to you.

**Non-Canon brand peripheral equipment and software which may be distributed with, or factory loaded on, the Equipment, are sold "AS IS" without warranty of any kind by Canon USA, including any implied warranty regarding merchantability or fitness for a particular purpose. The sole warranty with respect to such non-Canon brand items is given by the manufacturer or producer thereof. If the Equipment contains a hard disk drive, Canon USA recommends that data stored on that drive be duplicated or backed up to prevent its loss in the event of failure or other malfunction of such drive.**

Canon USA shall have no responsibility under this limited warranty for use of the Equipment in conjunction with incompatible peripheral equipment and incompatible software.

In order to obtain warranty service, contact the authorized Canon retail dealer from whom you purchased the Equipment or call the CANON INFORMATION CENTER AT 1-800-OK-CANON). You will be directed to the nearest service facility for your Equipment.

This Limited Warranty covers all defects encountered in normal use of the Equipment and does not apply in the following cases:

- A) Loss or damage to the Equipment due to abuse, mishandling, accident, improper maintenance, or failure to follow operating instructions;
- B) If the Equipment is defective as a result of leaking batteries, sand, dirt or water damage;
- C) If defects or damages are caused by the use of unauthorized parts or by service other than by Canon USA's factory service centers or authorized service facilities;
- D) If the Equipment is used for commercial or industrial use.

This Limited Warranty does not cover cabinet (exterior finish), video cassette tape, head cleanings, nor does it apply to Equipment purchased outside the United States. This warranty does not cover units sold to rental firms, military operations, hotels, schools, hospitals or for other commercial, industrial, or institutional applications. These uses are covered only by such specific warranty as Canon may issue with such sales.

This Limited Warranty does not apply to accessories or consumables for the Equipment, which are sold "AS IS", without warranty of any kind by Canon USA.

Please retain this warranty card and your Bill of Sale as a permanent record of your purchase. This card is most important in order to be sure you are contacted right away should there be a safety inspection, modification or product recall under applicable laws or regulations.

**NO IMPLIED WARRANTY, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE APPLIES TO THIS EQUIPMENT AFTER THE APPLICABLE PERIOD OF EXPRESS WARRANTY OR GUARANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS EQUIPMENT SHALL BIND THE UNDERSIGNED (SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU). CANON USA SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, INCLUDING WITHOUT LIMITATION, LOSS OR CORRUPTION OF DATA STORED ON THE EQUIPMENT'S HARD DRIVE, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE EQUIPMENT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CANON USA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CANON USA BE GREATER THAN THE PURCHASE PRICE OF THE EQUIPMENT SOLD BY CANON USA AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE, MISUSE OR INABILITY TO USE THE EQUIPMENT NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF CANON USA. (SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU). THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS EQUIPMENT OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT.**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.  
CANON U.S.A., INC.

**CANON CONSUMER DIGITAL VIDEO EQUIPMENT LIMITED WARRANTY**

The limited warranty set forth below is given by Canon Canada Inc. ("Canon Canada") with respect to Canon Consumer Digital Video Equipment (the "Equipment") purchased in Canada. This limited warranty is only effective upon presentation of a bill of sale or other proof of purchase for this Equipment to a Canon Service Facility when repairs are required.

The Equipment is warranted under normal, non-commercial, personal use, against defective materials or workmanship as follows:

Parts: Defective parts will be exchanged for new parts or, at Canon Canada's option, comparable rebuilt parts for a period of one year from the date of original purchase, except Video Heads which will be exchanged for a period of 3 months from the date of purchase.

Labour: For a period of one year from the date of original purchase, labour will be provided free of charge by our Canon Service Facilities in Canada.

This limited warranty covers all defects except where:

(a) The loss or damage to the product results from:

- i) accident, natural disaster, mishandling, abuse, neglect, unauthorized product modification or failure to follow instructions contained in the instruction manual;
- ii) the use of accessories, attachments, products, supplies, parts or devices with the Equipment that do not conform to Canon specifications or that cause abnormally frequent service problems;
- iii) repairs or services performed by any party other than a Canon Service Facility;
- iv) defective batteries or any exposure to water, sand or dirt;
- v) shipping (claim must be presented to the shipper);

(b) Any serial number on the video Equipment is altered or removed.

(c) The Equipment is used for commercial, professional or industrial purposes.

This limited warranty does not cover the cabinet (exterior finish) of the Equipment, media, nor does it apply to Equipment purchased outside Canada. If the Equipment contains a hard disk drive, Canon Canada recommends that data stored on that drive be duplicated or backed up to prevent its loss in the event of a failure or other malfunction of such drive.

**TO OBTAIN WARRANTY SERVICE**

Ship your Equipment in its original carton, box or equivalent, properly packed, fully insured with shipping charges prepaid, together with a copy of your bill of sale or other proof of purchase and a description of the problem to any of the Canon Service Facilities in Canada.

**LIMITATIONS**

Except as otherwise required by applicable legislation, this warranty is in lieu of all other warranties, conditions, guarantees or representations, express or implied, statutory or otherwise, relative to the Equipment, including implied warranties or conditions of merchantability or fitness for a particular purpose.

Canon Canada assumes no liability for special, consequential or incidental damages, loss or corruption of data including, without limitation, data stored on the hard disk drive of the Equipment or loss that may arise, whether on account of negligence or otherwise, from the use, misuse or inability to use the Equipment (including loss of profit, revenue, media or enjoyment) or from failure to conform to any express or implied warranties, conditions, guarantees or representations. Any recovery under this limited warranty shall not exceed the purchase price of the equipment. Canon Canada does not assume or authorize any other person to assume for Canon Canada any other liability with respect to this equipment.

This warranty does not extend to any person other than the original purchaser of the Equipment or the person for whom it was purchased as a gift and states your exclusive remedy.

**NOTICE TO CONSUMER**

If you plan to take important videos or if the product has not been used for some time, please check all functions with the instruction book before using it.

# Canon

---

## USA

### **CANON U.S.A., INC. NEW JERSEY OFFICE**

100 Jamesburg Road, Jamesburg, NJ 08831 USA

### **CANON U.S.A., INC. CHICAGO OFFICE**

100 Park Blvd., Itasca, IL 60143 USA

### **CANON U.S.A., INC. LOS ANGELES OFFICE**

15955 Alton Parkway, Irvine, CA 92618 USA

### **CANON U.S.A., INC. HONOLULU OFFICE**

210 Ward Avenue, Suite 200, Honolulu, HI 96814 USA

- ❖ If you have any questions, call the Canon U.S.A. Information Center toll-free at 1-800-828-4040 (U.S.A. only).
- 

## CANADA

### **CANON CANADA INC.**

6390 Dixie Road, Mississauga, ON L5T 1P7

### **CANON CANADA INC. CALGARY**

2828 16th Street NE, Calgary, AB T2E 7K7

### **CANON CANADA INC. MONTREAL**

8801 Route Transcanadienne, Saint-Laurent, QC H4S 1Z6

- ❖ If you have any questions, call the Canon Canada Information Center toll free (in Canada only) at 1-800-OK-CANON (1-800-652-2666).
  - ❖ Si vous avez des questions, veuillez téléphoner 1-800-OK-CANON (1-800-652-2666, sans frais au Canada seulement).
- 

## MÉXICO

### **CANON MEXICANA, S DE RL DE CV**

Blvd. Manuel Ávila Camacho No. 138, Piso 17

Col. Lomas de Chapultepec

C.P. 11000 México, D.F., México

### **CANON U.S.A., INC. NEW JERSEY OFFICE**

100 Jamesburg Road, Jamesburg, NJ 08831 USA

---

## CENTRO Y SURAMÉRICA

### **CANON LATIN AMERICA, INC.**

703 Waterford Way, Suite 400, Miami, FL 33126 USA

---

## ASIA

### **CANON HONGKONG COMPANY LTD.**

19/F, The Metropolis Tower, 10 Metropolis Drive,

Hunghom, Kowloon, Hong Kong

Tel: +852 3191 2333, Fax: +852 2428 3963

---

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>