

# Operator's Manual




2.5 HP (Max. Developed)

10" Inch Blade

5000 R.P.M.

## BENCH TABLE SAW

Model : 137.232040

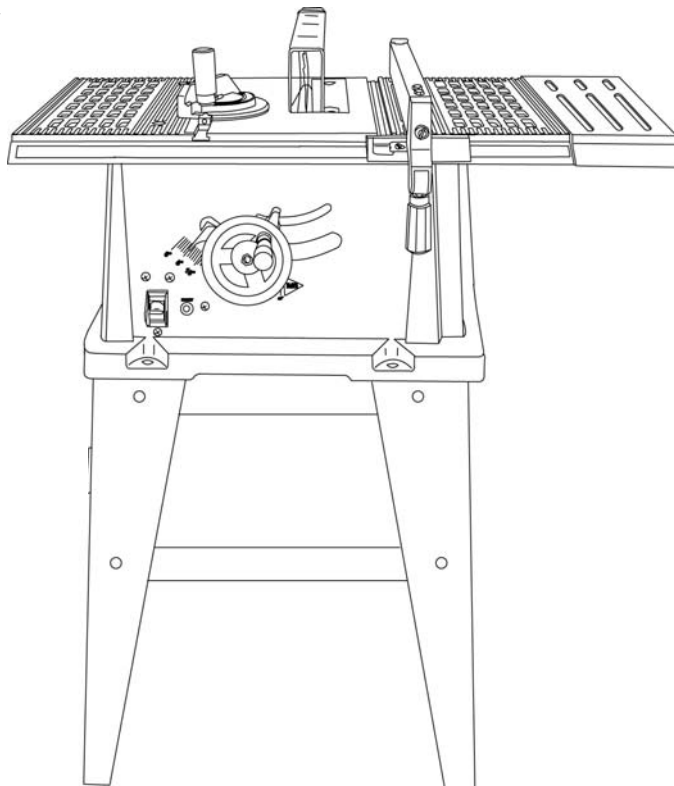

### CAUTION:

Before using this Table Saw, read this manual and follow all its Safety Rules and Operating Instructions

- Safety Instructions
- Installation
- Operation
- Maintenance
- Parts List

**Customer Help Line**  
**1-800-843-1682**

Sears, Roebuck and Co., Hoffman Estates, IL 60179 USA

Visit our Craftsman website: [www.sears.com/craftsman](http://www.sears.com/craftsman)

Part No. : 137232040001

# TABLE OF CONTENTS

SECTION	PAGE	SECTION	PAGE
Warranty .....	2	Know Your Table Saw.....	8
Product Specifications .....	2	Assembly and Adjustments.....	9
Power Tool Safety .....	3	Operation.....	17
Table Saw Safety.....	4	Maintenance .....	21
Electrical Requirements and Safety.....	5	Troubleshooting Guide.....	22
Accessories and Attachments.....	6	Push Stick Pattern .....	23
Tools Needed For Assembly.....	6	Parts List .....	24
Carton Contents .....	6		

## WARRANTY

### FULL ONE YEAR WARRANTY

If this Table Saw fails due to a defect in material or workmanship within one year of date of purchase, Sears will at its option repair or replace it free of charge.

Return this Table Saw to a Sears Service Center for repair, or to place of purchase for replacement.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

**Sears, Roebuck and Co., Dept. 817 WA, Hoffman Estates, IL 60179**

### ⚠ WARNING

Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment such as dust masks that are specially designed to filter out microscopic particles.

## PRODUCT SPECIFICATIONS

### MOTOR

HP (Maximum developed).....	<b>2.5</b>
Type .....	<b>Universal</b>
Amps .....	<b>13</b>
Voltage .....	<b>120</b>
Hz .....	<b>60</b>
RPM (no load).....	<b>5000</b>
Overload Protection.....	<b>YES</b>

### SAW

Table Size.....	<b>26 1/8" x 16"</b>
Table Extension.....	<b>Right Side – 8" Steel</b>
Rip Capacity with Extension.	<b>17-5/8"</b>
Blade Size.....	<b>10"</b>
Rip Fence .....	<b>YES</b>
Miter Gauge.....	<b>YES</b>
Maximum Cut Depth @ 90°..	<b>3"</b>
Maximum Cut Depth @ 45°..	<b>2-1/2"</b>
Maximum Diameter Dado....	<b>6"</b>
Maximum Dado Cut Width...	<b>1/2"</b>
Net Weight.....	<b>54 LBS</b>

### ⚠ WARNING

To avoid electrical hazards, fire hazards or damage to the table saw, use proper circuit protection. This table saw is wired at the factory for 110-120 Volt operation. It must be connected to a 110-120 Volt / 15 Ampere time delay fuse or circuit breaker. To avoid shock or fire, replace power cord immediately if it is worn, cut or damaged in any way.

Before using your table saw, it is critical that you read and understand these safety rules. Failure to follow these rules could result in serious injury to you or damage to the table saw.

# POWER TOOL SAFETY

**▲ WARNING** Before using your table saw, it is critical that you read and understand these safety rules. Failure to follow these rules could result in serious injury or damage to the table saw.

Good safety practices are a combination of common sense, staying alert and understanding how to use your power tool. To avoid mistakes that could cause serious injury, do not plug in your power tool until you have read and understood the following safety rules:

1. **READ** and become familiar with this entire Operator's Manual. **LEARN** the tool's applications, limitations and possible hazards.
2. **▲ WARNING** Look for this symbol that identifies important safety precautions. It means **CAUTION!** Become alert, your safety is involved if you do not follow the safety instructions.
3. **▲ DANGER** Look for this symbol that identifies important safety precautions. It means **CAUTION!** Become alert, your safety is involved if you do not follow the safety instructions.
4. **NEVER OPERATE THIS MACHINE WITHOUT THE SAFETY GUARD IN PLACE FOR ALL THROUGH-SAWING OPERATIONS.**
5. **DO NOT USE IN DANGEROUS ENVIRONMENTS** such as damp or wet locations or exposure to rain. Keep work area well lighted.
6. **DO NOT** use power tools in the presence of flammable liquids or gases.
7. **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite accidents.
8. **KEEP CHILDREN AWAY.** All visitors should be kept at a safe distance from the work area.
9. **DO NOT FORCE THE TOOL.** It will do the job better and safer at the rate for which it was designed.
10. **USE THE RIGHT TOOL.** Don't force the tool or attachment to do a job for which it is not designed.
11. **WEAR PROPER APPAREL. DO NOT** wear loose clothing, gloves, neckties, rings, bracelets or other jewelry which may get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.
12. **WEAR A FACE MASK OR DUST MASK.** Sawing, cutting and sanding operations produce dust.
13. **DISCONNECT TOOLS** before servicing and when changing accessories such as blades, cutters, etc.
14. **REDUCE THE RISK OF UNINTENTIONAL STARTING.** Make sure the switch is in the OFF position before plugging into the power supply.
15. **USE ONLY RECOMMENDED ACCESSORIES.** Consult the Operator's Manual for recommended

accessories. The use of improper accessories may cause injury to you or damage to the tool.

16. **REMOVE ADJUSTING KEYS AND WRENCHES.** Form the habit of checking to see that keys and adjusting wrenches are removed from the tool before turning ON.
17. **NEVER LEAVE TOOL RUNNING UNATTENDED. TURN THE POWER "OFF".** Do not leave the tool before it comes to a complete stop.
18. **NEVER STAND ON TOOL.** Serious injury could occur if the tool is tipped or if the cutting tool is unintentionally contacted.
19. **DO NOT OVERREACH.** Keep proper footing and balance at all times.
20. **MAINTAIN TOOLS WITH CARE.** Keep tools sharp and clean for most efficient and safest performance. Follow instructions for lubricating and changing accessories.
21. **CHECK FOR DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to ensure it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, mounting and any other conditions that may affect its safe operation. A guard or other part that is damaged should be properly repaired or replaced.
22. **MAKE WORKSHOP CHILD PROOF** with padlocks, master switches or by removing starter keys.
23. **DO NOT** operate the tool if you are under the influence of any drugs, alcohol or medication that could impair your ability to use the tool safely.
24. **USE A DUST COLLECTION SYSTEM** wherever possible. Dust generated from certain materials can be hazardous to your health and in some cases, a fire hazard. Always operate the power tool in a well-ventilated area with adequate dust removal.
25. **ALWAYS WEAR EYE PROTECTION.** Any power tool can throw foreign objects into your eyes which could cause permanent eye damage. **ALWAYS** wear safety goggles (not glasses) that comply with ANSI safety standard Z87.1. Everyday glasses have only impact resistant lenses. They **ARE NOT** safety glasses.  
**NOTE:** Glasses or goggles not in compliance with ANSI Z87.1 could cause serious injury when they break.
26. **DIRECTION OF FEED.** Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.
27. **DO NOT AUTHORZE ADDITIONAL USERS** to operate this power tool without the accompanying operators manual for which the user must read & understand.

# TABLE SAW SAFETY

1. **ALWAYS USE SAW BLADE GUARD**, splitter and anti-kickback pawls for every operation for which they can be used, including through-sawing. Through-sawing operations are those in which the blade cuts completely through the workpiece when ripping or cross-cutting.
2. **ALWAYS HOLD WORK FIRMLY** against the miter gauge or rip fence.
3. **USE A PUSH STICK** when required. Always use a push stick when ripping narrow stock. Refer to ripping instructions in this Operator's Manual where the push stick is covered in detail. A pattern for making your own push stick is included on page 30.
4. **NEVER PERFORM ANY OPERATION "FREE HAND"**, which means using only your hands to support or guide the workpiece. Always use either the fence or the miter gauge to position and guide the work.  
  
**DANGER: FREEHAND CUTTING IS THE MAJOR CAUSE OF KICK-BACK & FINGER/HAND AMPUTATIONS.**
5. **NEVER STAND** or have any part of your body in line with the path of the saw blade. Keep your hands out of the saw blade path.
6. **NEVER REACH** behind or over the cutting tool for any reason.
7. **NEVER** use a rip fence when cross cutting.
8. **DO NOT USE** a molding head with this saw.
9. **FEED WORK INTO THE BLADE** against the direction of rotation only.
10. **NEVER** use the rip fence as a cut-off gauge when cross-cutting.
11. **NEVER ATTEMPT TO FREE A STALLED SAW BLADE** without first turning the saw OFF. Turn power switch OFF and disconnect the plug from the power source immediately to prevent motor damage & before removing material
12. **PROVIDE ADEQUATE SUPPORT** to the rear and the sides of the saw table for long or wide workpieces.
13. **AVOID KICKBACKS** (work thrown back towards you) by keeping the blade sharp, the rip fence parallel to the saw blade and by keeping the splitter, anti-kickback pawls and guards in place and functioning. Do not release work before it has passed all the way past the saw blade & is off the table. Do not rip work that is twisted, warped or does not have a straight edge to guide it along the fence.
14. **AVOID AWKWARD OPERATIONS** and hand positions where a sudden slip could cause your hand to move into the saw blade.
15. **NEVER USE SOLVENTS** to clean plastic parts. Solvents could possibly dissolve or otherwise damage the material. Only a soft damp cloth should be used to clean plastic parts.
16. **MOUNT** your table saw on a bench or stand before performing any cutting operations. Refer to ASSEMBLY AND ADJUSTMENTS on page 9.
17. **NEVER CUT METALS** or materials which may make hazardous dust.
18. **ALWAYS USE IN WELL-VENTILATED AREA.** Remove sawdust frequently. Clean out sawdust from the interior of the saw to prevent a potential fire hazard. Attach a vacuum to the dust port for additional sawdust removal.
19. **NEVER LEAVE THE SAW** running unattended. Do not leave the saw until it comes to a complete stop.
20. **FOR** proper operation follow the instructions in this Operator's Manual. Failure to provide sawdust fall-through and removal hole will allow sawdust to build up in the motor area resulting in a fire hazard and potential motor damage (see page 10 for details).
21. **DO NOT AUTHORIZE ADDITIONAL USERS** to operate this power tool without the accompanying operators manual for which the user must read and understand.
22. **THE REAR OF THE TABLE INSERT MUST BE FLUSH TO THE TABLE** during all sawing operations. Two different inserts are provided for regular through-sawing operations and dado cutting where a rubber adjusting spacer is provided under the rear of the insert for this purpose.
23. **DO NOT USE A DADO BLADE LARGER THAN 6"** in diameter and 1/2" in width.

# ELECTRICAL REQUIREMENTS AND SAFETY

## POWER SUPPLY REQUIREMENTS

### **⚠ WARNING**

To avoid electrical hazards, fire hazards or damage to the table saw, use proper circuit protection. Always use a separate electrical circuit for your tools. This power tool is wired at the factory for 120V operation. Connect it to a 120V, 15 Amp circuit and use a 15 Amp time delay fuse or circuit breaker. To avoid shock or fire, replace the cord immediately if it is worn, cut or damaged in any way.

## EXTENSION CORD REQUIREMENTS

### **⚠ WARNING**

Any extension cord must be **GROUND**ED for safe operation.

MINIMUM GAUGE FOR EXTENSION CORDS (AWG type / 120 Volt only)					
Ampere Rating		Total length in feet			
More Than	Not More Than	25'	50'	100'	150'
0	6	18	16	16	14
6	10	18	16	14	12
10	12	16	16	14	12
12	16	14	12	Not Applicable	

## GUIDELINES FOR EXTENSION CORDS

Any extension cord used for power tools **MUST** be grounded (3 wire with two flat prongs and one round ground prong).

Make sure the extension cord is in good condition. When using an extension cord, make sure you use one heavy enough to carry the current the tool will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. The table above shows the correct size to use according to extension cord length and nameplate ampere rating. If in doubt, use the next heavier gauge cord. The smaller the gauge number the heavier the cord.

**NOTE: THE 12 TO 16 AMP RATING IS CORRECT FOR THIS TOOL. IT IS HIGHLIGHTED IN THE TABLE ABOVE.**

Be sure your extension cord is properly wired and in good condition. Always replace a damaged extension cord or have it repaired by a qualified person before using it. Protect your extension cords from sharp objects, excessive heat and damp or wet areas.

Before connecting the saw to the extension cord, make sure the saw switch is turned OFF.

## GROUNDING INSTRUCTIONS



IN THE EVENT OF A MALFUNCTION OR BREAKDOWN, grounding provides a path of least resistance for electric current and reduces the risk of electric shock. This saw is equipped with an electric cord that has an equipment grounding conductor and a grounding plug. The plug **MUST** be plugged into a matching receptacle that is properly installed and grounded in accordance with ALL local codes and ordinances.

**DO NOT MODIFY THE PLUG PROVIDED.** If it will not fit the receptacle, have the proper receptacle installed by a qualified electrician.

**IMPROPER CONNECTION** of the equipment grounding conductor can result in risk of electric shock. The conductor (wire) with the green insulation (with or without yellow stripes) is the equipment grounding conductor. If repair or replacement of the electric cord or plug is necessary, **DO NOT** connect the equipment grounding conductor to a live terminal.

**CHECK** with a qualified electrician or service personnel if you do not completely understand the grounding instructions, or if you are not sure the saw is properly grounded.

**USE ONLY 3-WIRE EXTENSION CORDS THAT HAVE 3-PRONG GROUNDING PLUGS AND 3-POLE GROUNDING RECEPTACLES THAT ACCEPT THE SAW'S PLUG. REPAIR OR REPLACE DAMAGED OR WORN CORDS IMMEDIATELY.**

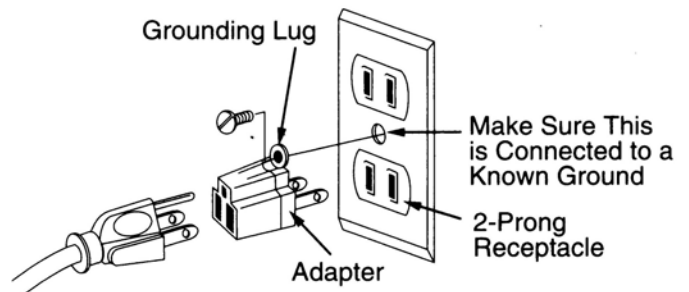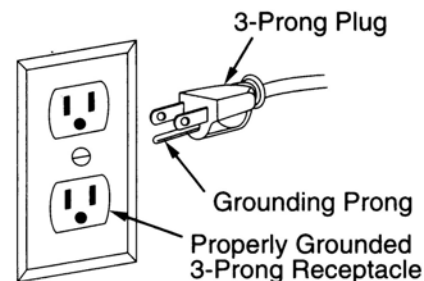

## ACCESSORIES AND ATTACHMENTS

### RECOMMENDED ACCESSORIES

#### ▲ WARNING

Visit your Sears Hardware Department or see the Craftsman Power and Hand Tools Catalog to purchase recommended accessories for this power tool.

#### ▲ WARNING

To avoid the risk of personal injury:

- Do not use adjustable (wobble) type dados or carbide tipped dado blades.
- Maximum dado width is 1/2".
- Do not use a dado with a diameter larger than 6".
- Do not use molding head set with this saw.
- Do not modify this power tool or use accessories not recommended by Sears.

## TOOLS NEEDED FOR ASSEMBLY

 
### TOOLS NEEDED



Medium screwdriver



#2 Phillips screwdriver



Straight edge



13mm Wrench



Adjustable wrench



Combination square

## CARTON CONTENTS

### UNPACKING AND CHECKING CONTENTS

- For missing or damaged parts on initial purchase, call 800-843-1682
- To order parts, call 800-366-7278

Separate all parts from packing materials. Check each part with the illustration on the next page and the "Table of Loose Parts" to make certain all items are accounted for, before discarding any packing material.

#### ▲ WARNING

If any part is missing or damaged, do not attempt to assemble the table saw, plug in the power cord, or turn the switch ON until the missing or damaged part is obtained and is installed correctly.

### TABLE OF LOOSE PARTS

ITEM	DESCRIPTION	QUANTITY
A.	Table saw assembly	1
B.	Blade	1
C.	Blade wrenches	2
D.	Miter gauge	1
E.	Hex keys	2
F.	Bolt, flat washer, toothed washer, Oval washer, spring washer	1 each
G.	Blade guard and splitter	1
H.	Dado table insert	1
I.	Rip fence, lock handle & nut	1
J.	Flat washer & Dome nut	1
K.	Handwheel	1

### TABLE EXTENSION CONTENTS


L.	Table extension	1
M.	Table ext. mounting hardware bag	1
N.	Table extension rip scale	1

### STAND:


O.	Short upper support	2
P.	Long upper support	2
Q.	Short bottom support bracket	2
R.	Long bottom support bracket	2
S.	Leg	4
T.	Foot Pad	4
U.	Stand mounting hardware bag	1

**NOTE:** To make assembly easier, keep contents of box together. Apply a coat of automobile wax to the table. Wipe all parts thoroughly with a clean dry cloth. This will reduce friction when pushing the workpiece. To avoid injury, the styrofoam block should be removed between the motor and the table.

# UNPACKING YOUR TABLE SAW

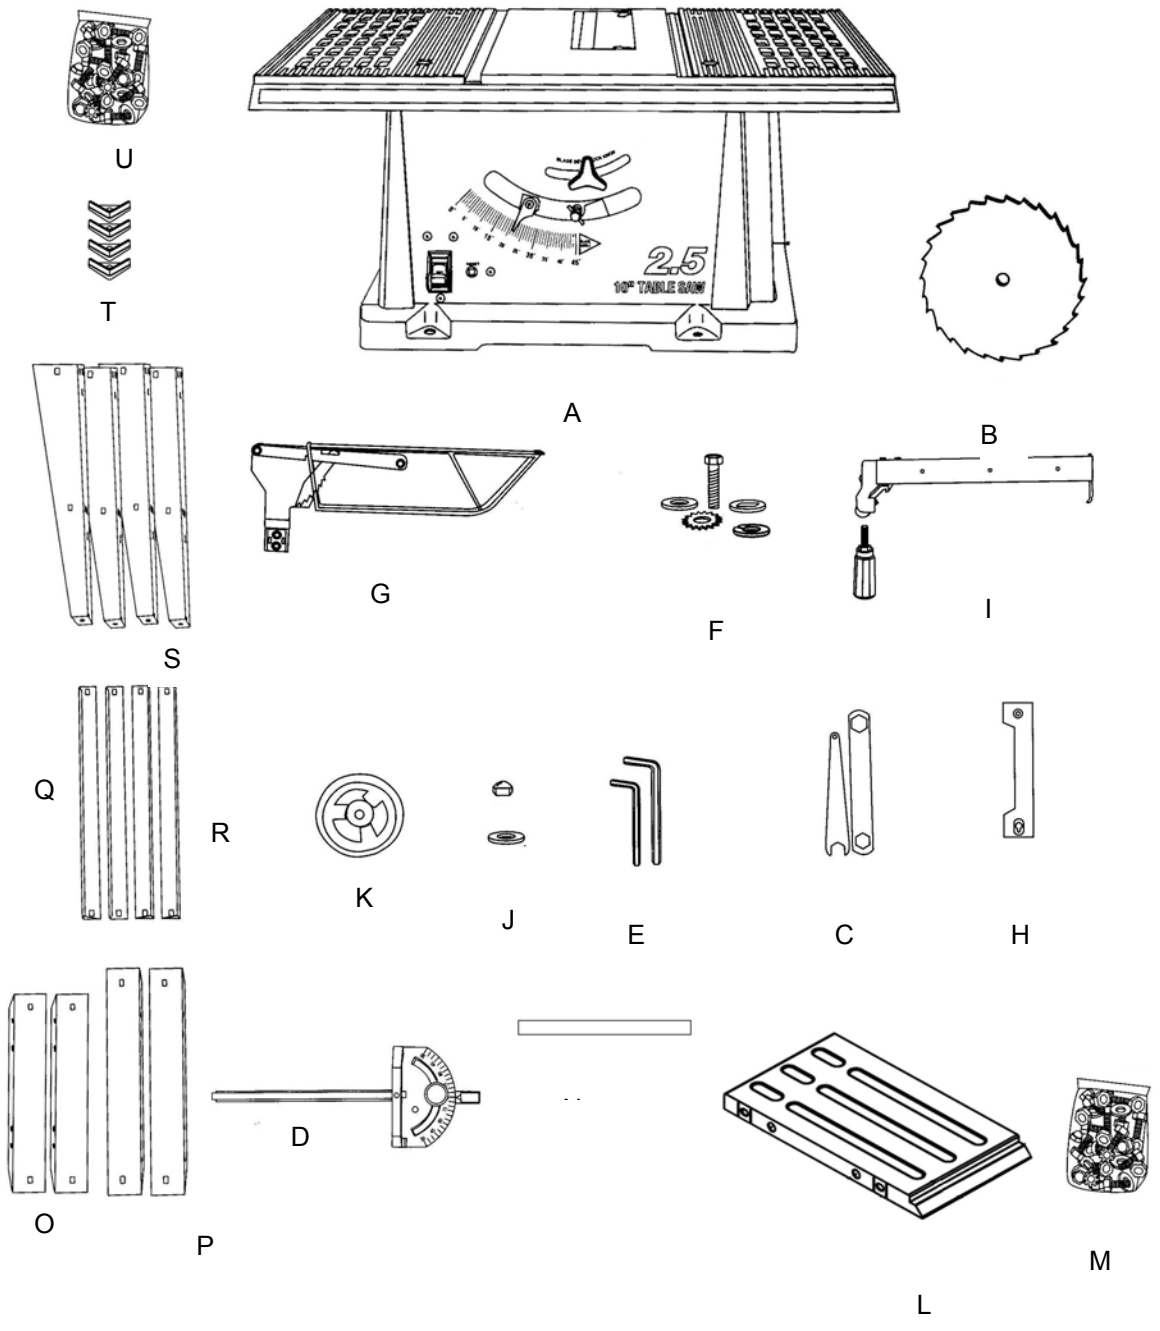

# KNOW YOUR TABLE SAW

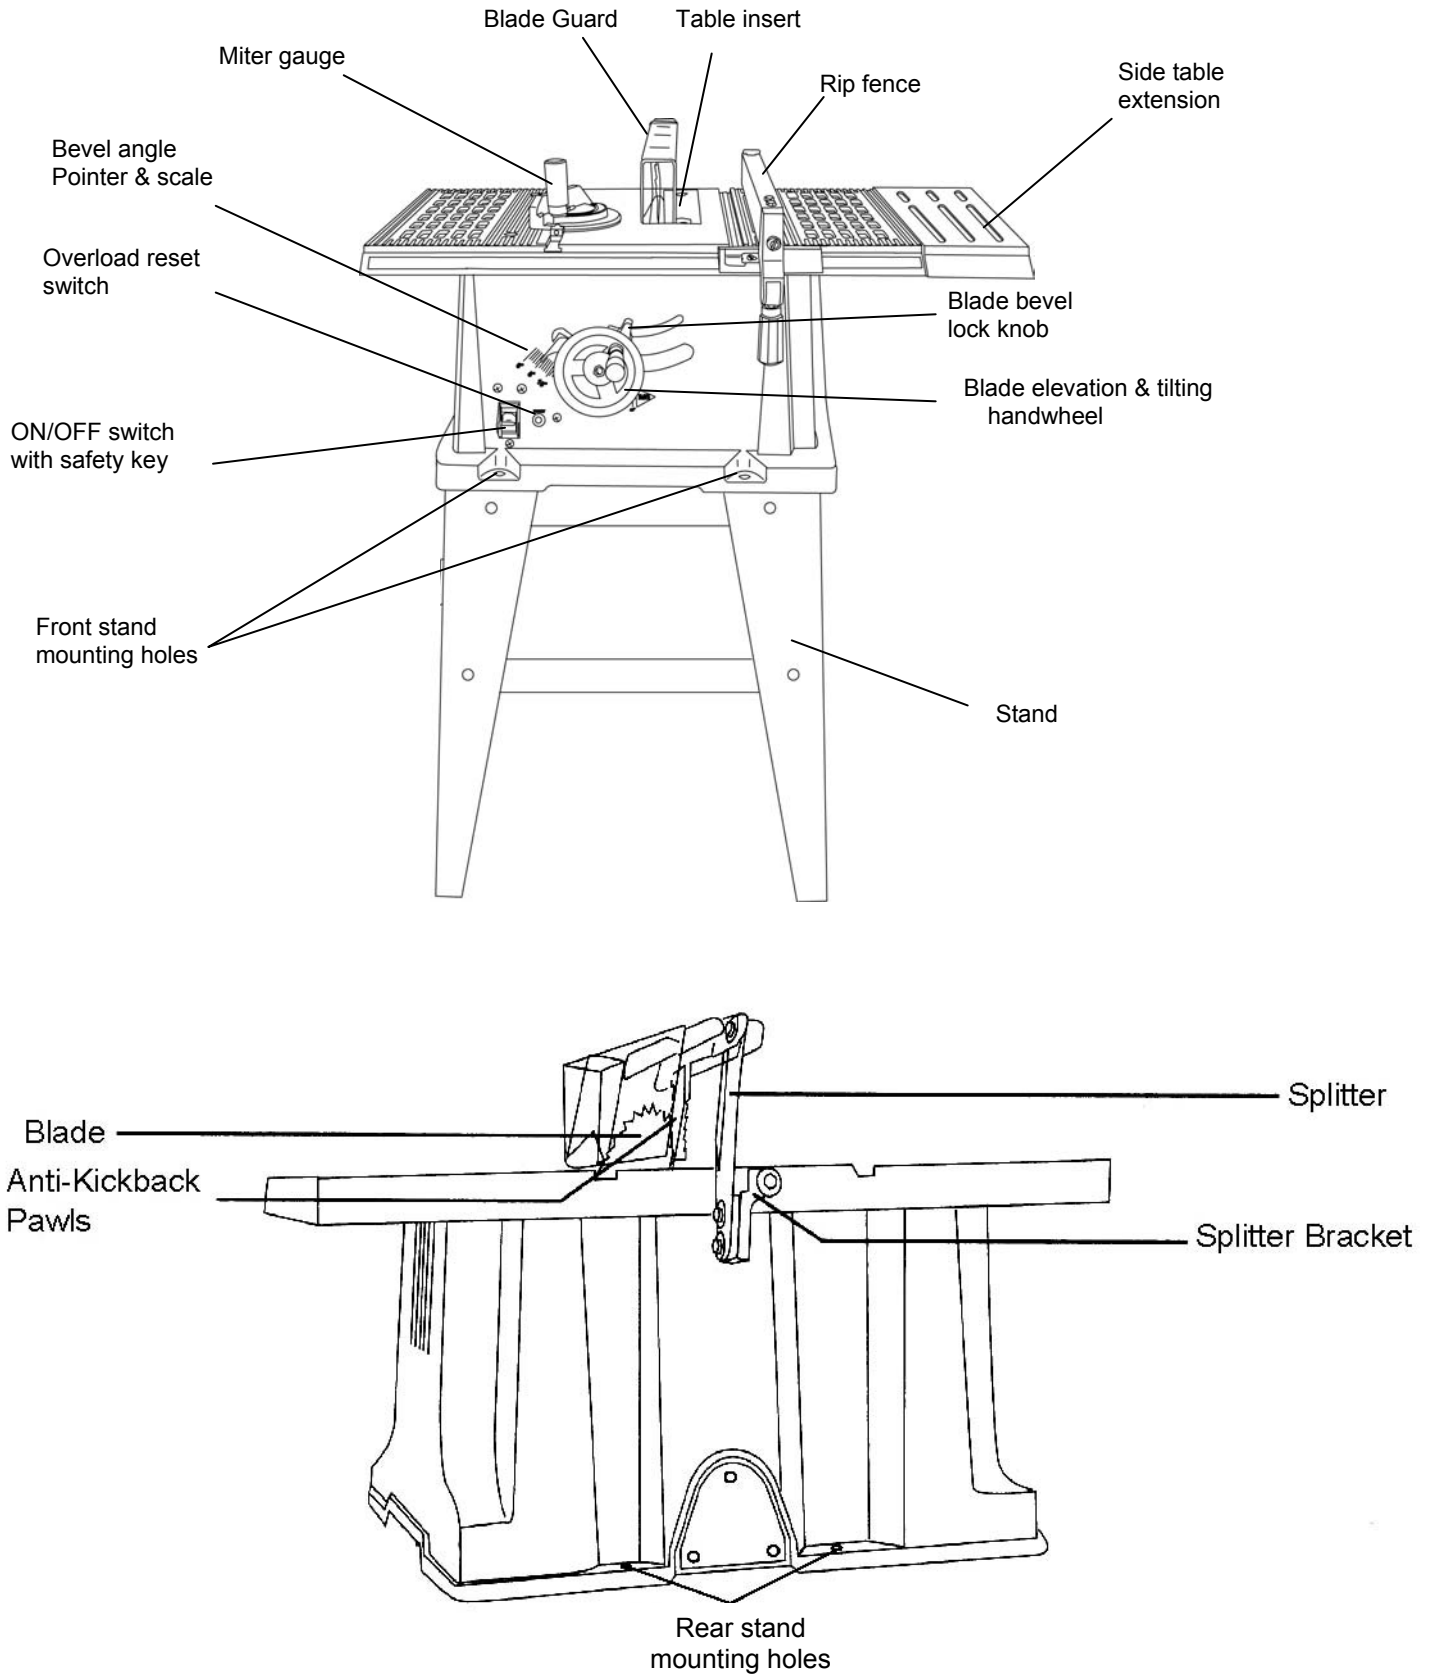



# ASSEMBLY AND ADJUSTMENTS

## ASSEMBLE STAND (Fig. A)

1. Unpack all parts and group by type and size (see Fig. 1). Refer to the parts list for correct quantities.
2. Attach one long upper support (4) to top of leg (1) using one square neck bolt (2) and nut (5).  
**NOTE:** Do not tighten bolts until stand is properly aligned (see step #8 before tightening).
3. Attach other end of long upper support to top of another leg using one square neck bolt and nut.
4. Attach one long bottom support (3) to center of each leg using square neck bolts and nuts. This completes the front frame section.
5. Assemble rear frame section in exactly the same manner.
6. Join front and rear frame assemblies using two short upper supports (11) and two short bottom supports (10), square neck bolts and nuts.
7. Insert foot pad (6) into bottom of leg. Repeat for each leg.
8. Place stand on level surface and adjust so all legs are contacting the floor and are at similar angles to the floor. Tighten all bolts.  
**NOTE:** Stand should not rock after all bolts are tightened.

## Assemble table saw to stand (Fig. A-1)

1. Place protective cardboard or old blanket on floor to protect the saw table surface.
2. Place the saw up side down on the protective material (see Fig. A-1).
3. Position the stand up side down on the saw base.  
**NOTE:** Make sure front of stand (identified with label) and front of saw are facing the same direction.
4. Line up four holes in saw base and stand.
5. Fasten saw to stand using four bolts (12), washers (13) and nuts (14).  
**NOTE:** Place washer on each bolt before inserting into saw base and through the support. Nut must be immediately against the bracket (see Fig. A).
6. Tighten all four nuts.  
**NOTE: DO NOT OVER TIGHTEN NUTS HOLDING SAW TO STAND. THIS MAY DAMAGE THE SAW BASE.**
7. Carefully set the saw in its upright position on a clean level surface.

### CAUTION

**DO NOT OPERATE THIS MACHINE ON THE FLOOR. THIS IS A VERY DANGEROUS POSITION.**

Fig. A


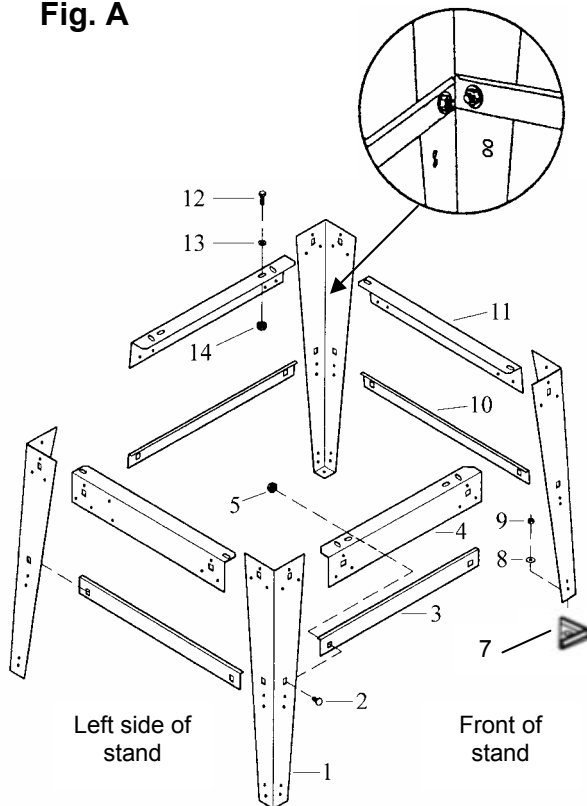


Fig. A-1

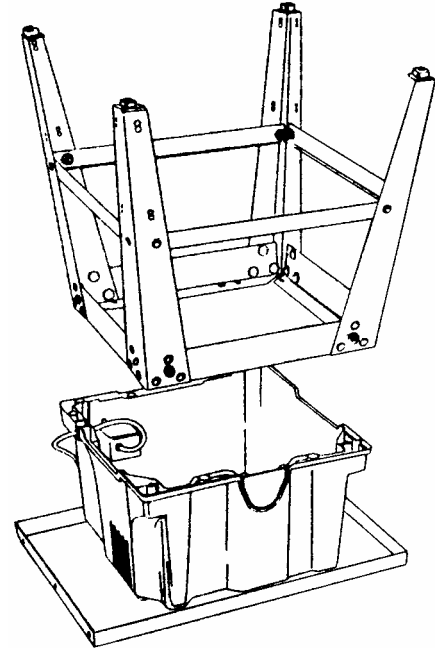


### SAW MOUNTED TO WORK SURFACE (FIG.B)

1. If the leg set will not be used, the saw must be properly secured to a sturdy workbench using the four mounting holes at the base of the saw.
2. The surface of the table where the saw is to be mounted must have a hole large enough to facilitate sawdust fall-through and removal.
3. Square the saw on the mounting surface and mark the location of the four 3/8" mounting holes (1).
4. Drill 3/8" hole into the mounting surface.
5. Mark an 11" square (2) centered between the four mounting holes (1).
6. Cut out and remove the square.
7. This opening will allow sawdust to fall through the saw base.
8. Place the saw on the work surface, and align the mounting holes of the saw with those drilled through the surface.
9. Fasten the saw to the work surface.

#### **▲ WARNING**

Do not operate this machine on the floor. This is very dangerous and may cause serious injury.

**Fig. B**

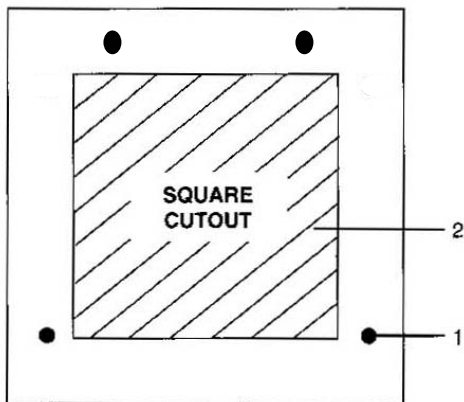

#### **▲ WARNING**

Failure to provide the sawdust fall-through hole for use of the saw when mounted to a worksurface and not a stand will cause sawdust to build up in the motor area, which may result in fire or cause motor damage.


### KEEPING THE AREA CLEAN

1. Sawdust and wood chips that fall from under the saw will accumulate on the floor.
2. Make it a practice to pick up and discard this dust when you have completed cutting.

### ASSEMBLE BLADE RAISING & TILTING WHEEL (FIG. C)

1. Attach blade raising & tilting hand wheel (1) to the height regulating bolt (2). Make sure the slot (3) in the hand wheel hub is engaged with the roll pin (4) in the height regulating bolt.
2. Fasten hand wheel to height regulating bolt with flat washer (5) and dome nut (6).
3. Fasten handle (7) onto handwheel as shown.


**Fig. C**

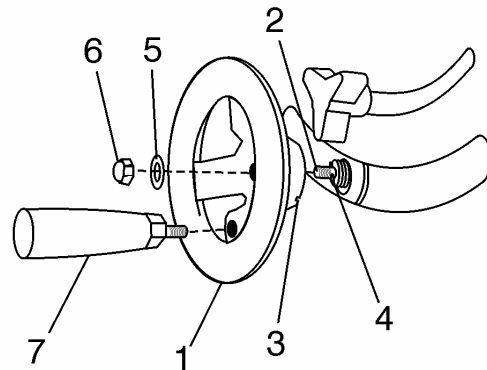

### RIP FENCE (FIG. D, E)


1. Thread the rip fence locking handle into the eccentric (3) of the fence and lock in place by tightening the nut (1) against the fence head.

**Fig. D**

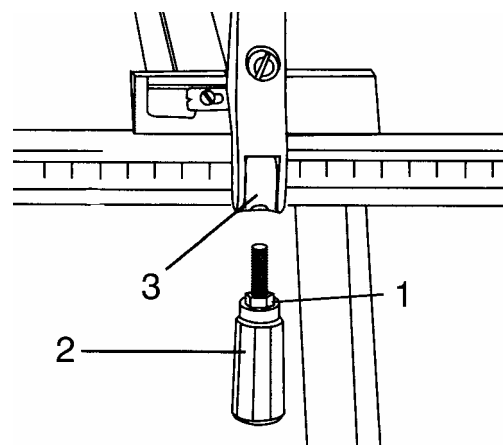

1. Lift upward on rip fence handle (2) so the rear holding clamp is fully extended..
2. Place the rip fence on the saw table, engaging the rear fence clamp first then lowering the front end onto the table.
3. Push down on the fence handle to lock.


**Fig. E**

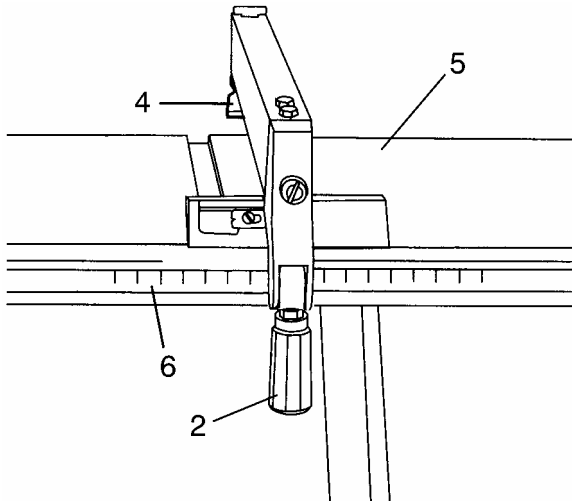

**TABLE EXTENSION – RIGHT SIDE (FIG. F)**

1. Group like bolts and washers.
2. Thread the three adjusting bolts (1) into the threaded holes of the extension as shown. Do not thread bolts beyond the end of the extension.
3. Place a lock washer (3) followed by the flat washer (5) on bolt (4). Repeat for remaining two mounting bolts.
4. Position the extension (6) next to the saw table on the right side (7) and align the mounting holes.
5. Place the bolts and washers into the three holes at the right side of the saw table as shown.
6. Place a washer (8) and nut (9) on the threaded end of each bolt, and hand tighten.
7. Lay a straight edge on the saw table and over the extension (6). Turn the three adjusting screws (1) in or out accordingly until the extension is flush with the top of the saw table.
8. Tighten the mounting bolts.
9. Attach the rip scale (10) to the table extension accordingly.

**Fig. F**

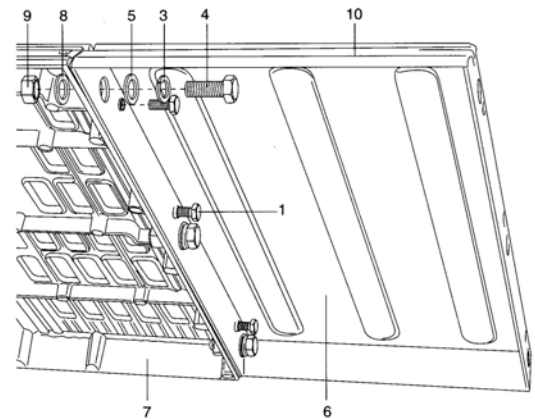


**INSTALLING AND CHANGING THE BLADE (FIG. H, I, J)**

**▲ DANGER**

- To avoid injury from an accidental start, make sure the switch is in the OFF position and the plug is not connected to the power source outlet.
- To avoid serious injury, table insert must be level with the table. If the table insert is not level with the table, adjust the screw (3) until it is level with the table. To raise the insert, turn the screw counterclockwise, to lower the insert, turn the screw clockwise. Note: A rubber adjusting spacer is provided under rear of insert for this purpose.

1. Remove the table insert (1) by removing the two screws (2, 3). Be careful not to lose the rubber spacer that is on the back screw (3) beneath the table insert. (Fig. H)

**Fig. H**

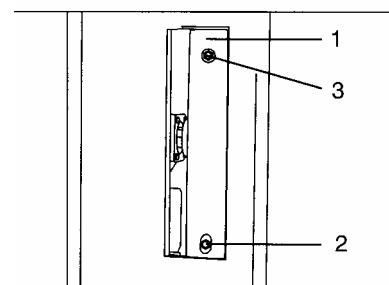


2. Raise the blade arbor (4) (Fig. I) to the maximum height by turning the blade raising handwheel counterclockwise.
3. Place the open-end wrench jaws on the flats of the saw arbor to keep the arbor from turning. (Fig. J) and place the box-end wrench (8) on the arbor nut (5), and turn counterclockwise.

4. Remove the arbor nut (5) and outer flange (6).
5. Install the saw blade onto the arbor with the blade teeth pointing toward the front of the saw.
6. Install the flange (6) against the blade and thread the arbor nut (5) as far as possible by hand. Ensure that the blade is flush against the inner side of the blade flange.

### **⚠ WARNING**


To avoid possible injury and damage to the workpiece be sure to install the blade with the teeth pointing toward the front of table in the direction of the rotation arrow on the blade guard.

**Fig. I**

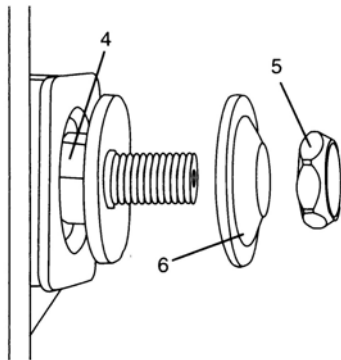

7. To tighten the arbor nut (5) place the open-end wrench jaws on the flats of the saw arbor to keep the arbor from turning. (Fig. J)
8. Place the box-end wrench (9) on the arbor nut (5), and turn clockwise (to the rear of the saw table).
9. Replace the blade insert in the table recess, insert the screws through the front and rear holes and tighten remembering the rubber washer under the rear of the insert..

**Fig. J**

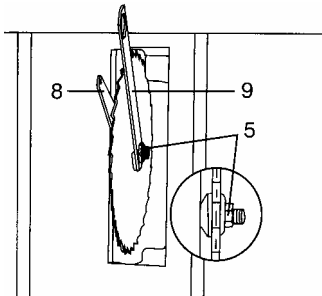


### **⚠ WARNING**

To avoid injury from a thrown workpiece, blade parts, or blade contact, never operate saw without the proper insert in place. Use the original installed insert for all sawing operations except dado cuts. Use the dado head insert when using a dado.

### **BLADE GUARD ASSEMBLY (FIG. K, L, M)**

1. Set the blade to maximum height and the tilt to zero degrees on the bevel scale with the hand wheels. Lock the blade lock knob.
2. Place the spring washer (2), flat washer (3),


external tooth lock washer (4) onto the blade guard mounting bolt (1). (Fig. K)

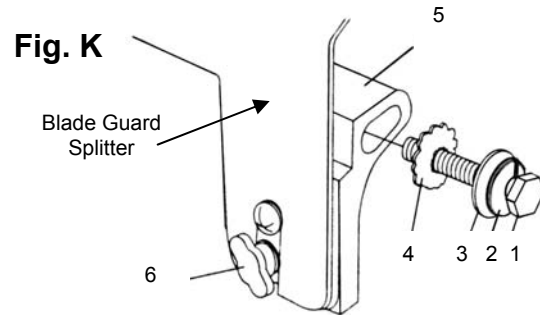

3. Place the oval washer (5) on the pivot rod (6). (Fig. L)
4. Install the blade guard splitter & bracket assembly (4) into the rear of the saw table. Thread the bolt (3) into the internally threaded pivot rod until snug.

**NOTE:** The blade guard & splitter is removed from the illustration for clarity.

**Fig. L**

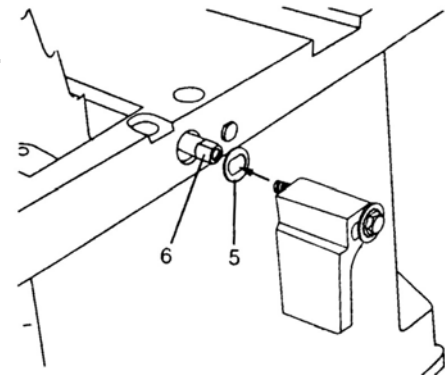


5. Lift blade guard arm (7) up and using a straight edge, align the blade guard splitter (8) with the saw blade (9).
6. Shift the splitter assembly to right or left until parallel alignment to the blade is achieved.
7. When the splitter is properly aligned with the saw blade, tighten the bolt securely.

**NOTE:** The splitter must always be correctly aligned so that the cut workpiece will pass on either side without binding or twisting to the side.

### **⚠ DANGER**


Improper splitter alignment can cause “kickback” and Serious injury.

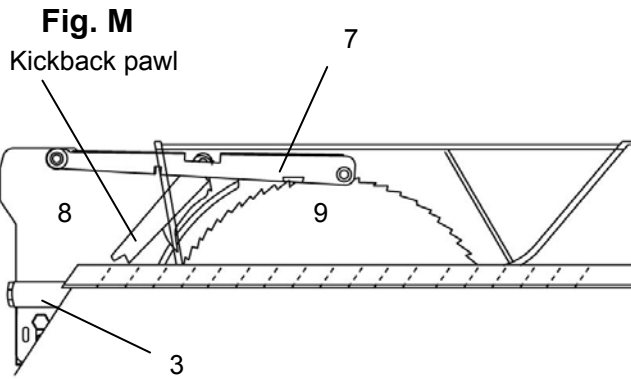

**MITER GAUGE ADJUSTMENT (FIG. N)**

1. To check miter gauge squareness, loosen lock handle (1) to allow miter body (3) to rotate freely. Position the miter head so the pointer (2) points to 90° on the scale. Tighten lock handle to hold miter head in position. Use a square to verify the 90° angle between the miter body and the slide bar.
2. If adjustment is needed, loosen the pointer locking screw and adjust pointer to 90° on the protractor scale then tighten the locking screw.
3. To change angles on miter gauge, loosen clamp knob and rotate miter body to desired angle as indicated by the pointer (2). Secure in position by tightening the lock handle.

**FIG. N**

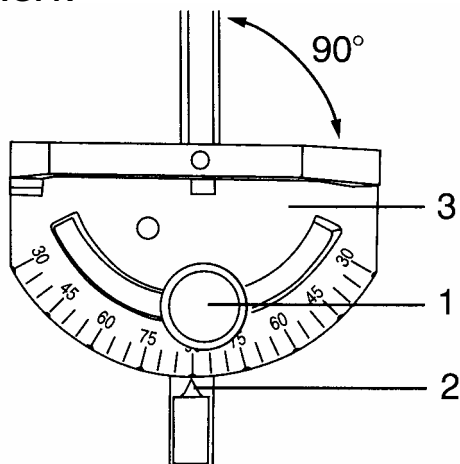

**RIP FENCE ADJUSTMENT (FIG. O)**

1. The fence (1) is moved by lifting up on the locking handle (2) and sliding the fence to the desired location. Pushing down on the handle locks the fence in position.
2. Position the fence on the table and along one edge of the miter gauge grooves.
3. Lock the fence handle. The fence should be parallel with the miter gauge groove.
4. If adjustment is needed to make the fence parallel to the groove, do the following:

- Loosen the two screws (3) and lift up on the handle (2).
- Hold the fence bracket (4) firmly against the front of the saw table. Move the far end of the fence until it is parallel with the miter gauge groove.
- Tighten both screws and push the handle to lock.

5. If fence is loose when the handle is in the locked (downward) position, do the following:
  - Move the handle (2) upward and turn the adjusting screw (5) clockwise until the rear clamp is snug. Do not turn the adjusting screw more than 1/4 turn at a time.


Over-tightening the adjusting screw will cause the fence to come out of alignment.

**⚠ WARNING**

Failure to properly align fence can cause “kickback” and serious injury.

NOTE: The rip fence and blade are aligned parallel to the miter gauge groove of the table.

**Fig. O**

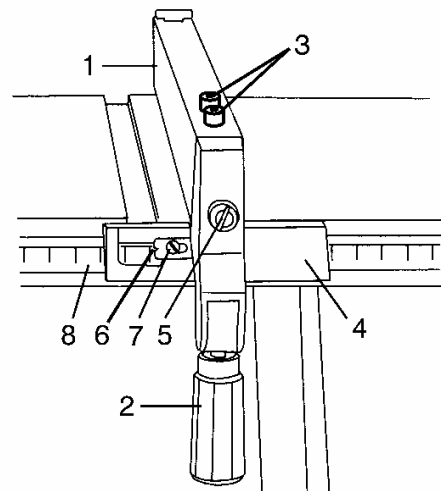

**RIP FENCE INDICATOR ADJUSTMENT (FIG. O)**

1. The rip fence indicator (6) points to the measurement scale (8). The scale shows the distance between the fence and the blade.
2. Measure the actual distance with a rule. If there is a difference between the measurement and the indicator, adjust the indicator (6).
3. Loosen the screw (7) and slide the indicator to the correct measurement on the scale. Tighten the screw and re-measure with the rule.

## BLADE TILTING MECHANISM

The saw blade can be tilted two different ways.

### RAPID BLADE TILTING (FIG. P)

1. Loosen blade bevel lock knob (2).
2. Slide the entire handwheel assembly (1) to desired location.
3. Tighten locking knob (2). Ensure locking knob is fully tightened before attempting a cut.

### MICRO-ADJUSTMENT BLADE TILTING (FIG. P)


1. Loosen blade bevel lock knob (2).
2. Push handwheel (1) IN to engage the handwheel gears with the segment gear on the table saw base.
3. While holding handwheel IN, turn the handwheel to tilt the blade to the desired angle.
4. Tighten lock knob to secure bevel angle.

**NOTE:** Changing the blade angle can be done independently of changing blade height.

## ▲ WARNING

**BLADE BEVEL LOCK KNOB (1) MUST BE FIRMLY TIGHTENED AND LOCKED DURING ALL CUTTING OPERATIONS.**

Fig. P

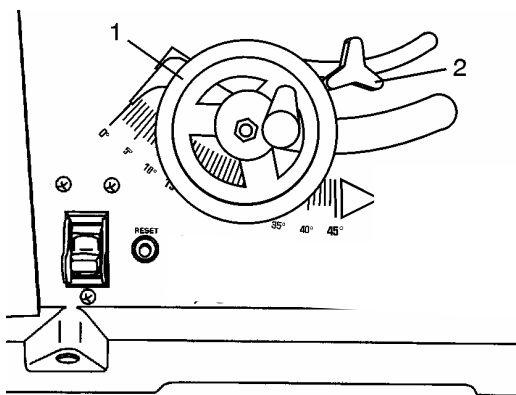

### BLADE HEIGHT ADJUSTMENT (FIG. P)

To raise the saw blade, turn handwheel (1) COUNTER CLOCKWISE. To lower the blade, turn the handwheel CLOCKWISE..

It is not necessary to loosen blade tilting locking knob (2) when raising or lowering the saw blade.

## BLADE PARALLEL TO THE MITER GAUGE GROOVE (FIG. Q, R)

This adjustment was made at the factory, but it should be rechecked and adjusted if necessary.


## ▲ WARNING

To prevent personal injury:

- Always disconnect plug from the power source when making any adjustments.
- This adjustment must be correct or kickback could result in a serious injury and accurate cuts can not be made.

1. Remove the safety switch key and unplug the saw.
2. Remove the blade guard for this procedure but reinstall and realign after adjustment.
3. Raise the blade to the highest position and set at the 0° angle (90° straight up).
4. Select and mark, with a felt tip maker, a blade tooth having a "right set" and rotate the blade so the marked tooth is 1/2" above the table.
5. Place the combination square base (1) into the right side miter gauge groove (2).
6. Adjust the rule so it touches the front marked tooth and lock ruler so it holds its position in the square assembly.
7. Rotate the blade bringing the marked tooth to the rear and about 1/2 inch above the blade.
8. Carefully slide the combination square to the rear until the ruler touches the marked tooth.
9. If the ruler touches the marked tooth at the front and rear position, no adjustment is needed at this time. If not or the base of the rule is no longer parallel with the edge of the miter gauge groove, perform adjustment procedure described in next section.

Fig. Q

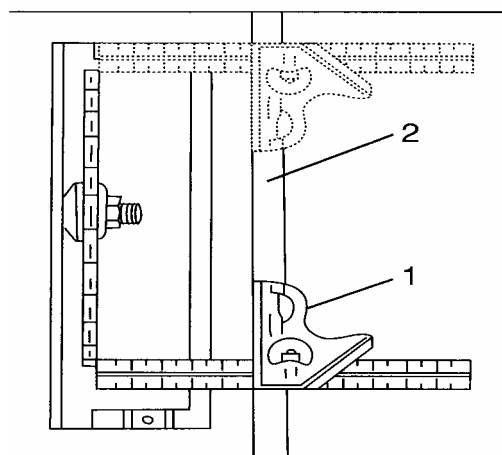


## Additional blade adjustments (Fig. R)

### TOOLS REQUIRED

- 10mm open end or 10mm combination wrench
- 4mm hex key
- Framing square
- Medium size flat blade screw driver

### ADJUSTMENT PROCEDURE

1. Turn saw switch OFF and remove plug from the power source.
2. Remove blade guard and splitter assembly, miter gauge and rip fence.
3. Using the 10mm hex wrench, slightly loosen the two middle blade alignment rod strap bolts (1) and two rear blade alignment rod strap bolts (2) (see Fig. R).

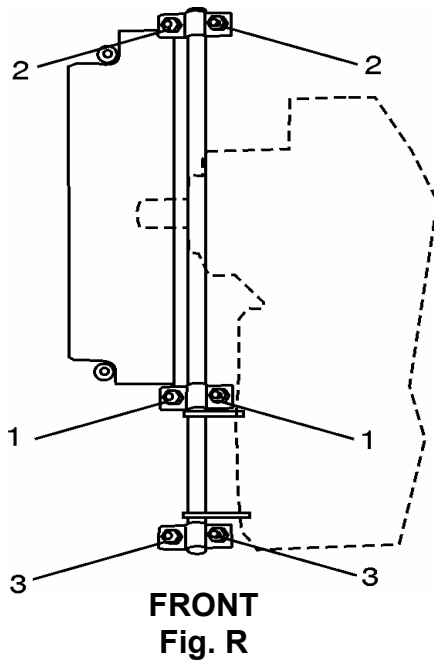


4. While standing at the rear of the saw, use a medium size flat blade screwdriver and gently pry the rear of the blade alignment rod to the LEFT or RIGHT. Using the framing square, simultaneously measure the distance at the front and rear of the blade to an edge of a miter slot. When the distances are within  $1/64$  or closer, tighten both rear blade alignment rod strap bolts (2) while holding the rod firmly in place.  
NOTE: The blade alignment rod will only move slightly.
5. If alignment is not achieved by rear adjustment, loosen the two front blade alignment rod strap bolts (3).

6. While standing at the front of the saw, use a medium size flat blade screw driver and gently pry the front of the blade alignment rod to the RIGHT or LEFT. Simultaneously measure the distance at the front and rear of the blade to an edge of a miter slot. When the distances are within  $1/64$  or closer, tighten both front blade alignment rod strap bolts (3) while holding the rod firmly in place.  
NOTE: The blade alignment rod will only move slightly to the right.
7. Tighten both middle blade alignment rod strap bolts (1). NOTE: Re-check to make sure all six bolts are properly tightened and that the distance from the front and rear of the blade to the miter gauge groove are within  $1/64^{\text{th}}$  of an inch from one another.
8. Re-install blade guard and splitter assembly and adjust the alignment with the blade as outlined earlier in the owner's manual.

### 0° BEVEL STOP (FIG. S)

1. Raise the blade to maximum height by rotating the handwheel counter clockwise.
2. Loosen bevel angle lock knob.
3. Tilt the blade to 0° bevel.
4. Using a square (1), verify blade is 90° to the table top.
5. If blade is not 90° to the table, adjust the screw (2) in or out accordingly.
6. Loosen bevel lock knob and recheck squareness as described in stop 5 & 6 until blade is 90° to table.
7. Once blade is at 90° to the table top, lock bevel angle locking knob.
8. Carefully tighten adjusting screw (2) until it touches the bevel stop. DO NOT OVER TIGHTEN.
9. Recheck to ensure blade is still aligned at 90°.


**Fig. S**

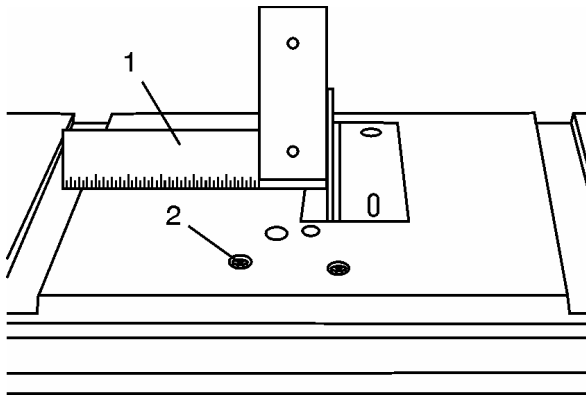

### 45° BEVEL STOP (FIG. U)

1. Raise the blade to maximum height by rotating the handwheel counter clockwise.
  2. Loosen bevel angle lock knob.
  3. Tilt the blade to 45° bevel.
  4. Using a square (1), verify blade is 45° to the table top.
  5. If blade is not 45° to the table, adjust the screw (2) in or out accordingly.
  6. Loosen bevel lock knob and recheck squareness as described in stop 5 & 6 until blade is 45° to table.
  7. Once blade is at 45° to the table top, lock bevel angle locking knob.
  8. Carefully tighten adjusting screw (2) until it touches the bevel stop. DO NOT OVER TIGHTEN.
- Recheck to ensure blade is still aligned at 45°.


**Fig. U**

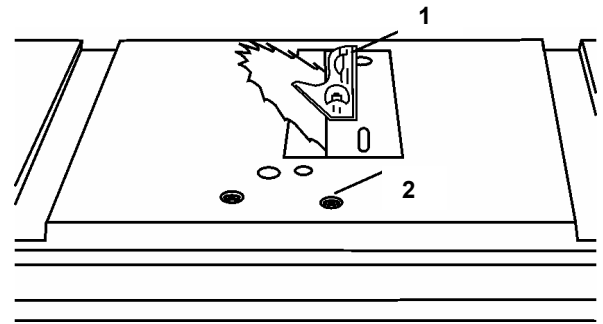

### BEVEL POINTER ADJUSTMENT (FIG. T)

1. Set bevel angle in vertical position.
2. If the pointer (1) does not read 0°, loosen pointer screw (2) and move the pointer so it reads correctly.
3. Retighten the pointer screw.

**Fig. T**

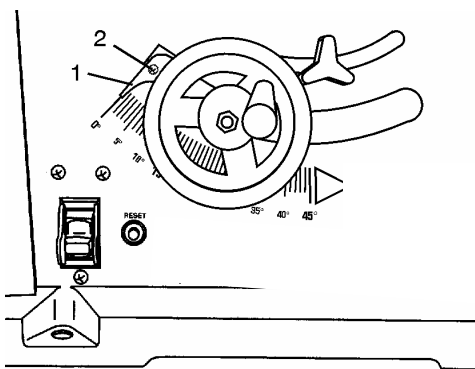



# OPERATION

## BASIC SAW OPERATIONS

### ON/OFF SWITCH (FIG. V)

The switch (2) is located on the front panel of the saw base. To turn the saw ON move the switch to the up position. To turn the saw OFF move the switch to the down position.

### LOCKING SWITCH IN "OFF" POSITION (FIG. V)


When the saw is not in use, the switch should be locked in the OFF position. To lock the switch in the OFF position, simply pull out the safety key (1) from the center of the switch. The saw will not start with the key removed. However, if the key is removed while the switch is in the ON position, it can be turned off ONCE. The saw will not restart until the key has been reinserted into the switch.

### OVERLOAD PROTECTION (FIG. V)

This saw is equipped with a resettable overload relay button. If the motor shuts off or fails to start due to overloading or low voltage, turn the switch to OFF position and let the motor cool down. After the motor has cooled down, push the reset button (3) to reset the overload device. The saw should now start when the switch is returned to the ON position.

To avoid injury, the ON/OFF switch should be in the OFF position and the plug removed from the power source while the motor cool down takes place. This will prevent accidental starting when the reset button is pushed. Overheating may be caused by misaligned parts, a dull blade, or an undersized extension cord. Inspect the saw for proper setup before using it again.

Fig. V

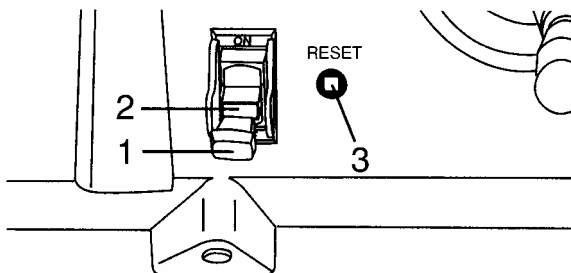

## CUTTING OPERATIONS

There are two basic types of cuts: ripping and crosscutting. Ripping is cutting along the length and with the grain of the workpiece. Crosscutting is cutting either across the width or across the grain of the workpiece. Neither ripping nor crosscutting may be done safely freehand. Ripping requires the use of the rip fence, and crosscutting requires the miter gauge. Never use a rip fence and miter gauge at the same time.

### ⚠ WARNING

Before using the saw each and every time, check the following:

1. Blade is tight on the arbor.
2. Bevel angle lock knob is tight.
3. If ripping, fence lock handle is tight and fence is parallel to the blade.
4. Blade guard is in place and working properly.
5. Safety glasses are being worn.

The failure to adhere to these common safety rules, and those printed in the front of this manual, can greatly increase the likelihood of injury.

## RIPPING (Fig W, X)

### ⚠ WARNING


- Do not allow familiarity or frequent use of your table saw to cause careless mistakes. Remember that even a careless fraction of a second is enough to cause a severe injury.
- Keep both hands away from the blade and path of the blade.
- The workpiece must have a straight edge against the fence and must not be warped, twisted, or bowed.
- DANGER – Never attempt to pull the workpiece backwards during a cutting operation. This will cause kickback and serious injury to the user can occur.

1. Remove the miter gauge. Secure the rip fence to the table at the desired rip measurement.
2. Raise the blade so it is about 1/8" higher than the top of the workpiece.
3. Place the workpiece flat on the table and against the fence. Keep the workpiece about 1" away from the blade.
4. Turn the saw ON and wait for the blade to come up to speed.
5. Slowly feed the workpiece into the blade by pushing forward only on the workpiece section (1) that will pass between the blade and the fence. (Fig. W)

## **⚠ WARNING**


**AVOID KICKBACK** by pushing forward that section of the workpiece that will pass between the blade and the fence. Use a push stick at all times.

**Fig. W**

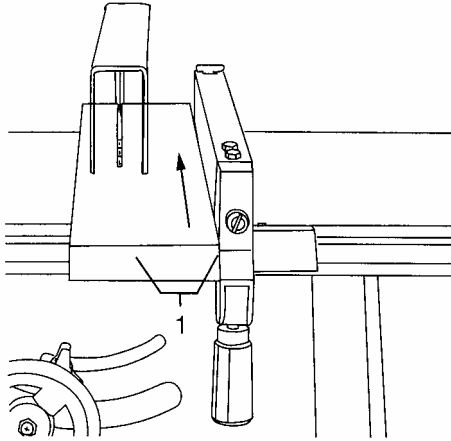

6. Keep your thumbs off the blade top. When your hand reaches the front edge of the table (2), finish the cut with a push stick (3) (Fig. X). You can make a push stick using the pattern on page 23.
7. The push stick (3) should always be used for any ripping operation.
8. Continue pushing the workpiece with the push stick (3) until it passes the blade guard and clears the rear of the table.
9. **DANGER** - Never attempt to pull the workpiece backwards during a cutting operation. This will cause kickback and serious injury to the user can occur. When the blade completely stops raise the anti-kickback pawls on each side of the splitter and slide the workpiece out.

**Fig. X**

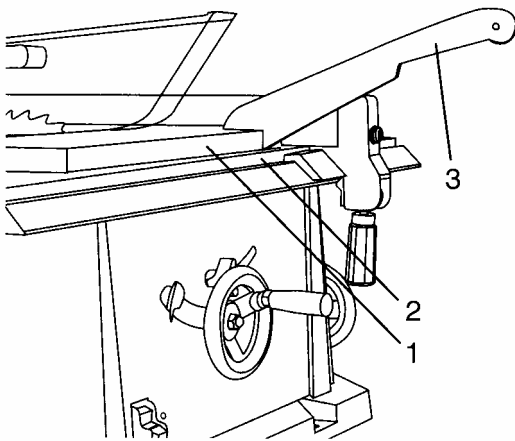

## **BEVEL RIPPING**

This cut is the same as ripped except the blade bevel angle is set to an angle other than "0".

## **⚠ WARNING**

Cut only with the workpiece and the fence on the right side of the blade.

## **⚠ DANGER**

Never attempt to pull the workpiece backwards during a cutting operation. This will cause kickback and serious injury to the user can occur.

## **RIPPING SMALL PIECES**

### **⚠ WARNING**

Avoid injury from the blade contact. Never make through-saw cuts narrower than 3/4" wide.

1. It is unsafe to rip small pieces. Instead, rip a larger piece to obtain the size of the desired piece.
2. When a small width is to be ripped, your hand cannot be safely put between the blade and the rip fence, therefore, use one or more push sticks to pass the workpiece completely through and past the blade.

## **CROSSCUTTING 90° MITER ANGLE (FIG. Y)**

### **⚠ WARNING**

To prevent serious injury:


- Do not allow familiarity or frequent use of your table saw to cause careless mistakes. Remember that even a careless fraction of a second is enough to cause a severe injury.
- Keep both hands away from the blade and the path of the blade.
- **DANGER** - Never attempt to pull the workpiece backwards during a cutting operation. This will cause kickback and serious injury to the user can occur.

1. Remove the rip fence lower all table extension fences flush to the table and place the miter gauge a miter gauge groove on the table.
2. Adjust the blade height so it is 1/8" higher than the top of the workpiece.
3. Hold the workpiece firmly against the miter gauge with the blade path in line with the desired cut location. Move the workpiece to one inch distance from the blade.
4. Start the saw and wait for the blade (1) to come up to full speed. Never stand directly inline of the saw blade path, always stand to the side of the blade that you are cutting on.
5. Keep the workpiece (2) against the face of the miter gauge (3) and flat against the table. Then slowly push the workpiece through the blade.
6. Do not try to pull the workpiece back with the blade turning. Turn the switch OFF, and carefully slide the workpiece out when the blade is completely stopped.

### **⚠ WARNING**

Always position the larger surface of the workpiece on the table when crosscutting and/or bevel crosscutting to avoid instability.

**Fig. Y**

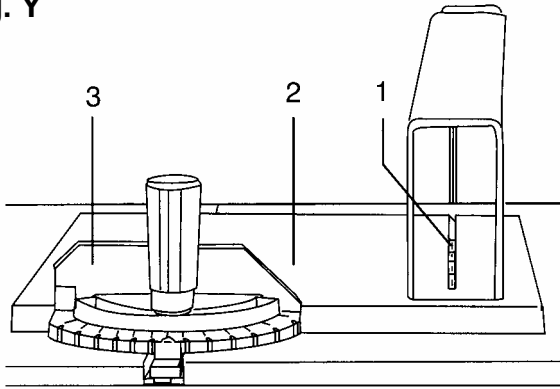


**BEVEL CROSSCUTTING (FIG. AA)**  
**0°~45° BLADE BEVEL & 90° MITER ANGLE**

This cutting operation is the same as crosscutting except the blade is at bevel angle other than 0°.

1. Adjust the blade (1) to the desired angle, and tighten the blade bevel lock knob.
2. Tighten miter lock handle at 90°.

**Fig. AA**

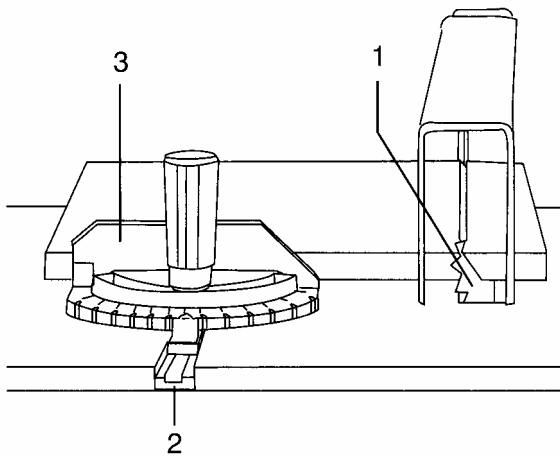


**COMPOUND MITER CROSSCUTTING (FIG. BB)**  
**0°~45° BLADE BEVEL & 0°~45° MITER ANGLE**

This sawing operation is combining a miter angle with a bevel angle.

**WARNING** - Always work to the left side of the blade during this type of cut. The miter gauge (3) must be in the left side miter gauge groove. It cannot be used in the right side groove unless the miter angle is very sharp, as it will interfere with the blade guard.

1. Set the miter gauge (3) to the desired angle. Use only the left side groove (2).
2. Set the blade (1) bevel to the desired angle.
3. Carefully push the miter gauge to begin the cutting operation.

**Fig. BB**

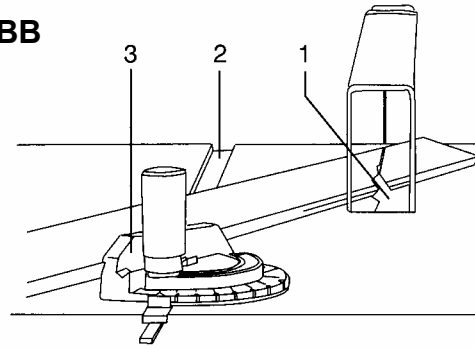


**MITERING (FIG. CC) 0°~45° MITER ANGLE**

This sawing operation is the same as crosscutting except the miter gauge is locked at an angle other than 90°.

**WARNING** - Always work to the left side of the blade during this type of cut. The miter gauge (3) must be in the left side miter gauge groove. It cannot be used in the right side groove unless the miter angle is very sharp, as it will interfere with the blade guard.

1. Hold the workpiece (2) firmly against the miter gauge (3).
2. Feed the workpiece slowly into the blade (1) to prevent the workpiece from moving.

**Fig. CC**

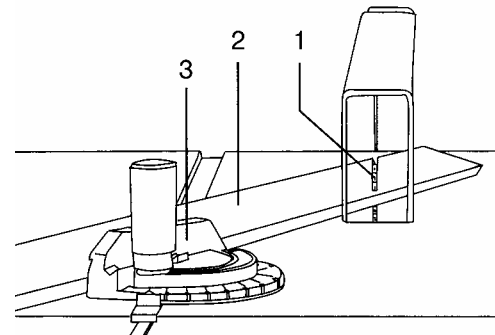


**USING WOOD FACING ON THE RIP FENCE (FIG. DD)**

When performing some special cutting operations, You can add a wood facing (1) to either side of the rip fence (2).

1. Use a smooth straight 3/4" thick wood board (1) that is as long as the rip fence.
2. Attach the wood facing to the fence with wood screws (3) through the hole in the fence. A wood fence should be used when ripping material such as thin paneling to prevent the material from catching between the bottom of the fence and the table.

**Fig. DD**

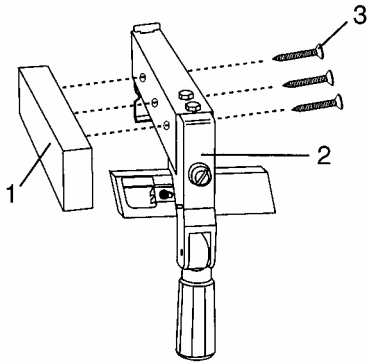

**USING WOOD FACING ON THE RIP FENCE (FIG. DD)**

When performing some special cutting operations, add a wood facing (1) to either side of the rip fence (2).

1. Use a smooth  $\frac{3}{4}$ " thick board (1) that is as long as the rip fence.
2. Attach the wood facing to the rip fence with wood screws (3) through the holes in the fence.
3. A wood facing should be used when ripping material such as thin paneling to prevent the material from catching between the bottom of the fence and the table.


**DADO CUTS (FIG. EE)**

1. The dado table insert is included with this saw. Remove saw blade and blade guard for dado cuts only. Reinstall and realign blade guard for all through sawing operations. Install a dado not exceeding 6" diameter and  $\frac{1}{2}$ " width and the dado table insert.
2. Instruction for operating the dado is packed with the separately purchased dado set.
3. The arbor (1) on this saw restricts the maximum width of the cut to  $\frac{1}{2}$ ".
4. It is not necessary to install the outside flange (2) before threading on the arbor nut (3) for maximum  $\frac{1}{2}$ " dado cuts. Make sure that the arbor nut (3) is tight, and that at least one thread of the arbor sticks out past the nut.
5. Use only the 6" diameter dado set and keep the width  $\frac{1}{2}$ " or less. It will be necessary to remove the blade guard and splitter when using a dado blade only. Always use caution when operating a dado blade.
6. Use only the correct number of round outside blades and inside chippers as shown in the dado set's instruction manual. Blades/chippers must not exceed  $\frac{1}{2}$ " total in width.
7. Check saw to ensure that the dado will not strike the housing, insert, or motor when in operation.


**▲ WARNING**

For your own safety, always replace the blade, blade guard assembly, and blade insert when you are finished with the dado operation. You must also realign the blade guard assembly.

**Fig. EE**

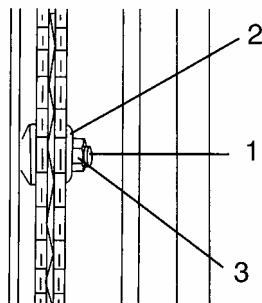

**Fig. DD**

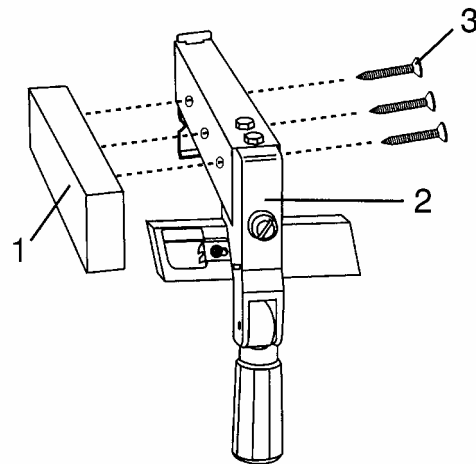

**BLADE SELECTION**

There are many different types of blades with differing tooth configurations, tooth counts and materials. Some of the more common types are shown below.

**▲ WARNING**

**ABRASIVE AND METAL CUTTING BLADES MUST NOT BE USED WITH THIS SAW**

This saw was not made to cut metals or masonry materials. Doing so may result in injury. It will also void the warranty.

**▲ WARNING**

**ALL BLADES MUST:**

1. Be rated at 5000 RPM or higher.
2. Have a  $\frac{5}{8}$ " arbor hole.
3. Be no larger in diameter than 10".

Smaller diameter blades may be used. While this will result in a reduced depth of cut, the output of the motor will be increased.

## MAINTAINING YOUR TABLE SAW

Fig. FF

### GENERAL MAINTENANCE

#### **⚠ WARNING**

For your own safety, turn the switch OFF and remove the switch key. Remove the plug from the power source outlet before maintaining or lubricating your saw.

1. Clean out all sawdust that has accumulated inside the saw cabinet and the motor.
2. Polish the saw table with an automotive wax to keep it clean and to make it easier to slide the workpiece.
3. Clean cutting blades with pitch and gum remover.
4. A worn, cut, or damaged power cord should be replaced immediately.

#### **⚠ WARNING**

All electrical or mechanical repairs should be attempted only by a trained repair technician. Contact the nearest Sears Service Center for service. Use only identical replacement parts. Any other parts may create a hazard.

5. Use liquid dish washing detergent and water to clean all plastic parts.


**NOTE:** Certain cleaning chemicals can damage plastic parts.

6. Avoid use of the following cleaning chemicals or solvents; ammonia and household detergents containing ammonia.

### BLADE RAISING AND TILTING MECHANISM

After each five full hours of operation, the blade raising mechanism and tilting mechanism should be checked for looseness, binding, or other abnormalities. With the saw disconnected from the power source, turn the saw upside down and alternately pull upward and downward on the motor unit. Observe any movement of the motor mounting mechanism. Looseness or play in the blade raising screw (1) (Fig. FF) should be adjusted as follows:

1. Using a 14mm wrench, loosen the check-nut (2).
2. Adjust nut (3) until it is finger-tight against the bracket (4), then back off the nut (3) 1/6 turn.
3. Tighten nut (2) with the wrench, while holding nut (3) in place. Maximum allowable play in and out of the screw rod (1) is 1/8".

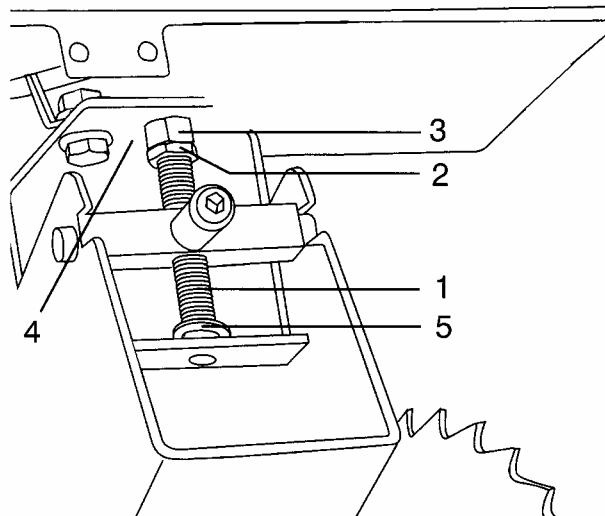

You can place a small amount of dry lubricant on bevel and angle adjustment rod also. This rod (1) must be kept clean and free of sawdust, gum, pitch, and other contaminants for smooth operation.

If excessive looseness is observed in any parts of the blade raising mechanism or tilting mechanism, take the complete unit to a Sears Service Center.

### LUBRICATION

All motor bearings are permanently lubricated at the factory and require no additional lubrication.

On all mechanical parts of your table saw where a pivot or threaded rod are present, lubricate using graphite or silicone. These dry lubricants will not hold sawdust as would oil or grease.

## TROUBLESHOOTING GUIDE

### ▲ WARNING


To avoid injury from an accidental start, turn the switch OFF and always remove the plug from the power source before making any adjustments.

- Consult your local Sears Service Center if for any reason the motor will not run.

SYMPTOM	POSSIBLE CAUSES	CORRECTIVE ACTION
Saw will not start	<ol style="list-style-type: none"> <li>1. Saw not plugged in</li> <li>2. Fuse blown or circuit breaker tripped</li> <li>3. Cord damaged</li> </ol>	<ol style="list-style-type: none"> <li>1. Plug in saw</li> <li>2. Replace fuse or reset circuit breaker</li> <li>3. Have cord replaced by a Sears Service Center</li> </ol>
Does not make accurate 45° and 90° rip cuts	<ol style="list-style-type: none"> <li>1. Positive stop not adjusted correctly</li> <li>2. Bevel angle pointer not set accurately</li> </ol>	<ol style="list-style-type: none"> <li>1. Check blade with square and adjust positive stop</li> <li>2. Check blade with square and adjust to zero</li> </ol>
Material pinched blade when ripping	<ol style="list-style-type: none"> <li>1. Rip fence not aligned with blade</li> <li>2. Warped wood, edge against fence is not straight</li> </ol>	<ol style="list-style-type: none"> <li>1. Check and align rip fence</li> <li>2. Select another piece of wood</li> </ol>
Material binds on splitter	<ol style="list-style-type: none"> <li>1. Splitter not aligned correctly with blade</li> </ol>	<ol style="list-style-type: none"> <li>1. Check and align splitter with blade</li> </ol>
Saw makes unsatisfactory cuts	<ol style="list-style-type: none"> <li>1. Dull blade</li> <li>2. Blade mounted backwards</li> <li>3. Gum or pitch on blade</li> <li>4. Incorrect blade for work being done</li> <li>5. Gum or pitch on blade causing erratic feed</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace blade</li> <li>2. Blade teeth must face forward</li> <li>3. Remove blade and clean with turpentine and coarse steel wool</li> <li>4. Change the blade</li> <li>5. Clean table with turpentine and steel wool</li> </ol>
Material kicked back from blade	<ol style="list-style-type: none"> <li>1. Rip fence out of adjustment</li> <li>2. Splitter not aligned with blade</li> <li>3. Feeding stock without rip fence</li> <li>4. Dull blade</li> <li>5. Operator is letting go of material before it is past saw blade</li> <li>6. Miter angle lock handle is not tight</li> </ol>	<ol style="list-style-type: none"> <li>1. Align rip fence with miter gauge slot</li> <li>2. Align splitter with blade</li> <li>3. Install and use rip fence</li> <li>4. Replace Blade</li> <li>5. Push material all the way past saw blade before releasing work</li> <li>6. Tighten handle</li> </ol>
Blade does not raise or tilt freely	<ol style="list-style-type: none"> <li>1. Sawdust and dirt in raising and tilting mechanisms</li> </ol>	<ol style="list-style-type: none"> <li>1. Brush or blow out loose dust and dirt</li> </ol>
Blade does not come up to speed	<ol style="list-style-type: none"> <li>1. Extension cord too light or too long</li> <li>2. Low house voltage</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace with adequate size cord</li> <li>2. Contact your electric company</li> </ol>
Machine vibrates excessively	<ol style="list-style-type: none"> <li>1. Saw not mounted securely to workbench</li> <li>2. Stand not level</li> <li>3. Damaged saw blade</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten all mounting hardware</li> <li>2. Adjust stand level to floor</li> <li>3. Replace blade</li> </ol>
Does not make accurate 45° and 90° cross cuts	<ol style="list-style-type: none"> <li>1. Miter gauge out of adjustment</li> </ol>	<ol style="list-style-type: none"> <li>1. Square miter gauge to 90°</li> </ol>

### PUSH STICK CONSTRUCTION

- This is a full-size drawing (actual size)
- Use good quality plywood or solid wood
- Use  $\frac{1}{2}$ " or  $\frac{3}{4}$ " material
- Push stick MUST be thinner than the width of material being cut

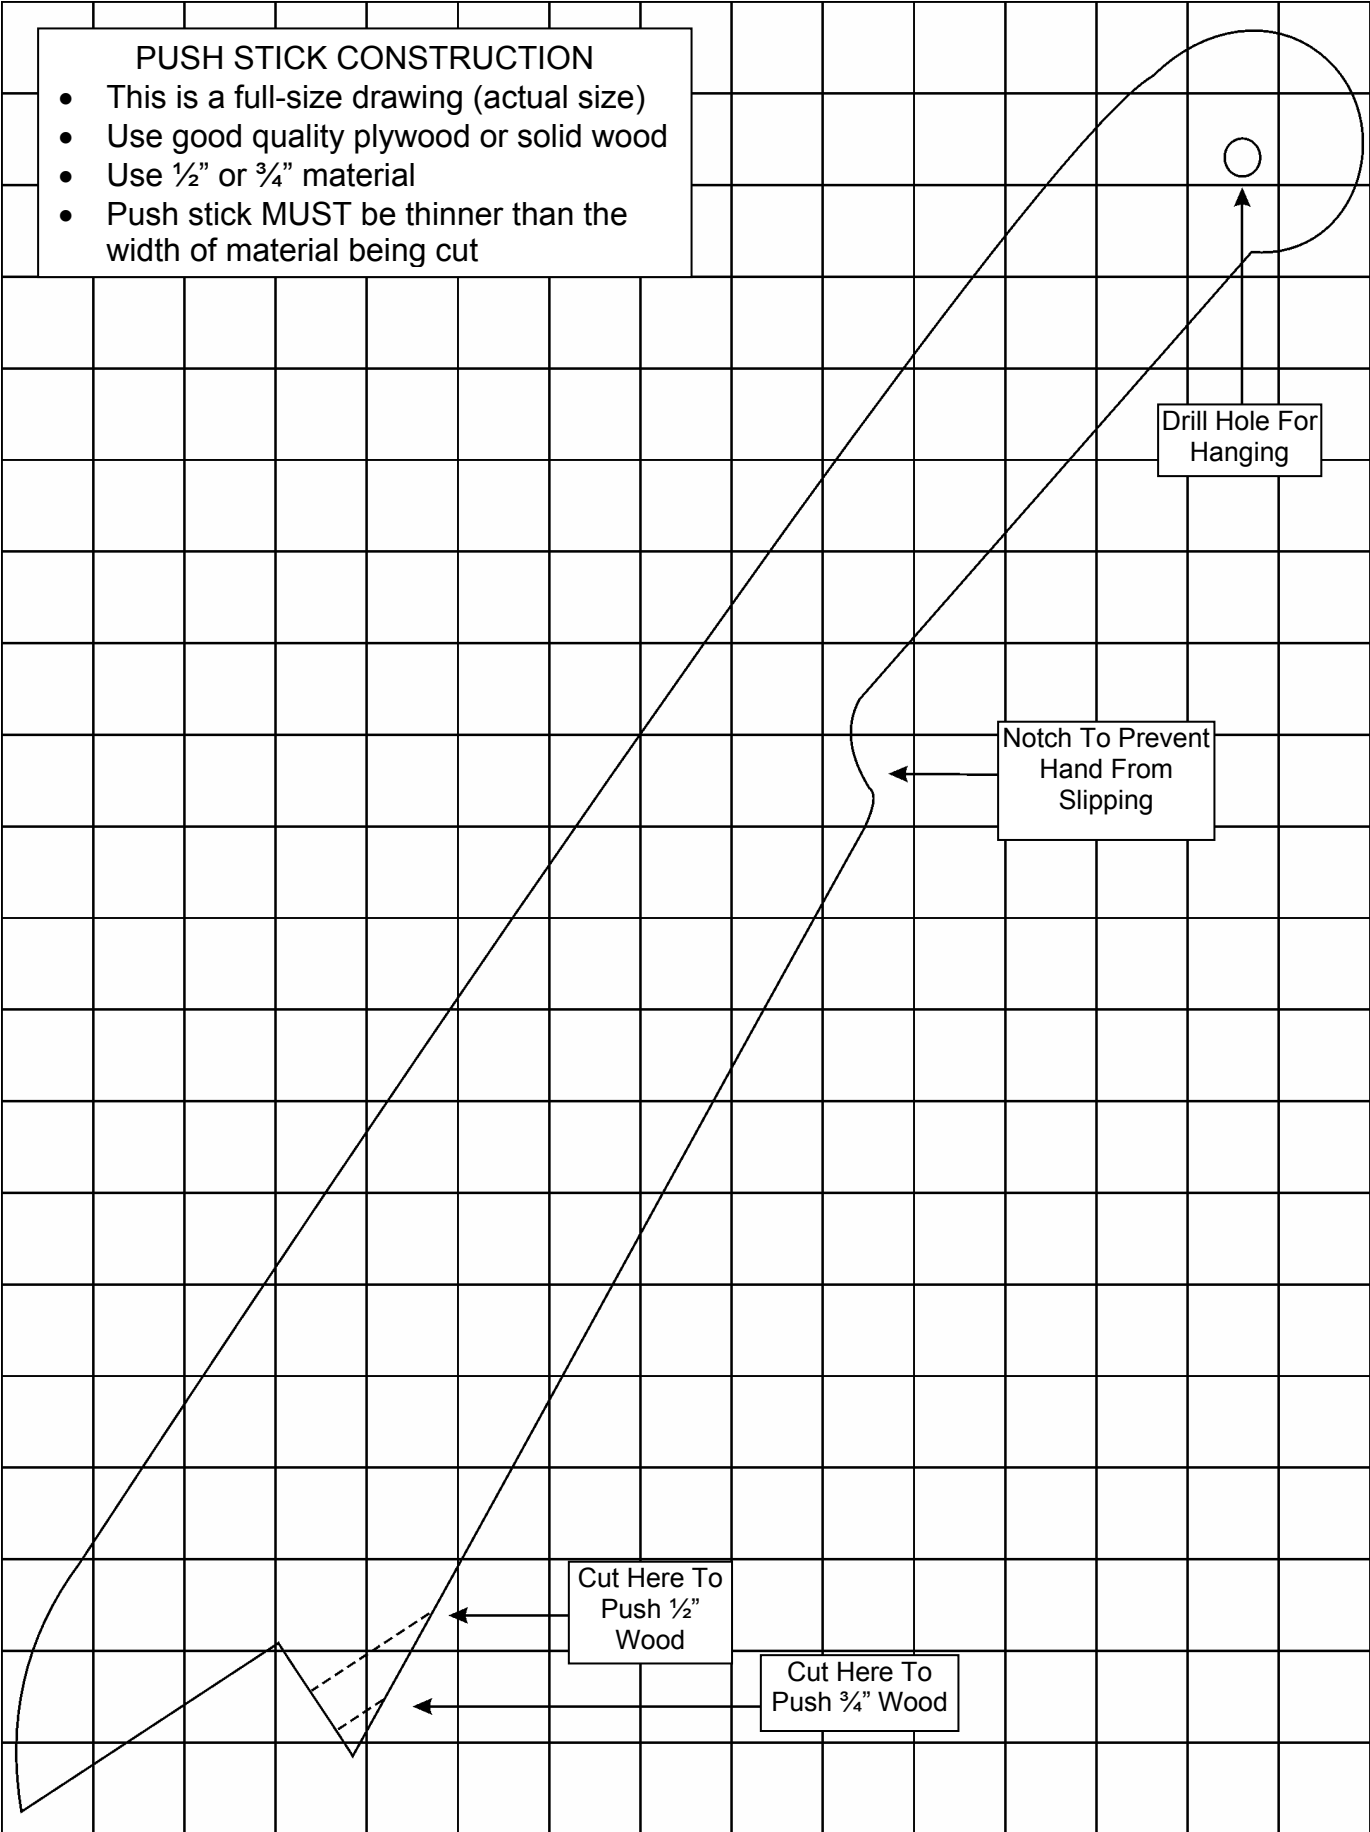

# PARTS LIST

## 10" TABLE SAW PARTS LIST

**MODEL: 137.232040**




**WARNING**

When servicing use only COMPANION replacement parts. Use of any other parts may create a HAZARD or cause product damage. Any attempt to repair or replace electrical parts on this Table Saw may create a HAZARD unless repair is done by a qualified service technician. Repair service is available at your nearest Sears Service Center.

I.D.	Description	Size	Qty	I.D.	Description	Size	Qty
09FN	CLAMP HANDLE	M8x1.25-40	1	0JAA	WASHER	φ8	1
09H0	HANDLE BAR		1	0JAE	EXTERNAL TOOTH LOCK WASHER	φ4	2
09JK	WRENCH HEX.		1	0JC9	SPRING PIN	3-18	1
0AVR	BODY SHELL		1	0JCR	SPRING PIN	8-90	1
0AW8	SEGMENT GEAR		1	0JE7	C-RING	A-9	1
0B1M	WHEEL		1	0JPD	HEX. HD. BOLT	M6x1.0-16	3
0B21	HEIGHT REGULATING BOLT		1	0JST	HEX. HD. BOLT	"3/8x16UNC-1"	3
0B23	SADDLE		1	0JXL	HEX. SOC. SET SCREW	M10x1.5-12	1
0B24	SPRING		1	0JYN	HEX. SOC. COUNTERSUNK HD. SCREW	M6x1.0-25	6
0B25	POINTER BRACKET		1	0K0Z	HEX. HD. SCREW AND WASHER	M8x1.25-16	4
0B29	NEEDLE POINTER		1	0K16	HEX. HD. SCREW AND WASHER	M8x1.25-16	1
0B2C	SWITCH BOX		1	0K25	HEX.SOCKET HD.CAP SCREWS	M5x0.8-20	1
0B2N	TABLE		1	0K3G	CR.RE. PAN HD. SCREW & WASHER	M5x0.8-12	1
0B36	SCALE		1	0K3R	CR.RE. PAN HD. SCREW & WASHER	M5x0.8-12	1
0B3H	INSERT		1	0K3R	CR.RE. PAN HD. SCREW & WASHER	M5X0.8-12	2
0B3R	WRENCH		1	0K5P	CR. RE. COUNT HD. SCREW	M6x1.0-50	4
0B3V	PLATE COVER		1	0K8C	CR. RE.COUNT HD. TAPPING SCREW	M4x18-10	8
0B3W	RETAINING CLIP		1	0K91	CR. RE. TRUSS HD. TAPPING SCREW	M4x16-12	4
0B84	WASHER		1	0KA4	CR.RE. PAN HD. TAPPING SCREW	M4x16-16	2
0B97	MOTOR BRACKET		1	0KEK	CR. RE. PAN HD. SCREW	M6x1.0-30	1
0B99	SPACER		1	0KEM	CR. RE. PAN HD. SCREW	M6x1.0-40	1
0B9C	PLUNGER HOUSING		1	0KF7	CR. RE. PAN HD. SCREW	M4x0.7-12	2
0B9G	ANGLE ROD		1	0KJ4	CAP HD. SQ.NECK BOLT	M6x1.0-35	1
0B9M	STRAP		6	0KJ5	CAP HD. SQ.NECK BOLT	M6X1.0-80	1
0B9S	BRACKET		1	0KM1	RIVET	φ5-11	3
0B9W	BRACKET		1	0KMR	HEX. NUT	M5x0.8 T=4	1
0B9Z	COMPRESSION SPRING		1	0KMS	HEX. NUT	M6x1.0 T=5	1
0BA1	COMPRESSION SPRING		1	0KMV	HEX. NUT	M10x1.5 T=8	1
0BA4	SPACER		1	0KMW	HEX. NUT	M10x1.5 T=4	1
0BAC	SET NUT		1	0KMY	HEX. NUT	M8x1.25 , T=6.5	1
0BAE	ARBOR COLLAR		1	0KMY	HEX. NUT	M8x1.25 , T=6.5	1
0BAH	BLADE		1	0KP2	HEX. NUT	3/8x16UNC T=8	3
0BBU	EXTENTION WING		1	0KQJ	CROWN NUT	M8x1.25 T=12.5	1
0BC3	SCALE		1	0KRQ	SERRATED TOOTHED HEXAGON FLANGE NUT	M6x1.0 T=6	6
0BPA	LOCK KNOB		1	0KRX	HEXAGON NUT AND FLAT WASHER	M6x1.0	1
0G1U	DUST SHIELD		4	0KRX	HEXAGON NUT AND FLAT WASHER	M6x1.0	4
0J3P	WRENCH HEX.	4-64	1	0KSW	STRAIN RELIEF	φ6.1	1
0J4F	FLAT WASHER	φ8X16-2.5	1	0KTA	STRAIN RELIEF		2
0J4H	FLAT WASHER	φ10x30-0.2	2	0L65	POWER CABLE ASS'Y		1
0J70	FLAT WASHER	1/4x3/4-7/64	1	0LSL	CIRCUIT BREAKER SWITCH		1
0J72	FLAT WASHER	1/4x5/8-1/16	1	0LVF	SWITCH KEY		1
0J76	FLAT WASHER	1/4x3/4-1/16	1	0LW5	ROCKER SWITCH		1
0J76	FLAT WASHER	1/4x3/4-1/16	4	0QEL	MOTOR		1
0J7F	FLAT WASHER	5/16x7/8-5/64	1	0QQ0	CORD CLAMP		1
0J7K	FLAT WASHER	3/8x29/32-5/64	1	0S45	ROCKER SWITCH ELEMENT		1
0J7N	FLAT WASHER	3/8x11/16-1/16	6	20WQ	HEX. HD. BOLT	M6x1.0-50	1
0J7V	FLAT WASHER	5/8x1 3/8-5/64	1	26GS	MITER GAUGE ASS'Y		1
0J8D	FLAT WASHER	3/8x3/4-5/64	2	27EX	RIP FENCE ASS'Y		1
0J8D	FLAT WASHER	3/8x3/4-5/64	1	27RK	BLADE GUARD ASS'Y		1
0J95	SPRING WASHER	φ6	1				
0J9H	SPRING WASHER	φ1/4"	6				
0J9K	SPRING WASHER	φ3/8	3				




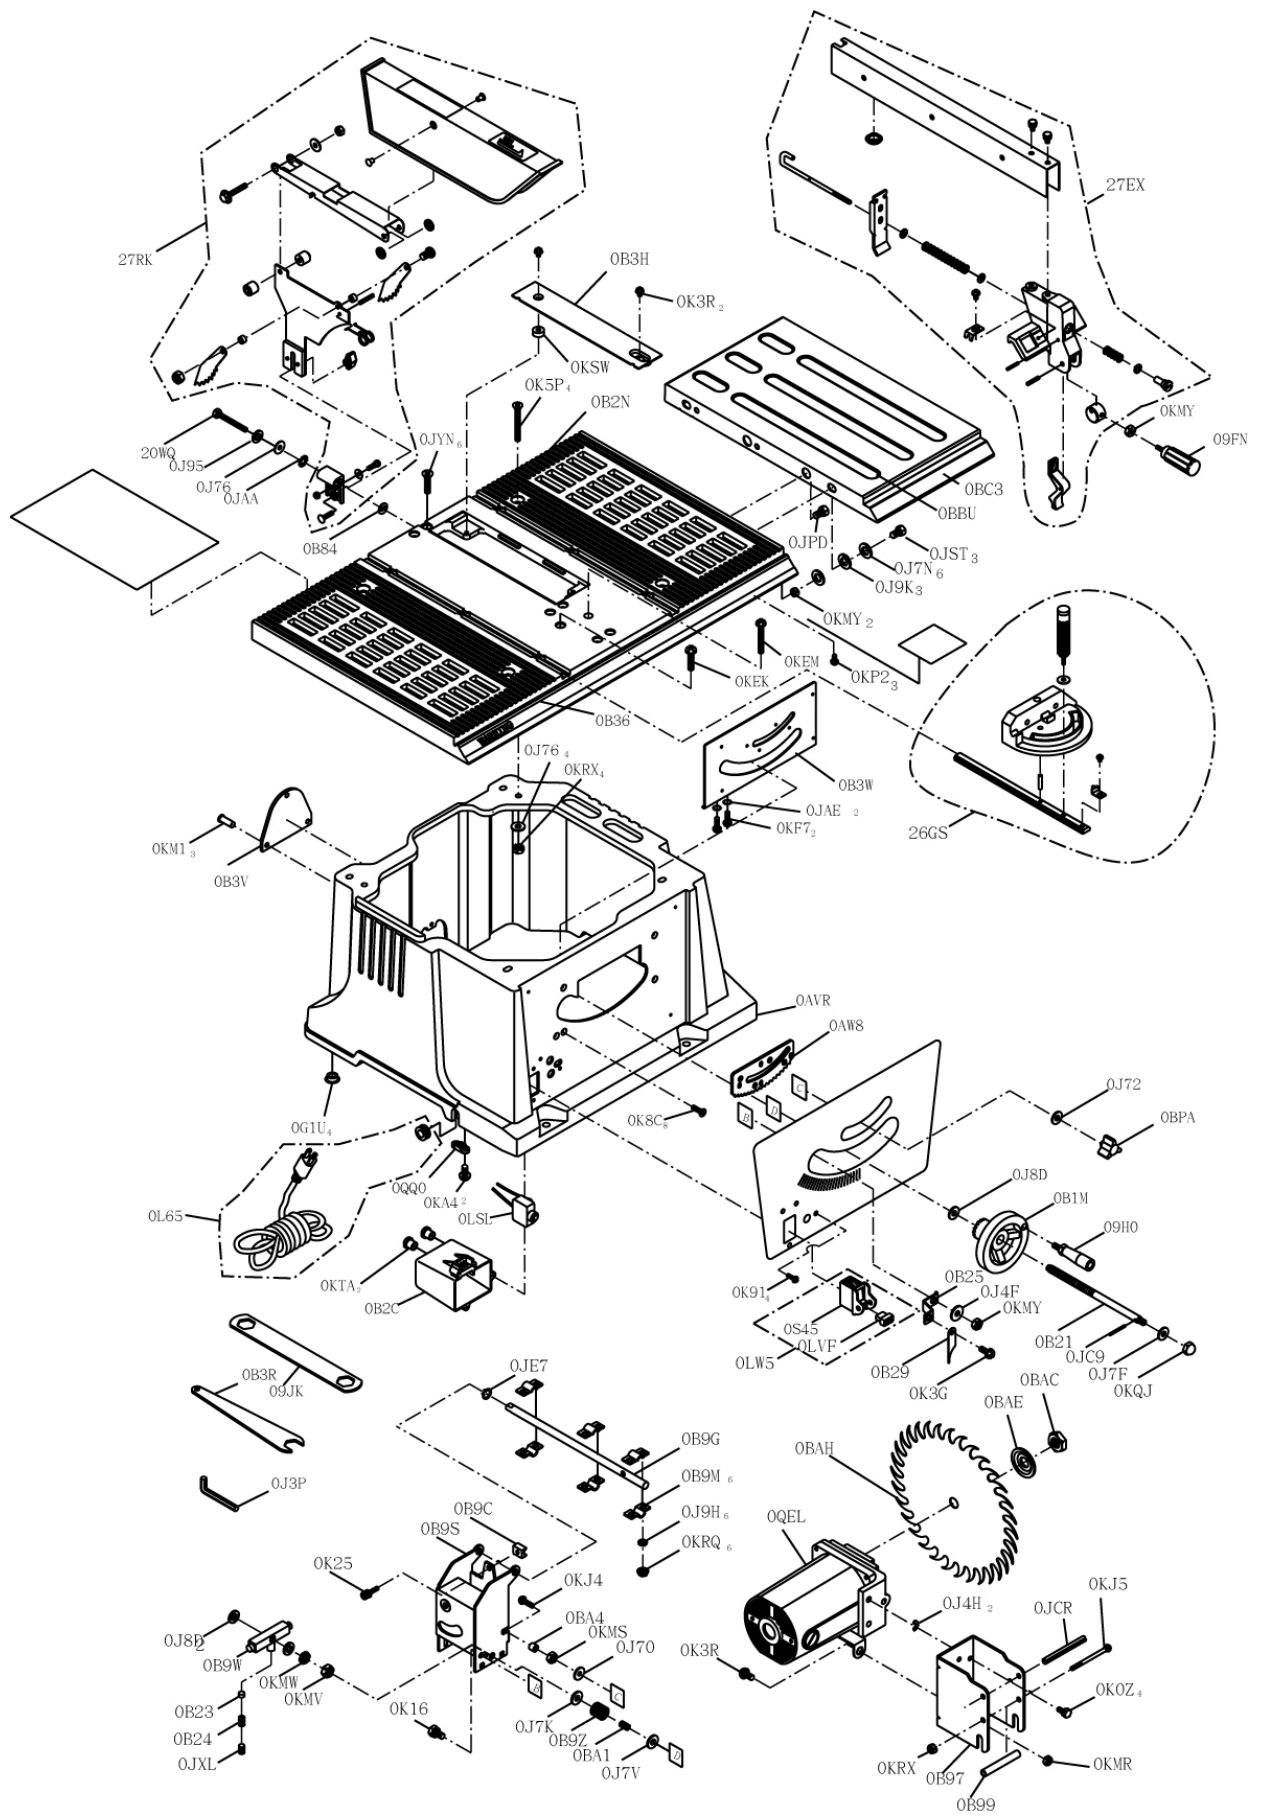

# 10" TABLE SAW PARTS LIST


MODEL: 137.232040

I.D.	Description	Size	Qty	I.D.	Description	Size	Qty
0HV5	BALL BEARING	6204LLU	1	0QED	SUPPORT PLATE		1
0JAL	EXT.TOOTH LOCK WASHER	φ 4	4	0QEH	FIELD ASS'Y		1
0JEE	C-RING	A-17	1	0QEJ	ARMATURE ASS'Y		1
0JFY	PARALLEL KEY	4x4-12	1	0QEK	MOTOR NAMEPLATE		1
0JX3	HEX. SOC. SET SCREW	M5*0.8-8	2	0QM2	BRUSH HOLDER ASS'Y	Φ 27*26.5	2
0K3A	CR.RE. PAN HD. SCREW & WASHER	M5*0.8-30	4	0QQT	BRUSH ASS'Y		2
0K5V	CR.-RE. COUND.HD.SCREW	M4*0.7-8	4	0QR0	BRUSH COVER		2
0KTH	STRAIN RELIEF		1	0R1Q	MOTOR HOUSING		1
0LMH	LOCKING CABLE TIE		2	0R1S	BEARING BUSHING		1
0QDZ	BEARING RETAINER		1	0R20	BAFFLE		1
0QE0	ARBOR SHAFT		1	0R24	HELIX GEAR		1
0QEA	BRACKET		1	10ZQ	NEEDLE BEARING	HK1010	1
0QEB	COLLAR		1	110A	CR. RE.PAN HD.TAPPING SCREW & WASHER	M5*12-55	2

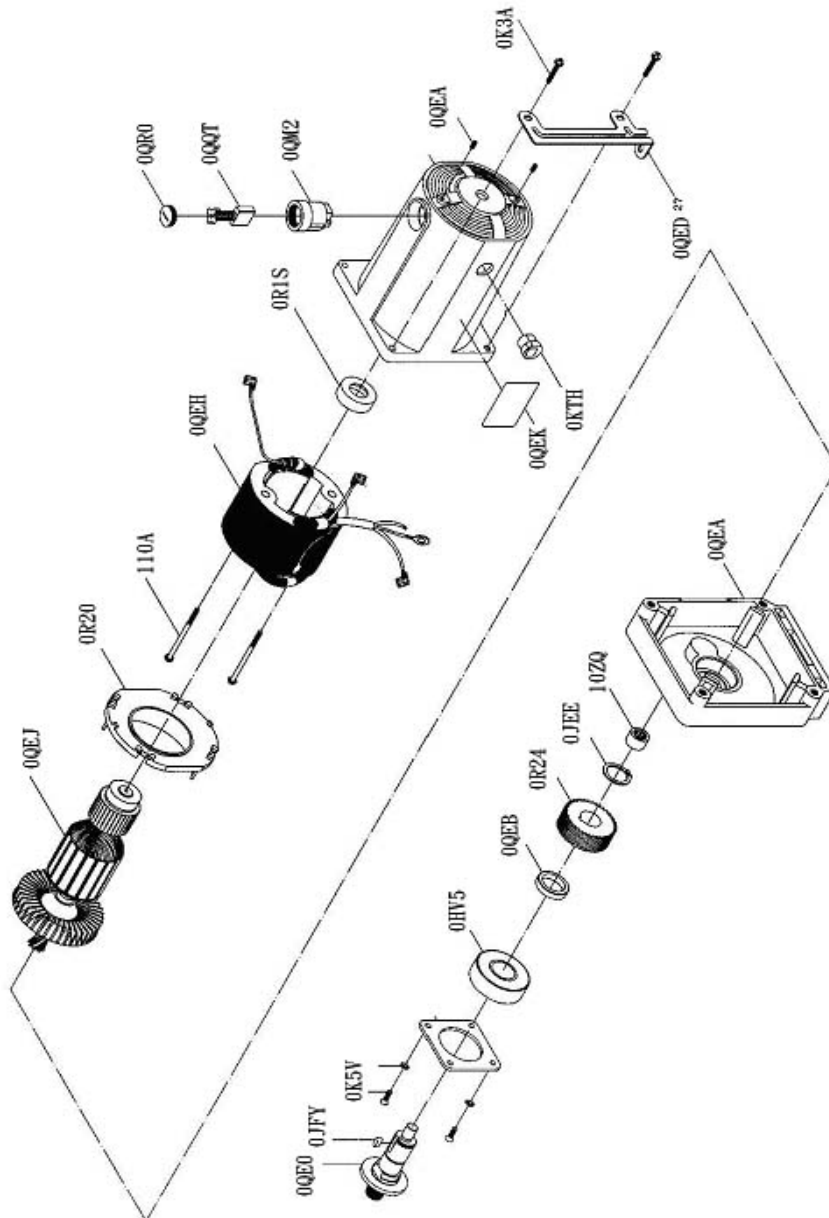

STAND

I.D. No.	Description	Size	Qty
2003	LONG BOTTOM SUPPORT BRACKET	L=616mm	2
2004	SHORT BOTTOM SUPPORT BRACKET	L=528.4mm	2
2005	LONG UPPER SUPPORT	L=462mm	2
2006	SHORT UPPER SUPPORT	L=428mm,	2
2007	BRACKET	L=595.6mm	4
093B	FOOT PAD		4
0J4F	FLAT WASHER	φ8X16-2.5	4
0JPP	HEX. HD. BOLT	M8x1.25-30	4
OKJ7	CAP HD. SQ. NECK BOLT	M8x1.25-16	16
OKRR	SERRATED TOOTHED HEXAGON FLANGE NUT	M8x1.25 , T=7.5	20

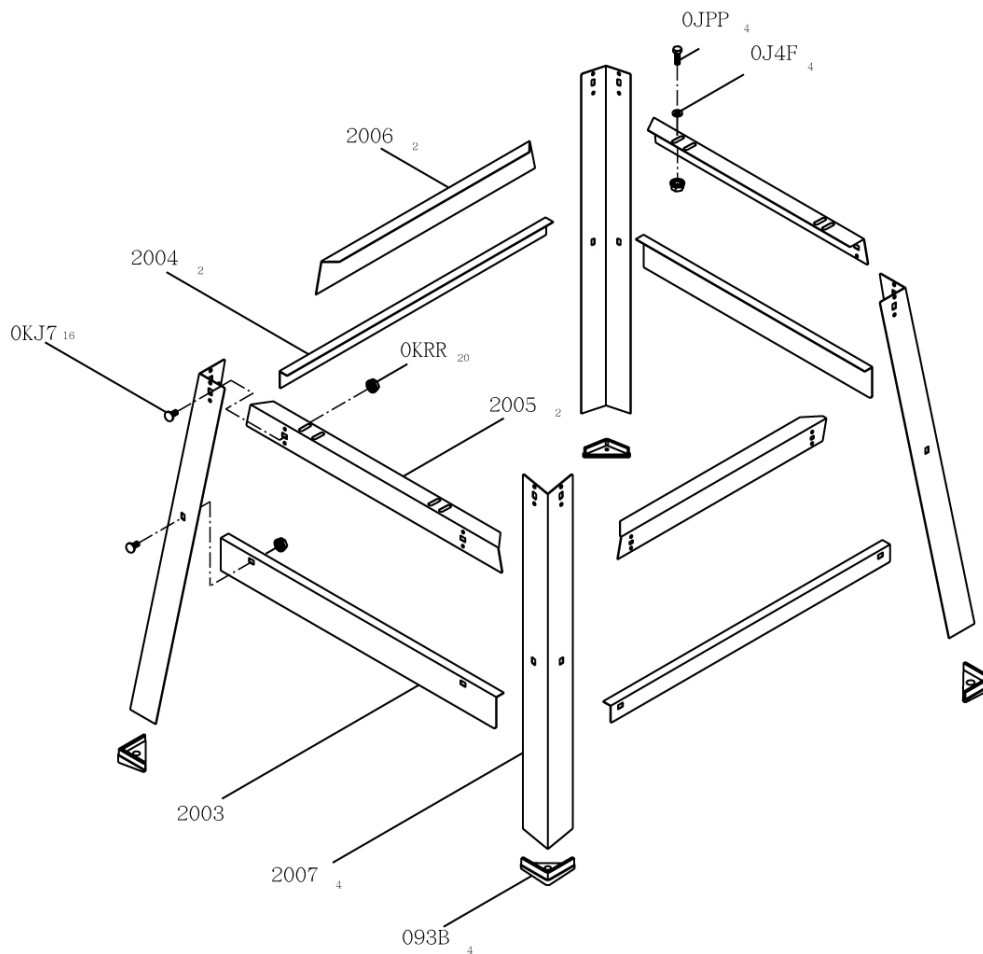

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>