

Digital controller for medium-low temperature refrigeration applications
XR75CH

-Manual for the SW rel. 2.6-

| | |
|---|---|
| 1. GENERAL WARNING | 1 |
| 2. GENERAL DESCRIPTION | 1 |
| 3. CONTROLLING LOADS | 1 |
| 4. FRONT PANEL COMMANDS | 1 |
| 5. MAX & MIN TEMPERATURE MEMORIZATION | 2 |
| 6. MAIN FUNCTIONS | 2 |
| 7. PARAMETERS | 2 |
| 8. DIGITAL INPUTS | 4 |
| 9. RS485 SERIAL LINE – FOR MONITORING SYSTEMS | 4 |
| 10. X-REP OUTPUT – OPTIONAL | 4 |
| 11. INSTALLATION AND MOUNTING | 4 |
| 12. ELECTRICAL CONNECTIONS | 4 |
| 13. HOW TO: USE THE HOT KEY | 4 |
| 14. ALARM SIGNALS | 4 |
| 15. TECHNICAL DATA | 5 |
| 16. CONNECTIONS | 5 |
| 17. DEFAULT SETTING VALUES | 5 |

1. GENERAL WARNING

1.1 PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.
- Dixell Srl reserves the right to change the composition of its products, even without notice, ensuring the same and unchanged functionality.

1.2 SAFETY PRECAUTIONS

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- Fit the probe where it is not accessible by the End User. The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.r.l." (see address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

2. GENERAL DESCRIPTION


Model XR75CH, format 32x74mm, is microprocessor based controller, suitable for applications on medium or low temperature ventilated refrigerating units. It has four relay outputs to control compressor, fan, defrost, which can be either electrical or reverse cycle (hot gas) and light (configurable). It could be provided with a Real Time Clock which allows programming of up to six daily defrost cycles, divided into holidays and workdays. A "Day and Night" function with two different set points is fitted for energy saving. It is also provided with up to four NTC (EU or US type) probe inputs. The first probe is used for temperature control. The second probe is used to control the defrost termination temperature at the evaporator. One of the two digital inputs can operate as third temperature probe. The fourth probe is used to control the condenser temperature (for condenser alarm management) or to display a temperature.

The RS485 serial output allows connecting the unit to a network line (ModBUS-RTU compatible) such as any dixell monitoring units of X-WEB family. The HOT-KEY receptacle allows programming the controller by using the HOTKEY programming device. The instrument is fully configurable through special parameters that can be easily programmed through the frontal keyboard.

3. CONTROLLING LOADS

3.1 COMPRESSOR

The regulation is performed according to the temperature measured by the thermostat probe with a positive differential (HY) over the set point: if the temperature increases and reaches set point plus differential, the compressor will start. It will turn off as soon as the temperature reaches the set point value again.

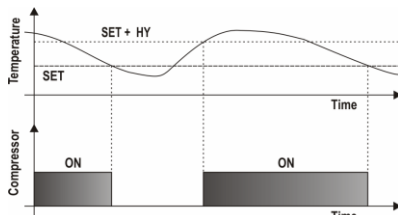

In case of fault in the thermostat probe the start and stop of the compressor are timed through parameters **Con** and **CoF**.

3.2 DEFROST

Two defrost modes are available through the "tdF" parameter: defrost through electrical heater (**tdF = EL**) and hot gas defrost (**tdF = in**). The defrost interval depends on the presence of the RTC (optional). The internal RTC is controlled by means of the **EdF** parameter:

- **EdF=in**, the defrost is made every **idF** time – standard way for controller without RTC.

- **EdF=rtC**, the defrost is real time controlled, depending on the hours set in the parameters **Ld1...Ld6** (for workdays) and in **Sd1...Sd6** (for holidays).

Other parameters are used to control defrosting cycles: the maximum length (**MdF**) and defrosting modes: timed or controlled by the evaporator's probe (**P2P**). At the end of defrost dripping time is started, its length is set in the **Fdt** parameter. With **Fdt=0** the dripping time is disabled.

3.3 CONTROL OF EVAPORATOR FANS

The fan control mode is selected by means of the **FnC** parameter:
FnC=C_n, fans will switch ON and OFF with the compressor and **not run** during defrost.
FnC=o_n, fans will run even if the compressor is off, and not run during defrost.

After defrost, there is a timed fan delay allowing for drip time, set by means of the "**Fnd**" parameter.
FnC=C_Y, fans will switch ON and OFF with the compressor and **run** during defrost.
FnC=o_Y, fans will run continuously also during defrost.

An additional parameter **FSt** provides the setting of temperature, detected by the evaporator probe, above which the fans are always OFF. This is used to make sure circulation of air only if his temperature is lower than set in **FSt**.

3.3.1 Forced activation of fans

This function managed by the **FcT** parameter is designed to avoid short cycles of fans, that could happen when the controller is switched on or after a defrost, when the room air warms the evaporator. **How it works**: if the temperature difference between evaporator probe and room probe is higher than the **FcT** parameter value, fans will be switched on. With **FcT=0** the function is disabled.

3.3.2 Cyclical activation of the fans with compressor off.

When **FnC=C-n** or **C-Y** (fans working in parallel with the compressor), by means of the **Fon** and **FoF** parameters the fans can carry out on and off cycles even if the compressor is switched off. When the compressor is stopped the fans go on working for the **Fon** time. With **Fon=0** the fans remain always off, also when the compressor is off.

3.4 LIGHT RELAY CONFIGURATION (PAR. OA2; TERM. 1-2)

The functioning of the auxiliary relay (terminals. 1-4) can be set by the **oA2** parameter, according to the kind of application. In the following paragraph the possible setting:

3.4.1 Light relay

With **oA2=LiG** the relay 1-2 operates as a light.

3.4.2 Auxiliary relay

a. Relay activation by digital input 2 (oA2=AUS, i2F=AUS)

With **oA2=AUS** and **i2F=AUS** the relay 1-2 is switched on and off by digital.

b. Auxiliary thermostat

Anti condensing heater with the possibility of switching it on and off also by using the frontal keyboard.

Parameters involved:

- **ACH** Kind of regulation for the auxiliary relay: **Ht** = heating; **CL** = cooling.
- **SAA** Set point for auxiliary relay.
- **SHy** Differential for auxiliary relay.
- **ArP** Probe for auxiliary relay.
- **Sdd** Auxiliary output off during defrost.

The differential threshold value is set by the **SHY** parameter.

NOTE: Set **oA2=AUS** and **ArP=nP** (no probe for auxiliary output).

In this case the relay 1-2 can be activated only by digital input with **i1F=AUS** or **i2F=AUS**.

3.4.3 On/off relay (oA2 = onF)

When **oA2=onF**, the relay is activated when the controller is turned on and de-activated when the controller is turned off.

3.4.4 Neutral zone regulation

With **oA2 = db** the relay 1-2 can control a heater element to perform a neutral zone action.

- **oA2** cut in = **[SET-HY]**
- **oA2** cut out = **SET**

3.4.5 Alarm relay

With **oA2 = ALr** the relay 1-2 operates as alarm relay. It is activated every time an alarm happens. Its status depends on the **tbA** parameter: if **tbA=Y**, the relay is silenced by pressing any key. If **tbA=n**, the alarm relay remains on until the alarm condition recovers.




3.4.6 Night blind management during energy saving cycles

With **oA2=HES**, the relay 1-2 operates to manage the night blind: the relay is energised when the energy saving cycle is activated by digital input, frontal button or RTC (optional).




4. FRONT PANEL COMMANDS



| | |
|------------|--|
| SET | To display target set point; in programming mode it selects a parameter or confirm an operation. |
| | (DEF) To start a manual defrost. |
| | (UP) To see the max stored temperature; in programming mode it browses the parameter codes or increases the displayed value. |





   


| | |
|--|--|
|  | (DOWN) To see the min stored temperature; in programming mode it browses the parameter codes or decreases the displayed value. |
|  | To switch the instrument on and off (when oNF=oFF). |
|  | To switch on and off the light (when oA2=LiG). |

KEY COMBINATIONS:

| | |
|--|--|
|  | To lock & unlock the keyboard. |
|  | To enter in programming mode. |
|  | To return to the room temperature display. |

4.1 USE OF LEDS

Each LED function is described in the following table.

| LED | MODE | FUNCTION |
|--|----------|---------------------------------------|
|  | ON | Compressor enabled |
| | Flashing | Anti-short cycle delay enabled |
|  | ON | Defrost enabled |
| | Flashing | Drip time in progress |
|  | ON | Fans enabled |
| | Flashing | Fans delay after defrost in progress. |
|  | ON | An alarm is occurring |
|  | ON | Continuous cycle is running |
| ECO | ON | Energy saving enabled |
|  | ON | Light on |
| AUX | ON | Auxiliary relay on |
|  | ON | Measurement unit |
| | Flashing | Programming phase |

5. MAX & MIN TEMPERATURE MEMORIZATION

5.1 HOW TO: SEE THE MIN TEMPERATURE

1. Press and release the **DOWN** button.
2. The "Lo" message will be displayed followed by the minimum temperature recorded.
3. By pressing the **DOWN** button again or by waiting 5s the normal display will be restored.

5.2 HOW TO: SEE THE MAX TEMPERATURE

1. Press and release the **UP** button.
2. The "Hi" message will be displayed followed by the maximum temperature recorded.
3. By pressing the **UP** button again or by waiting 5s the normal display will be restored.

5.3 HOW TO: RESET THE MAX AND MIN TEMPERATURE RECORDED

1. Keep **SET** button pressed for more than 3s while the max or min temperature is displayed. ("rSt" message will be displayed)
2. After confirming the operation, the "rSt" message will start blinking and then the normal temperature will be displayed.

6. MAIN FUNCTIONS


6.1 HOW TO: SET THE CURRENT TIME AND DAY (ONLY WITH RTC)

When the instrument is switched on, it's necessary to program the time and day.

1. Enter the Pr1 programming menu, by pushing **SET + DOWN** buttons for 3s.
2. The **rTc** parameter is displayed. Push **SET** button to enter the real time clock menu.
3. The **HUr** (hours) parameter is displayed.
4. Push the **SET** and set current hour by **UP** and **DOWN** buttons, then push **SET** to confirm the new inserted value.
5. Repeat these operations for **Min** (minutes) and **dAy** (day) parameters.

To exit: Push **SET+UP** buttons or wait for 15 sec without pushing any keys.


6.2 HOW TO: SEE THE SET POINT

-  1. Push and immediately release the **SET** key: the display will show the Set point value;
2. Push and immediately release the **SET** key or wait for 5 seconds to display the probe value again.

6.3 HOW TO: CHANGE THE SET POINT

1. Push the **SET** button for more than 2 seconds to change the Set point value.
2. The value of the set point will be displayed and the °C or °F LED will start blinking.
3. To change the actual value, push the **UP** or **DOWN** buttons within 10s.
4. To memorise the new set point value, push the **SET** button again or wait 10s.

6.4 HOW TO: START A MANUAL DEFROST

-  Push the **DEF** button for more than 2 seconds and a manual defrost will start.

6.5 HOW TO: CHANGE A PARAMETER VALUE

To change a parameter value, operate as follows:

1. Enter the Programming mode by pressing the **SET + DOWN** buttons for 3s (the °C or °F LED will start blinking).
2. Select the required parameter. Press the **SET** button to display its actual value.
3. Use **UP** or **DOWN** buttons to change its value.
4. Press **SET** button to store the new value and move to the following parameter.

To exit: Press **SET + UP** buttons or wait for 15s without pressing any key.

NOTE: the set value is stored even when the procedure is exited by waiting for the time-out to expire.

6.6 THE HIDDEN MENU

The hidden menu includes all the parameters of the instrument.

6.6.1 HOW TO: ENTER THE HIDDEN MENU

1. Enter the Programming mode by pressing the **SET + DOWN** buttons for 3s (the °C or °F LED will start blinking).
 2. Released the buttons and then push again the **SET + DOWN** buttons for more than 7s. The Pr2 label will be displayed immediately followed from the **HY** parameter.
- Now it is possible to browse the hidden menu.**
3. Select the required parameter.
 4. Press the **SET** button to display its value.
 5. Use **UP** or **DOWN** to change its value.
 6. Press **SET** to store the new value and move to the following parameter.

To exit: Press **SET + DOWN** or wait 15s without pressing a key.

NOTE1: if no parameter is present in Pr1 menu, after 3s the "noP" message will be displayed. Keep the buttons pushed till the Pr2 message will be displayed.

NOTE2: the set value is stored even when the procedure is exited by waiting for the time-out to expire

6.6.2 HOW TO: MOVE A PARAMETER FROM THE HIDDEN MENU TO THE FIRST LEVEL AND VICEVERSA.

Each parameter present in the hidden menu (Pr2) can be moved into the user level (Pr1) by pressing **SET + DOWN** buttons. If a parameter is part of the user level, when showed in the hidden menu the decimal point will be lit.

6.7 HOW TO: LOCK THE KEYBOARD

1. Keep both **UP** and **DOWN** buttons pressed for more than 3s.
2. The "PoF" message will be displayed and the keyboard will be locked. At this point it will be possible only to see the set point or the MAX o Min temperature stored
3. If a button is pressed more than 3s the "PoF" message will be displayed.


6.8 HOW TO: UNLOCK THE KEYBOARD

Keep both **UP** and **DOWN** pressed for more than 3s till the "Pon" message will be displayed.

6.9 THE CONTINUOUS CYCLE

When defrost is not in progress, it can be activated by keeping the **UP** button pressed for about 3 seconds. The compressor operates to maintain the **CCS** set point for the time set through the **CCT** parameter. The cycle can be terminated before the end of the set time using the same activation button (**UP** for 3 seconds).

6.10 THE ON/OFF FUNCTION

-  When "oNF=oFF", pushing the **ON/OFF** key, the instrument is switched off. The "OFF" message is displayed. In this configuration, the regulation is disabled.
- To switch the instrument on, push again the **ON/OFF** key.

WARNING: Loads connected to the normally closed contacts of the relays are always supplied and under voltage, even if the instrument is in stand by mode.

7. PARAMETERS

| RTC | |
|-----|--|
| rTc | Real time clock menu (only for controller with RTC): to set the time, date and defrost start time. |

REGULATION

| | |
|-----|---|
| HY | Differential: (0.1 to 25.5°C; 1 to 45°F) intervention differential for set point. Compressor Cut IN is Set Point + differential (HY). Compressor Cut OUT is when the temperature reaches the set point. |
| LS | Minimum set point: (-50°C to SET; -58°F to SET) sets the minimum value for the set point. |
| US | Maximum set point: (SET to 110°C; SET to 230°F) set the maximum value for set point. |
| ot | Thermostat probe calibration: (-12.0 to 12.0°C; -21 to 21°F) allows to adjust possible offset of the thermostat probe. |
| P2P | Evaporator probe presence: (n; Y) n = not present, the defrost stops by time; Y = present, the defrost stops by temperature. |
| oE | Evaporator probe calibration: (-12.0 to 12.0°C; -21 to 21°F) allows to adjust possible offset of the evaporator probe. |
| P3P | Third probe presence (P3): (n; Y) n = not present, the terminals 18-20 operate as digital input; Y = present, the terminals 18-20 operate as third probe. |
| o3 | Third probe calibration (P3): (-12.0 to 12.0°C; -21 to 21°F) allows to adjust possible offset of the third probe. |
| P4P | Fourth probe presence: (n; Y) n = Not present; Y = present. |
| o4 | Fourth probe calibration: (-12.0 to 12.0°C; -21 to 21°F) allows to adjust possible offset of the fourth probe. |
| odS | Outputs activation delay at start up: (0 to 255min) this function is enabled at the initial start up of the instrument and inhibits any output activation for the period of time set in the parameter. |

| | |
|-----|---|
| AC | Anti-short cycle delay: (0 to 50min) minimum interval between the compressor stop and the following restart. |
| rtr | Percentage of the second and first probe for regulation: (0 to 100; 100=P1, 0=P2) it allows to set the regulation according to the percentage of the first and second probe, as for the following formula $(rtr(P1-P2)/100 + P2)$. |
| CCt | Compressor ON time during continuous cycle: (0.0 to 24h00min, res. 10min) allows to set the length of the continuous cycle. Compressor stays on without interruption during CCt time. This is useful, for instance, when the room is filled with new products. |
| CCS | Set point for continuous cycle: (-50 to 110°C; -58 to 230°F) it sets the set point used during the continuous cycle. |
| Con | Compressor ON time with faulty probe: (0 to 255min) time during which the compressor is active in case of faulty thermostat probe. With Con=0 compressor is always OFF. |
| CoF | Compressor OFF time with faulty probe: (0 to 255min) time during which the compressor is OFF in case of faulty thermostat probe. With CoF=0 compressor is always active. |

DISPLAY

| | |
|-----|---|
| CF | Temperature measurement unit: (°C; °F) °C = Celsius; °F = Fahrenheit. WARNING: When the measurement unit is changed the SET point and the values of the parameters HY, LS, US, ot, ALU and ALL have to be checked and modified (if necessary). |
| rES | Resolution (for °C): (in=1°C; dE=0.1°C) allows decimal point display. |
| Lod | Instrument display: (P1; P2, P3, P4, SET, dtr) it selects which probe is displayed by the instrument. P1 = Thermostat probe; P2 = Evaporator probe; P3 = Third probe (only for model with this option enabled); P4 = Fourth probe, SET = set point; dtr = percentage of visualization. |
| rEd | X-REP display (optional): (P1; P2, P3, P4, SET, dtr) it selects which probe is displayed by X-REP. P1 = Thermostat probe; P2 = Evaporator probe; P3 = Third probe (only for model with this option enabled); P4 = Fourth probe, SET = set point; dtr = percentage of visualization. |
| dLY | Display delay: (0 to 20min00s; res. 10s) when the temperature increases, the display is updated of 1°C or 1°F after this time. |
| dtr | Percentage of the second and first probe for visualization when Lod=dtr: (0 to 99; 100=P1, 0=P2) if Lod=dtr it allows to set the visualization according to the percentage of the first and second probe, as for the following formula $(dtr(P1-P2)/100 + P2)$. |

DEFROST

| | |
|-----|---|
| EdF | Defrost mode (only for controller with RTC): (rtC; in) rtC = Real Time Clock mode. Defrost time follows Ld1 to Ld6 parameters on workdays and Sd1 to Sd6 on holidays. in = interval mode. The defrost starts when the time idF is expired. |
| tdF | Defrost type: (EL; in) EL = electrical heater; in = hot gas. |
| dFP | Probe selection for defrost termination: (nP; P1; P2; P3; P4) nP = no probe; P1 = thermostat probe; P2 = evaporator probe; P3 = configurable probe; P4 = Probe on Hot Key plug. |
| dtE | Defrost termination temperature: (-50 to 50°C; -58 to 122°F) (enabled only when EdF=Pb) sets the temperature measured by the evaporator probe, which causes the end of defrost. |
| idF | Interval between defrost cycles: (0 to 120hours) determines the interval of time between two defrost cycles. |
| MdF | (Maximum) length for defrost: (0 to 255min) when P2P=n, (not evaporator probe: timed defrost) it sets the defrost duration. When P2P=Y (defrost end based on temperature) it sets the maximum length for defrost. |
| dSd | Start defrost delay: (0 to 99min) this is useful when different defrost start times are necessary to avoid overloading the plant. |
| dFd | Temperature displayed during defrost: (rt; it; SET; dEF) rt = real temperature; it = temperature at defrost start; SET = set point; dEF = "dEF" label. |
| dAd | MAX display delay after defrost: (0 to 255min) sets the maximum time between the end of defrost and the restarting of the real room temperature display. |
| Fdt | Drip time: (0 to 120min) time interval between reaching defrost termination temperature and the restoring of the control's normal operation. This time allows the evaporator to eliminate water drops that might have formed due to defrost. |
| dPo | First defrost after start-up: (n; Y) n = after the idF time, Y = immediately. |
| dAF | Defrost delay after continuous cycle: (0.0 to 24h00min, res. 10min) time interval between the end of the fast freezing cycle and the following defrost related to it. |

FANS

| | |
|-----|--|
| FnC | Fans operating mode: (C-n; o-n; C-Y; o-Y) C-n = runs with the compressor, OFF during defrost; o-n = continuous mode, OFF during defrost; C-Y = runs with the compressor, ON during defrost; o-Y = continuous mode, ON during defrost. |
| Fnd | Fans delay after defrost: (0 to 255min) interval between end of defrost and evaporator fans start. |
| Fct | Temperature differential to avoid fan short cycles: (0 to 59°C; 0 to 90°F) (N.B.: if Fct=0 function disabled) if the difference of temperature between the evaporator and the room probes is higher than Fct value, the fans will be switched on. |
| FSt | Fans stop temperature: (-50 to 50°C; -58 to 122°F) setting of temperature, detected by evaporator probe, above which fans are always OFF. |
| Fon | Fan ON time: (0 to 15min) with Fnc=C_n or C_Y, (fan activated in parallel with compressor) it sets the evaporator fan ON cycling time when the compressor is off. With Fon=0 and FoF≠0 the fan are always off, with Fon=0 and FoF=0 the fan are always off. |
| FoF | Fan OFF time: (0 to 15min) With Fnc=C_n or C_Y, (fan activated in parallel with compressor) it sets the evaporator fan off cycling time when the compressor is off. With Fon=0 and FoF≠0 the fan are always off, with Fon=0 and FoF=0 the fan are always off. |
| FAP | Probe selection for fan management: (nP; P1; P2; P3; P4) nP = no probe; P1 = thermostat probe; P2 = evaporator probe; P3 = configurable probe; P4 = Probe on Hot Key plug. |

AUXILIARY THERMOSTAT CONFIGURATION (terms. 1-2) – oA2 = AUS

| | |
|-----|---|
| ACH | Kind of regulation for auxiliary relay: (Ht; CL) Ht = heating; CL = cooling. |
|-----|---|

| | |
|-----|--|
| SAA | Set Point for auxiliary relay: (-50 to 110.0°C; -58 to 230°F) it defines the room temperature set point to switch auxiliary relay. |
| SHY | Differential for auxiliary output: (0.1 to 25.5°C; 1 to 45°F) intervention differential for auxiliary output set point. • ACH=CL, AUX Cut in is [SAA+SHY]; AUX Cut out is SAA. • ACH=Ht, AUX Cut in is [SAA-SHY]; AUX Cut out is SAA. |
| ArP | Probe selection for auxiliary: (nP; P1; P2; P3; P4) nP = no probe, the auxiliary relay is switched only by the digital input; P1 = Probe 1 (Thermostat probe); P2 = Probe 2 (evaporator probe); P3 = Probe 3 (display probe); P4 = Probe 4. |
| Sdd | Auxiliary relay off during defrost: (n; Y) n = the auxiliary relay operates during defrost. Y = the auxiliary relay is switched off during defrost. |

ALARMS

| | |
|-----|---|
| ALP | Probe selection for alarm: (nP; P1; P2; P3; P4) nP = no probe, the temperature alarms are disabled; P1 = Probe 1 (Thermostat probe); P2 = Probe 2 (evaporator probe); P3 = Probe 3 (display probe); P4 = Fourth probe. |
| ALC | Temperature alarms configuration: (Ab; rE) Ab = absolute temperature, alarm temperature is given by the ALL or ALU values. rE = temperature alarms are referred to the set point. Temperature alarm is enabled when the temperature exceeds the [SET+ALU] or [SET-ALL] values. |
| ALU | MAXIMUM temperature alarm: (ALL to 110°C; ALL to 230°F) when this temperature is reached the alarm is enabled, after the ALd delay time. |
| ALL | Minimum temperature alarm: (-50°C to ALU; -58 to ALU) when this temperature is reached the alarm is enabled, after the ALd delay time. |
| AFH | Differential for temperature alarm recovery: (0.1 to 25.5°C; 1 to 45°F) intervention differential for recovery of temperature alarm. |
| ALd | Temperature alarm delay: (0 to 255 min) time interval between the detection of an alarm condition and alarm signalling. |
| dAo | Exclusion of temperature alarm at start-up: (0.0 to 24h00min, res. 10min) time interval between the detection of the temperature alarm condition after instrument power on and alarm signalling. |

CONDENSER TEMPERATURE ALARM

| | |
|-----|--|
| AP2 | Probe selection for temperature alarm of condenser: (nP; P1; P2; P3; P4) nP = no probe; P1 = thermostat probe; P2 = evaporator probe; P3 = configurable probe; P4 = Probe on Hot Key plug. |
| AL2 | Low temperature alarm of condenser: (-50 to 110°C; -58 to 230°F) when this temperature is reached the LA2 alarm is signalled, possibly after the Ad2 delay. |
| Au2 | High temperature alarm of condenser: (-50 to 110°C; -58 to 230°F) when this temperature is reached the HA2 alarm is signalled, possibly after the Ad2 delay. |
| AH2 | Differential for temperature condenser alarm recovery: 0.1 to 25.5°C; 1 to 45°F |
| Ad2 | Condenser temperature alarm delay: (0 to 255 min) time interval between the detection of the condenser alarm condition and alarm signalling. |
| dA2 | Condenser temperature alarm exclusion at start up: 0.0 to 24h00min, res. 10min. |
| bLL | Compressor off with low temperature alarm of condenser: (n; Y) n = no: compressor keeps on working; Y = yes, compressor is switched off till the alarm is present, in any case regulation restarts after AC time at minimum. |
| AC2 | Compressor off with high temperature alarm of condenser: (n; Y) n = no: compressor keeps on working; Y = yes, compressor is switched off till the alarm is present, in any case regulation restarts after AC time at minimum. |

AUXILIARY RELAY

| | |
|-----|--|
| tbA | Alarm relay silencing (with oA2=ALr): (n; Y) n = silencing disabled: alarm relay stays on till alarm condition lasts; Y = silencing enabled: alarm relay is switched OFF by pressing a key during an alarm. |
| oA2 | Second relay configuration (1-2): (dEF; FAn; ALr; LiG; AUS; onF; db; CP2; dEF2; HES) dEF = defrost; FAn = do not select it; ALr = alarm; LiG = light; AUS = Auxiliary relay; onF = always on with instrument on; db = neutral zone; CP2 = do not select it; dEF2 = do not select it; HES = night blind. |
| AoP | Alarm relay polarity: (CL; oP) it set if the alarm relay is open or closed when an alarm occurs. CL = terminals 1-2 closed during an alarm; oP = terminals 1-2 open during an alarm. |

DIGITAL INPUTS

| | |
|-----|---|
| i1P | Digital input polarity (18-20): (oP; CL) oP = the digital input is activated by opening the contact; CL = the digital input is activated by closing the contact. |
| i1F | Digital input configuration (18-20): (dor; dEF) dor = door switch function; dEF = activation of a defrost cycle; |
| i2P | Second digital input polarity (18-19): (oP; CL) oP = the digital input is activated by opening the contact; CL = the digital input is activated by closing the contact. |
| i2F | Second digital input configuration (18-19): (EAL; bAL; PAL; dor; dEF; ES; AUS; Htr; FAn; HdF; onF) EAL = external alarm: "EA" message is displayed; bAL = serious alarm "CA" message is displayed; PAL = pressure switch alarm, "CA" message is displayed; dor = door switch function; dEF = activation of a defrost cycle; ES = energy saving; AUS = auxiliary relay activation with oA2=AUS; Htr = type of inverting action (cooling or heating); FAn = fan; HdF = Holiday defrost (enable only with RTC); onF = to switch the controller off. |
| did | Digital input alarm delay (18-20) when i2F=EAL or i2F=bAL: (0 to 255 min) delay between the detection of the external alarm condition and its signalling. When i2F= PAL, it is the interval of time to calculate the number of pressure switch activation. |
| doA | Door open signalling delay: 0 to 255 min. |
| nPS | Number of pressure switch activation: (0 to 15) Number of activation, during the did interval, before signalling an alarm event (i2F=PAL). If the nPS activation during did time is reached, switch off and on the instrument to restart normal regulation. |
| odc | Compressor status when open door: (no; FAn; CP2; F_C) no = normal; FAn = normal; CP2 = compressor OFF; F_C = compressor OFF. |
| rrd | Outputs restart after doA alarm: (n; Y) n = outputs not affected by the doA alarm; Y = outputs restart with the doA alarm. |

| | |
|------------|--|
| HES | Delta temperature during an Energy Saving cycle: (-30.0 to 30.0°C; -54 to 54°F) it sets the increasing value of the set point [SET+HES] during the Energy Saving cycle. |
|------------|--|

RTC SETTINGS (ONLY FOR MODELS WITH RTC)

| | |
|------------|--|
| Hur | Current hour: 0 to 23hours |
| Min | Current minute: 0 to 59min |
| dAY | Current day: SUn to SA |
| Hd1 | First weekly holiday: (SUn to nU) set the first day of the week which follows the holiday times. nU = not used. |
| Hd2 | Second weekly holiday: (SUn to nU) set the second day of the week which follows the holiday times. nU = not used. |

ENERGY SAVING SETTINGS (ONLY FOR MODELS WITH RTC)

| | |
|------------|---|
| iLE | Energy Saving cycle start during workdays: (0.0 to 24h00min, res. 10min) during the Energy Saving cycle the set point is increased by the value in HES so that the operation set point is [SET+HES]. |
| dLE | Energy Saving cycle length during workdays: (0.0 to 24h00min, res. 10min) sets the duration of the Energy Saving cycle on workdays. |
| iSE | Energy Saving cycle start on holidays: 0.0 to 23h50min, res. 10min. |
| dSE | Energy Saving cycle length on holidays 0.0 to 24h00min, res. 10min. |

DEFROSTING TIMES SETTINGS (ONLY FOR MODELS WITH RTC)

| | |
|-------------------|---|
| Ld1 to Ld6 | Start defrosts during workdays: (0.0 to 23h 50min, res. 10min) these parameters set the beginning of the 6 programmable defrost cycles during workdays. E.g.: when Ld2=12.4 , the second defrost starts at 12.40 during workday time. |
| Sd1 to Sd6 | Start defrosts during holidays: (0.0 to 23h50min, res. 10min) these parameters set the beginning of the 6 programmable defrost cycles on holidays. E.g.: when Sd2=3.4 the second defrost starts at 3.40 during holiday time. N.B.: to disable a defrost cycle set it to "nU" (not used). E.g.: if Ld6=nU , the sixth defrosting cycle is disabled. |

OTHER

| | |
|------------|---|
| Adr | Serial address: (1 to 247) identifies the instrument address when connected to a ModBUS compatible monitoring system. |
| PbC | Type of probe: (ntC, CtC) it allows to set the kind of probe used by the instrument: ntC = NTC-EU probe, CtC = NTC-US probe. |
| onF | On/Off key enabling: (nU; oFF; ES) nU = disabled; oFF = enabled; ES = not set it. |
| dP1 | Thermostat probe display. |
| dP2 | Evaporator probe display. |
| dP3 | Third probe display- optional. |
| dP4 | Fourth probe display. |
| rSE | Real set point: it shows the set point used during the energy saving cycle or during the continuous cycle. |
| rEL | Software release for internal use. |
| Ptb | Parameter table code: readable only. |

8. DIGITAL INPUTS

The first digital input 18-20 is enabled with **P3P=n**.
With **P3P=n** and **i1F=i2F** the second digital input is disabled.
The free voltage digital inputs are programmable by the **i1F** and **i2F** parameters.

8.1 GENERIC ALARM (i2F = EAL)

As soon as the digital input is activated the unit will wait for **did** time delay before signalling the "EAL" alarm message. The outputs status doesn't change. The alarm stops just after the digital input is de-activated.

8.2 SERIOUS ALARM MODE (i2F = bAL)

When the digital input is activated, the unit will wait for **did** delay before signalling the "CA" alarm message. The relay outputs are switched OFF. The alarm will stop as soon as the digital input is de-activated.

8.3 PRESSURE SWITCH (i2F = PAL)

If during the interval time set by **did** parameter, the pressure switch has reached the number of activation of the **nPS** parameter, the "CA" pressure alarm message will be displayed. The compressor and the regulation are stopped. When the digital input is ON the compressor is always OFF. If the **nPS** activation during **did** time is reached, switch off and on the instrument to restart normal regulation.

8.4 DOOR SWITCH INPUT (i1F or i2F = dor)

It signals the door status and the corresponding relay output status through the **odC** parameter: **no** = normal (any change); **FAn** = Fan OFF; **CPr** = Compressor OFF; **F.C** = Compressor and fan OFF. Since the door is opened, after the delay time set through parameter **doA**, the door alarm is enabled, the display shows the message **dA** and the regulation restarts in **rtr=Y**. The alarm stops as soon as the external digital input is disabled again. With the door open, the high and low temperature alarms are disabled.

8.5 START DEFROST (i1F or i2F = dEF)

It starts a defrost if there are the right conditions. After the defrost is finished, the normal regulation will restart only if the digital input is disabled otherwise the instrument will wait until the **MdF** safety time is expired.

8.6 SWITCH THE AUXILIARY RELAY (i2F = AUS)

With **oA2=AUS** the digital input switched the status of the auxiliary relay.

8.7 INVERSION OF THE KIND OF ACTION: HEATING-COOLING (i2F = Htr)

This function allows to invert the regulation of the controller: from cooling to heating and viceversa.

8.8 ENERGY SAVING (i2F = ES)

The Energy Saving function allows to change the set point value as the result of the [SET+HES] (parameter) sum. This function is enabled until the digital input is activated.

8.9 HOLIDAY DEFROST (i2F = HDF) –ONLY FOR MODELS WITH RTC

This function enabled the holiday defrost setting.

8.10 ON OFF FUNCTION (i2F = onF)

To switch the controller on and off.

8.11 DIGITAL INPUTS POLARITY

The digital input polarity depends on the **i1P** and **i2P** parameters.

 
- i1P** or **i2P=CL**, the input is activated by closing the contact.
- i1P** or **i2P=OP**, the input is activated by opening the contact.

9. RS485 SERIAL LINE – FOR MONITORING SYSTEMS


The RS485 serial line allows to connect the instrument to a monitoring system (ModBUS-RTU compatible) such as the X-WEB500/3000/300.

10. X-REP OUTPUT – OPTIONAL

As optional, an X-REP can be connected to the instrument, trough the dedicated connector.



11. INSTALLATION AND MOUNTING

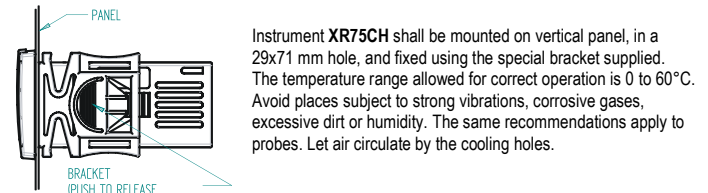

12. ELECTRICAL CONNECTIONS

The instrument is provided with screw terminal block to connect cables with a cross section up to 2.5mm². Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the probe cables from the power supply cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay.

12.1 PROBE CONNECTION

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature. Place the defrost termination probe among the evaporator fins in the coldest place, where most ice is formed, far from heaters or from the warmest place during defrost, to prevent premature defrost termination.

13. HOW TO: USE THE HOT KEY

13.1 PROGRAM A HOT KEY FROM AN INSTRUMENT (UPLOAD)

1. Program one controller with the front keypad.
2. When the controller is ON, insert the "HOT-KEY" and push UP button; the "uPL" message appears followed a by a flashing "End" label.
3. Push SET button and the "End" will stop flashing.
4. Turn OFF the instrument, remove the "HOT-KEY" and then turn it ON again.

NOTE: the "Err" message appears in case of a failed programming operation. In this case push again button if you want to restart the upload again or remove the "HOT-KEY" to abort the operation.

13.2 PROGRAM AN INSTRUMENT BY USING A HOT KEY (DOWNLOAD)

1. Turn OFF the instrument.
2. Insert a pre-programmed "HOT-KEY" into the 5-PIN receptacle and then turn the Controller ON.
3. The parameter list of the "HOT-KEY" will be automatically downloaded into the Controller memory. The "doL" message will blink followed a by a flashing "End" label.
4. After 10 seconds the instrument will restart working with the new parameters.
5. Remove the "HOT-KEY".

NOTE: the message "Err" is displayed for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the "HOT-KEY" to abort the operation.

14. ALARM SIGNALS

| Message | Cause | Outputs |
|---------|----------------------------------|--|
| "P1" | Room probe failure | Compressor output acc. to par. Con and CoF |
| "P2" | Evaporator probe failure | Defrost end is timed |
| "P3" | Third probe failure | Outputs unchanged |
| "P4" | Fourth probe failure | Outputs unchanged |
| "HA" | Maximum temperature alarm | Outputs unchanged. |
| "LA" | Minimum temperature alarm | Outputs unchanged. |
| "HA2" | Condenser high temperature | It depends on the AC2 parameter |
| "LA2" | Condenser low temperature | It depends on the bLL parameter |
| "dA" | Door open | Compressor restarts |
| "EA" | External alarm | Output unchanged. |
| "CA" | Serious external alarm (i2F=bAL) | All outputs OFF. |
| "CA" | Pressure switch alarm (i2F=PAL) | All outputs OFF |

| Message | Cause | Outputs |
|---------|-------------------------------|--|
| rtC* | Real time clock alarm | Alarm output ON; Other outputs unchanged; Defrosts according to par. idF. Set real time clock has to be set. |
| rtF | Real time clock board failure | Alarm output ON; Other outputs unchanged; Defrosts according to par. idF. Contact the service. |

14.1 SILENCING BUZZER / ALARM RELAY OUTPUT

If tbA=Y, the buzzer and the relay are silenced by pressing any key.
If tbA=n, only the buzzer is silenced while the alarm relay is on until the alarm condition recovers.

14.2 ALARM RECOVERY

Probe alarms "P1", "P2", "P3" and "P4" start some seconds after the fault in the related probe; they automatically stop some seconds after the probe restarts normal operation. Check connections before replacing the probe.
Temperature alarms "HA", "LA", "HA2" and "LA2" automatically stop as soon as the temperature returns to normal values.
Alarms "EA" and "CA" (with i2F=bAL) recover as soon as the digital input is disabled.
Alarm "CA" (with i2F=PAL) recovers only by switching off and on the instrument


14.3 OTHER MESSAGES

| | |
|-----|---|
| Pon | Keyboard unlocked. |
| PoF | Keyboard locked |
| noP | In programming mode: no parameter present in Pr1. On the display or in dP2, dP3, dP4: the selected probe is not enabled. |

15. TECHNICAL DATA

Housing: self extinguishing ABS
Case: frontal 38x80mm; depth 62mm
Mounting: panel mounting in a 71x29mm panel cut-out
Protection: IP20; **Frontal protection:** IP65
Connections: Screw terminal block ≤ 2.5 mm² wiring
Power supply: (according to the model) 24Vac, ±10%; 230Vac ±10%, 50/60Hz; 110Vac ±10%, 50/60Hz.
Power absorption: 3VA max
Display: 3 digits, red LEDs, 14.2 mm high. **Inputs:** Up to 4 NTC-EU or NTC-US probes
Digital inputs: free voltage contact.
Relay outputs:
Compressor: SPST 8(3)A, 250Vac or SPST 16A 250Vac
Defrost: SPDT 8(3)A, 250Vac
Aux: SPST 5A, 250Vac
Fan: SPDT 8(3)A, 250Vac or SPST 16(6)A 250Vac
Data storing: on the non-volatile memory (EEPROM)
Internal clock back-up: 24 hours
Kind of action: 1B. **Pollution degree:** 2. **Software class:** A
Rated impulsive voltage: 2500V. **Overvoltage Category:** II
Operating temperature: 0 to 55°C (32 to 131°F)
Storage temperature: -30 to 85°C (-22 to 185°F)
Relative humidity: 20 to 85% (no condensing)
Measuring and regulation range:
NTC-EU probe (10k ±1%, β=3435): -40 to 110°C (-40 to 230°F)
NTC-US probe (xxk ±y%, β=????): -40 to 110°C (-40 to 230°F)
Resolution: 0.1°C or 1°C or 1°F (selectable)
Accuracy (ambient temp. 25°C): ±0.7°C ±1 digit

16. CONNECTIONS

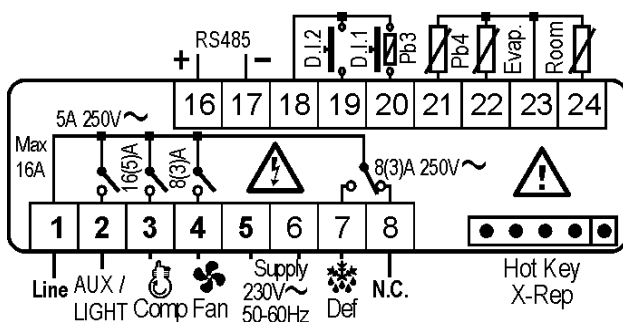

Supply: 120Vac: connect to terminals 5-6.
The X-REP output is optional

17. DEFAULT SETTING VALUES

| Label | Name | Range | Value | Level |
|-------|------------------------------|-------------------------------|-------------------|-------|
| SEt | Set point | LS to US | [-5.0°C] [23°F] | --- |
| rtC* | Real time clock menu | - | - | Pr1 |
| HY | Differential | [0.1 to 25.5°C] [1 to 255°F] | [2.0°C] [2°F] | Pr1 |
| LS | Minimum set point | [-50°C to SET] [-58°F to SET] | [-50.0°C] [-58°F] | Pr2 |
| US | Maximum set point | [SET to 110°C] [SET to 230°F] | [110.0°C] [230°F] | Pr2 |
| ot | Thermostat probe calibration | [-12 to 12°C] [-21 to 21°F] | [0.0°C] [0°F] | Pr1 |
| P2P | Evaporator probe presence | n=not present; Y=pres. | Y | Pr1 |
| oE | Evaporator probe calibration | [-12 to 12°C] [-21 to 21°F] | [0.0°C] [0°F] | Pr2 |
| P3P | Third probe presence | n=not present; Y=pres. | n | Pr2 |

| Label | Name | Range | Value | Level |
|------------------|--|---|-------------------|-------|
| o3 | Third probe calibration | [-12.0 to 12.0°C] [-21 to 21°F] | [0.0°C] [0°F] | Pr2 |
| P4P | Fourth probe presence | n=not present; Y=pres. | n | Pr2 |
| o4 | Fourth probe calibration | [-12.0 to 12.0°C] [-21 to 21°F] | [0.0°C] [0°F] | Pr2 |
| odS | Outputs delay at start up | 0 to 255 min | 0 | Pr2 |
| AC | Anti-short cycle delay | 0 to 50 min | 1 | Pr1 |
| rtr | P1-P2 percentage for regulation | 0 to 100 (100=P1, 0=P2) | 100 | Pr2 |
| CCt | Continuous cycle duration | 0.0 to 24h 00min, res. 10min | 0.0 | Pr2 |
| CCS | Set point for continuous cycle | [-50 to 110.0°C] [-58 to 230°F] | [-5°C] [23°F] | Pr2 |
| Con | Compressor ON time with faulty probe | 0 to 255 min | 15 | Pr2 |
| CoF | Compressor OFF time with faulty probe | 0 to 255 min | 30 | Pr2 |
| CF | Temperature measurement unit | °C; °F | [°C] [°F] | Pr2 |
| rES | Resolution | in=integer; dE=dec.point | dE | Pr1 |
| LoD | Probe displayed | P1; P2 | P1 | Pr2 |
| rEd ² | X-REP display | P1; P2; P3; P4; SEt; dtr | P1 | Pr2 |
| dLY | Display temperature delay | 0.0 to 20min 00s, res. 10s | 0.0 | Pr2 |
| dtr | P1-P2 percentage for display | 1 to 99 | 50 | Pr2 |
| EdF* | Kind of interval for defrost | rC; in | rtC | Pr2 |
| tdF | Defrost type | EL=el. heater; in= hot gas | EL | Pr1 |
| dFP | Probe selection for defrost termination | nP; P1; P2; P3; P4 | P2 | Pr2 |
| dtE | Defrost termination temperature | [-50 to 50°C] [-50 to 122°F] | [8°C] [46°F] | Pr1 |
| idF | Interval between defrost cycles | 1 to 120 hours | 6 | Pr1 |
| MdF | (Maximum) length for defrost | 0 to 255 min | 30 | Pr1 |
| dSd | Start defrost delay | 0 to 99 min | 0 | Pr2 |
| dFd | Displaying during defrost | rt, it, SEt, DEF | it | Pr2 |
| dAd | MAX display delay after defrost | 0 to 255 min | 30 | Pr2 |
| Fdt | Draining time | 0 to 120 min | 0 | Pr2 |
| dPo | First defrost after start-up | n=after idF; Y=immed. | n | Pr2 |
| dAF | Defrost delay after fast freezing | 0 to 24h 00min, res. 10min | 0.0 | Pr2 |
| FnC | Fan operating mode | C-n; o-n; C-Y; o-Y | o-n | Pr1 |
| Fnd | Fan delay after defrost | 0 to 255 min | 10 | Pr1 |
| Fct | Differential of temperature to force fan activation | [0 to 50°C] [0 to 90°F] | [10°C] [10°F] | Pr2 |
| FSt | Fan stop temperature | [-50 to 50°C] [-58 to 122°F] | [36°C] [23°F] | Pr1 |
| Fon | Fan on time with compressor off | 0 to 15 min | 0 | Pr2 |
| FoF | Fan off time with compressor off | 0 to 15 min | 0 | Pr2 |
| FAP | Probe selection for fan management | nP; P1; P2; P3; P4 | P2 | Pr2 |
| ACH | Kind of action for auxiliary relay | CL; Ht | CL | Pr2 |
| SAA | Set Point for auxiliary relay | [-50 to 110°C] [-58 to 230°F] | [0.0°C] [32°F] | Pr2 |
| SHY | Differential for auxiliary relay | [0.1 to 25.5°C] [1 to 45°F] | [2.0°C] [2°F] | Pr2 |
| ArP | Probe selection for auxiliary relay | nP; P1; P2; P3; P4 | nP | Pr2 |
| Sdd | Auxiliary relay operating during defrost | n; Y | n | Pr2 |
| ALP | Alarm probe selection | nP; P1; P2; P3; P4 | P1 | Pr2 |
| ALC | Temperat. alarms configuration | rE= related to set; Ab= absolute | Ab | Pr2 |
| ALU | MAXIMUM temperature alarm | [SEt to 110.0°C] [SEt to 230°F] | [110°C] [230°F] | Pr1 |
| ALL | Minimum temperature alarm | [-50°C to SEt] [-58°F to SEt] | [-50.0°C] [-58°F] | Pr1 |
| AFH | Differential for temperat. alarm recovery | [0.1°C to 25.5°C] [1°F to 45°F] | [2.0°C] [2°F] | Pr2 |
| ALd | Temperature alarm delay | 0 to 255 min | 15 | Pr2 |
| dAo | Delay of temperature alarm at start up | 0 to 24h 00min, res. 10min | 1.3 | Pr2 |
| AP2 | Probe for temperat. alarm of condenser | nP; P1; P2; P3; P4 | P4 | Pr2 |
| AL2 | Condenser for low temperat. alarm | [-50 to 110°C] [-58 to 230°F] | [-40.0°C] [-40°F] | Pr2 |
| AU2 | Condenser for high temperat. alarm | [-50 to 110°C] [-58 to 230°F] | [110°C] [230°F] | Pr2 |
| AH2 | Differential for condenser temperature alarm recovery | [0.1°C to 25.5°C] [1°F to 45°F] | [5°C] [5°F] | Pr2 |
| Ad2 | Condenser temperature alarm delay | 0 to 254 min, 255=nU | 15 | Pr2 |
| dA2 | Delay of cond. temper. alarm at start up | 0.0 to 24h 00min, res. 10min | 1.3 | Pr2 |
| bLL | Compr. off for condenser low temperature alarm | n; Y | n | Pr2 |
| AC2 | Compressor off because of condenser high temperature alarm | n; Y | n | Pr2 |
| tbA | Alarm relay disabling | n; Y | Y | Pr2 |
| oA2 | Second relay configuration | ALr = alarm; dEF = do not select it; LiG = Light; AUS = AUX; onF = always on; FAn = do not select it; db = neutral zone; CP2 = second compressor; dF2 = do not select it; HES = night blind | LiG | Pr2 |
| oAP | Alarm relay polarity (oA2=ALr) | oP; CL | CL | Pr2 |
| i1P | Digital input polarity (18-20) | oP=opening; CL=closing | CL | Pr1 |
| i1F | Digital input 1 configuration (18-20) | dor; dEF; | dor | Pr1 |
| i2P | Digital input polarity (18-19) | oP=opening; CL=closing | CL | Pr2 |
| i2F | Digital input configuration (18-19) | EAL; bAL; PAL; dor; dEF; ES; AUS; Htr; FAn; HdF; onF | EAL | Pr2 |
| did | Digital input alarm delay (18-20) | 0 to 255 min | 15 | Pr1 |
| doA | Door open alarm delay | 0 to 255 min | 15 | Pr1 |
| NPS | Number of activation of pressure switch | 0 to 15 | 15 | Pr2 |
| odC | Compress and fan status when open door | no; FAn; CP; F_C | F-C | Pr2 |
| rrd | Regulation restart with door open alarm | n; Y | Y | Pr2 |
| HES | Differential for Energy Saving | [-30°C to 30°C] [-54°F to 54°F] | 0 | Pr2 |
| HUR* | Current hour | 0 to 23 | - | Pr1 |
| Min* | Current minute | 0 to 59 | - | Pr1 |
| dAY* | Current day | Sun to Sat | - | Pr1 |
| Hd1* | First weekly holiday | Sun to Sat; nU | nU | Pr1 |
| Hd2* | Second weekly holiday | Sun to Sat; nU | nU | Pr1 |
| iLE* | Energy Saving cycle start during workdays | 0 to 23h50min, res. 10min | 0.0 | Pr1 |
| dLE* | Energy Saving cycle length during workdays | 0 to 24h 00min, res. 10min | 0 | Pr1 |
| iSE* | Energy Saving cycle start on holidays | 0 to 23h 50min, res. 10min | 0.0 | Pr1 |

| Label | Name | Range | Value | Level |
|-------|--|--------------------------------|-------|-------|
| dSE* | Energy Saving cycle length on holidays | 0 to 24h 00min, res. 10min | 0 | Pr1 |
| Ld1* | 1 st workdays defrost start | 0 to 23h 50min, res. 10min; nU | 6.0 | Pr1 |
| Ld2* | 2 nd workdays defrost start | 0 to 23h 50min, res. 10min; nU | 13.0 | Pr1 |
| Ld3* | 3 rd workdays defrost start | 0 to 23h 50min, res. 10min; nU | 21.0 | Pr1 |
| Ld4* | 4 th workdays defrost start | 0 to 23h 50min, res. 10min; nU | nU | Pr1 |
| Ld5* | 5 th workdays defrost start | 0 to 23h 50min, res. 10min; nU | nU | Pr1 |
| Ld6* | 6 th workdays defrost start | 0 to 23h 50min, res. 10min; nU | nU | Pr1 |
| Sd1* | 1 st holiday defrost start | 0 to 23h 50min, res. 10min; nU | 6.0 | Pr1 |
| Sd2* | 2 nd holiday defrost start | 0 to 23h 50min, res. 10min; nU | 13.0 | Pr1 |
| Sd3* | 3 rd holiday defrost start | 0 to 23h 50min, res. 10min; nU | 21.0 | Pr1 |
| Sd4* | 4 th holiday defrost start | 0 to 23h 50min, res. 10min; nU | nU | Pr1 |
| Sd5* | 5 th holiday defrost start | 0 to 23h 50min, res. 10min; nU | nU | Pr1 |
| Sd6* | 6 th holiday defrost start | 0 to 23h 50min, res. 10min; nU | nU | Pr1 |
| Adr | Serial address | 1 to 247 | 1 | Pr2 |
| PbC | Kind of probe | ntC; CtC | ntC | Pr2 |
| onF | on/off key enabling | nU, oFF; ES | nU | Pr2 |
| dP1 | Room probe display | -- | - | Pr1 |
| dP2 | Evaporator probe display | -- | - | Pr1 |
| dP3 | Third probe display | -- | - | Pr1 |
| dP4 | Fourth probe display | -- | - | Pr1 |
| rSE | Real set | actual set | - | Pr2 |
| rEL | Software release | -- | 5.6 | Pr2 |
| Ptb | Map code | -- | - | Pr2 |

* Only for model with real time clock

² Only for XR75CH with X-REP output

Dixell™



Dixell S.r.l. - Z.I. Via dell'Industria, 27 - 32010 Pieve d'Alpago (BL) ITALY
 Tel. +39.0437.9833 r.a. - Fax +39.0437.989313 - EmersonClimate.com/Dixell - dixell@emerson.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>