



# Emerson®


## Model: AV101 Quick Set Up Guide

### Complete Home Theater System with DVD/CD Player and Digital Tuner

This Quick Set Up Guide will help you get your new Emerson Home Theater System connected, positioned, and operating so you can begin enjoying movies and music as quickly as possible.

All of the initial default settings have been pre-set for the system to be operated in North America. No further adjustments are required at this time.

The diagrams below show the important controls on the front panel and remote control that you will use to perform the operations in this Quick Set Up Guide.

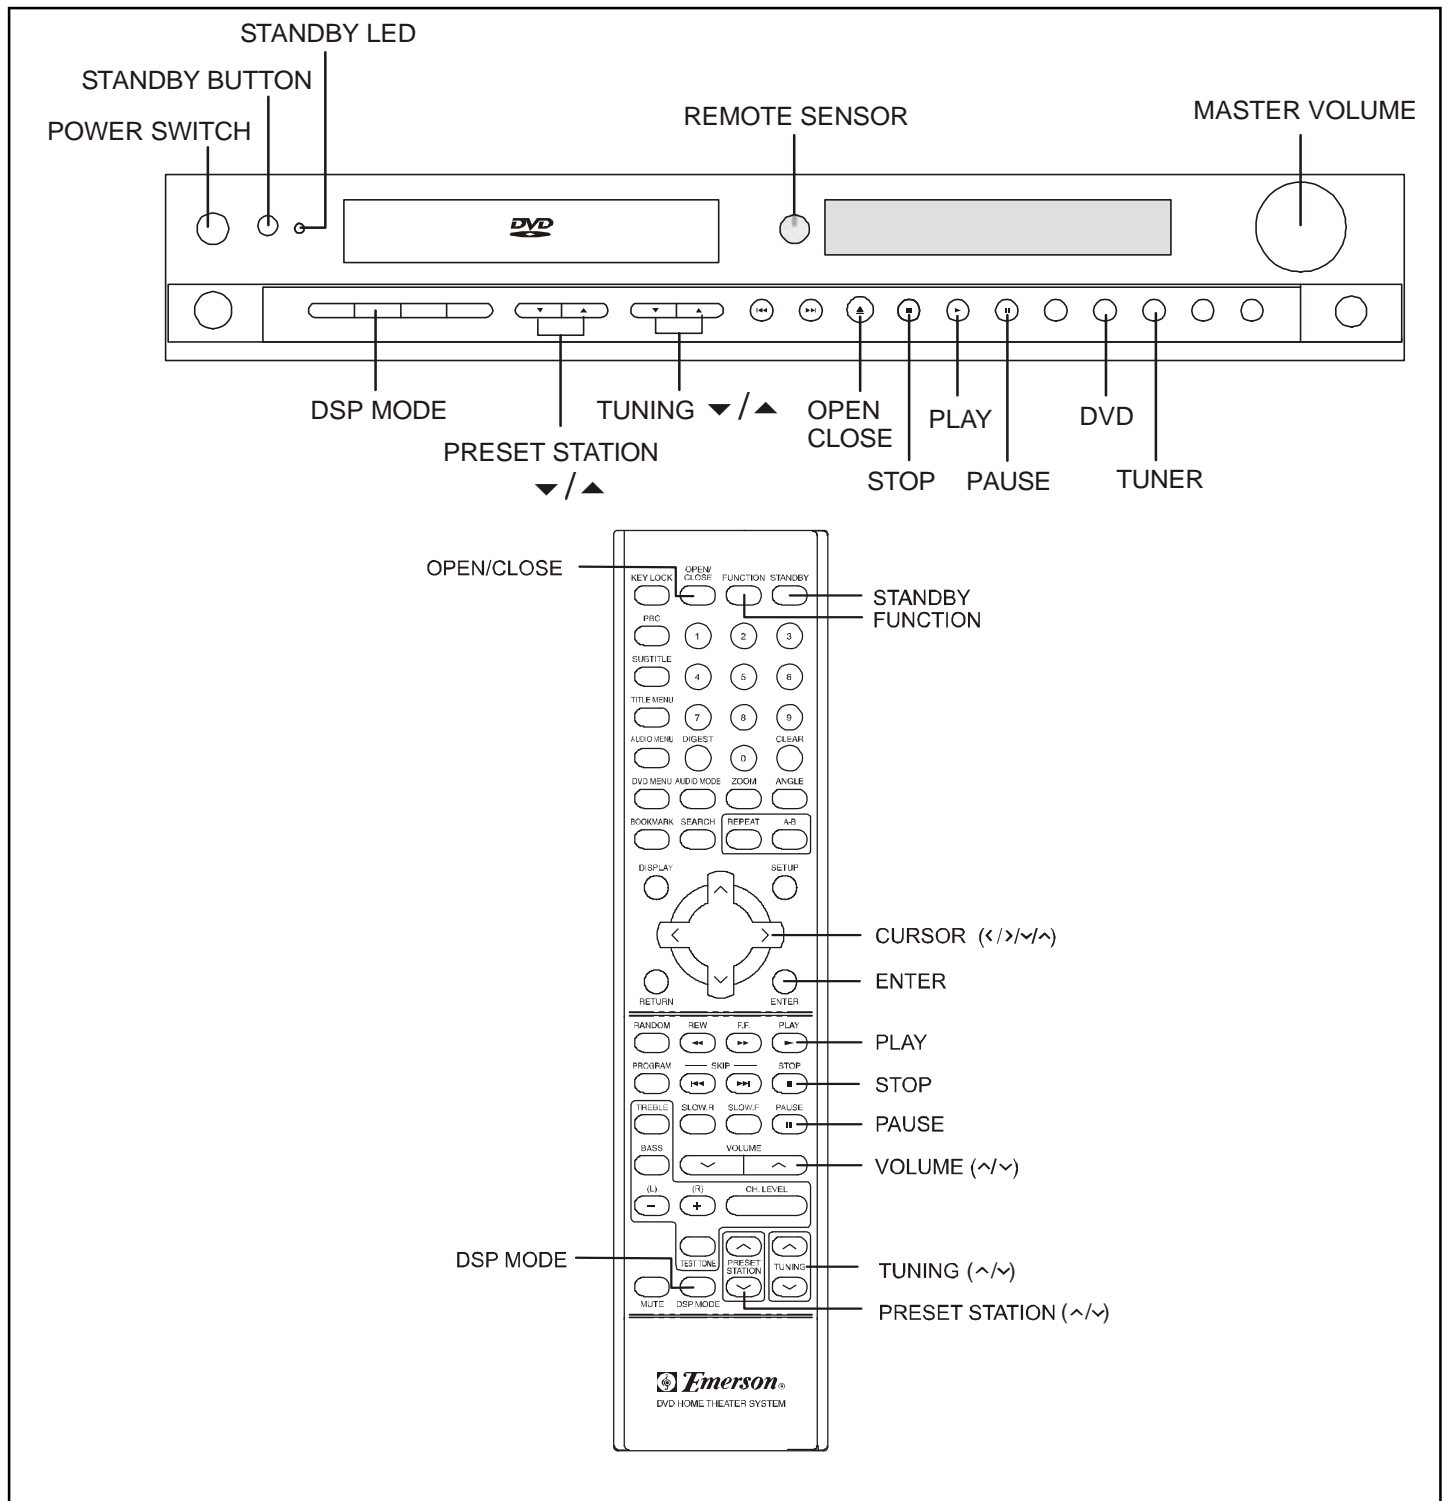 

## BASIC SETUP AND CONNECTIONS

1.) Carefully remove the system from the display carton and confirm that you have the following items:

- Main Unit x 1.
- Satellite Speakers x 5.
- Subwoofer x 1.
- Remote Control x 1.
- Video Cable x 1.
- AM and FM Antennas.
- Owner's Manual.
- Rubber Feet x 20.

### Save the carton and all packing materials.

 
2.) Install batteries (not included) in the remote control.

3.) Place the main unit in the desired location but do not connect the AC power cord at this time.

4.) Refer to the following connection diagram.

- Connect all 6 speakers to the color coded terminals on the back of the main unit.
- Connect your TV to the back of the main unit using the supplied video cable (yellow plugs on each end).
- Connect the AM and FM antennas to the back of the main unit.
- Connect the power cord of the main unit to a 120V 60Hz AC household outlet.
- Press the **POWER** switch on the front of the main unit to turn on the main power. The red STANDBY LED turns 'On'.


**Note:** In order to use the remote control to turn the system 'On' and 'Off' the main **POWER** switch on the front panel must be 'On'. We suggest that this **POWER** switch be left in the 'On' position at all times. If your system will not be used for an extended period, such as a two week vacation for example, you can set the main **POWER** switch back to the 'Off' position.

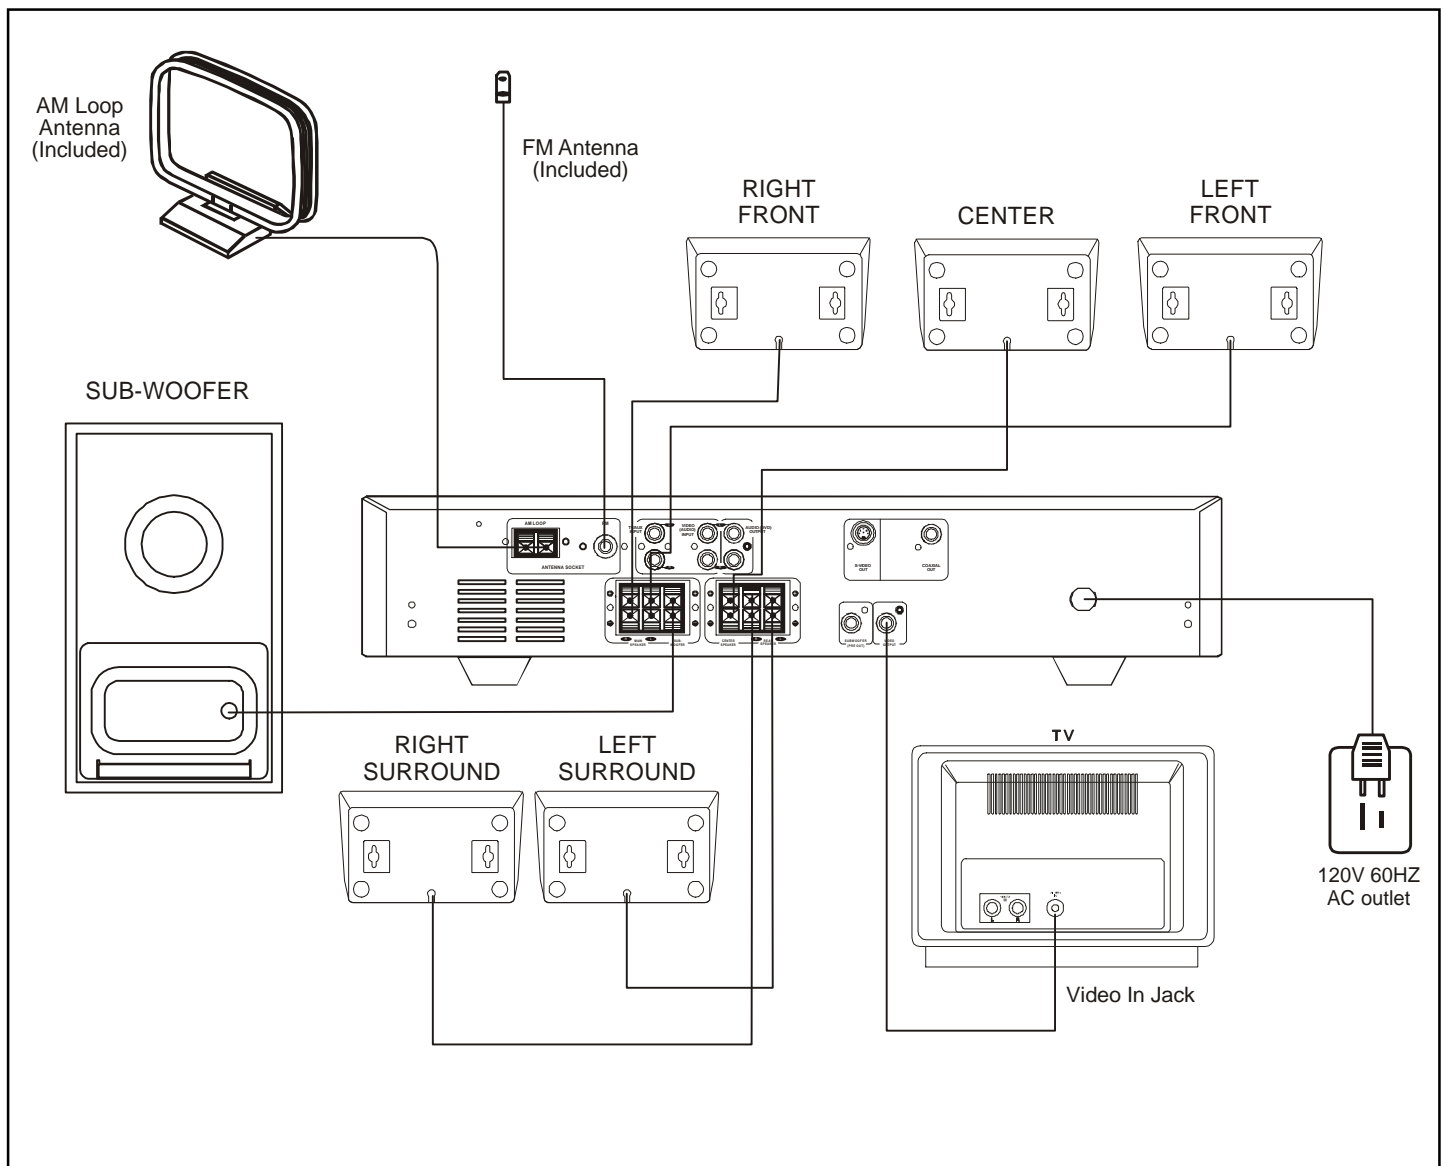

## POSITIONING THE SPEAKERS

Refer to the following speaker positioning diagram. All 5 satellites should be approximately the same distance from your listening position.

 - Place center speaker either directly above or below your TV screen.
- Place front left and right speakers to the left and right of TV at approximately the same height as the center speaker.
- Place rear left and right speakers either in line with, or behind your listening position, at ear level, or slightly above, when seated.
- Place subwoofer on the floor in front of the room, either next to TV or in the corner, facing your listening position.

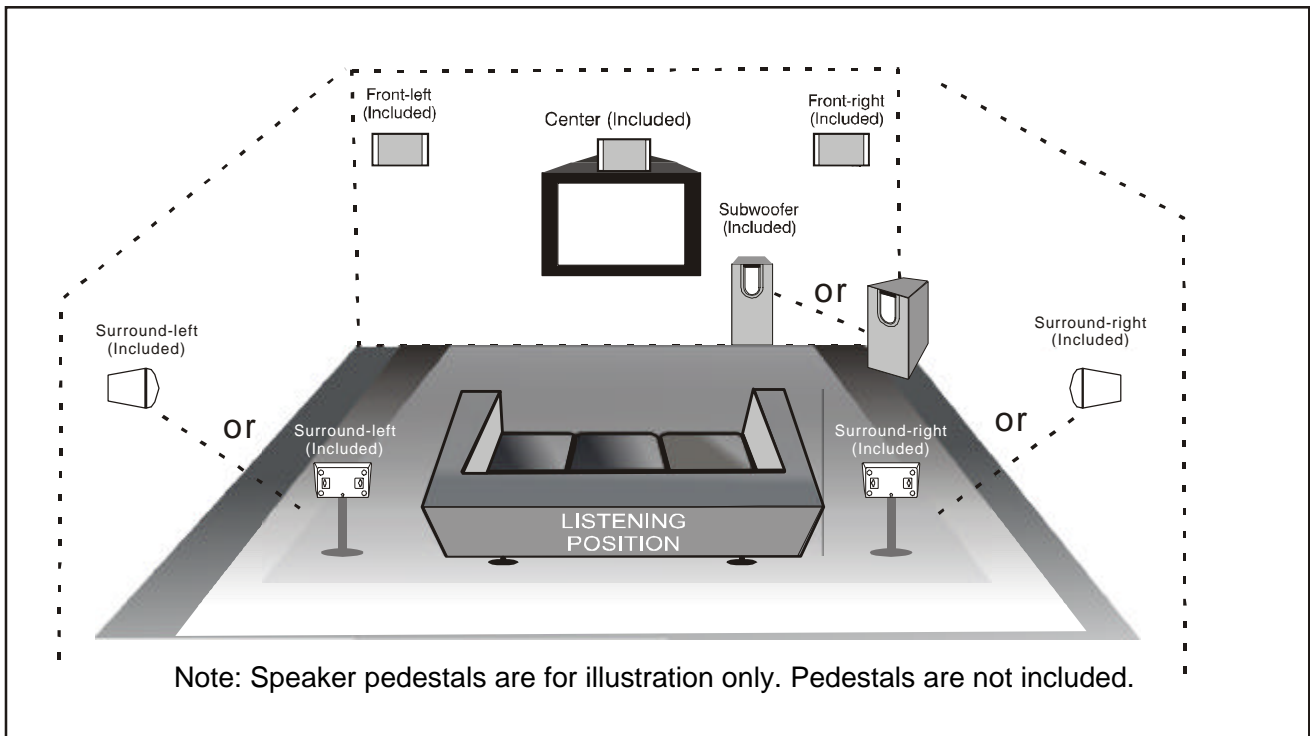

## DVD PLAYBACK

- 1.) Turn on your TV. If necessary press the Source or Video button on your TV's front panel or TV remote control to select the external source connected to your TV's Video In jack. (If necessary refer to your TV's instruction manual.)
- 2.) Press the **STANDBY** button on the AV101 remote control to turn the system 'On'. If necessary press the **DVD** button on the front panel or the **FUNCTION** button on the AV101 remote control repeatedly to select the DVD function. The AV101 front panel display will show "DVD", and the DVD logo screen should appear on your TV.
- 3.) Press the **OPEN/CLOSE** button on the remote control or front panel to open the Disc Tray.  
**Note:** Remote must be pointed at the front of the player to operate properly.
- 4.) Insert DVD movie disc in tray with printed side facing up. Press **OPEN/CLOSE** button to close the disc tray. Player will read the disc and display shows LOADING. On some discs playback will start automatically. On other discs the DVD Menu Screen will appear. Press **PLAY** button to begin playback, or use the Cursor buttons (◀ / ▶ / ▲ / ▼) and then the **ENTER** button to select other playback options from the DVD menu.
- 5.) When you play a DVD movie disc, the player will automatically select DOLBY DIGITAL audio mode. If the DVD disc is recorded with Dolby Digital soundtrack you will hear sound from all 5 satellites plus subwoofer. If the DVD disc does not come with DOLBY DIGITAL and comes either Dolby Surround, Dolby Pro Logic or 2 channel Stereo soundtrack, the subwoofer will not operate. In this case press the **DSP MODE** button on the front panel or the remote control to select 2 CH. STEREO audio mode. This will activate the subwoofer.
- 6.) Rotate the **MASTER VOLUME** control of the player or press the **VOLUME** ▲ / ▼ buttons of the remote control to adjust volume level as desired.
- 7.) When finished watching, press the **STOP** button and/or the **OPEN/CLOSE** button. Remove the disc, then press the **STANDBY** button on the remote control to turn the player 'Off'. The STANDBY indicator comes 'On' again.

## **IMPORTANT INFORMATION ABOUT INDIVIDUAL DVD DISC MENUS**

---

There is no universal standard for the audio default setting of individual DVD movie discs. Some DVD movie discs have both Dolby Digital and DTS audio soundtracks in addition to Dolby Pro Logic and normal stereo. Some discs will automatically begin playback after they are inserted in the player and the drawer is closed. On other discs a "Disc Menu" will appear and playback will not begin until you press the **PLAY** or **ENTER** buttons. In the Disc Menu you also select the type of audio output and the languages for the soundtrack and subtitles. It may also allow you to jump to specific scenes or chapters and play some special features, if included on the disc.

The producer of the disc decides which default settings to use. For example the disc producer may decide to use "2 channel stereo" as the default audio setting on a particular movie disc. If you do not change the default setting on the Disc Menu the soundtrack will be heard in stereo, only from the front left and right speakers and the subwoofer.

The producer of the disc may decide to use a different language as the default setting for the audio soundtrack and the subtitles, especially if it is a foreign film. They may also decide to use subtitles 'On' as their default setting in the Disc Menu. If you prefer to hear the soundtrack in English and cancel the subtitles you must use the Cursor buttons (◀ / ▶ / ▲ / ▼) and the **ENTER** button on the remote control to select the appropriate options in the "Disc Menu".

If you begin playing the disc and find that the settings are not what you expected (for example, the subtitles are 'On' or not all speakers are operating), press the **DVD MENU** button on the remote control to 'return' to the "Disc Menu", then use the Cursor buttons (◀ / ▶ / ▲ / ▼) and the **ENTER** button to select the desired settings and resume playback.

## **CD PLAYBACK**

---

**Note:** *It is not necessary to turn on your TV to listen to audio CDs.*

- 1.) Press **STANDBY** button on the remote control. The front panel display comes 'On'.
- 2.) Press **DVD** button on front panel or press **FUNCTION** button on remote control to select DVD/CD function.
- 3.) Press **OPEN/CLOSE** button. Disc tray opens.
- 4.) Insert your CD in the drawer with label side facing up. Press **OPEN/CLOSE** button to close the disc tray. The player reads the disc and the display shows the total tracks and playing time.
- 5.) Press **PLAY** button to begin playback.
- 6.) Rotate the **MASTER VOLUME** control or press the **VOLUME** ▲/▼ button on the remote control to adjust the sound level.
- 7.) When finished listening press the **STOP** button and/or the **OPEN/CLOSE** button. After removing the disc, press the **STANDBY** button to turn the player 'Off'.

## **LISTENING TO RADIO**

---

- 1.) Press the **STANDBY** button on the AV101 remote control to turn the system 'On'.
- 2.) Press the **TUNER** button on the front panel or press the **FUNCTION** button on the remote control to select the Tuner function. Press the **TUNER** button on the front panel or press the **FUNCTION** button on the remote control again to switch between AM and FM bands.
- 3.) Press the **TUNING** ▲ or ▼ buttons on the front panel or on remote control until the desired radio station frequency appears on the front panel display.
- 4.) Rotate the **MASTER VOLUME** control or press the **VOLUME** ▲/▼ button on the remote control to adjust volume.
- 5.) When finished listening, press the **STANDBY** button on the remote control to shut the system system 'Off'.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>