


Owner's Manual

Location of controls

Emerson™

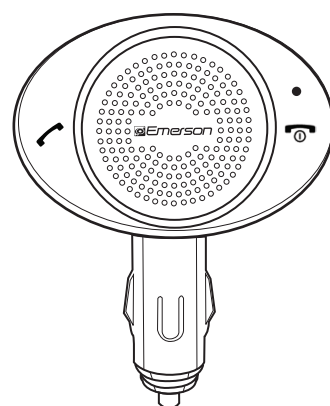


Installation




Microphone here
DO NOT BLOCK

When inserting into the car's cigarette lighter, make sure that the microphone is not blocked, and if possible facing up and towards the driver.

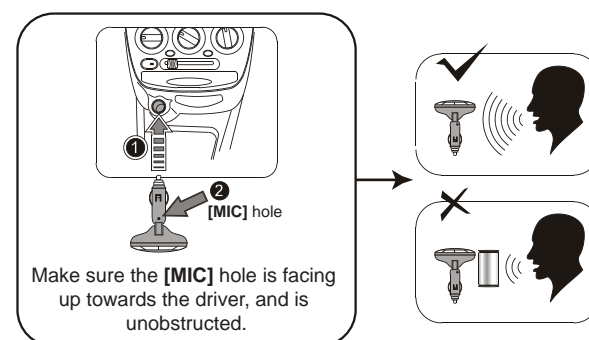

OR

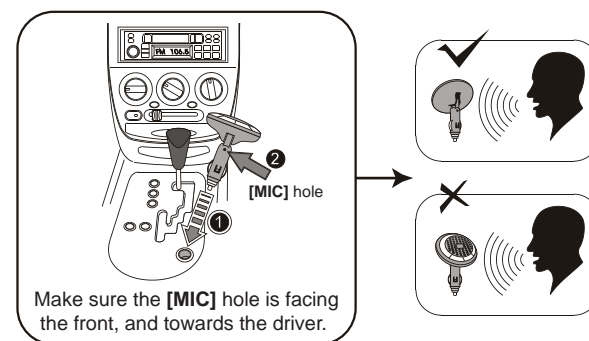


Pairing the speaker with a Bluetooth enabled phone

1. Insert the **Handsfree Speaker** into your car's cigarette lighter socket.
2. Keep your **Handsfree Speaker** and mobile phone within 3 feet of each other during the pairing process.
3. Press and **HOLD** the RED button until the RED and BLUE lights flash alternately. The **Handsfree Speaker** is now in pairing mode.




NOTE: To enter the pairing mode, you must press and **HOLD** the RED button for approximately 10 seconds.


4. Set your mobile phone to search for Bluetooth devices.

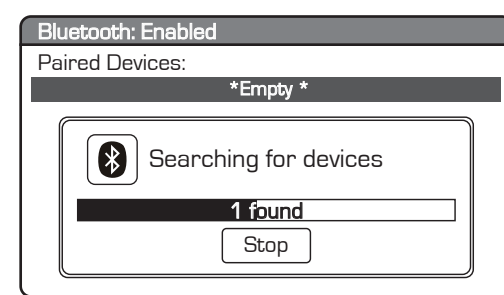


5. When the phone finds the speaker, confirm by selecting **CK2** from the list.

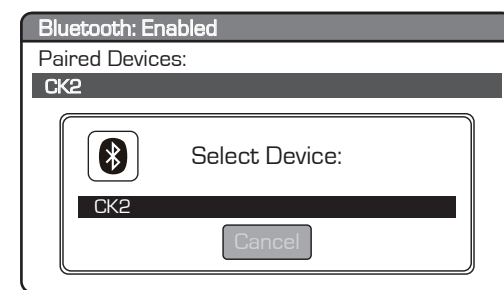


6. Enter passcode "0000" when prompted by the phone.

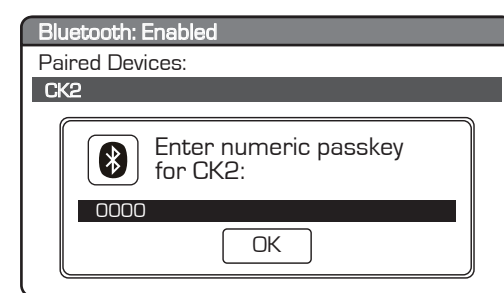

7. Your mobile phone will confirm that the pairing was completed, and prompt you to accept the connection. Please respond **YES** to connect the speaker to your mobile phone. If the pairing was successful, the speaker's indicator light flashes once every 5 seconds.

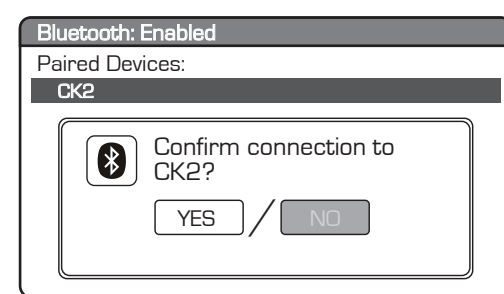

8. When attempting to reconnect the speaker to your mobile phone, you may see the message below, and your mobile phone will prompt you to accept the connection request to the **CK2** speaker and an option not to ask this again. Please accept the connection, and if you select "Don't ask this again", your phone will automatically accept future connection requests from your **Handsfree Speaker**.

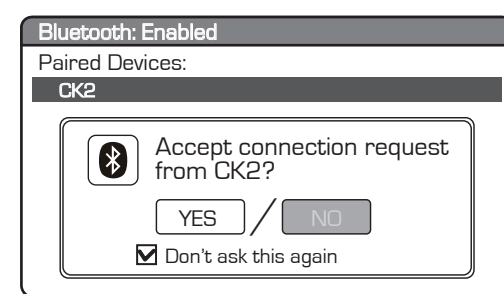

NOTE: The screen shots above are typical of many Bluetooth enabled phones in the market today, and are used to assist in the explanation of the pairing process. Your mobile phone's interface and interaction with the **Handsfree Speaker** may slightly differ from the illustrations above.

Using your Handsfree Speaker

Powering ON/OFF

- To turn **ON**, press and **HOLD** the RED button until the blue indicator light flashes.
- To turn **OFF**, press and **HOLD** the RED button until the RED indicator light flashes, and shuts off.



Answering/Ending a call

- To answer a call, press and release the GREEN button.
- To end or reject a call, press and release the RED button.




To make a call

Dial the number and press the send button on your mobile phone, the call is automatically transferred to the speaker.



Redialing the last number called (Dependent on your phone supporting this feature)

Press and **HOLD** the GREEN button until hearing the indicator tone. The last number called will be redialed.

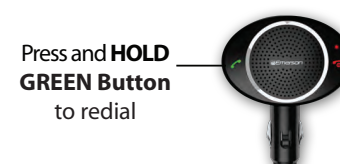


Adjusting the volume

Adjust the volume control wheel in conversation mode to the desired level.



Rejecting a call

To reject an incoming call, press the RED button.

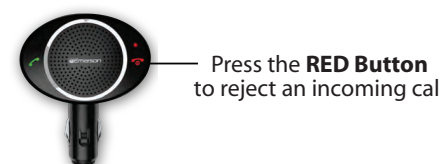

Transferring a call

- To transfer a call from the **Handsfree Speaker** to your mobile phone, short press the GREEN button.
- To transfer the call back to the **Handsfree Speaker**, press the GREEN button once again.

NOTE: In some cases (depending on the mobile phone) you may need to use your mobile phone to transfer back the call to the **Handsfree Speaker**.



Mute (For private conversation)

- During a conversation, press and **HOLD** the GREEN button for 2 seconds until hearing the indicator tone. When the microphone is mute, the **Handsfree Speaker** sounds an indication tone every 5 seconds.



- To cancel the mute feature, press and **HOLD** the GREEN button again until hearing the indicator tone.

Voice dialing (Dependent on your phone supporting this feature)

Short press the GREEN button.



NOTE: Not all mobile phones support all the functions listed above. Please refer to your mobile phone's user guide for more information regarding your phone's features.

Indicator light

- **RED and BLUE lights flashes alternately** - Pairing mode
- **BLUE light flashes once every second** - Not connected with a Bluetooth device
- **BLUE light flashes once every 5 seconds** - Connected with a Bluetooth device or in conversation mode.
- **BLUE light flashes quickly** - Incoming call / calling

Troubleshooting tips

I cannot get the **Handsfree Speaker** into "Pairing" mode

- Press and **HOLD** the RED button until the RED and BLUE lights flash alternately. The **Handsfree Speaker** is now in pairing mode.

My mobile phone is not able to pair with the **Handsfree Speaker**

- Keep your **Handsfree Speaker** and mobile phone within 3 feet of each other during the pairing process.
- Check that your phone's Bluetooth feature is turned **ON**.
- Try repeating the pairing process, see "Pairing the speaker with a Bluetooth enabled phone."

After successfully pairing my mobile phone and **Handsfree Speaker**, when I shut my phone and turn it on again, my speaker did not automatically connect

- Try turning the speaker **OFF**, and then turning it **ON** again.

- Many mobile phones have an auto reconnect option when first attempting to reconnect to a newly paired Bluetooth device. Make sure you accept this option, so that your **Handsfree Speaker** automatically reconnects to your mobile phone; check the user guide of your mobile phone for more information regarding this option.

- Try unpairing the speaker from your phone, and repeat the pairing procedure.

I hear distortion, and the sound quality is poor

- Check your mobile phone's reception signal.
- Try moving your mobile phone closer to the **Handsfree Speaker**.

Warranty information

1 Year Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within one (1) year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom Inc.
ATTN: Returns Department
14-C 53rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

1-877-768-8483 (Toll Free)
Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)
or
via e-mail at
cs@southern telecom.com

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.


Emerson™

Distributed by: AIT Inc. Brooklyn, NY 11232
© 2009 AIT Inc. All rights reserved.
www.emersonphones.com

Emerson and the G-Cléf logo are registered trademarks of Emerson Radio Corp., Parsippany, New Jersey USA.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.

In the box

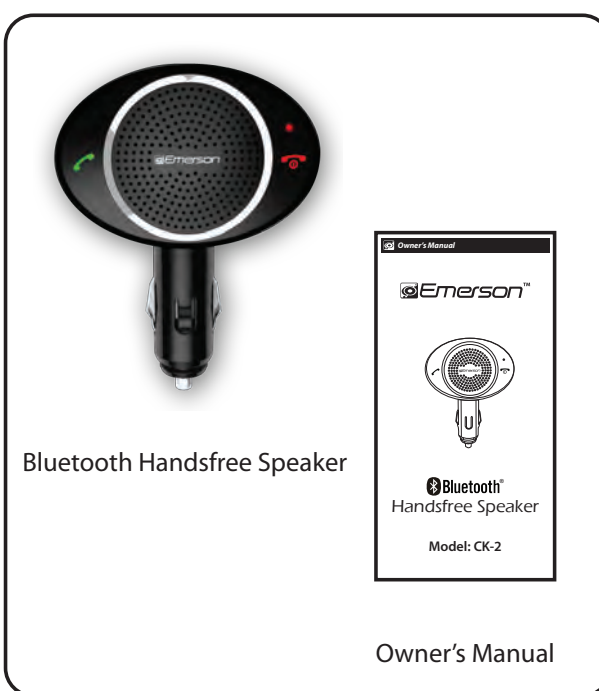

Drive Safe

Driving while talking on your mobile phone is dangerous, and illegal in many states.

Although this device enables drivers to conduct handsfree conversations, it is still dangerous to drive and use a mobile phone at the same time.

We recommend pulling over before making or answering calls, especially during adverse driving conditions. Please use your mobile phone, and our product responsibly while driving!

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>