

 
Owner's Manual




Bluetooth
WIRELESS SPEAKERPHONE

Model: CK-3

In the box

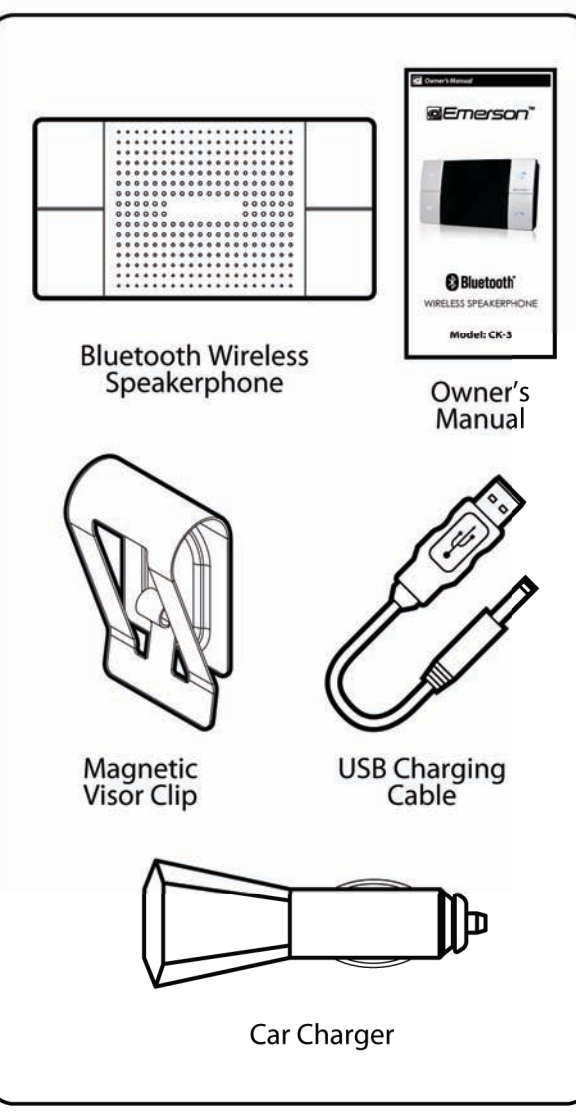


Location of controls

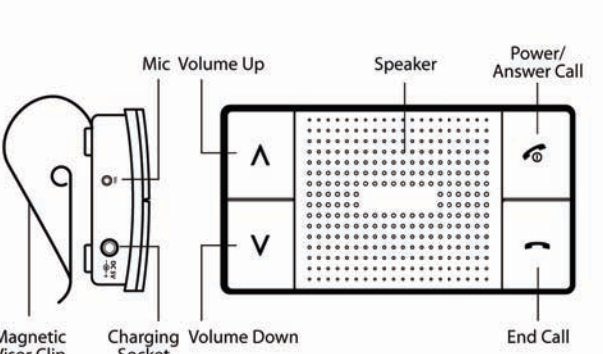 

Charging the Bluetooth Speakerphone

1. Connect the USB cable to the charging socket of the speakerphone.
 2. Connect the other end of the USB cable to either the:
 - **Car Charger** (and connect to your car's cigarette lighter socket)
 - **Computer's USB port**
 3. The **RED LED** indicator light turns on.
 4. The **RED LED** indicator light shuts off when the speakerphone is fully charged (approximately 2-3 hours).
- NOTE:** When the battery is running low, the **RED LED** indicator light starts to flash.

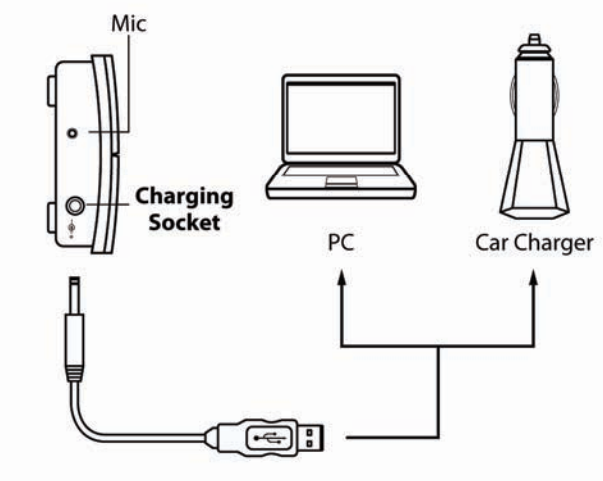


USB cable

NOTE: Charge your speakerphone for at least **8 hours** before using it for the first time.


Pairing the speakerphone with a Bluetooth enabled device

1. Make sure the speakerphone is turned off.
2. Keep the speakerphone and mobile phone within **3 feet** of each other during the pairing process.
3. Press and **HOLD** the [] button until the **RED** and **BLUE** lights flash alternately.
4. The speakerphone is now in **Pairing Mode** and is ready to connect to your mobile phone.

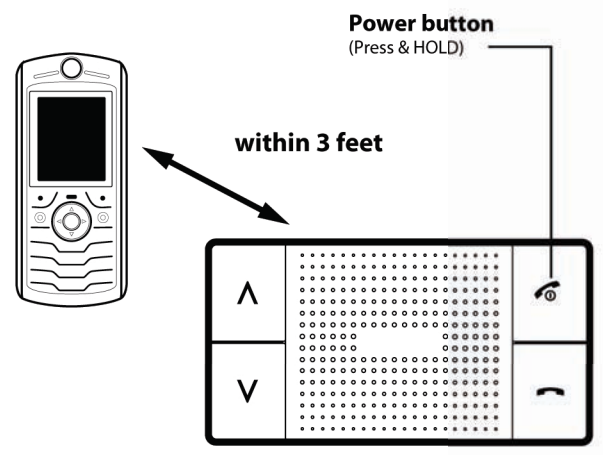


NOTE: To enter the **Pairing Mode**, you must press and **HOLD** the [] button for approximately 10 seconds.


5. Set your mobile phone to search for Bluetooth devices.

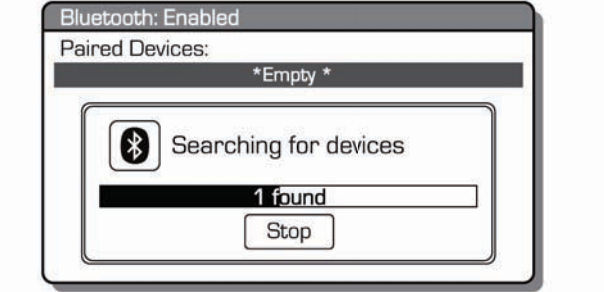


6. When the phone finds the speakerphone, confirm by selecting CK-3 from the list.

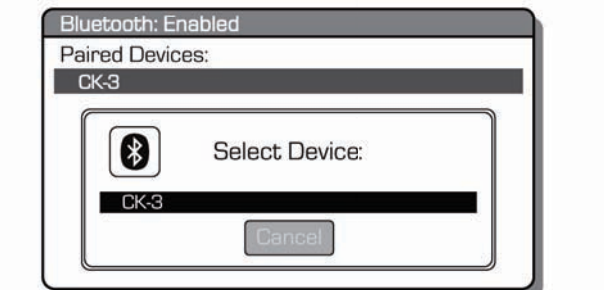

7. Enter passcode "0000" when prompted by the phone.

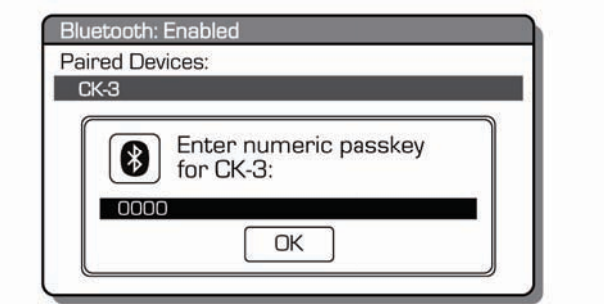


 OR depending on which model mobile phone you are trying to connect the speakerphone to, it may not be necessary to enter a passcode and the following message (or similar) may appear on your phone's display.

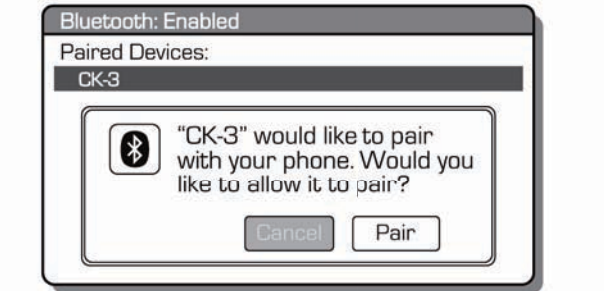


Select "Pair" to complete the pairing process.

8. Your mobile phone will confirm that the pairing was completed, and prompt you to accept the connection. Please select **"YES"** to connect the speakerphone to your mobile phone. If the pairing was successful, the speakerphone's indicator light flashes a steady blue.

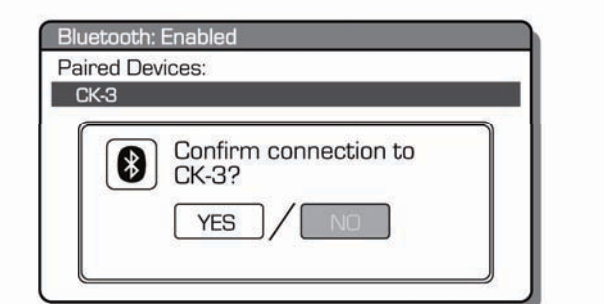

 9. When attempting to reconnect the speakerphone to your mobile phone, you may see the message below, and your mobile phone will prompt you to accept the connection request to the CK-3 speakerphone, and an option not to ask this again. Please accept the connection, and if you select "Don't ask this again", your phone will automatically accept future connection requests from your **Bluetooth Speakerphone**.

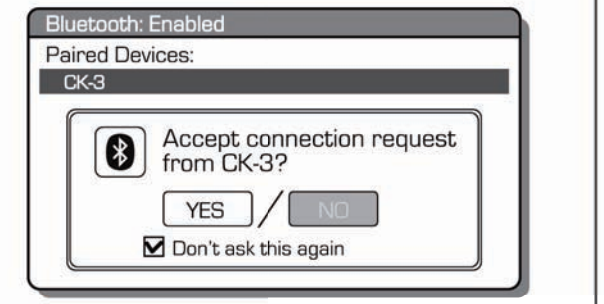

NOTE: The screenshots above are typical of many Bluetooth enabled phones in the market today, and are used to assist in the explanation of the pairing process. Your mobile phone's interface and interaction with the **Bluetooth Speakerphone** may slightly differ from the illustrations above.

Using your Bluetooth Speakerphone

Powering ON/OFF

- To turn **ON**, press and **HOLD** the [] button until the **BLUE LED** indicator light turns on.
- To turn **OFF**, press and **HOLD** the [] button until the **RED LED** indicator light briefly turns on and then shuts off.

Answering/Ending a call

- To answer a call, press and the [] button once.
- To end a call, press the [] button once.

To make a call
Dial the number and press the send button on your mobile phone, the call is automatically transferred to the speakerphone.

Adjusting the volume
Press the [A] or [V] button to adjust the volume to the desired level.

NOTE: You may also adjust the volume from your mobile phone's volume control.

Rejecting an incoming call
During an incoming call, press the [] button (the speakerphone will emit a confirmation tone).

Redialing the last number called (Dependent on your phone supporting this feature)
During Standby Mode, press the [] button 2 times (quickly, without pause). The last number called will be redialed.


Voice dial (Dependent on your phone supporting this feature)
During Standby Mode, press and quickly release the [] button. After the confirmation tone, say a name from your phone's contact list.

Transferring calls
To transfer calls between your **Bluetooth Speakerphone** and phone during a conversation, press and **HOLD** the [] button until you hear the confirmation tone. To transfer the call back to the **Bluetooth Speakerphone** press and **HOLD** the [] button once again until you hear the confirmation tone.

Microphone mute
During a conversation, press the [] button 2 times (quickly, without pause), the speakerphone will emit a confirmation tone. The microphone of your **Bluetooth Speakerphone** will be mute. While it is in mute mode, the speakerphone will beep every 5 seconds. To cancel the mute mode, press the [] button 2 times (quickly, without pause) once again, the speakerphone will emit a confirmation tone and turn on the microphone.

Using the Bluetooth Speakerphone in the car

- 1) Attach the Magnetic Visor Clip to the **Bluetooth Speakerphone** (make sure the clip is within the borders and securely attached).
- 2) Attach to your car's visor.
- 3) The microphone should be aimed towards the driver/user (see diagram below for correct position).

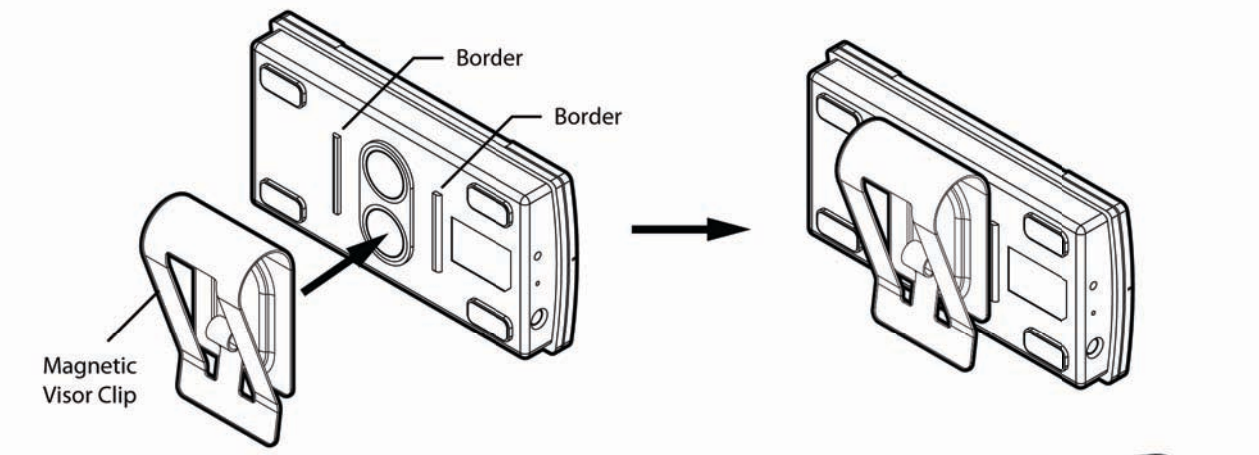

IMPORTANT:
To improve the way you are heard on the other end of your conversation, try lowering the volume on the **Bluetooth Speakerphone**.

Using the Bluetooth Speakerphone in the home or office

The Bluetooth Speakerphone may also be used on a desk at home or in an office. Pair the speakerphone with a Bluetooth enabled computer for online chatting (VOIP), or connect it to your Bluetooth enabled mobile phone for comfortable handsfree conversations.



Drive Safe



- Driving while talking on your mobile phone is dangerous, and illegal in many states.
- Check local laws regarding the use of a mobile handset and wireless speakerphone while driving.
- If you use the Bluetooth Speakerphone while driving, ensure your attention and focus remains on your driving.

Please use your mobile phone, and our product responsibly while driving!

Troubleshooting tips

I cannot get the Bluetooth Speakerphone into Pairing Mode

- Make sure the **Bluetooth Speakerphone** is turned off before beginning the pairing process.
- Press and hold the [] button (10 seconds) until the **RED** and **BLUE** lights flash alternately, this will signal that the speakerphone is in **Pairing Mode**, and ready to connect to your mobile phone.

My mobile phone is not able to pair with the Bluetooth Speakerphone

- Make sure that you fully charged the speakerphone before pairing.
- Keep your **Bluetooth Speakerphone** and mobile phone within **3 feet** of each other during the pairing process.
- Check that your phone's Bluetooth feature is turned **ON**.
- Try repeating the pairing process, see "Pairing the speakerphone with a Bluetooth enabled device."

After successfully pairing my mobile phone and Bluetooth Speakerphone, when I shut my phone and turn it on again, my headset did not automatically connect

- Try turning the speakerphone **OFF**, and then turning it **ON** again.
- Many mobile phones have an auto reconnect option when first attempting to reconnect to a newly paired Bluetooth device. Make sure you accept this option, so that your **Bluetooth Speakerphone** automatically reconnects to your mobile phone; check the user guide of your mobile phone for more information regarding this option.
- Try unpairing the speakerphone from your phone, and repeat the pairing procedure.

The speakerphone sometimes loses the connection with my mobile phone

- On some mobile phones, answering a call from the phone may cause it to disconnect from the **Bluetooth Speakerphone**. To reconnect, press and quickly release the [] button, the speakerphone will connect to the last connected device.

The person on the other end of my conversation cannot hear me clearly

Try lowering the volume on the **Bluetooth Speakerphone**, this should improve the way you are heard on the other end of your conversation.

FCC information

FCC Part 15
This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.
Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty information

Limited Warranty
In the unlikely event that this product is defective, or does not perform properly, you may within one (1) year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- **Provide proof of the date of purchase within the package (Dated bill of sale).**
- **Prepay all shipping costs to the authorized service center, and remember to insure your return.**
- **Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.**
- **Describe the defect or reason you are returning the product.**

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:
Southern Telecom, Inc.
ATTN: Returns Department
14-C 53rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

1-877-768-8483 (Toll Free)
Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)
or
via e-mail at
cs@southern telecom.com

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:
• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM INC.'S AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.



www.emersonphones.com
Distributed by Southern Telecom Inc. Brooklyn, NY 11232
© 2010 Southern Telecom Inc. All rights reserved.
Emerson and the G-Clef logo are registered trademarks of Emerson Radio Corp. Parsippany, New Jersey USA.
The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. All other trademarks are trademarks of their respective owners.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>