

 


# Emerson®

MODEL:  
**CK5888**

AM/FM SHOWER RADIO with DIGITAL CLOCK

## LOCATION OF CONTROLS AND INDICATIONS

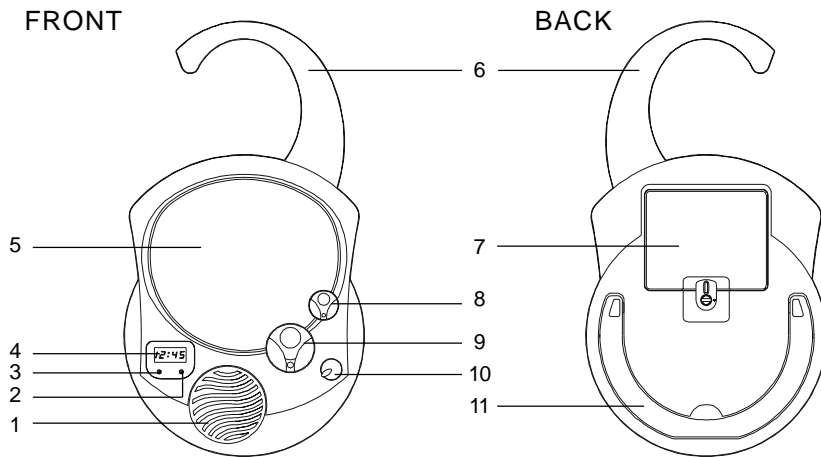


1. Speaker.
2. SET Button.
3. MODE Button.
4. Time/Date Display.
5. Fog Free Mirror.
6. Hanger.
7. Battery Compartment.
8. Power ON/OFF / Volume Control.
9. Tuning Control.
10. Band (AM/FM) Selector.
11. Stand.

### POWER SOURCE
 
#### Battery Installation:

To install the batteries, (1.) Open the battery compartment located on the rear of the unit by rotating the battery lock to the left or right. (2.) Lift off the cover from the bottom edge. (3.) Insert three 'AA' batteries (not included) according to the polarity diagram in the compartment. To put the battery compartment cover back on, slide the top edge in first, pressing down on the bottom edge until it locks in place. Rotate the lock back to the original position.

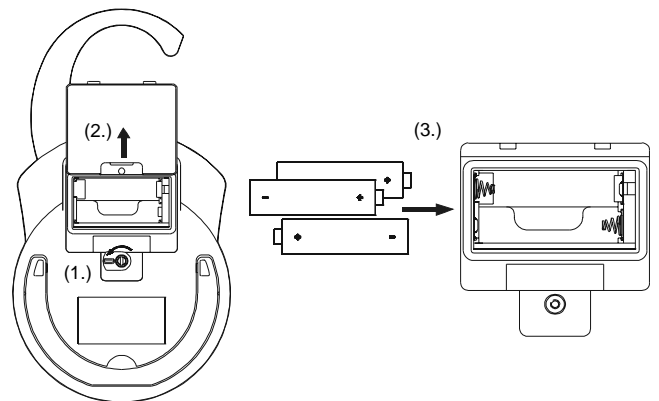

### BATTERY PRECAUTIONS

The precautions below should be followed when using batteries in this device:

 
1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. If the batteries are loaded incorrectly the unit will not operate.
3. Do not mix different types of batteries together (e.g. alkaline and carbon-zinc) or old batteries with fresh ones.
4. If the device is not be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture.

### CAUTION:

This unit is "Water Resistant" but it should not be placed in the direct path of the shower spray, and it should never be fully immersed in water.

### DESK OR TABLE TOP USE


This unit incorporates a stand which allows it to be used on a table or other flat surface. Just pull out the built in stand on the back of the cabinet and let the unit rest on a desk, table or other flat surface.

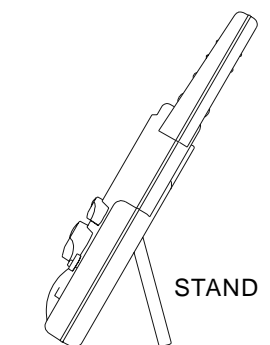



### TO SET THE DATE AND TIME

Note: Use the point of ball pen, a paper clip, or similar object to press the MODE and SET buttons.

 1. Press the MODE button twice; the month will appear.
2. Press the SET button to set the month.
3. Press the MODE button; the day will appear.
4. Press the SET button to set the day.

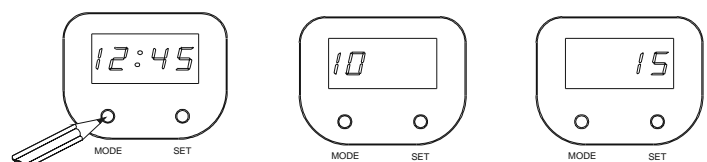

  5. Press the MODE button; the hour will appear.
6. Press the SET button to set the hour. Be sure to set correctly AM or PM.
7. Press the MODE button; the minutes will appear.
8. Press the SET button to set the minute.
9. Press the MODE button, then the SET button and the normal clock operation will begin.

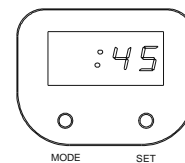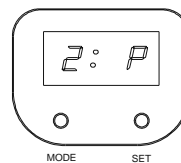

### TO AUTOMATICALLY CYCLE BETWEEN CLOCK AND DATE

To have the unit automatically cycle between the time and date every two (2) seconds, follow the steps below:

1. Press the MODE button once, the display will alternately show the time or date every two (2) seconds.
2. To cancel, press the SET button once and the seconds will appear. Continue pressing the MODE button until the time appears.

 
### TO MANUALLY CYCLE BETWEEN CLOCK, DATE AND SECOND

To manually cycle between the time, date and seconds, follow the steps below:

1. Press the SET button once and the date will appear.
2. Press the SET button again within two (2) seconds and the seconds will appear. If the SET button is not pressed within two (2) seconds, the display will revert to the time.
3. Press the SET button again to return to normal clock operation.

### TO LISTEN TO THE RADIO

1. Rotate the ON/OFF Volume control clockwise to turn the unit on.
2. Rotate the Band switch to select AM or FM.
3. Tune an AM or FM station by turning the Tuning control.
4. Adjust the Volume control as desired.
5. To turn the radio off, rotate the ON/OFF Volume control counter-clockwise until a click is heard.

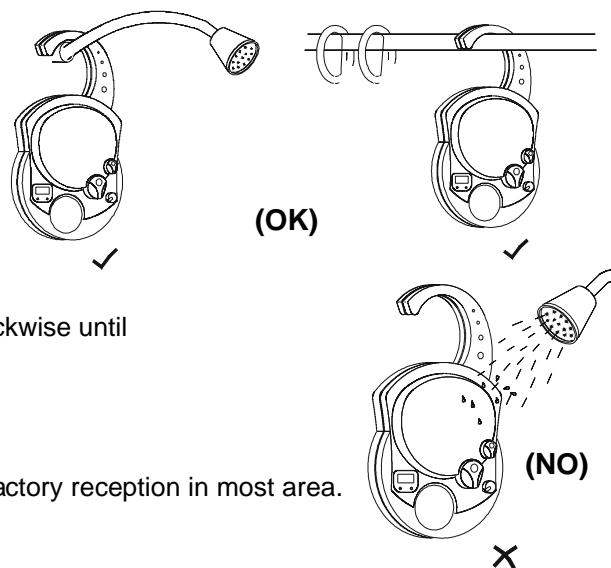

### ANTENNAS

This radio has built in AM and FM antenna which should provide satisfactory reception in most area.

### PROPER PLACEMENT OF YOUR SHOWER RADIO

You can use the built in hanger hook to hang the radio from the shower pipe or from the shower curtain rod. The radio will not be affected by moisture, steam, or occasional splashing, but it should not be placed in the direct path of the shower spray, and it should never be fully immersed in water.

### FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### LIMITED WARRANTY

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$5.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.  
1901 Diplomat Drive,  
Farmers Branch, TX 75234.  
1-800-898-9020

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

**AU898H**

Part No.: 16-2835  
109-01

Printed in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>