



CD CLOCK RADIO ***with DUAL ALARM***

OWNER'S MANUAL



CKD3810

Visit our web site at www.emersonradio.com




WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PRESENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p style="text-align: center;">WARNING</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.

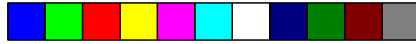

BEFORE WE BEGIN

Thank you.....

for purchasing this Emerson audio product. The Emerson brand is your assurance of quality, performance and value.

Our engineers have included many useful and convenient features in this product. Please be sure to read this Owner's Manual completely to make sure you are getting the maximum benefit from each feature.


This product was manufactured using the highest quality components and standards of workmanship. It was tested by Emerson inspectors and found to be in perfect working order before it left our factory. However, there is always the chance that some problem may occur because of rough handling during shipment to the retail store or to the final consumer.

If, after reading this Manual, you experience any problems with the operation of this product, please refer to the instructions for obtaining service at the end of this Manual. Emerson and Emerson retailers are committed to your satisfaction. Once again, thanks for purchasing this Emerson audio product.

For future reference, record the serial number in the space provided.

Model No: **CKD3810**

Serial Number: _____

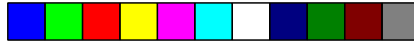

IMPORTANT NOTES

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM



This product contains a low power Laser Device.

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the power cord is properly installed.
- When moving the set, be sure to first disconnect the power cord and remove cords connected to other equipment.


FCC INFORMATION

This equipment has been tested and found to comply with the limits for a class B digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

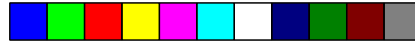

PREPARATION FOR USE


Unpacking And Set Up

- Remove the unit from the carton, and remove all packing materials from the unit.
- Save the carton and packing materials in case the unit ever needs to be returned for service. Using the original carton and packing materials is the only way to safely repack the unit for shipment.
- Remove any descriptive labels or stickers from the top or front of the unit. Do not remove any labels from the back or bottom of the cabinet.
- Remove any small strips of tape that may have been used to prevent the CD door from opening in transit.
- Open the CD door and remove the white card from the CD compartment. Discard it and close the CD door.
- Unwind the FM wire antenna and extend it to its full length.
- Unwind the AC power cord and extend it to its full length.
- Place the unit on a stable, level surface such as a table, desk, shelf, etc within easy reach of an AC outlet, out of direct sunlight, and away from sources of excessive heat, dust, moisture or humidity.

Power Supply

This unit is designed to operate only on normal 120V 60Hz AC house current. Operating this unit from any other power source may cause damage to the unit and such damage is not covered by your warranty.

This unit has a polarized AC plug with one wide blade and one narrow blade. This plug will only fit into a matching polarized AC outlet. This is a safety feature to reduce the possibility of electric shock. If this plug will not fit in your AC outlet, you probably have an outdated non-polarized outlet. You should have your outdated outlet changed by a qualified, licensed electrician. Do not file the wide blade on the plug, or use an adapter to make the plug fit into your outlet. This defeats the safety feature and could expose you to electric shock.


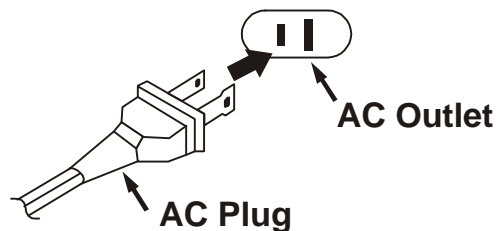




Battery Back Up System


This unit uses a single 9-Volt battery (not included) to maintain the time and alarm settings in the event that it is accidentally unplugged, or you experience a temporary power failure. We recommend that you install a well-known brand of Alkaline battery for longest life and best performance. To keep the battery back up system operational you should install a new battery every 6 to 9 months. Some people find it convenient to replace the back up batteries in their alarm clocks, clock radios, and smoke detectors too, at the beginning and end of Daylight Saving Time.

To install the back up battery turn the radio upside down and press on the small tab to remove the battery door. Connect the battery to the battery terminal, push the battery back into the compartment and replace the battery door.

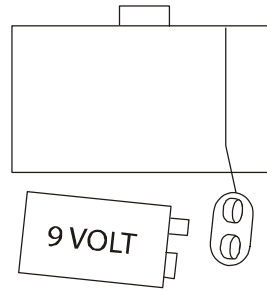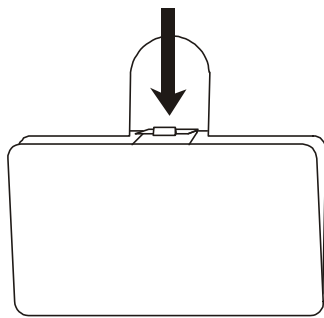


If the power is interrupted the clock display will go off but the battery will maintain the clock and alarm time settings. When power is restored the time display will be correct and your alarm setting will also be maintained.

If you notice that the time display is completely wrong you probably experienced a power failure with a weak or exhausted battery in the compartment. Reset the clock and replace the battery as soon as possible.

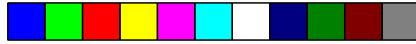



LOCATION OF CONTROLS AND INDICATORS

 TOP VIEW

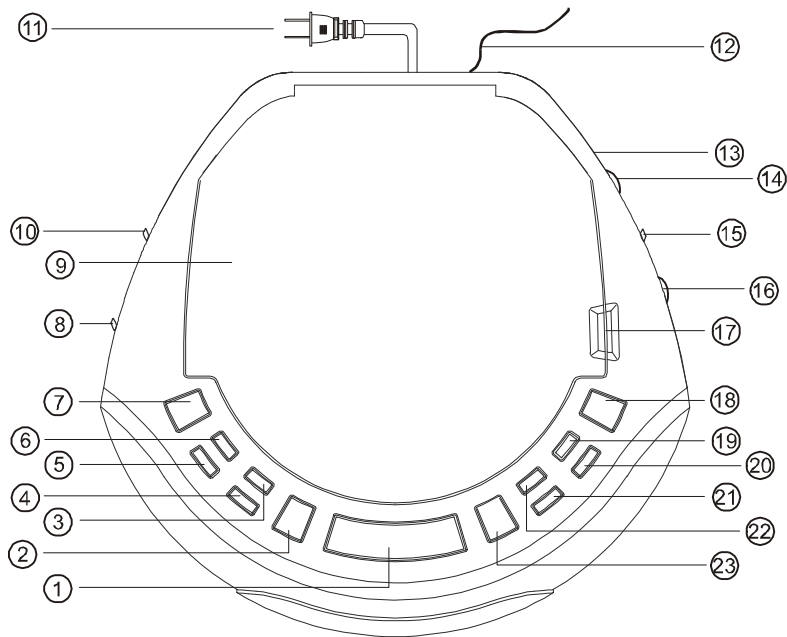

FRONT VIEW

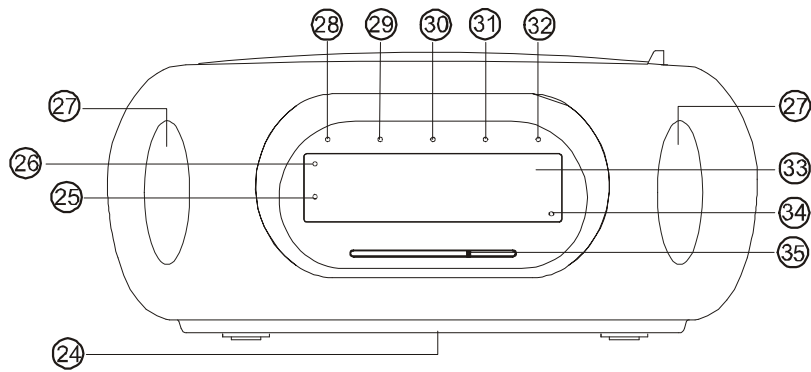 

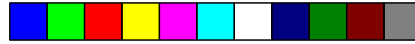

- 1.) SNOOZE Button.
- 2.) STOP ■ Button.
- 3.) REPEAT Button.
- 4.) Skip Forward Search ►► / HR (Hour) Button.
- 5.) Skip Reverse Search ◀◀ / MIN (Minute) Button.
- 6.) RANDOM Button.
- 7.) PLAY/PAUSE ►|| Button.
- 8.) ALARM MODE Switch (OFF-BUZZER-AUTO).
- 9.) CD compartment.
- 10.) ALARM SELECTOR Switch (AL 2 / AL 1+2 / AL 1).
- 11.) AC Power Cord.
- 12.) FM Wire Antenna.
- 13.) PHONES Jack.
- 14.) VOLUME Control.
- 15.) FUNCTION (CD-AM-FM) Selector Switch.
- 16.) TUNING Control.
- 17.) CD Compartment Open Tab.
- 18.) POWER On/Off Button.
- 19.) ALARM 2 Button.
- 20.) TIME Set Button.
- 21.) SLEEP Button.
- 22.) ALARM 1 Button.
- 23.) PROGRAM Button.
- 24.) Battery Compartment (At bottom cabinet).
- 25.) ALM (Alarm) 1 'On' Indicator.
- 26.) PM Indicator.
- 27.) Speakers.
- 28.) POWER 'On' Indicator.
- 29.) PROGRAM Indicator.
- 30.) RANDOM Indicator.
- 31.) REPEAT Indicator.
- 32.) FM STEREO Indicator.
- 33.) LED Display.
- 34.) ALM (Alarm) 2 'On' Indicator.
- 35.) Tuning Dial scale and pointer.



OPERATING INSTRUCTIONS

SETTING THE TIME OF DAY

- Connect the power cord to your AC outlet. Make sure to use an outlet that is always 'live'. Do not use an outlet that is controlled by a wall switch.
 - When the unit is plugged in for the first time the display will show "12:00" (AM).
- 1.) Press the TIME button. The display begins to flash.
 - 2.) Continue to hold the TIME button and press the ►► / HR button to set the hour. Be sure to observe the PM indicator to set the hour correctly. If the PM indicator is 'On' the hour displayed is PM.
 - 3.) Press the TIME and ◄◄ / MIN buttons together to set the minute correctly, then release all buttons.

SETTING THE WAKE UP TIMES

The unit has two separate wake up alarms that can be set and used independently.

- 1.) Press and hold the ALARM 1 or ALARM 2 button. The display will change from the respective time of day to wake up time and begin flashing.
- 2.) Continue to hold the ALARM 1 or ALARM 2 button and press the ►► / HR button to set the wake up hour. Set correctly for AM or PM.
- 3.) Continue to hold the ALARM 1 or ALARM 2 button and press the ◄◄ / MIN buttons to set the minute correctly, then release all buttons.

Whenever you want to check the respective wake up time setting simply press the ALARM 1 or ALARM 2 button. The display changes from time of day to wake up time as long as the ALARM 1 or ALARM 2 button is depressed.




LISTENING TO THE RADIO

- 1.) Press the POWER button to turn the unit 'On'. The power indicator appears in the display.
- 2.) Set the FUNCTION selector to the desired band, AM or FM.
- 3.) Turn the TUNING control to find the desired station. If you tune to a FM Stereo station the FM STEREO indicator light comes on.
- 4.) Adjust the VOLUME control to the desired level.
- 5.) When you are finished listening press the POWER button to turn the unit 'Off'. The power indicator disappears.

Antenna Information


AM

The AM ferrite bar antenna is inside the cabinet. If AM reception is unsatisfactory try turning the entire unit slightly until you find the position that provides the best reception for the desired station.

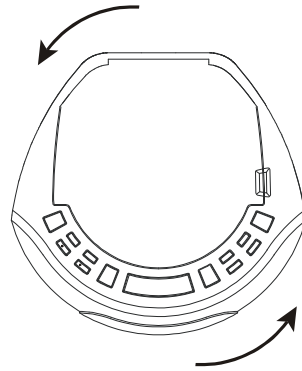

FM

Make sure the FM lead wire antenna is extended to its full length. You may have to vary the direction of the wire antenna to find the position that provides the best reception.

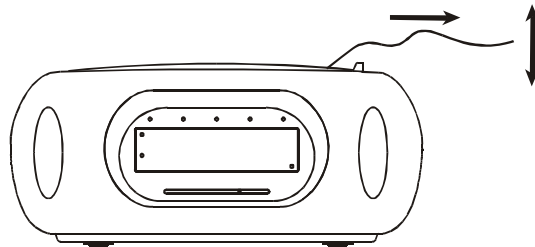



PLAYING COMPACT DISCS

Normal Playback

- 1.) Press the POWER button to switch the unit 'On'. The Power indicator appears in the display.
- 2.) Move the FUNCTION selector to the CD position.
- 3.) Open the CD door.
- 4.) Place your disc on the center spindle with the printed label side facing up. Press down near the center of the disc to make sure it is firmly 'seated' on the spindle, and then close the CD door.
- 5.) The disc will spin for a few seconds while the player reads the table of contents. The display will show the total number of tracks for a few seconds and then return to the correct time.
Note: If the disc is inserted incorrectly, or if the disc is badly scratched and cannot be read by the player, "no" will appear on the display for a few seconds, and then the display returns to the correct time.

- 6.) Press the PLAY/PAUSE ►|| button to begin playback. The display will briefly show "01" (Track 1) and playback begins on track 1. After a few seconds the display returns to the correct time.
- 4.) To Pause briefly during playback press the PLAY/PAUSE ►|| button again. The track number flashes briefly and the sound stops, but the disc continues to spin. Press PLAY/PAUSE ►|| again to cancel pause and resume playback.
- 5.) To skip forward or backward to other tracks press the ►► or ◀◀ buttons repeatedly until the desired track number appears in the display. Playback will begin on the selected track.
- 7.) To stop playback at any time press the STOP ■ button. After the last track has played the disc stops automatically. Open the CD door and remove your disc.



 
To Start Playback From A Specific Track

Load your disc and wait until the display shows the total number of tracks. Press the ►► or ◀◀ buttons to select the desired track. While the track number is still flashing press the PLAY/PAUSE ►► button. Playback will begin on the selected track and continue until the end of the disc.

High Speed Music Search

You can search rapidly forward or backward within a track to locate a specific musical passage. Depress and hold the ►► or ◀◀ buttons to begin high speed search. The display will show the current track and the player moves rapidly forward or backward. When you reach the desired passage release the ►► or ◀◀ button and normal playback resumes.

Note: The volume level is automatically reduced during high speed music search.



Random Playback

To listen to the tracks on a disc in random order:

- Turn the power 'On', set FUNCTION to CD, load your disc and wait until the total track number is displayed.
- Press RANDOM button once. The RANDOM indicator comes 'On'.
- Press PLAY/PAUSE ►► button. The player will select a track at random and playback begins on that track. The selected track number appears in the display for a few seconds.

After each track has played once the player stops automatically. To cancel random playback at any time, press the RANDOM button again. The RANDOM indicator goes 'Off'



Repeat Playback

You can program the player to repeat a single track or the entire disc continuously.

1 (One) Track Repeat

- Load your disc and wait for total track number display.
- Press REPEAT button once. The REPEAT indicator flashes.
- Press ►► or ◀◀ button to select the track to be repeated and then press the PLAY/PAUSE ►|| button. The selected track will be repeated continuously.

All Tracks Repeat

- Load your disc and wait for the total track number display.
- Press REPEAT button twice. The REPEAT indicator remains 'On'.
- Press PLAY/PAUSE ►|| button. All tracks will be repeated continuously.



To cancel repeat playback press the REPEAT button until the REPEAT indicator goes 'Off', or press the STOP ■ button.





Programmed Playback

The CD player in this unit has a 20 track programmable memory which allows you to program any disc to play just the tracks you want to hear in the exact order that you want to hear them. You may program a track or tracks to play more than once if desired.

Note: Programming can only be done while the player is in the Stop mode. If a disc is playing press the STOP ■ button to stop playback before performing the programming steps below.

- 1.) Turn the unit 'On', select the CD function and load the desired disc in the player. Wait until the player reads the disc and the display shows the total track number.
- 2.) Press the PROGRAM button. The PROGRAM indicator flashes and the display shows "PO1" indicating that you can select the first track to be programmed.
- 3.) Press the ►► or ◀◀ buttons to select the first track. When the desired track number appears on the display press the PROGRAM button again. The selected track is entered in program memory number 1 and the display advances to "PO2".
- 4.) Press the ►► or ◀◀ buttons to select the next track to be programmed, and press the PROGRAM button to enter that track in the memory.
- 5.) Repeat step 4 to program up to 20 tracks in the memory.
- 6.) After you have programmed all the desired tracks press the PLAY/PAUSE ►► button to begin programmed playback. The PROGRAM indicator stops flashing and remains 'On'. Playback will begin on the first track you programmed and continue until all programmed tracks have been played.




Important Notes About Programmed Playback

- After you enter the last track in the memory the PROGRAM indicator will continue flashing for an additional 10 seconds. If you press the PLAY/PAUSE ►|| button during that 10 second period, playback of the programmed tracks will begin. If the PROGRAM indicator stops flashing before you press the PLAY/PAUSE ►|| button, the player exits the programmed playback mode and playback will begin on track 1 as usual. To play the programmed tracks press the PROGRAM button again and then press the PLAY/PAUSE ►|| button.
- After all programmed tracks have played the player stops but the PROGRAM indicator remains 'On' and the program remains in the memory. If you press the PLAY/PAUSE ►|| button the programmed tracks will play again.
- To clear the program from the memory after the disc stops press the PROGRAM button and then press the STOP ■ button. The PROGRAM indicator goes 'Off' and the program is cleared. Opening the CD door also clears the program. However the program cannot be cleared by pressing the POWER button to shut the unit 'Off', or by switching to the radio function.

Program Repeat

You may use the Program and Repeat features together to repeat a programmed sequence of tracks. Simply enter the desired tracks in the program memory as described above, then press the REPEAT button twice to select 'Repeat/All' (the Repeat and Program indicators will both come 'On'). Press PLAY/PAUSE ►|| to begin Program Repeat playback.

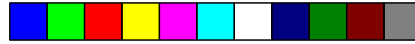

ALARM OPERATION

This unit gives you the option of waking to an electronic buzzer alarm, the AM/FM radio, or the CD player. You may also program the CD player to wake you to a specific track or series of tracks if desired.

NOTE: Whichever alarm mode you select – Buzzer, Radio OR CD – will apply to both alarms.

First press the ALARM 1 or ALARM 2 button to check the wake up time setting. Adjust the wake up time if necessary. Refer to “SETTING THE WAKE UP TIMES” on page 8.

Wake To Alarm

- 1.) Set the ALARM SELECTOR switch to AL 1, AL 2, or AL 1+2.
- 2.) Set the ALARM MODE switch to ‘BUZZER’. The ALM 1, ALM 2, or both indicators appears in the display.
- 3.) At the selected wake up time the electronic buzzer turns ‘On’. It will continue for 60 minutes and then turn ‘Off’ and reset itself for the following day.
- 4.) To stop the buzzer immediately, press the POWER button. The buzzer stops and the alarm resets itself for the following day.
- 5.) To cancel the alarm completely set the ALARM MODE switch to ‘Off’. The Alarm indicator disappears.

Wake To Radio

- 1.) Set the ALARM SELECTOR switch to AL 1, AL 2, or AL 1+2.
- 2.) Turn the radio ‘On’, tune to the desired band and station, adjust the volume to the desired level to wake you up, and turn the radio ‘Off’ again.
- 3.) Set the ALARM MODE switch to ‘AUTO’. The ALM 1, ALM 2, or both indicators appears in the display.
- 4.) At the selected wake up time the radio turns on. It will play for 60 minutes, then shut off and reset itself for the following day.



- 5.) To stop the radio immediately, press the POWER button. The radio stops and the alarm resets itself for the following day.
- 6.) To cancel the alarm completely set the ALARM selector to 'Off'. The Alarm indicator disappears.

Wake To CD

- 1.) Set the ALARM SELECTOR switch to AL 1, AL 2, or AL 1+2.
- 2.) Load the desired disc in the player, select the CD function, turn the unit 'On' and press PLAY/PAUSE ►|| to begin playback. Adjust the volume to the desired level to wake you up. Press STOP ■ button to stop playback, and turn the POWER 'Off' again.
- 3.) Set the ALARM MODE switch to 'AUTO'. The ALM 1, ALM 2, or both indicators appears in the display.
- 4.) At the selected wake up time the CD player turns on. It will play for 60 minutes or until the end of the disc, whichever comes first, and then shut off and reset itself for the following day.
- 5.) To stop the CD player immediately, press the POWER button. The disc stops and the alarm resets itself for the following day.
- 6.) To cancel the alarm completely set the ALARM MODE switch to 'OFF'. The ALM indicator disappears.

You can also use the "Wake To CD" function to wake up to one specific track or to a series of programmed tracks as follows:

- Program the specific track or series of tracks as usual.
Refer to "Programmed Playback" on page 13 if necessary.
- Press the PLAY/PAUSE ►|| button to begin programmed playback and adjust the volume to the desired level to wake you up.



- Press STOP ■ button to stop playback, and then press the POWER button to turn the unit 'Off'.
- Set the ALARM MODE switch to 'AUTO' and make sure the FUNCTION selector remains set to CD. The ALM 1, ALM 2, or ALM 1 and ALM 2 indicators appear in the display.
- At the selected wake up time the CD player will begin to play the specific track or series of tracks that you programmed. Playback will continue for 60 minutes or until all programmed tracks have been played, whichever comes first, and then shut off and reset itself for the following day.
- To stop playback immediately press the POWER button to turn the unit 'Off'. The alarm resets itself for the following day.
- To cancel the alarm completely set the ALARM MODE selector to 'Off'. The ALM indicator disappears.



Snooze/Repeat Alarm

After the alarm turns on in the morning you can press the SNOOZE button for a few extra minutes sleep. The alarm will stop for approximately 6 minutes and then come on again. Snooze operation can be repeated several times if desired, but after one hour the alarm will not turn 'On' again.





Sleep To Music Timer

You can use the sleep timer to fall asleep to the radio or CD player for 90, 60, or 30 minutes and have the unit shut off automatically.

- Turn the power 'On' and operate the radio or CD player as usual. Adjust the volume to the desired level, but remember that the level you select for 'Sleep To Music' is the same level you will hear when the alarm turns 'On' in the morning.
- Press the SLEEP button to select the desired amount of sleep time as follows:

	<u>DISPLAY</u>	<u>MEANING</u>
FIRST PRESS	"_ _"	Sleep Off
SECOND PRESS	"90"	90 Minutes Till Shut Off
THIRD PRESS	"60"	60 Minutes Till Shut Off
FOURTH PRESS	"30"	30 Minutes Till Shut Off
FIFTH PRESS	"_ _"	Sleep Off

 
- When the display shows the desired amount of time, stop pressing the SLEEP button. After 5 seconds the display changes back to the correct time. The radio or CD player will continue until the sleep timer counts down to "00" and then shut off automatically.
- To stop the radio or CD player before the sleep timer counts down to "00", press the POWER button to turn the unit 'Off'.

Note:

If you set the sleep time for either 90 or 60 minutes and you are playing a CD that is only 48 minutes long, for example, playback will stop at the end of the disc.

STEREO HEADPHONE JACK

For private listening without disturbing others connect a set of stereo headphones (not included) to the PHONES Jack on the right side cabinet. The built-in speakers automatically shut off when stereo headphones are connected to the headphone jack. When using stereo headphones always start with the volume control set to a low level and gradually increase until you find the desired level.





CARE AND MAINTENANCE



There are no user serviceable parts inside the unit. Do not attempt any adjustments other than those described in the manual. Refer all other problems to qualified service personnel.

Compact Disc Care

- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- Treat the disc carefully. Handle the disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the disc.

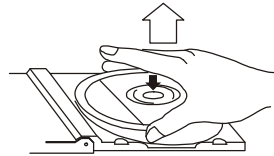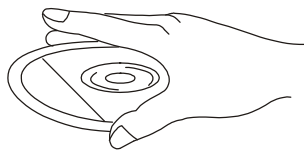

- Do not attach any tape, stickers, etc. to the disc label.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
- When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.

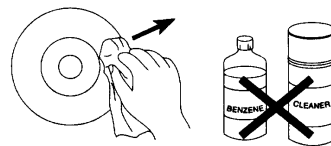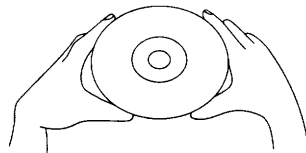




Care Of The Cabinet

- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will mar the finish of your unit.

Caution:

 Never allow any water or other liquids to get inside the unit while cleaning.





TROUBLESHOOTING GUIDE

Should this unit exhibit a problem, check the following before seeking service.

Symptom	Possible Cause	Solution
Radio		
Noise or sound distorted on AM or FM broadcasts.	Station not tuned properly for AM or FM.	Retune the AM or FM broadcast station.
	FM: FM Wire antenna is not extended.	Extend FM Wire antenna.
	AM: The bar antenna is not positioned correctly.	Reposition the unit until best reception is obtained.
FM STEREO indicator does not light.	You have tuned to a mono station.	Select another FM stereo station.
AM or FM, no sound.	FUNCTION switch is not set to AM or FM.	Set FUNCTION switch to AM or FM as desired.
	Volume at minimum.	Increase Volume.
Compact Disc Player		
CD Player will not play.	FUNCTION switch is not set to CD.	Set FUNCTION switch to CD.
	CD is not installed or installed incorrectly.	Insert CD with label side up.
CD skips while playing.	Disc is dirty or scratched.	Wipe disc with cloth or use another disc.

 


TO FIND THE LOCATION AND PHONE NUMBER OF YOUR NEAREST SERVICE CENTER PERMITTED TO PERFORM WARRANTY...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE PLEASE CALL:
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:
Emerson Radio Corp.
Consumer Affairs Dept.
1901 Diplomat Drive,
Farmers Branch, TX 75234.



**EMERSON RADIO CORP.
LIMITED WARRANTY**

What does this warranty cover ?

Any manufacturing defects in original material, including original parts and workmanship, under normal use and conditions.

For how long?

For a period of ninety (90) days from the date of original purchase in the U.S.

What will we do ?

If you need service under this Warranty, and you provide us with the dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion.

How do you make your warranty claim ?

If it becomes necessary to repair your unit, you can obtain the name and mailing location of a Depot Repair Facility by dialing **1-800-695-0098**. You should pack your unit in a well-padded heavy corrugated box, enclose your check or money order payable to the Depot Repair Facility in the amount of **\$9.00** to cover the return shipping and handling costs, and enclose a copy of your proof of purchase (warranty service will not be provided without a dated proof of purchase). Finally, you should ship the unit prepaid via UPS or parcel post (insured).

What does your warranty not cover ? Your warranty does not cover the following :

- Damage from negligence, misuse, abuse, accident, or failure to follow operating instructions.
- Use of product in a commercial application or rentals.
- Changes or repairs by anyone other than an authorized Depot Repair Facility.
- Damage because your unit is improperly connected to the equipment of other manufacturers.
- Unit on which the serial number has been defaced, modified or removed.
- Damage to equipment not properly connected to the product.
- Cost incurred in shipping your unit to and from an authorized Depot Repair Facility.
- Ordinary adjustments which you can perform as outlined in the owner's manual.
- Signal reception problems caused by external antenna or cable systems.
- Products purchased, used, serviced, or damaged outside of the United States.
- Damage to compact discs or cassettes.

What other limitations apply to your warranty ?

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT WILL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

How does state law apply to your warranty ?

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

AU898F



EMERSON RADIO CORP.



EMERSON
Part No.: 16-2855
203-01

Printed in China



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>