

WIRELESS HEADPHONES



Owner's Manual

Location of controls



- 1. USB Charging Port
- 2. Microphone
- 4. [PLAY / PAUSE] button

 
3. [NEXT] button

- 5. [VOLUME DOWN] button
- 6. [ON / OFF] button
- 7. [PREVIOUS] button
- 8. [VOLUME UP] button
- 9. **LED** indicator ring

Pairing the EM514



Wireless Headphones

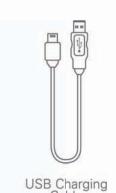

Owner's Manual

@Emerson

WIRELESS HEADPHONES

Owner's Manual

In the box

Charging the EM514


1. Connect the small end of the included USB charging cable into the Mini USB charging port of the EM514

4. The RED [LED indicator Ring] shuts off when the

EM514 is fully charged (approximately 4 hours).

- 2. Connect the other end of the USB cable to your Computer's USB port.
- 3. The [LED indicator Ring] illuminates red while


USB port

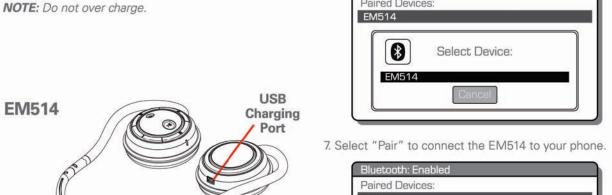




Make sure the EM514 is turned off.


- 3. Press and HOLD the [ON/OFF] button for 8 seconds until the [LED indicator Ring] light flashes RED
- 4. The EM514 is now in Pairing Mode and ready to connect to your mobile phone.

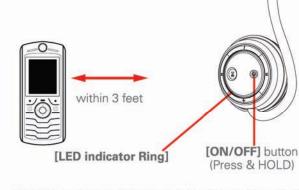


- NOTE: To enter the Pairing Mode, you must press and HOLD the [ON/OFF] button for approximately 8 seconds. This must be done while the headphones are powered off. Pairing mode will last 2 minutes. After two minutes the headset will return to standby mode.
- 5. Set your mobile phone or other Bluetooth enabled device to search for Bluetooth devices

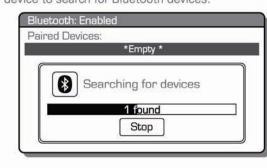


6. When the phone finds the EM514, confirm by selecting EM514 from the list.

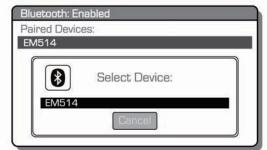

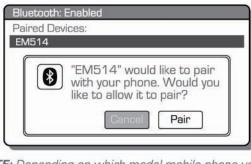

NOTE: Depending on which model mobile phone you are trying to connect the EM514 to, it may be necessary to enter a passcode and the following message (or similar) may appear on your phone's

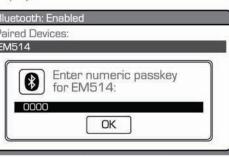


Enter passcode "0000" if prompted by the phone.


NOTE: Make sure you charge your EM514 for a full 8 hours before using it for the first time.

USB Cable

8. Your mobile phone will confirm that the pairing was 2. Keep your EM514 and mobile phone within 3 feet of completed, and prompt you to accept the connection. Please respond YES to connect the EM514 to your mobile phone. If the pairing was successful, the EM514's [LED indicator Ring] flashes blue and BLUE alternately. slowly every 4 seconds.

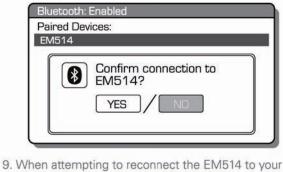

mobile phone, you may see the message below, and your mobile phone will prompt you to accept the connection request to the EM514, and an option not to ask this again. Please accept the connection, and if you select "Don't ask this again", your phone will automatically accept future connection requests from vour EM514.

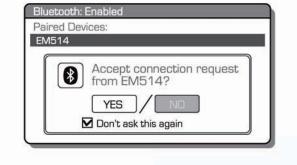

NOTE: The screenshots above are typical of many Bluetooth enabled phones in the market today and are used to assist in the explanation of the pairing process. Your mobile phone's interface and interaction with the EM514 may be slightly different from the illustrations above.

To pair the EM514 with a SONY PlayStation 3, follow the These EM514 allows you to listen (in full stereo) and instructions below:

- Scroll to and select "Manage Bluetooth Devices".

<REGISTER EM514 to PS3>

Put your EM514 into pairing mode. (See "Pairing the EM514 with a Bluetooth enabled

- Select "Start Scanning" from the PS3 menu. 2. Once the PS3 has discovered the EM514, the
- 3. The PS3 will ask for a passkey. Enter [0000] then get back to the previous menu

NOTE: "Input Device" is the microphone, and determines the method of how others will hear PS3 audio and others speaking.

To test the connection, speak into the EM514 and you will see the bars above the "Microphone Level" moving, if not, repeat the pairing process.

Press "OK" to confirm the new settings. You are now ready to use the EM514 with your PS3 Entertainment System. If you would like to hear the PS3 audio through vour TV or Audio System, scroll to "Output Device" and switch to "System Default Device".

For further assistance with Bluetooth settings on your PS3 please refer to your PS3 instruction manual.

sing your Wireless Headphones

until the BLUE [LED indicator Ring] blinks.

- To turn OFF, press and hold the [ON/OFF] button until the RED [LED indicator Ring] blinks and shuts off.
- When your EM514 is powered on and connected, the every 4 seconds.

Answering/Ending a call

To end a call, press the [ON/OFF] button once.

If the EM514 is powered on and a call comes in the

Dial the number and press the send button on your

Adjusting the volume

Press the [VOLUME UP] or [VOLUME DOWN] button to adjust the volume to the desired level.

- . Go to the PS3 main menu, scroll to and select
- 2. Scroll to and select "Accessory Settings".
- been registered. Do you want to register it?", then select "YES".

- select "OK". Now press [O] (the PS3 circle button) to

Powering ON/OFF • To turn ON, press and hold the [ON/OFF] button

- BLUE [LED indicator Ring] illuminates periodically

• To answer a call, press the [ON/OFF] button once.

EM514 will beep to indicate the incoming call.

mobile phone, the call is automatically transferred to the

NOTE: You may also adjust the volume from your mobile phone's volume control. A beep will be heard when maximum volume is reached.

Pairing with SONY Playstation® (PS3™) Stereo Bluetooth

- <SET ACCESSORY to BLUETOOTH on PS3>
- 1. The menu will ask: "The Bluetooth device has not

- screen will read "Select the Bluetooth device to
- register", then select "EM514"
- Scroll to and select "Audio Device Settings" to change the "Input Device" to "EM514".

you speak. By default, the "Output Device" will now switch to "EM514". "Output Device" is the audio, and determines how you will hear the

control* the music on your Bluetooth enabled mobile

supports the following Bluetooth profiles:

phone, gaming console, computer or mp3 player and

- A2DP Advanced Audio Distribution Profile • AVRCP - Audio/Video Remote Control Profile
- HSP Headset Profile • HFP - Handsfree Profile

To use the EM514 to listen/control music, your Bluetooth enabled device must support the A2DP and AVRCP profiles. Please refer to the user guide of your Bluetooth enabled device for more information

*The EM514 wireless headphones are compatible with any brand of Bluetooth-enabled phone or music device that supports Advanced Audio Distri-bution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

In order for Bluetooth devices to communicate with one another properly, they must utilize the same Bluetooth profile. To determine the profiles supported by your device (mobile phone, gaming console, computer or mp3 player), please refer to the device's user guide.

Certain Bluetooth features including those listed may not be supported by all compatible Bluetoothenabled devices, and/or the functionality of such features may be limited in certain devices.

Playing music

the music player or application on your device, then quickpress the [PLAY / PAUSE] button. Once playback has begun, you can control the music or answer phone calls from the control buttons of the FM514 (not all mobile phones support the control of music using Bluetooth).

NOTE: Some phones or bluetooth enabled media players require that you first quickpress the [PLAY / PAUSE] button on your device before you can control the music with the EM514.

Play/Pause*

Press the [PLAY / PAUSE] button to pause the music. To resume music playback, press the [PLAY / PAUSE] button again.

Skipping songs*


Press the [PREVIOUS] button to go to the previous track. Press the [NEXT] button to go to the next track.

Adjusting the volume

Press the [VOLUME UP] or [VOLUME DOWN] button to adjust the volume to the desired level.

NOTE: You may also adjust the volume from your mobile phone's volume control. A beep will be heard when maximum volume is reached.

Location of music controls

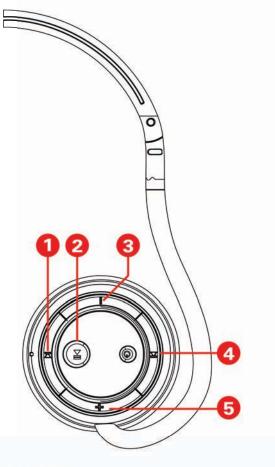

1. [NEXT] button

- 2. [PLAY / PAUSE] button
- 3. [VOLUME DOWN] button

4. [PREVIOUS] button

5. [VOLUME UP] button

Storing your Bluetooth EM514

oubleshooting tips

I can pair the EM514 with my Bluetooth device

Make sure your Bluetooth device supports A2DP

I cannot get the EM514 into Pairing Mode.

• To enter the Pairing Mode, you must press and

HOLD the [ON/OFF] button for approximately 8

eadphones are powered off. Pairing mode will

last 2 minutes. After two minutes the headset

Make sure the EM514 is turned off before

seconds. This must be done while the

beginning the pairing process.

will return to standby mode.

To enjoy wireless music on your EM514, you must open Fold the EM514 as shown below, when traveling with or storing your EM514.

Folded View

Safety information

egal Information

The shipping address of the authorized service center is: CAUTION: Do not use this device while operating a motor vehicle. Although the EM514 offers handsfree operation, they cover both ears of the Southern Telecom, Inc.

ATTN: Customer Service - 2nd Floor 14-C 53rd Street Brooklyn, NY 11232

product, please contact our customer service department at:

Monday - Thursday: 9AM - 5PM (EST) Friday: 9AM - 3PM (EST)

Warranty service not provided This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

via e-mail at

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT ALL OTHER WARRANTIES EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED, NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM INC. IT'S AGENTS, OR EMPLOYEES HALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE COPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY S THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN ELECOM INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR ONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER F WARRANTIES AND LIMITED WARRANTY ARE GOVERNED THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO TH EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

© 2012 Southern Telecom Inc. All rights reserved.

Emerson Radio Corp. Parsippany, New Jersey USA. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.

Emerson and the G-Clef logo are registered trademarks of

SONY PlayStatiion® & PS3™ are either trademarks or registered

All other trademarks are trademarks of their respective owners.

www.emersonphones.com Your product will be repaired or replaced, at our option, for the same

trademarks of SONY.

some electronic devices or RF radio products are Should you have any questions or problems concerning this required to be switched off. These could include airplanes, hospitals, blasting areas, and potentially explosive atmospheres. (1-877-768-8483 (Toll Free)

• Do not use these EM514 while driving.

Observe all signs in the designated areas where

user, and are not suitable for use when driving.

tion is subject to the following two conditions:

) this device must accept any interference received, including interference that may cause undesired

his device complies with Part 15 of the FCC Rules. Opera-

(1) this device may not cause harmful interference, and

Warning: Changes or modifications to this equipment not

expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply vith the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and

Connect the equipment into an outlet on a circuit

Consult the dealer or an experienced radio/TV

technician for help.

Limited warranty

Limited Warranty

center for repair or exchange.

(Dated bill of sale).

the package.

TO OBTAIN WARRANTY SERVICE:

and remember to insure your return.

different from that to which the receiver is connected.

In the unlikely event that this product is defective, or does

original date of purchase return it to the authorized service

Provide proof of the date of purchase within the package

· Prepay all shipping costs to the authorized service center,

a telephone contact number, and the defective unit within

· Describe the defect or reason you are returning the product.

or similar model of equal value if examination by the service center

determines this product is defective. Products received damaged

as a result of shipping will require you to file a claim with the carrier.

• Include a return shipping address (no P.O. Boxes),

Make sure that you fully charged the EM514 before

My mobile phone is not able to pair with the

- Keep your EM514 and mobile phone within 3 feet
- of each other during the pairing process. Check that your phone's Bluetooth feature is turned ON. Try repeating the pairing process, see "Pairing the

After successfully pairing my mobile phone and EM514, when I shut my phone and turn it on again, my EM514 did not automatically

- Try turning the EM514 OFF, and then turning them ON again.
- Many mobile phones have an auto reconnect option when first attempting to reconnect to a newly paired Bluetooth device. Make sure you accept this option, so that your EM514 automatically reconnects to your mobile phone (check the user guide of your mobile

phone for more information regarding this option).

I hear distortion, and the sound quality is poor

Try unpairing the EM514 from your phone, and

- repeat the pairing procedure.
- Try keeping the EM514 closer to the Bluetooth enabled device. · Check that the battery is charged enough.

Try adjusting the volume by using the [Control Wheel] on your EM514; make sure the volume on your mobile

The sound is very low.

phone is turned up as well.

THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.



Distributed by Southern Telecom Inc. Brooklyn, NY 11232 not perform properly, you may within one (1) year from your

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com