


Digital Cordless Phone



DECT 6.0



 
Handset

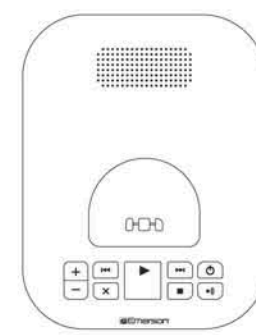


Base



Line Cord

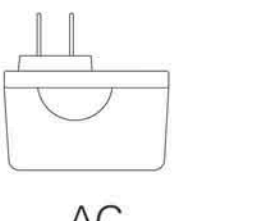

AC Adapter

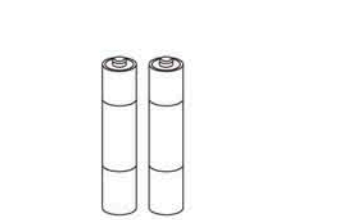

(4) AAA Rechargeable Ni-MH Batteries



User Guide

User Guide EM7120-FD

The handset / Using the phone

Standby Screen

PHONEBOOK/ SCROLL UP/ INCREASE VOLUME
Scroll up/ increase speaker volume

CLEAR/BACK
Delete character/sub

END CALL/ ON/OFF
End call/ turn handset on and off

CALL LIST/ SCROLL DOWN/ DECREASE VOLUME
Open call list scroll down/ decrease speaker volume

/ CHANGE CASE
Change letters from upper case to lower case

MUTE
Mute/mute microphone during a call

LOCK/UNLOCK
Lock and unlock the keypad

MENU/OK
Enter menu/ confirm option

TALK/FLASH
Make answer call/ Use flash

INTERCOM
Press and hold to make internal call

SPEAKER
Activate for hands-free use during a call

Icons

- Indicates signal strength. Flashes when handset is not registered to the base or if you go out of range.
- Indicates a missed call.
- Steady when making an outgoing call. Flashes to indicate an incoming or internal call.
- Indicates an incoming call when viewing the calls list.
- Indicates an outgoing call when viewing the calls list.
- Hands-free is on.
- Handset ringer is off.
- Answering machine is on.
- Indicates new voicemail messages received. Off when there are no messages.
- Indicates you can scroll through a list or adjust the volume in talk mode.
- Indicates more text after the displayed information.
- Battery is fully charged.
- Battery is partially charged.

Menu

Use the menu to customize various settings such as ringer volume, ring tones, language, display settings and more.

- Press the **menu** button to enter the menu.
- Use the **▲** and **▼** buttons to navigate from the following selections: Phonebook, Handset, Base Settings, Time, and Tools.
- Press the **enter** button to select an option.
- Press the **back** button to go back.

Menu map

Function	Phone Setup	Services	Answer Machine
View	Sounds	Call list type	Play
Edit	Ring volume	Area code	Delete all
Add new	Flash time	Key tone	Announcement
Delete	Key tone	Dial mode	Voice answer
Delete all	Docking tone	Auto clock	Ring delay
	Battery tone	Repeat	Remote access
	Battery tone	Unregister	Voice language
	Battery tone	Reset	Language

Installing the batteries

- Open the battery cover on the back of the handset.
- Insert two (2) of the AAA rechargeable batteries with the (+) and (-) poles correctly aligned into the battery compartment.
- Close the battery cover.
- Place the handset on the base to charge.

HANDSET RANGE

The unit has a range of up to 200 yards outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 100 feet. Thick concrete and stone walls can severely affect the range.

SIGNAL STRENGTH

The **signal strength** icon on your handset indicates that you are within range of the base. When out of range of the base, the **signal strength** icon disappears. If you are on a call, you will hear a warning beep. The line will hang up if the handset moves out of range of the base. Move closer to the base. The handset will automatically reconnect to the base.

Before using for the first time, charge the handset for 12-16 hours

LOCATION:

You need to place your EM7120-FD base within 3.5 feet of a socket outlet and telephone wall socket so that the cables will reach. The socket-outlet should be installed near the equipment and should be easily accessible. Make sure that it is at least 3 feet away from other electrical appliances to avoid distortion or interference. Your EM7120-FD works by sending radio signals between the handset and base. The strength of the signal depends on where you place the base. Placing it as high as possible ensures the best signal.

HANDSET RANGE


The unit has a range of up to 200 yards outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 100 feet. Thick concrete and stone walls can severely affect the range.

SIGNAL STRENGTH

The **signal strength** icon on your handset indicates that you are within range of the base. When out of range of the base, the **signal strength** icon disappears. If you are on a call, you will hear a warning beep. The line will hang up if the handset moves out of range of the base. Move closer to the base. The handset will automatically reconnect to the base.

Connecting

- Plug one end of the line cord into the jack at the back of the phone's base, and the other end into a modular phone jack.

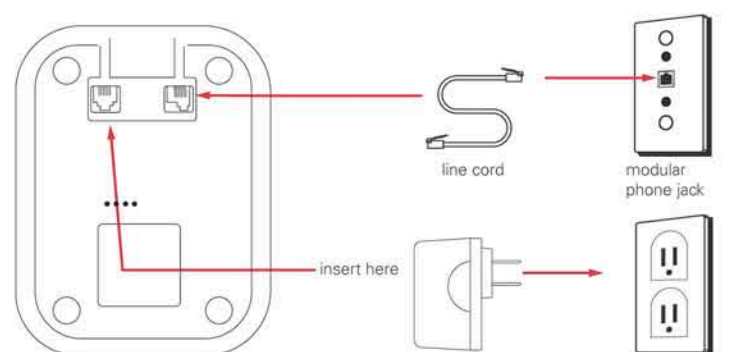

- Plug the pin of the AC adaptor into the DC9V jack on the bottom of the base as shown above, and plug into a standard AC outlet.
- The handset will display "Searching", wait until "Handset 1" is displayed.
- Press **enter** on the handset and confirm you hear the dial tone.

Phone setup

Restoring your phone to default settings

You can restore your EM7120-FD to its default (original) settings. All the handsets that are registered to the base will be retained.

NOTE: Resetting your phone to its default settings will delete all entries in the Phonebook and Calls list. All handset and base settings will also be reset.

- Press **services**, scroll **▼** to **SERVICES** and press **enter**.
- Scroll **▼** to **Reset** and press **enter**.
- Once "Confirm?" is displayed, Press **enter**.

Phone setup

Selecting Ring Tones

- Press **enter** to enter **PHONE SETUP**.
- Press **enter** again to display **SOUNDS**.
- Press **enter** again to select **RING VOLUME**.
- Scroll down using **▼** button to display **RING TONES**.
- Press **enter**. Scroll **▲** or **▼** to select your desired melody.
- Press **enter** to confirm your selection.

NOTE: Use the **back** button to return to the previous menu or press **enter** to return to the home screen.

Ringer Volume

- Press **enter** to enter **PHONE SETUP**.
- Press **enter** to display **SOUNDS**.
- Press **enter** again to select **RING VOLUME**.
- Press **enter** to enter the **RING VOLUME** menu. Use **▲** or **▼** to select desired ringer volume.

Use the **back** button to return to the previous menu or press **enter** to return to the home screen.

NOTE: To adjust the volume during a call, press the **▲** or **▼** keys on your handset.

Key Tones

- Press **enter** to enter **PHONE SETUP**.
- Press **enter** again to display **SOUNDS**.
- Press **enter** to select **RING VOLUME**.
- Scroll down using **▼** to display **KEY TONE**.
- Press **enter** to enter the **KEY TONE** menu. Use the **▲** or **▼** keys to select **ON** or **OFF**.
- Press **enter** to dial or **enter** to return to the home screen.

Use the **back** button to return to the previous menu or press **enter** to return to the home screen.

NOTE: To adjust the volume during a call, press the **▲** or **▼** keys on your handset.

Activating Remote Access From the Handset

- Press **services**, scroll **▼** to **locate ANSWER MACHINE** and press **enter** to confirm.
- Scroll **▼** to **REMOTE ACCESS** and press **enter**.
- Scroll **▲** or **▼** to select **Activated, Deactivated or Change PIN**.
- Press **enter** to confirm.

Adding Additional Handsets

NOTE: It is possible to register up to 4 additional handsets to the base unit for a total of 5 handsets. If you would like to purchase additional handsets, please contact our Customer Service department at:

1-877-768-8481 (Toll Free)
Monday – Friday: 8AM-10PM (EST)

Registering Your Handset

- Locate the **Paging** button located on the base of the EM7120-FD base. Press and hold the **Paging** button.
- While holding the **Paging** button on the base, press the **delete** button on your Handset.
- When the display shows PIN, enter the base PIN and press **enter**. When the handset registers with the base, it is assigned a handset number.
- Press **enter** to confirm.

Release the **Paging** button on the base.

NOTE: The Master PIN is required before you can register or unregister handsets. The PIN is 0000.

De-Register a Handset

- Press **services**, scroll using the **▼** key to **Services** and press **enter**.
- Scroll down to **UNREGISTER** and press **enter**.
- Enter the 4 digit master PIN and press **enter**.
- Display shows the first registered handset number.
- Scroll **▲** or **▼** to select the handset you want to delete and press **enter**.
- Scroll **▼** to Area code is displayed. Press **enter**.
- Using the keypad enter the area code and press **enter** to confirm.

UNREGISTERED is displayed on the handset screen.

SETTING THE AREA CODE

You can set your local area code into the phone. When a number from that area code calls only the local number will be displayed and stored.

- Enter the 4 digit master PIN and press **enter**.
- Display shows the first registered handset number.
- Press **services** and scroll **▼** to **Services** and press **enter**.
- Scroll **▼** to Area code is displayed. Press **enter**.
- Using the keypad enter the area code and press **enter** to confirm.

SETTING THE DATE AND TIME

- Press **enter** then scroll **▼** to **PHONE SETUP**.
- Scroll **▼** to **DATE & TIME**. Use the **▲** or **▼** key to scroll to **DATE & TIME**.
- Press **enter** to enter the date and time.
- Enter the date using the keypad and press **enter** to set the time.
- Press **enter** to confirm.

Dialing Numbers From the Calls List

- Dial a number in the Calls list.
- Press **enter** to open the Calls list.
- Scroll using **▲** or **▼** to the entry you want.
- Press **enter** to dial the displayed entry.

Dialing a number from the Recent Calls List

- Press the **key** to open the Recent Calls List.
- Scroll **▲** or **▼** to locate the desired entry.
- Press **enter** to dial the displayed entry.

Naming Handset

If you are using more than one handset with your EM7120-FD base, you can set a personalized name for each handset to easily distinguish between them.

The Handset name can be up to 14 characters long. To name your Handset:

- Press **enter** and use **▲** or **▼** to **PHONE SETUP**.
- Press **enter** and scroll to **PHONE NAME**.
- Press **enter** again to display the Handset's name.
- To delete the current name, press the **delete** button.
- Type the desired Handset name using the keypad and press **ENTER**.


RESTORE YOUR PHONE TO DEFAULT SETTINGS

You can restore your EM7120-FD to its default (original) settings. All the handsets that are registered to the base will be retained.

NOTE: Resetting your phone to its default settings will delete all entries in the Phonebook and Calls list. All handset and base settings will also be reset.

- Press **services**, scroll **▼** to **SERVICES** and press **enter**.
- Scroll **▼** to **Reset** and press **enter**.
- Once "Confirm?" is displayed, Press **enter**.

The base

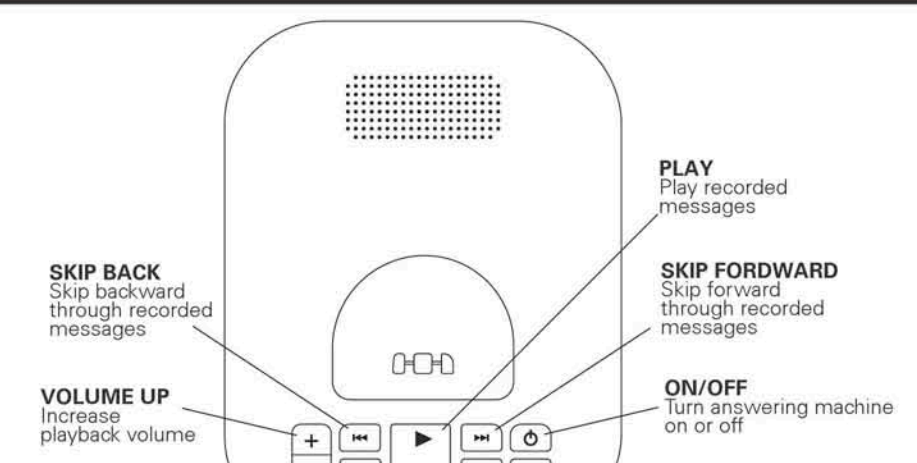

Volume

- Adjust the volume of the base.
- Adjust the "rings to answer" option (how many rings until the answering system picks up the call).
- Adjust the "security code" option (the security code is factory set to 000).

Paging

- Press **enter** and the handset will emit an alarm making it easy to find.
- Press any key on the handset to stop the paging alarm.

Answering system

The EM7120-FD can digitally record up to 12 minutes of messages as well as recording incoming messages. You can operate your answering machine from:

- the base
- the handset
- or remotely, from another telephone.

You will need to set the correct day and time (if you have not already done so) so that you will know when each message was received.

Turning the Answering Machine ON/OFF

- Press the **enter** button on the base to turn the Answering machine ON or OFF.

From the Handset

- Press the **enter** button then scroll down using the **▼** key to **ANSWER MACHINE** and press **enter**.
- Scroll **▼** to **VOICE ANSWER** and press **enter**.
- Use **▲** or **▼** to select either **ANSWER ONLY**, **RECORD ALSO** or **OFF** then press **enter** to confirm.

Listening to Your Messages (From the Base)

- Press **▶** to listen to new messages.

NOTE: All other messages will be played from oldest to newest.

During Playback

- Press **▶** to stop message playback.
- Press **▶** to play the next message.
- Press **▶** to play the previous message.
- Press **x** to delete the current message.

Remote Access

You can operate your answering machine from most phones by calling your Answering Machine and entering a 4 digit security PIN code.

Make an internal call

If more than one handset is registered to the base, internal calls can be made between two handsets. The **handset** icon flashes and the display shows the handset number you are calling.

- If only 2 handsets are registered to the base, press the **handset** button and the other handset rings automatically.
- If more than 2 handsets are registered to the base press the **handset** button and scroll **▼** to the handset that is to be called and press **enter**.

Receive an internal call

When you receive an internal call, the **handset** icon flashes and the handset number that is calling you is displayed.

- Press **enter** to answer the call.

Transfer a call

You can transfer an external call to another handset registered to the base. During an external call:

- If only 2 handsets are registered to the base, press and hold **handset** and the other handset rings automatically.
- If more than 2 handsets are registered to the base press and hold **handset** and scroll **▼** to the handset that is to be called and press **enter**.
- When the other handset answers, press **enter** to complete the transfer.

Activating Remote Access From the Handset

- Press **services**, scroll **▼** to **locate ANSWER MACHINE** and press **enter** to confirm.
- Scroll **▼** to **REMOTE ACCESS** and press **enter**.
- Scroll **▲** or **▼** to select **Activated, Deactivated or Change PIN**.
- Press **enter** to confirm.

Changing the Pin

If you choose Change PIN enter the old PIN and press **enter**. Enter the new PIN and press **enter**. Re-enter the new PIN. Press **enter** to confirm.

Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

Compliance information

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ARIATA.

FCC Part 68 information

Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringing Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company. The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most but not all areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring by the ACTA, a compatible telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment.
- If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

Compliance information

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ARIATA.

FCC Part 15 information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against radio interference.

The equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate the equipment into the telephone company.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How to Identify and Resolve Radio/TV Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-0034-4 when ordering copies.

NOTE: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF exposure information

This product complies with FCC radiation exposure limits under the following conditions:

- The base must be placed to allow a minimum of 20cm (8 inches) between the antenna and all persons during normal operation.
- The base must not be collocated or operated in conjunction with any other antenna or transmitter.

The handset is designed for body-worn operation and meets FCC RF exposure guidelines when used with any cord, carrying case, or other accessory supplied with this product. (All necessary accessories are included in the package, any additional or optional accessories are not required for compliance with the guidelines.) Third party accessories, unless approved by the manufacturer should be avoided as these might constitute a risk of electric shock to persons.

Hearing Aid Compatibility

This telephone meets FCC standards for Hearing Aid Compatibility.

Listening to Your Messages (From the Handset)

- When you have new messages, the display shows X new message(s) and the **handset** will flash. Press **enter** to play new messages.
- If you have no new messages, press **enter**, scroll **▲** or **▼** to **ANSWER MACHINE** and press **enter**.
- Select "PLAY" by pressing **enter**.
- The display will show the number of messages being played along with the date and time when the messages were left.

Setting Outgoing Messages (OGMs)

This is the message your callers hear on the answer machine. Choose from two pre-recorded outgoing messages, or you can record your own.

A. RECORD ALSO

The preset **RECORD ALSO** outgoing message, that allows your caller to leave a message, is "Hello, your call cannot be taken at the moment, so please leave your message after the tone".

B. ANSWER ONLY

The caller can listen to your announcement but cannot leave a message. The pre-recorded message is "Hello, your call cannot be taken at the moment, and you cannot leave a message, so please call later."

Record, play or delete your own outgoing message

- Press **services**, scroll **▼** to **ANSWER MACHINE** and press **enter**.
- Scroll **▼** to **ANNOUNCEMENT** and press **enter**.
- Scroll **▲** or **▼** to select either **ANSWER ONLY** or **RECORD ALSO** and press **enter**.
- Scroll **▲** or **▼** to select either **PLAY**, **RECORD** or use the default greeting and press **enter**.
- If you select, "PLAY" the current OGM will play back.

Record, play or delete your own outgoing message

- Press **services**, scroll **▼** to **ANSWER MACHINE** and press **enter**.
- Scroll **▼** to **ANNOUNCEMENT** and press **enter**.
- Scroll **▲** or **▼** to select either **ANSWER ONLY** or **RECORD ALSO** and press **enter**.
- Scroll **▲** or **▼** to select either **PLAY**, **RECORD** or use the default greeting and press **enter**.
- If you select, "PLAY" the current OGM will play back.

Record Your Greeting

Once you hear the beep, speak your message into the handset. To end recording, press **enter**. The message will automatically play back. If you selected **USE DEFAULT** the display shows "Confirm?". Press **enter** to confirm.

Select the OGM

- Press **services**, scroll **▼** to **ANSWER MACHINE** and press **enter**.
- Scroll **▼** to **VOICE ANSWER** and press **enter**.
- Press **▲** or **▼** to select either **ANSWER ONLY** or **RECORD ALSO** and press **enter** to confirm.

NOTE: If the answering machine is turned off and then turned on via the base unit the settings will be the same as when it was last switched on.

Ring Delay

Select the duration of rings before your answering machine picks up the call. Choose from 3-8 Rings or Toll Saver.

- If you have new messages your phone answers after 3 Rings.
- If there are no new messages it will answer after 5 Rings. So you have the option to hang up, saving the time and cost of a call.
- If the memory is full, it will automatically revert to Answer Only mode.

- Press **services**. Then scroll **▼** to **ANSWER MACHINE** and press **enter**.
- Scroll to **RING DELAY** and press **enter**. The handset will display the current setting.

- Press **services**. Then scroll **▼** to **ANSWER MACHINE** and press **enter**.
- Scroll to **RING DELAY** and press **enter**. The handset will display the current setting.

Rechargeable battery warning

- This equipment contains a rechargeable battery.
- Rechargeable batteries are known to the State of California to cause cancer.
- Do not short-circuit the battery

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>