

HD ACTION CAM DIGITAL VIDEO

User Guide

EVC255

In the Box

- Camera
- Mini USB Cable
- A/V Cable
- Installation CD
- Bicycle Mount
- Helmet Mount
- Helmet Band
- Waterproof Case
- User Manual

Micro SD memory card not included

Reminders about Waterproof Casing

- Before opening the waterproof casing and putting the device in, carefully check whether the waterproof ring of the casing is flat and smooth;
- After putting the device in and closing the cover of the waterproof casing, carefully check whether the waterproof ring is deformed due to pressure.

Setting Up Your Camera

Charging the Battery

- Open the cover on the back of the EVC255.
- Connect the small end of the Mini USB cable into the Mini USB port; connect the opposite end into an available USB port on your computer.
- The battery icon on the LCD screen will flicker, indicating the charging is in progress.
- The battery icon will stop flickering when charging is complete.

Micro SD Memory Card Installation

This camera has no internal memory and requires a formatted Micro SD memory card (not included) to take and save pictures or record videos. The camera can support Micro SD memory cards up to 32GB. The Micro SD card must be Class 4 or higher. To install the Micro SD memory card into the camera, follow the steps below:

- Turn off the camera.
- Open the cover on the back of the EVC255.
- Insert the Micro SD memory card into the card slot with the metal contacts facing the front-left side of the camera (as shown in the image) until it clicks.

! - A card can be inserted only one way; do not use force when inserting the card. - Inserting or removing a card while the camera is on may damage both the card and files stored on the card. - It is recommended to format any memory card before using it with a new device.

Video Recording Mode

Use this mode to capture videos with your digital camera.

- Insert a Micro SD memory card into the card slot with the camera powered OFF.
- Turn the camera on.
- Make sure the camera is in Video Recording mode (LO), which is the default mode when the camera is turned on. The [MODE] icon will be in the top section of the LCD screen next to the battery icon. (If you are in Photo mode, quickpress the [MODE] button until you are in Video Recording mode.)
- There are two Video Recording modes: HI and LO.
- In Video Recording mode at HI, you will record in HD (1280x720) 30 frames per second and the HI icon will be in the left side of the LCD screen. In Video Recording mode LO, you will record in VGA (640x480) 15 frames per second and the LO icon will be in the left side of the LCD screen.
- To switch from Video Recording mode at HI to Video Recording mode at LO, quickpress the [MODE] button one time. To switch from Video Recording mode at LO to Video Recording mode at HI, quickpress the [MODE] button three times.
- To begin recording a video clip, press the [REC] button. The [REC] icon will flicker and the time will change to "0:00" on the LCD screen while the recording is in progress. The amount of recording time will be displayed in minutes and seconds as you record.
- To stop recording, press the [STOP] button again. The video will be saved on your Micro SD memory card automatically. The amount of remaining time left to record on the memory card will be displayed.

Location of Controls

- LCD screen
- [MODE] button - Switch camera modes
- [Reset] button
- [STOP] button - Shutter for taking videos/pictures
- [ON] button - Power ON/OFF
- Mini USB port
- Microphone
- Mini USB port
- A/V output
- Micro SD memory card slot

Using Your Camera

Turning the Camera ON/OFF

- To turn the camera ON, press and HOLD the [ON] button for 2 seconds. The LCD screen will show "ON", then display the time.
- To turn the camera OFF, press and HOLD the [ON] button for 2 seconds. The LCD screen will show "OFF", then turn off.

Camera Mode Selector

The camera has four different modes depending on what you want to do with the camera. Press the [MODE] button to scroll through the different modes.

Resetting the camera

If the camera malfunctions, you can use the reset function to restart it. To reset the camera, take a metal pin (such as the end of a paperclip), and push it into the [RESET] hole to restart the player.

! - The camera will shut down by itself if no button is pressed for 5 minutes. - When the battery has run out of charge, the battery icon located in the lower left corner will turn RED and blink. The camera will then shut itself OFF.

Photo Mode

Use this mode to take pictures with your digital camera.

- Insert a Micro SD memory card into the card slot with the camera powered OFF.
- Press the [ON] button to turn the camera on.
- Make sure the camera is in Photo mode (LO). The [LO] icon will be in the top section of the LCD screen next to the battery icon. (If you are in Video Recording mode, quickpress the [MODE] button until you are in Photo mode.)
- There are two Photo modes: HI and LO.
- In Photo mode at HI, you will take pictures in (2592x1944) and the HI icon will be in the left side of the LCD screen. In Photo mode LO, you will record in (1280x960) and the LO icon will be in the left side of the LCD screen.
- To switch from Photo mode at HI to Photo mode at LO, quickpress the [MODE] button one time. To switch from Photo mode at LO to Photo mode at HI, quickpress the [MODE] button three times.
- To take a picture, press the [REC] button. The picture will be saved on your Micro SD memory card automatically. The amount of pictures that can be still taken on the memory card will be displayed on the LCD screen.

Playback Mode

Use this mode to look at pictures and videos on your TV screen or monitor.

- Make sure the camera is turned OFF.
- Connect the red and yellow tips of the included A/V Cable to the Red and Yellow RCA inputs on your television or monitor. Make sure your TV is set to the correct input.
- Connect the pin of the A/V Cable to the A/V Output jack on the back of the camera.
- Turn the camera ON. You will see the Emerson Logo on the TV screen then the first of your pictures or videos will show.
- Press the [MODE] button to scroll through pictures and videos.
- After selecting a video, press the [STOP] button to replay the video.
- During playback, press the [STOP] button to stop the video.
- Longpress the [STOP] button to enter file deletion mode.
- In file deletion mode, longpress the [STOP] button to confirm deletion, or press the [MODE] button to exit from deletion.

Video Recording Mode Controls and Icons

- Indicates LO resolution
- Indicates currently in Video Recording mode (flashes when recording)
- Battery level
- Memory card indicator
- Indicates HI resolution
- Indicates recording time remaining on memory card when not recording

Photo Mode Controls and Icons

- Indicates LO resolution
- Indicates currently in Photo mode (flashes when recording)
- Battery level
- Memory card indicator
- Indicates HI resolution
- Indicates recording time remaining on memory card when not recording

Playback Mode Controls and Icons

- Indicates LO resolution
- Indicates currently in Playback mode (flashes when recording)
- Battery level
- Memory card indicator
- Indicates HI resolution
- Indicates recording time remaining on memory card when not recording

Transferring Files To Computer

Transferring from Camera to Computer

- Make sure the camera is turned OFF, and that a Micro SD memory card card is inserted in the camera before connecting it to your computer.
- Insert the smaller end of the Mini USB cable into the camera's Mini USB port.
- Connect the larger end of the Mini USB cable into your computer's USB port.
- Turn ON the camera.
- Your computer will treat the camera as a removable disk and will appear as such under "My Computer."
- Select "DCIM" then select "100MEDIA".
- Pictures and videos will be displayed in this folder.
- Before disconnecting the camera, click on the "Safely Remove Hardware" icon usually located on the lower right corner of your desktop. OR Click on "My Computer", RIGHT click on "MICROSD" then click on "Eject" from the drop down menu.

MAGIX Photo and Video Suite

Installing

Install the included MAGIX Photo and video suite software before connecting the camera to your computer. With the software you will be able to manage, view, edit, transfer, and easily upload/share your videos and pictures. Follow the instructions below to install the MAGIX Photo and video suites onto your computer.

Note: You must have an Internet connection to download this software.

- Insert the CD labeled "Install MAGIX Video Easy SE" into the CD-ROM drive of your computer. When the Autoplay screen appears, click on "Run autorun.exe".
- Click on "Install MAGIX Video easy / SE"
- Choose your language, then follow the installation instructions.
- Click "Next" when prompted, then "Install", and then "Finish".
- To open the MAGIX Video easy SE software, click the "MAGIX Video Easy SE" icon on your Desktop.

Using MAGIX video easy SE

- MAGIX video easy SE will open on your screen.
- Register the software online by clicking on "Program registration" or click on "Continue trial" to use the trial version for up to 7 days.

Transferring videos from the camera to your computer

Open MAGIX video easy SE. Click "Create new video project".

Name the project.

- Click "Select files from computer", then locate the videos or pictures you saved from the camera (see "Connect your camera to a computer"). If your camera is connected to the computer, you can locate the files by selecting "Removable Disk" from "My Computer" located in the "Start Menu".

Viewing and editing videos on your computer

- From the main screen click on "Insert video".
- Select a video and click [PLAY] to play.
- Double click the video to play it in full screen.
- Edit the video by changing the brightness, contrast, saturation and color shape.
- Title and text: Select this tab to add a title or other text to the object.

Viewing and editing pictures on your computer

- Insert the CD labeled MAGIX Photo Manager 9 into the CD-ROM drive of your computer. When the Autoplay screen appears, click on "Run autorun.exe".
- Click on "Install MAGIX Photo Manager 9".
- Select the language then click "Next". Follow the installation instructions and the software will download automatically from the MAGIX website. When finished downloading, click "Finish", then click "Exit".
- To view instructional videos for this software click on "Help" then select "Online tutorials".

Waterproof Case

Assembling Camera to Waterproof Case:

Your camera comes with a Waterproof Case for underwater action and added durability. To assemble your camera to the case and use the camera, follow the instructions below:

- The camera does not have a standard tripod mount. The camera must be enclosed in the Waterproof Case.
- Slide the Waterproof Case backwards onto the Slide on the top of the Bike Mount.
- Turn Locking Wheel 1 so it applies pressure to the case to keep the connection secure.
- Loosen Locking Wheel 1 and Locking Wheel 2, and separate the Bike Mount into two pieces.
- Place the two pieces of the Bike Mount between the middle of your bike's handlebars with the camera facing out in front, and re-connect the Bike Mount by tightening Locking Wheel 1 and Locking Wheel 2.
- Panning adjustments can be made by loosening Locking Wheel 1. Adjust the pan angle, then tighten the wheel.

NOTE: This camera with the case properly sealed is rated to 3 meters (10 feet) under water for a maximum of 1 hour.

Bike Mount Assembly

- Slide
- Locking Wheel 1
- Locking Wheel 2
- Locking Wheel 3

Helmet Assembly

- Helmet Mount
- Helmet Band

FCC information

FCC Part 15: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Deleting Files in Playback Mode:

- Longpress the [STOP] button to enter file deletion mode.
- In file deletion mode, longpress the [STOP] button to confirm deletion, or press the [MODE] button to exit from deletion.

Transferring Files To Computer

Transferring from Camera to Computer

- Make sure the camera is turned OFF, and that a Micro SD memory card card is inserted in the camera before connecting it to your computer.
- Insert the smaller end of the Mini USB cable into the camera's Mini USB port.
- Connect the larger end of the Mini USB cable into your computer's USB port.
- Turn ON the camera.
- Your computer will treat the camera as a removable disk and will appear as such under "My Computer."
- Select "DCIM" then select "100MEDIA".
- Pictures and videos will be displayed in this folder.
- Before disconnecting the camera, click on the "Safely Remove Hardware" icon usually located on the lower right corner of your desktop. OR Click on "My Computer", RIGHT click on "MICROSD" then click on "Eject" from the drop down menu.

MAGIX Photo and Video Suite

Installing

Install the included MAGIX Photo and video suite software before connecting the camera to your computer. With the software you will be able to manage, view, edit, transfer, and easily upload/share your videos and pictures. Follow the instructions below to install the MAGIX Photo and video suites onto your computer.

Note: You must have an Internet connection to download this software.

- Insert the CD labeled "Install MAGIX Video Easy SE" into the CD-ROM drive of your computer. When the Autoplay screen appears, click on "Run autorun.exe".
- Click on "Install MAGIX Video easy / SE"
- Choose your language, then follow the installation instructions.
- Click "Next" when prompted, then "Install", and then "Finish".
- To open the MAGIX Video easy SE software, click the "MAGIX Video Easy SE" icon on your Desktop.

Using MAGIX video easy SE

- MAGIX video easy SE will open on your screen.
- Register the software online by clicking on "Program registration" or click on "Continue trial" to use the trial version for up to 7 days.

Safety Precautions

Always follow these basic safety precautions when using your camera. This will reduce the risk of product damage and personal injury.

- Do not disassemble, repair or modify the camera by yourself. Refer servicing to qualified personnel.
- If the LCD display breaks, do not touch the glass or liquid, and contact customer support.
- The use of a NON-RECOMMENDED accessory may cause fire, electric shock, or injury. For approved accessories, please contact customer support.
- Keep the camera away from direct sunlight and any direct heat source.
- Do not expose the camera to rain or moisture.
- Avoid using the camera in dry environments to avoid static.
- Never apply heavy impact on the player, or place it on a magnet.
- When connecting the camera to a computer or TV, route the cable so that people and pets are not likely to trip over it.
- Clean only with a dry cloth. Make sure the player is turned off before cleaning. Do not use a liquid cleanser.

Important Battery Precautions

- Use only the type of battery specified in this user manual.
- Batteries may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged.
- Do not dispose of the battery (ies) in a fire. They may explode. Check with local codes for disposal instructions.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or longer.
- If your product uses more than one battery, do not mix different types of batteries. Make sure you replace the old, with all new batteries. Mixing different types of batteries or inserting them incorrectly, may cause them to leak.
- In the event that the battery is leaking, do not handle the device with your bare hands. Contact the service center for help since the liquid may remain in the player. If your body or clothes had contact with the battery liquid, wash it off thoroughly with water. Also, if some liquid gets into your eyes, do not rub your eyes but immediately wash them with clean water and consult a doctor.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom, Inc.
Attention: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
1-877-768-8483 (Toll Free)
cs@southern telecom.com

Monday - Friday: 8AM - 10 PM (EST)

www.southern telecom.com

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>