



User Guide EVC455

In the box

Action Camera	Micro USB Cable	User Guide
Waterproof Case	Helmet Mount	Strap
Bike Mount		

Location of controls

Back View: LCD screen, Charging indicator light

Right Side View: Micro USB port, [RESET] button, Micro SD card slot

Top View: [POWER/MODE] button, Microphone, [Shutter / Confirm] button

Front View: Lens

Left Side View: [▲] button, [▼] button, [MENU] button

Bottom View: [POWER/MODE] button, Hole for tripod (not included)

Video Mode

- Make sure that a Micro SD card is inserted into the camera.
- Turn the camera ON. The [V] icon will appear in the upper left side of the LCD screen, meaning you are in Video mode.
- Press the [SHUTTER / CONFIRM] button, the camera starts recording video.
- To stop recording press the [SHUTTER / CONFIRM] button again.

NOTE: If the Micro SD memory card is full or the battery is low on power during recording, the camera will automatically stop recording.

1. Video Mode Icon
2. White Balance
3. Metering
4. Exposure
5. Picture Resolution
6. Pictures Remaining
7. Zoom Level
8. Micro SD Card Indicator
9. Battery Indicator

Picture Mode

- Make sure that a Micro SD card is inserted into the camera.
- Turn the camera ON and quickpress the [C] button once. The [C] icon will appear in the upper left side of the LCD screen, meaning you are in Picture mode.
- Press the [SHUTTER / CONFIRM] button to take a picture.

1. Picture Mode Icon
2. White Balance
3. Metering
4. Exposure
5. Picture Resolution
6. Pictures Remaining
7. Zoom Level
8. Micro SD Card Indicator
9. Battery Indicator

Setting up your camera

Charging the battery

- Insert the smaller end of the Micro USB cable into the camera's Micro USB port.
- Connect the larger end of the Micro USB cable into your computer's USB port.
- The Charging indicator light will illuminate red.
- The battery indicator is located on the lower right corner of the camera's LCD screen.

Charging indicator light

SD card installation

This camera has no internal memory and requires a Micro SD card (not included) to take and save pictures or record videos. The camera can support Micro SD cards up to 32GB. To install the Micro SD card into the camera, follow the steps below:

- Turn off the camera.
- Insert the Micro SD card into the card slot (as shown right) with the metal contacts facing the front of the camera until it clicks and locks into place.
- To remove the card, gently push it in until it pops out.

NOTE: A card can only be inserted one way; do not use force when inserting the card. Inserting or removing a card while the camera is on may damage the card, files stored on the card.

Using your camera

Turning the camera on/off

- To turn the camera on, press and HOLD the [POWER/MODE] button until the display turns on.
- To turn the camera off, press and HOLD the [POWER/MODE] button until the display turns off.

Switching Camera Modes

This camera has three different modes depending on what you are doing with the camera. For example:

- To record videos, turn the camera ON. The [V] will appear in the upper left side of the LCD screen.
- To take pictures, turn the camera ON and quickpress the [C] button once. The [C] will appear in the upper left side of the LCD screen.
- To view pictures/videos, turn the camera ON and quickpress the [C] button two times. The [C] will appear in the upper left side of the LCD screen.

Connecting the camera

Video Playback

- If you select a video, press the [SHUTTER / CONFIRM] button to start the video playback.
- To stop the video playback press the [SHUTTER / CONFIRM] button.
- Use the [▲] or [▼] buttons to scroll through videos and pictures.

Below, the image on the left is a video in Playback mode, as indicated by the [V] icon located in the bottom left corner. The image on the right is a picture in Playback mode, as indicated by the [C] icon located in the bottom left corner.

Playback video Playback photo

NOTE: Please do not disconnect the Micro USB cable during loading, as it may cause damage to the camera and the files on the SD card.

System Settings

- To make changes to the camera's settings, follow the instructions below:
- Press the [MENU] button.
 - Quickpress the [SHUTTER / CONFIRM] button to go to the settings.
 - Use the [▲] or [▼] buttons to scroll through the settings.
 - Press the [SHUTTER / CONFIRM] button to select the desired setting.
 - Use the [▲] or [▼] buttons to scroll through the options.
 - Press the [SHUTTER / CONFIRM] button to confirm the option.
 - Press the [MENU] button to exit settings.

System Settings Options

POWER FREQUENCY	60Hz / 50Hz The Camera's default setting is 60Hz for the USA and North America!
POWER SAVE	Select off, 1, 3, or 5 minutes. To conserve battery power, the camera will shut off if no buttons are pressed within the selected time.
DATE & TIME	Set the camera's date and time. Use the [▲] or [▼] buttons to scroll through the settings. Press the [C] button to move to the next setting. Press the [SHUTTER / CONFIRM] button to save the new settings.
LANGUAGE	Set the camera's language
FORMAT	Erase all data on the SD card
RESET ALL	Reset the camera's settings to factory default.

Video Mode Settings Options

MOVIE SIZE	HD / 1280X720 / 640X480 / 320X240
FRAME RATE*	30 FPS / 15 FPS
METERING	Center / Multi / Spot
WHITE BALANCE	Auto / Daylight / Cloudy / Fluorescent / Tungsten

* NOTE: Frame rate is fixed in HD mode and cannot be changed in a lower level.

Picture Mode Settings Options

RESOLUTION	SX (1920x1080) / 1M (1280x960) / VGA (640x480) (Higher picture resolution takes up more space on the SD card.)
QUALITY	Super fine / Fine / Normal
METERING	Center / Multi / Spot
WHITE BALANCE	Auto / Daylight / Cloudy / Fluorescent / Tungsten
EXPOSURE	Adjust the exposure
DRIVER MODE	"OFF" (disables the self timer), "2" or "10" second options (self timer), "Burst" (3 frame shot)
EFFECT	Norma / B&W / Sephia / Negative / Red / Green / Blue

Waterproof Case

Assembling camera into case

Your camera comes with a Waterproof Case for underwater action and added durability. To assemble your camera to the case, follow the instructions below:

- Open the latch on the Waterproof Case.
- Insert the camera lens forward into the case.
- Close the door and secure the latch for a maximum of two hours.

NOTE: Please make sure latch is secure and that all seals are in place to ensure no water can seep in.

Assembling camera to bike mount

- Attach your camera to the Bike Mount by screwing it to the top of the Bike Mount. Unscrew the bottom lever and place the two pieces of the Bike Mount, with the rubber pieces that were inside the Bike Mount attached, between the middle of your bike's handlebars with the camera facing out in front.
- Re-connect the Bike Mount by re-attaching the two pieces of the Bike Mount by screwing the bottom lever back in.
- Panning adjustments can be made by loosening the locking wheel underneath the camera. Adjust the pan angle, then tighten the locking wheel.

NOTE: This camera with the case properly sealed is rated to 3 meters (10 feet) under water for a maximum of 2 hours.

FCC Information

FCC Part 15: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Playback Mode Settings

- To make changes to the playback mode settings, follow the instructions below:
- Turn the camera ON and quickpress the [C] button two times. The [C] icon will appear in the upper left side of the LCD screen, meaning you are in playback mode.
 - Press the [MENU] button.
 - Use the [▲] or [▼] buttons to scroll through the settings.
 - Press the [SHUTTER / CONFIRM] button to select the desired setting.
 - Use the [▲] or [▼] buttons to scroll through the options.
 - Press the [SHUTTER / CONFIRM] button to confirm the option.
 - Press the [MENU] button to exit settings.

Playback Mode Settings Options

LOCK	Lock one or all of your picture and video files. When locked the files will not be deleted.
DELETE	"One" (Delete the currently displayed video or picture) or "All"
SLIDE SHOW	Start a slide show, and adjust the slide show settings.
ROTATE	Rotate the image vertically and horizontally.

NOTE: Only picture files can be used to create a slide show and be rotated.

MOVIE SIZE	HD / 1280X720 / 640X480 / 320X240
FRAME RATE*	30 FPS / 15 FPS
METERING	Center / Multi / Spot
WHITE BALANCE	Auto / Daylight / Cloudy / Fluorescent / Tungsten
EXPOSURE	Adjust the exposure
DRIVER MODE	"OFF" (disables the self timer), "2" or "10" second options (self timer), "Burst" (3 frame shot)
EFFECT	Norma / B&W / Sephia / Negative / Red / Green / Blue

Helmet Assembly

Assembling camera to helmet mount

- You should have now both ends of the Strap inside the helmet. Take both ends of the Strap and pull to tighten and then attach together with the Velcro strap.
- Slide the top half of the Bike Mount on the Helmet Mount.
- Please note this Helmet Mount will only work with vented helmets.

Assembling camera to bike mount

- Attach your camera to the Bike Mount by screwing it to the top of the Bike Mount. Unscrew the bottom lever and place the two pieces of the Bike Mount, with the rubber pieces that were inside the Bike Mount attached, between the middle of your bike's handlebars with the camera facing out in front.
- Re-connect the Bike Mount by re-attaching the two pieces of the Bike Mount by screwing the bottom lever back in.
- Panning adjustments can be made by loosening the locking wheel underneath the camera. Adjust the pan angle, then tighten the locking wheel.

Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom, Inc.
Attention: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
1-877-768-8483 (Toll Free)
cs@southern telecom.com

Monday-Friday: 10AM-8PM (EST)
www.southern telecom.com

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:
THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY ATT, INC.'S AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ATT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>