

## Operation (Figure 3)

### IMPORTANT

Fan installation must be completed, including the installation of the fan blades, before testing the remote control.

Your remote control has full control of your fan and light.

**NOTE:** Prior to operation of the fan and light from the remote control, set the fan speed to HIGH (••••) and turn the light ON (💡).

1. To set the desired fan speed, press one of the four buttons (•, ••, •••, ••••) to operate your fan from low to high speeds.
2. To turn the downlight on, press and release the (💡) button. The light will turn on at the light intensity previously selected.
3. To vary the intensity of the light, hold the (💡) button down until the desired light intensity is reached, then release the button.

**Note:** When turning the light on, light will turn on at the light intensity previously selected.

## Trouble Shooting

### Fan/Light Fails to Operate

- Check that the speed switch on the fan is set to HIGH (••••) speed.
- Check that the light switch is on.
- Check that the battery is good (power indicator light should light when any button is pressed).
- Check that the receiver is wired properly.
- Check that code switches in the remote control and receiver are set in the same position.

### Short Range

- If the remote control operates the fan when close to it, but does not operate it at a distance of 40 feet, try placing the antenna wire outside of the ceiling cover.

## Installation of Storage Bracket

A storage bracket is provided for holding your remote control when not in use. If you desire to use the bracket, install it on a wall that is away from excess heat or humidity.

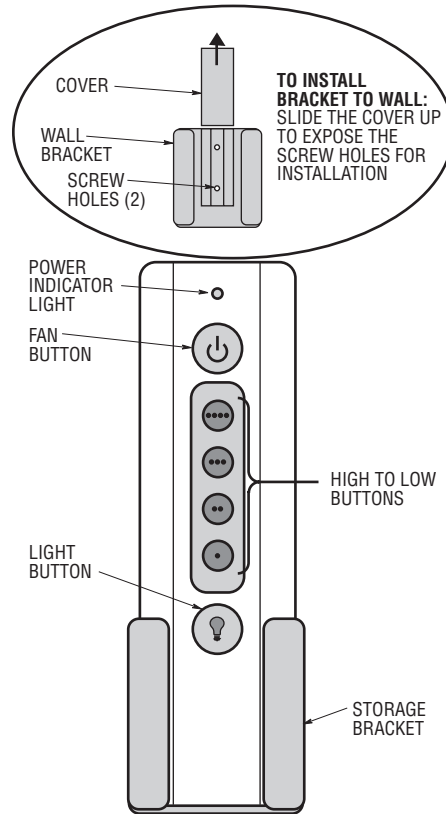 


Figure 3



**Air Comfort Products**  
DIVISION OF EMERSON COMPANY  
8100 W. Florissant • St. Louis, MO 63136

**CAUTION:** Read all instructions carefully before installation.  
Save this Owner's Manual for future reference.

Model Number <b>SR400</b>	Model Number <b>SR401</b>
<ul style="list-style-type: none"><li>• 4-Speed Hand Held Transmitter</li><li>• Single Light</li><li>• Supplied with Receiver</li><li>• Includes Light Dimming Selection Switch</li></ul>	<ul style="list-style-type: none"><li>• 4-Speed Hand Held Transmitter</li><li>• Single Light</li><li>• Use with SR400 or SW405</li><li>• Includes Light Dimming Selection Switch</li></ul>

# EMERSON™ Ceiling Fan/Light Remote Control Owner's Manual

## ⚠ WARNING

### Safety Instructions

**WARNING:** To avoid fire, shock, and serious personal injury, follow all instructions carefully.

1. Read your Owner's Manual carefully before installing the remote control. Retain Owner's Manual for future reference.
2. Be careful of the fan and blades when installing the receiver in the ceiling cover. Before installing or servicing the ceiling fan or receiver, switch power off at service panel and lock service panel disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.

### ADDITIONAL SAFETY INSTRUCTIONS FOR INSTALLATION

1. To avoid possible electrical shock, be sure electricity is turned off at the main fuse or circuit breaker box before wiring.
2. Make certain no bare wires are exposed outside the wire connectors.
3. All wiring must conform to National and Local Electrical Codes.
4. Follow the recommended instructions for the proper method of wiring your new remote control. If you feel you do not have enough electrical wiring knowledge or experience, have your remote control installed by a licensed electrician. Any electrical work not described in this manual should be performed by a licensed electrician.

## LIMITED WARRANTY

### What The Warranty Covers:

All products covered by this Owner's Manual are warranted against all defects in workmanship and materials. You must be the original purchaser or user of the product to be covered.

### What The Period Of Coverage Is:

All components are covered by this warranty for one year from the date you purchased your remote control. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, MADE WITH RESPECT TO COMPONENTS AND ACCESSORIES IS ALSO LIMITED TO ONE YEAR.

### What Will Emerson Company Do To Correct Problems:

Emerson Company will replace a defective Emerson Remote Control at no charge to you. We will ship the repaired product or replacement to you at no charge, but you are responsible for all costs or removal, reinstallation and shipping of the product to Emerson.

### How Can You Get Service:

YOU MUST HAVE PROOF OF YOUR PURCHASE OF THE REMOTE CONTROL TO OBTAIN LIMITED WARRANTY SERVICE. KEEP YOUR RECEIPT OR OTHER PROOF OF PURCHASE. You can return the product to our factory or to your nearest authorized service center.

- To return the product to the factory, obtain a return authorization and service on the product with your request.
- To return the product to an authorized service center, call 1-800-654-3545 for the address of the nearest authorized service center.

You will be responsible for all insurance, freight or other transportation charges to our factory or authorized service center. Your Emerson Remote Control should be properly packed to avoid damage in transit since we will not be responsible for any such damage.

### What Is Not Covered:

This warranty also does not cover any defects, malfunctions or failures caused by:

- Repairs by persons not authorized by Emerson Company,
- Use of parts or accessories not authorized by Emerson Company,
- Mishandling, improper installation, modifications or damage to your remote control while in your possession, or
- Unreasonable use, misuse, abuse, including failing to do reasonable and necessary maintenance, and normal wear and tear.

Additionally, this warranty and any implied warranty of merchantability or fitness for a particular purpose are voided when:

- The original purchaser or user ceases to own the product, or
- The ceiling fan is moved from its original point of installation.

This warranty is only valid within the 50 states of the United States and the District of Columbia. No other written or oral warranties apply, and no employee, agent, dealer or other person is authorized to give any warranties on behalf of Emerson Company.

REPAIR, REPLACEMENT OR A REFUND ARE THE EXCLUSIVE REMEDIES AVAILABLE UNDER THIS WARRANTY AND EMERSON IS NOT RESPONSIBLE FOR DAMAGES OF ANY KIND, INCLUDING INCIDENTAL AND CONSEQUENTIAL DAMAGES. Incidental damages include but are not limited to such damages as loss of time and loss of use. Consequential damages include but are not limited to the cost of repairing or replacing other property which was damaged if this product does not work properly.

### How State Law Relates To The Warranty:

Some states do not allow the exclusion or limitation of incidental or consequential damages so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## General

Your Emerson Ceiling Fan/Light Remote Control consists of hand-held transmitter and a receiver which is mounted under the fan ceiling cover. The remote control is designed to separately control your ceiling fan speed and light intensity. There are four push buttons (•, ••, •••, ••••) to set the fan speed and turn the fan off. The light (💡) push button turns the light on and off and controls the light intensity. The red indicator light will illuminate while any button is pressed, indicating that the battery is good.

The remote control transmitter is powered by two AAA alkaline batteries (not included). To prevent possible damage if the batteries should leak, be sure to remove the batteries when the control is not to be used for an extended period of time.

Code switches in the transmitter may be set in 32 different positions. If your fan and light go on and off without using your control, you may be getting interference from other remote units such as garage door openers, car alarms or security systems. To remedy this situations, simply change the combination code in your transmitter.

## Preset Memory Feature

Your Emerson receiver is equipped with a preset memory feature. If the AC supply to the receiver is powered through a wall switch, when the switch is turned OFF, the control

will remember the light intensity and fan speed. When the switch is turned back ON the light and fan will resume operation as they were prior to the switch being turned OFF.

## Installation of Battery

- Remove the battery cover by pressing firmly below the arrow and sliding the cover off the control (Figure 1).
- Install two AAA alkaline batteries.

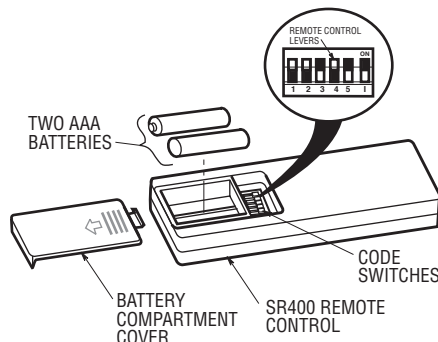 


Figure 1


## Setting Operating Frequency of Transmitter (Figure 1)

 Your remote control transmitter has code switches which must be set in one of 32 possible code combinations. The five levers (numbered 1, 2, 3, 4, and 5) on the switches are factory-set in the ON (up) position. **Do not use this setting.** Change the switch settings as follows:

- Slide the five switch levers in the remote control (transmitter) to your choice of ON (up) or down positions. Use a ball-point pen or small screwdriver and slide the levers firmly up or down.

- When power is restored after installation of the wall control, push and hold the fan OFF button (⏻) for 3 to 5 seconds to set the code in the receiver.
- The sixth switch marked ON and I is for dimming control of lights: Set switch to ON to allow for dimming of the lights. Set switch to I for no dimming of the lights such as for fluorescent bulbs.

## Installation of Receiver (Figure 2)

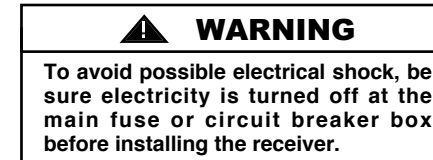

- After electricity has been turned off at main fuse box or circuit breaker box, remove the ceiling cover from the hanger bracket.
- Disconnect the supply wiring to the fan by removing wire connectors. Do not disconnect the green/bare ground wires.
- Connect the black supply wire to the receiver black wire (AC IN L). Connect the white supply wire to the receiver white wire (AC IN N). Use only listed wire connectors (supplied) to make connections.

- Connect the receiver white wire (TO MOTOR N) to the fan white wire. Connect the receiver red wire (TO MOTOR L) to the fan black wire. Connect the receiver blue wire (FOR LIGHT) to the fan blue wire.

**CAUTION: If no light exist on your ceiling fan, cap the blue wire on the receiver with a wire connector.**

- Push the connected wires up into the junction box and position the receiver in the hanger bracket above the hanger ball. Lay the antenna wire on top of the receiver.
- Reinstall the ceiling cover and restore electrical power to the circuit.

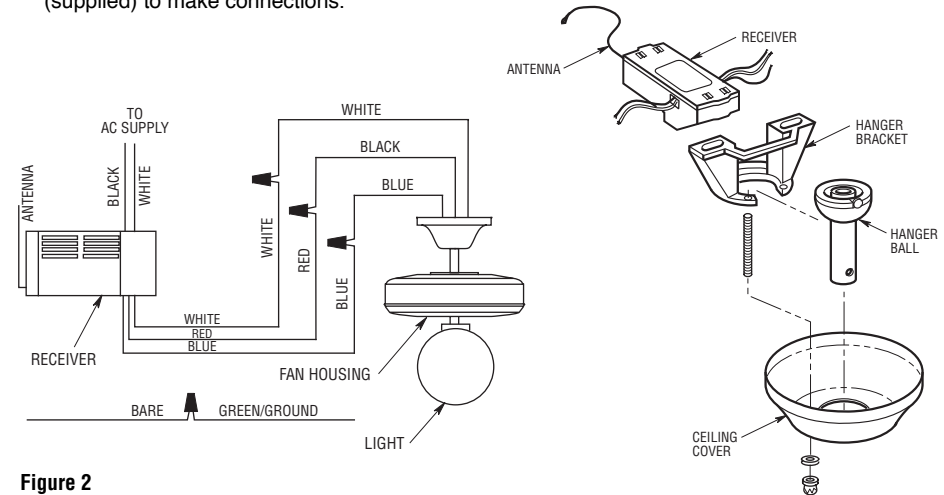 


Figure 2

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>