



# ***0.7 CUBIC FT. TOASTER OVEN***

## ***OWNER'S MANUAL TOR59***

### **Instructions For Use**

Keep These Instructions

Visit our Web site at [www.emersonradio.com](http://www.emersonradio.com)

# IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be observed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plug or oven in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning appliance and putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair or adjustment.
7. The use of accessory attachments not recommended by the manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. When operating the oven, keep 2-4 inches of free space on all sides of the oven to allow for adequate air circulation.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Be sure to allow hot oil or liquids to cool before moving appliance.
13. To disconnect, turn any control to Off, then remove plug from wall outlet.
14. Use extreme caution when removing baking pan or disposing of hot grease.
15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electrical shock.
16. Oversize foods or metal utensils must not be inserted in a oven as they may create a fire or risk of electric shock.
17. A fire may occur if the oven is covered by, touching or near flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation, or before the appliance cools down.
18. Extreme caution should be exercised when using containers constructed of metal or glass.
19. Do not store any materials, other than manufacturer-recommended accessories, in this oven.
20. Do not place any of the following materials in the oven: paper, cardboard, plastic and the like.
21. Do not cover crumb tray or any part of oven with metal foil. This will cause overheating of oven.
22. To turn oven off, turn Timer to OFF position.
23. Do not place eyes or face in close proximity with tempered safety glass door, in the event that the safety glass breaks.
24. Do not use appliance for other than intended use.
25. Please be sure this unit is plugged into a 15AMP Breaker.

**SAVE THESE INSTRUCTIONS**

# IMPORTANT SAFEGUARDS

## HOUSEHOLD USE ONLY WARNING

### Fire Hazard

- Do not use with oven cooking bags.
- Do not store any materials, other than recommended accessories, in this oven when not in use.
- Always allow at least one inch between food and heating element.
- Do not cover or use near curtains, walls, cabinets, paper or plastic products, cloth towels, etc. Keep 2 to 4 inches away from wall or any objects on countertop.
- Close supervision is necessary when used by or near children.
- Always unplug toaster oven when not in use.
- Regular cleaning reduces risk of fire hazard.
- If contents ignite, do not open oven door. Unplug oven and allow contents to stop burning and cool before opening door.
- Failure to follow these instructions can result in death or fire.

### Shock Hazard

 
 
- Do not immerse this appliance in water or other liquid.

### CONSUMER SAFETY INFORMATION:

This appliance is intended for household use only.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the oven (AC120V, 60 Hz, 1400W). Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over. This appliance is equipped with a fully tempered safety glass door. The tempered glass is four times stronger than ordinary glass and more resistant to breakage. Tempered glass can break, however it breaks into pieces with no sharp edges. Care must be taken to avoid scratching door surface or nicking edges. If the door has a scratch or nick, call our toll-free customer service number. Always unplug your oven from the outlet when not in use.

## LOCATION OF CONTROLS

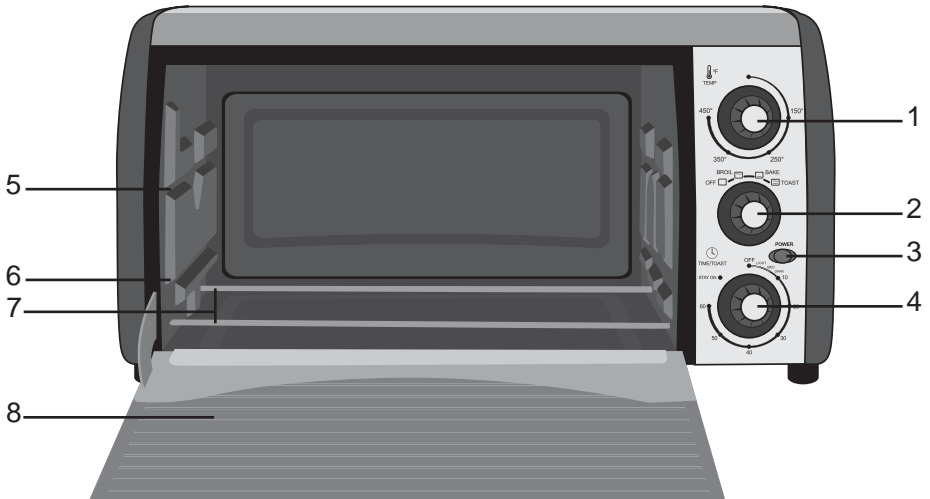

- |                                       |                     |
|---------------------------------------|---------------------|
| 1. Temperature Knob                   | 7. Heating Elements |
| 2. Function Knob                      | 8. Glass Door       |
| 3. Indicator Light                    | 9. Baking Pan       |
| 4. Timer Knob                         | 10. Wire Rack       |
| 5. Top Slot (for Baking Tray/Rack)    | 11. Crumb Tray      |
| 6. Bottom Slot (for Baking Tray/Rack) | 12. Tray Handle     |


## OPERATION
 
### USING YOUR OVEN FOR THE FIRST TIME

Most heating appliances produce an odor and/or smoke when used for the first time. Plug the oven into an outlet. Turn the Temperature Knob to 450°F and the Function Knob to TOAST. Heat at this temperature for 15 minutes. The odor should not be present after this initial preheating. Wash all accessories before using.


### AC CONNECTION

Unwind the AC cord and extend it to its full length. Insert the AC plug into any convenient 120V 60Hz household outlet. Please note that this unit is equipped with a polarized AC plug which has one blade wider than the other. This is a safety feature to reduce the likelihood of electric shock. This polarized AC plug will only fit in a polarized AC outlet. If you find that you cannot insert this plug into your outlet, you may have an obsolete non-polarized outlet. Please do not try to defeat this safety feature by using a non-polarized adapter or by filing the wider blade to make it fit into your outlet. If this plug does not fit into your outlet, you should contact a qualified licensed electrician to replace your obsolete outlet.

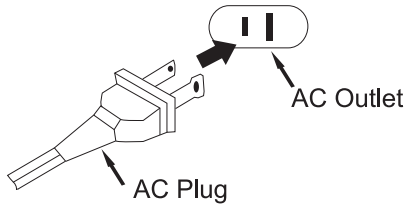

### REMOVING THE BAKING PAN USING THE HANDLE

 To remove the Baking Pan once cooking is completed, use the Handle as shown and place the Baking Pan on a heat resistant, sturdy surface.

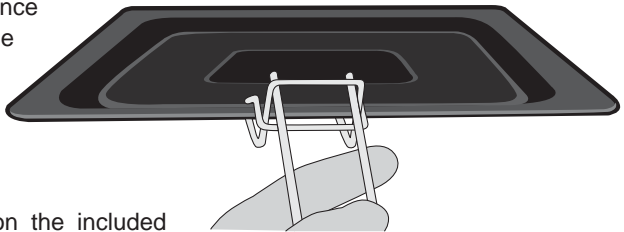


#### NOTES:


- Only use the Handle on the included Baking Pan.

## OPERATION (CONTINUED)

 
### BAKING/COOKING PIZZA

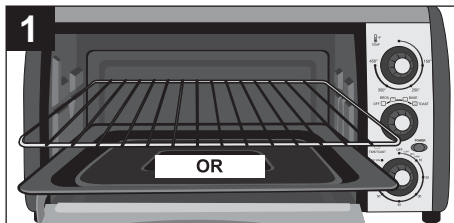

 
Place the Wire Rack (if using a separate oven-safe container) or the Baking Pan (if baking directly on it) in the desired slots depending on the food to be cooked.

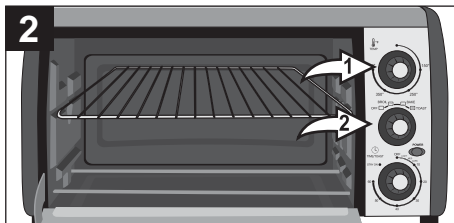

 Rotate the TEMPERATURE knob ① to the desired temperature. Rotate the FUNCTION knob ② to the BAKE position.

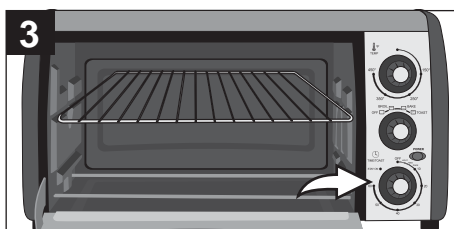

 Rotate the TIMER knob to 10 minutes to preheat the oven. When the oven is done preheating, place the food in the oven and rotate the TIMER knob to the desired baking time or counter clockwise to the STAY ON position if you want to control cooking time or need to cook your food longer than 60 minutes.

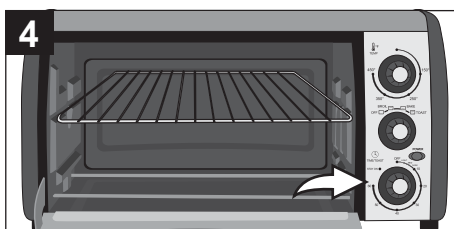


The oven is done cooking when the TIMER knob reaches OFF and a bell rings. You can also rotate the TIMER knob to OFF to stop cooking. If the STAY ON feature has been selected, the toaster oven must be shut off manually by turning the TIMER knob to the OFF position. Remove the oven-safe container or included Baking Pan using the Handle as shown on page 4.

#### NOTES:

 
- Do not place accessories or any other item on top of the oven as oven top will get hot.
- Use the BAKE setting when browning and crisping are not important, such as casseroles, vegetables, fish, lasagna, etc.
- If cooking pizza, it is recommended to place aluminum foil, to make clean up of dripping cheese easier, under the bottom cooking elements and to cook directly on the Wire Rack.

## OPERATION (CONTINUED)


### BROILING

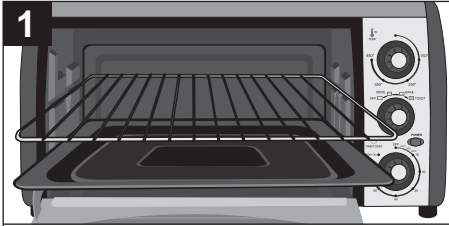

 
Place the Wire Rack in the upper slot. Place the Baking Pan into the slot under the Wire Rack to collect the fat dripping.

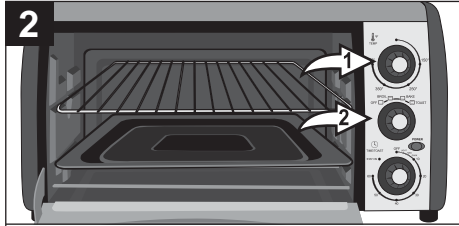

 Rotate the TEMPERATURE knob ① to the desired temperature. Rotate the FUNCTION knob ② to the BROIL position.

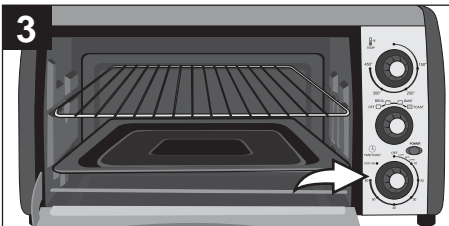

 Place the food on the Wire Rack and rotate the TIMER knob to the desired broiling time or counter clockwise to the STAY ON position if you want to control cooking time or need to cook your food longer than 60 minutes.

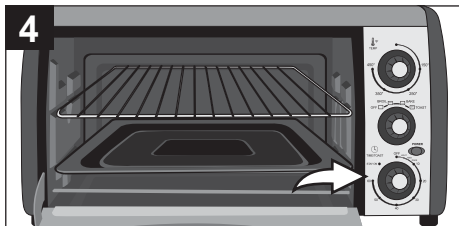


The oven is done broiling when the TIMER knob reaches OFF and a bell rings. You can also rotate the TIMER knob to OFF to stop broiling. If the STAY ON feature has been selected, the toaster oven must be shut off manually by turning the TIMER knob to the OFF position. Carefully remove the food using a pot holder.

#### NOTES:

 
- Do not place accessories or any other item on top of the oven as oven top will get hot.
- Use the BROIL setting when browning the top of food.
- Do not use Glass Pans when broiling, it is unsafe.
- For best results, do not preheat oven when broiling.
- Allow at least one inch between heating element and food.

## OPERATION (CONTINUED)


### TOASTING:

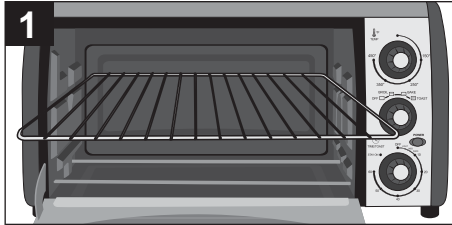

 
Place the Wire Rack in the desired slot.

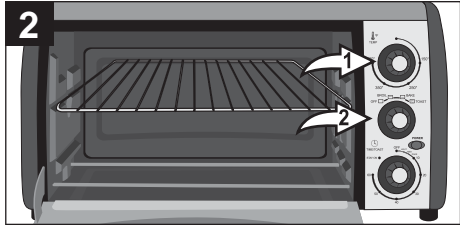

 Rotate the TEMPERATURE knob **1** to the desired temperature [you can take reference below "APPROXIMATE TOASTING TIMES (AT 450°F)"]. Rotate the FUNCTION knob **2** to the TOAST position.

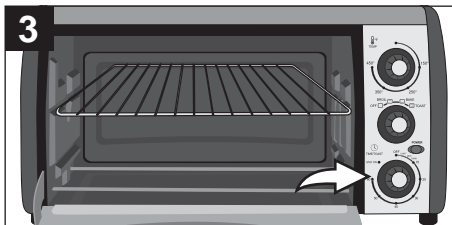

 Place the food on the Wire Rack and rotate the TIMER knob to the desired toasting time. Please note that the toast time is approximate (see below for suggested toast times). Toast should be observed the first few times function is used to become familiar with your toast shade preference.

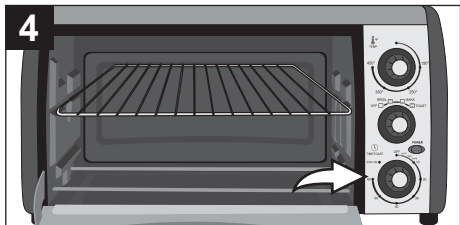

The oven is done toasting when the TIMER knob reaches OFF and a bell rings. You can also rotate the TIMER knob to OFF to stop toasting. Carefully remove the food using a pot holder.

### NOTES:

- Do not place accessories or any other item on top of the oven as oven top will get hot.
- When toasting, do not leave food in for longer periods of time other than what is listed below. Toasting for longer than recommended times will burn food.

### APPROXIMATE TOASTING TIMES (AT 450°F):

**LIGHT:** 3 - 4 Minutes

**MEDIUM:** 4 - 5.5 Minutes

**DARK:** 5.5 - 7 Minutes



## TROUBLESHOOTING

### **The oven will not heat.**

Check to make sure the AC cord is plugged in, the oven's TEMPERATURE knob is set to a temperature and the FUNCTION knob is set to one of the cook positions.

### **An odor and smoke comes from the oven.**

Smoke and odor is normal during the first use and should not be present after the initial heating period.

### **Some foods burn and some are not done.**

Use oven rack position to center food in the oven. Adjust oven temperature or cooking time for best results with your recipes.

## **CARE AND CLEANING**

Always unplug the oven and allow it to cool before cleaning. This unit has been designed and engineered with your safety in mind. To assure maximum safe operation, keep unit clean, free of grease and free of build-up of food particles.

To clean the interior cavity of your oven use a damp cloth. Do not clean interior with metal scouring pads. Pieces can break off and touch electrical parts, creating risk of electrical shock.

To clean the glass door, use a glass cleaner or a damp cloth. Wipe dry with a clean cloth. To clean the exterior finish, use a damp, sudsy cloth. For stubborn stains, a non-abrasive liquid cleaner or spray glass cleaner may be used. Do not use metal scouring pads, as they might mar the finish. Always remove cleaning agents by polishing with a dry cloth.

Slide the crumb tray out from under the bottom of the oven. Wash by hand. Should the soilage be difficult to remove, rinse the crumb tray with hot soapy water and if necessary, scour it delicately, without scratching it.

## LIMITED WARRANTY

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of one year from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$10.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.,  
5101 Statesman Drive,  
Irving, TX 75063

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.**

**AU898N**

The serial number can be found on the rear of the unit. We suggest that you record the serial number of your unit in the space below for future reference.

**Model Number: TOR59**

**Serial Number:** \_\_\_\_\_



TO FIND THE LOCATION AND PHONE  
NUMBER OF YOUR NEAREST SERVICE  
CENTER PERMITTED TO PERFORM  
WARRANTY...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE  
PLEASE CALL:  
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:  
Emerson Radio Corp.,  
Consumer Affairs Dept.,  
5101 Statesman Drive,  
Irving, TX 75063.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>