 




Multimedia Projector

EB-755F **EB-725Wi**
EB-750F **EB-725W**
EB-735Fi **EB-720**
EB-735F

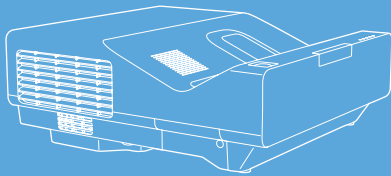

EN	Quick Start Guide	LV	Ātrās darba uzsākšanas pamācība
DE	Kurzanleitung	LT	Trumpas pradžios vadovas
FR	Guide de démarrage rapide	EL	Οδηγός γρήγορης εκκίνησης
IT	Guida di avvio rapido	TR	Hızlı Başlangıç Kılavuzu
ES	Guía de inicio rápido	SL	Priročnik za hitri zagon
PT	Guia de Referência Rápida	HR	Kratke upute
NL	Introductiehandleiding	MK	Прирачник брз почеток
DA	Introduktion	SR	Uputstvo za brz početak
FI	Pika-aloitusopas	CA	Guia d'inici ràpid
NO	Hurtigveiledning	RU	Руководство по быстрой установке
SV	Snabbstartsguide	UK	Коротка інструкція "Початок роботи"
CS	Úvodní příručka	KK	Қысқа іске қосу нұсқаулығы
HU	Bevezetés	KO	빠른 시작 가이드
PL	Przewodnik szybkiego startu	ID	Panduan Ringkas
SK	Stručná príručka	AR	دليل البداية السريعة
BG	Ръководство за бърз старт	FA	راهنمای سریع برای شروع بکار
RO	Ghid de pornire rapidă	ZHS	設定手册
ET	Lühijuhend	ZHT	設定説明書

  Product Box Contents

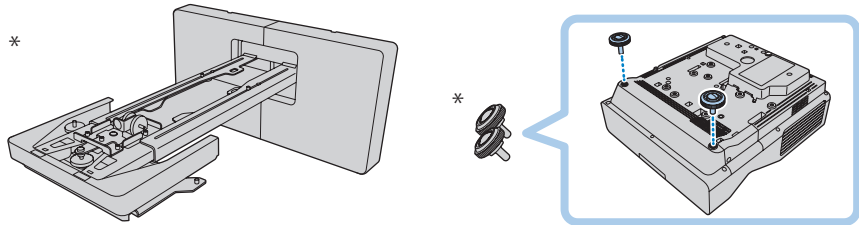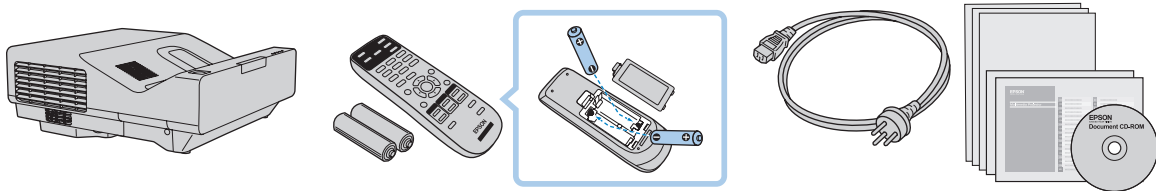


EB-735Fi/EB-735F
/EB-725Wi/EB-725W
/EB-720 only




* Bundled items vary depending on the country or the model.

 EB-735Fi/EB-725Wi only



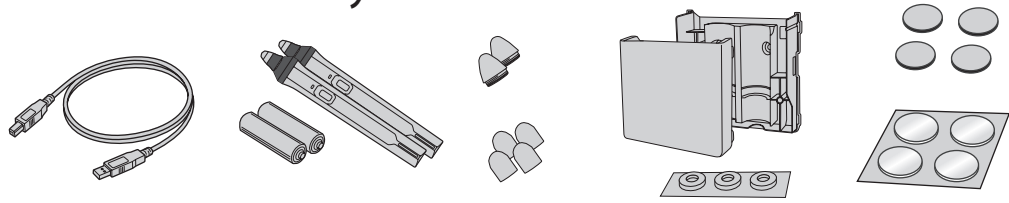


Connecting a Device


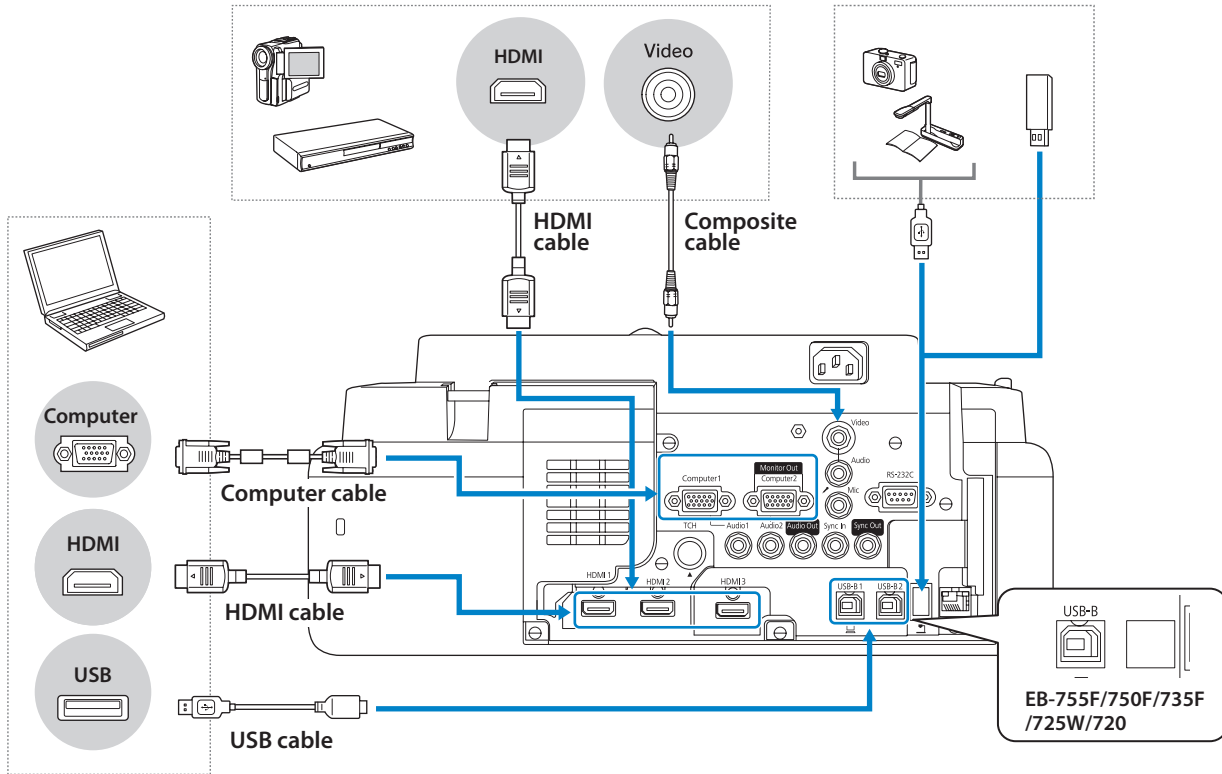 


Turning On the Projector

   3

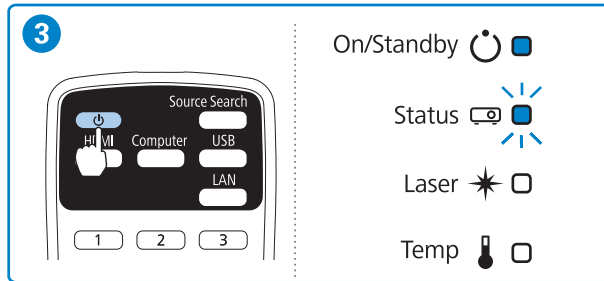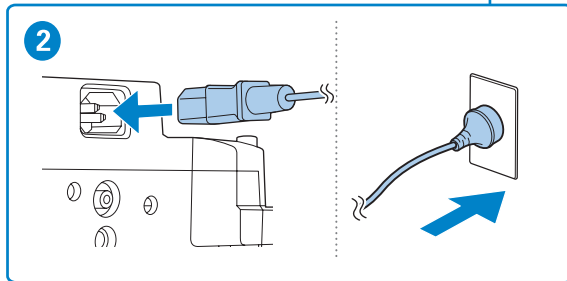
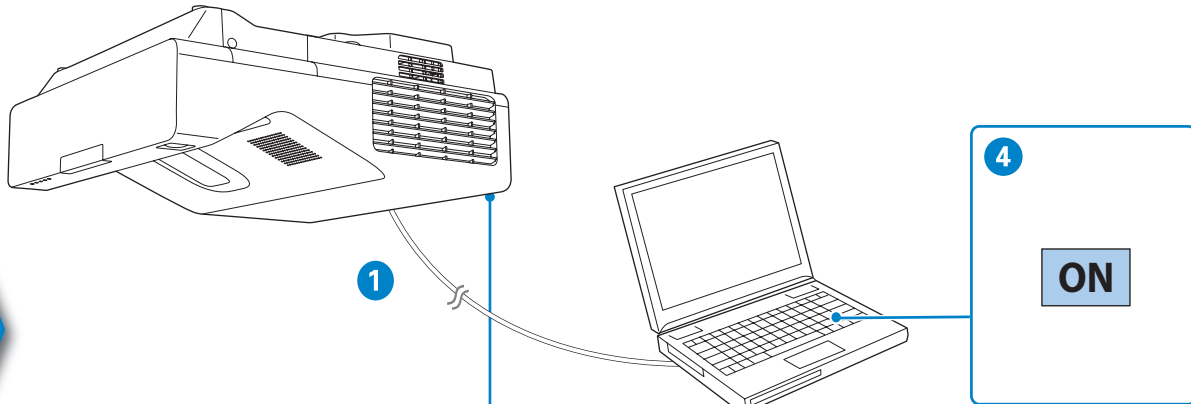


Initial Setting Wizard

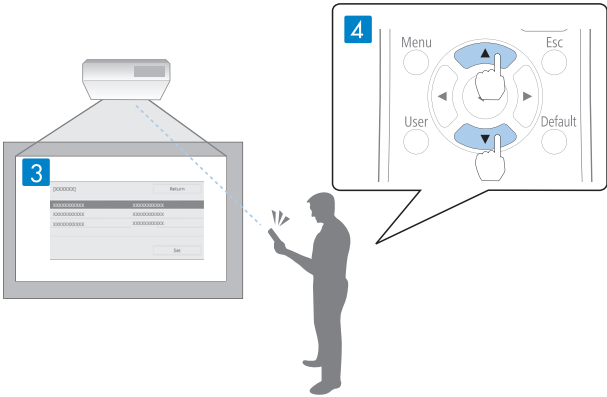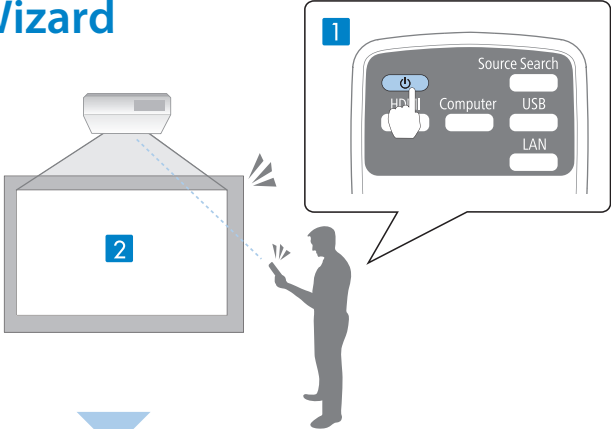  


Home Screen

 
 
5

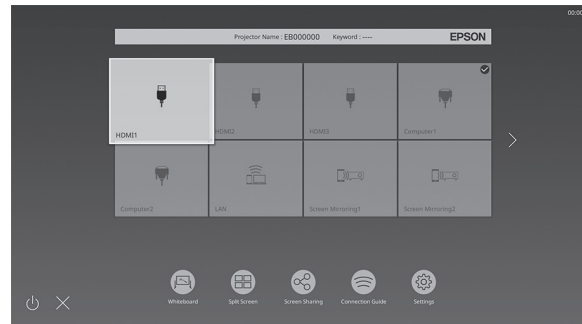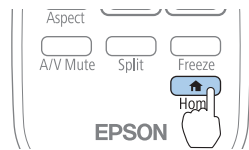

Adjusting the Image Shape

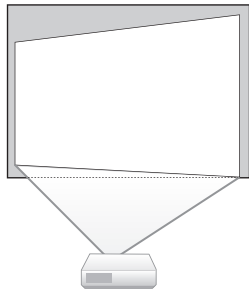 


1

  


2



 Changing the Projection Mode

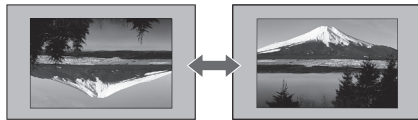


5 Sec.

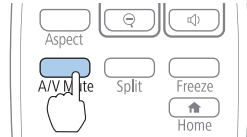 


Easy Interactive Function (EB-735Fi/EB-725Wi)

 
7

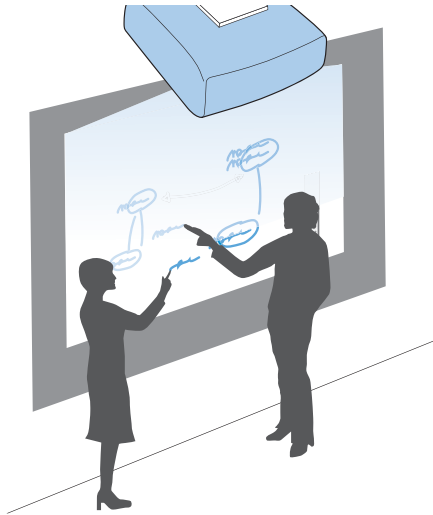




Pen Operation

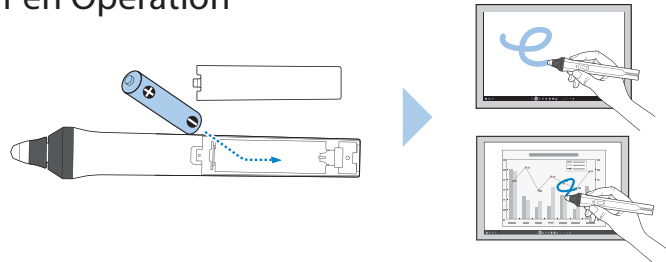 


Finger Touch Operation

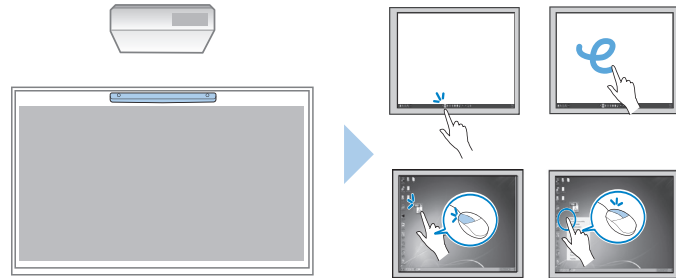 




Drawing (Whiteboard Mode)

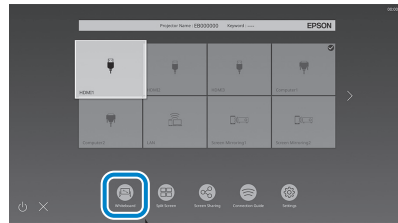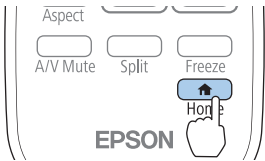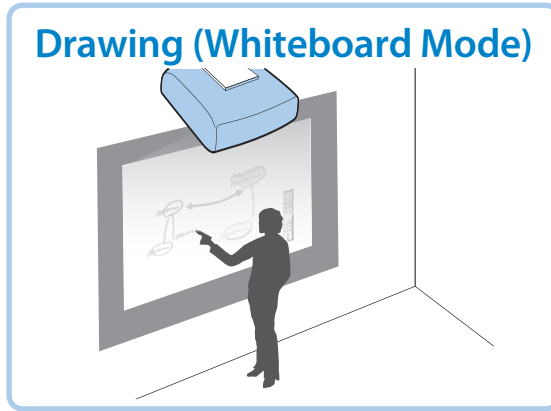   



Whiteboard

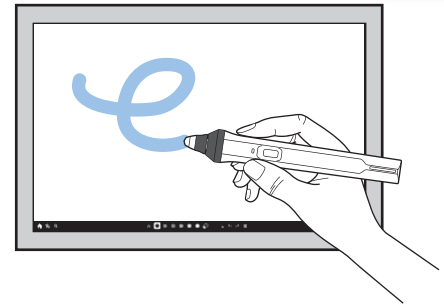 


Drawing (Annotation Mode)

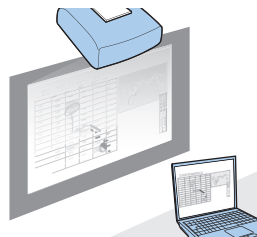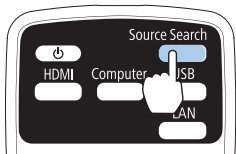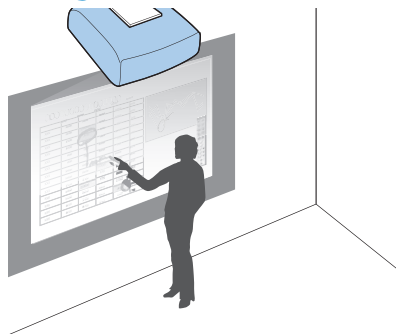   


PC Interactivity

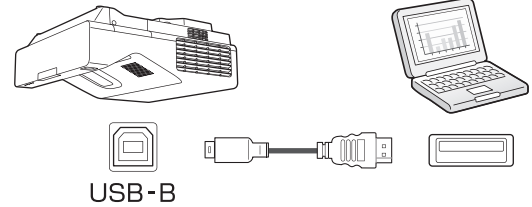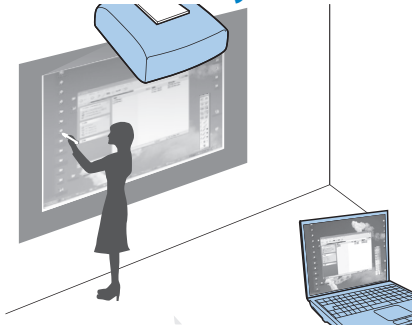  

10

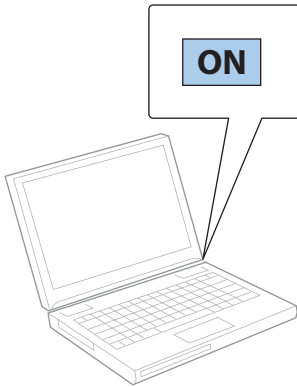 

 [Pen/Touch] > [PC Interactivity] > [Pen Tracking Mode]

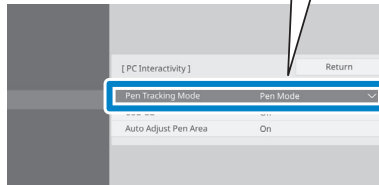

Windows/Mac: [Pen Mode]
Ubuntu: [Mouse Mode]



 
 
 
 
 
For More Information



or



epson.sn 

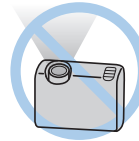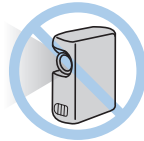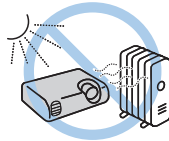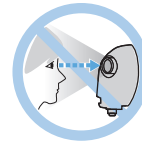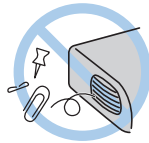

413961200

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>