 
 
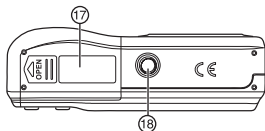 
 
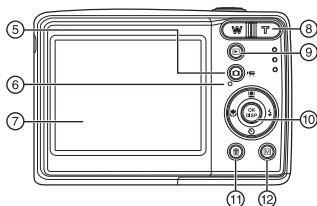 


Congratulations on your purchase of a high-quality Insignia product. Your Insignia digital camera is designed for reliable and trouble-free performance. Use this guide for initial setup of your camera. If you have questions, see your *User Guide* for more information.

Package contents

USB cable
Quick Setup Guide
2 AA alkaline batteries
CD with *User Guide*
Wrist strap

Getting to know your camera

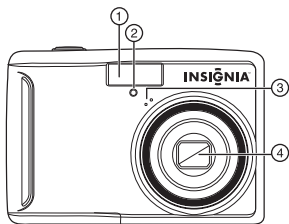

 
- 1 Flash
- 2 Self-timer lamp
- 3 Microphone
- 4 Zoom lens
- 5 Record mode button
- 6 Operation lamp
- 7 LCD screen
- 8 Zoom buttons
- 9 Playback mode button
- 10 OK/DISP button/
4-way navigation control (▲, ▼, ◀, ▶)
- 11 Delete button
- 12 Menu button
- 13 Speaker
- 14 Power button
- 15 Shutter button
- 16 Strap ring
- 17 Battery/memory card compartment
- 18 Tripod socket
- 19 USB connector

Note: The memory card slot is located behind the

<http://www.insignia.com>

Installing batteries


- 1 Open the battery cover by sliding it in the direction indicated by the arrow.
- 2 Insert two AA batteries with the positive (+) and negative (-) terminals matching the directions indicated inside the battery compartment.
- 3 Close the battery cover.

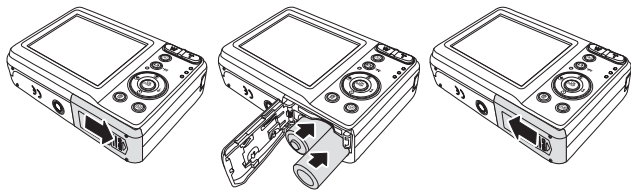

Inserting a memory card

- 1 Open the battery cover.
- 2 Insert an SD or SDHC card with the metallic part facing the back of the camera and the connectors pointing in.
- 3 Close the battery cover.

 Note: To remove the card, gently press on the edge of the card and release it. Pull the card out and close the battery cover.

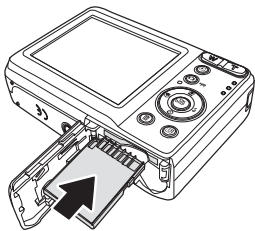

Turning the power on and off

- 1 Press and hold **POWER** to turn the camera on.
The lens extends and the Insignia startup image is displayed on the LCD.
- 2 Press **POWER** again to turn the camera off.

Power-saving function

To save battery power, turn the power saving function **ON** so that the camera automatically turns off two minutes after the last control has been accessed. You can change the power save setting in the *Setup* menu.


The power save feature will not activate while you are:


- Recording or playing video
- Erasing or copying files
- Connecting the camera to a computer with the USB cable

Changing the mode

You can record images and videos in Record mode. Use Playback mode to replay, delete, or copy images and video on the LCD display.

To switch between Record mode and Playback mode







In Record mode, press  (playback) to switch to Playback mode.

 
In Playback mode, press  (record) to switch to Record mode.

Using menus





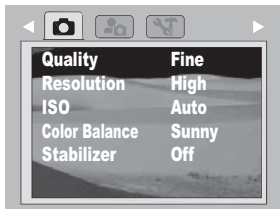


Use the four-way control and **OK/DISP** to make menu selections.

 
To use the Record menu

- 1 Turn the camera on. If the camera is not in Record mode, press the Record button.
- 2 Press  (menu) to display the *Record* menu.
- 3 Press up  or down  arrows to select a menu item and left  or right  arrows to change the setting.
- 4 Press  (menu) or **OK/DISP** to save settings and close the menu.



To use the setup menu

- 1 Turn the camera on. If the camera is not in Record mode, press the Record button.
- 2 Press  (menu) to display the *Record* menu.
- 3 Use the four-way control to select **SETUP**, then press **OK/DISP** to display the *Setup* menu.
- 4 Press up  or down  on the 4-way navigation control to select a menu item, then press right  on the 4-way navigation control or **OK/DISP** to display it.
- 5 Press up  or down  on the 4-way navigation control to select an option, then press **OK/DISP** to apply the setting.
- 6 Press  (menu) to close the menu.

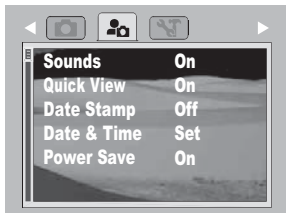

Taking pictures

 
- 1 Turn the power on. Set your camera to Record mode by pressing the Record button until the camera icon appears in the upper left of the LCD monitor.
- 2 Aim the focus area on the subject that you want to take a photo of.
- 3 Press the shutter button half-way down to focus the image.

The focus area turns green when the subject is in focus; the aperture value, shutter speed and ISO value are displayed.


If the shutter speed is slow or picture may blur, the shake warning icon may appear on the display. To avoid this, use a tripod to stabilize the camera when recording images.

- 4 Press the shutter button fully to take the picture.

Note: Be sure not to block the lens with your fingers or the wrist strap.

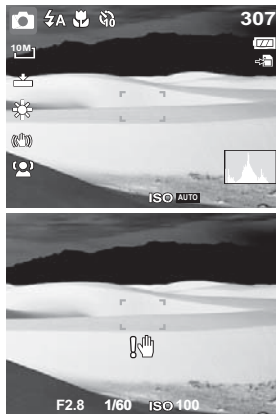


Recording video clips

- 1 Turn the power on.
- 2 Press the Record mode button until the movie icon appears in the upper lefthand corner of the LCD monitor.
- 3 Focus your camera on the subject that you want to take.
- 4 Press the Shutter button to start recording. Use the  control to zoom in and zoom out an image.

Note: When recording videos, audio recording mutes during zoom operation.

- 5 Press the Shutter button again to stop recording.

 Note: The camera will automatically stop recording when memory capacity has been reached.

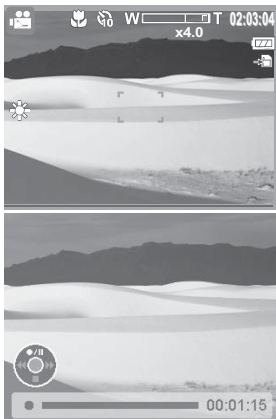

Playing back images

- 1 Turn the power on and set the camera to *Playback* mode.
The last recorded image or video appears on the display. If no images are stored, *[No image]* appears on the display.
- 2 Using the 4-way navigation control, press ◀ to see the previous image or ▶ to see the next image.

Note: Hold the ◀ or ▶ buttons down to scroll through images quickly.

Connecting the camera to a computer

There are two ways to download files from the camera to a computer:

- Insert the memory card into a card reader
- OR -
- Connect the camera to a computer using the supplied USB cable

Connecting the camera to a computer with the USB cable

- 1 Connect the supplied USB cable to the computer's USB port and turn on the camera.

 
A confirmation message appears on the LCD screen confirming that a connection has been made, and then the LCD screen turns off.

- 2 On Windows computers open **My Computer** or **Windows Explorer**.

Removable Disk appears in the drive list. On Macintosh computers,

a card icon will appear on the desktop. Double-click the icon to access images.

- 3 Double-click the *Removable Disk* icon to view its contents. Pictures and video clips stored on the camera or memory card are located in the *DCIM* folder.

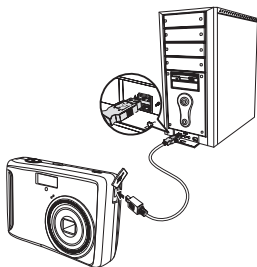

Accessing the User Guide

- Insert the enclosed CD into your computer, then open the *User Guide* file. If your computer has a slot-load CD/DVD drive, do not insert a mini CD into the drive. Go to www.insignia-products.com to download the user guide.
- OR -
- Visit the Insignia website at www.insignia-products.com and click on the **Digital Camera** link under *Products*.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>