

# User Guide



Digital Picture Key Chain

**NS-DKEYBL09**

**NS-DKEYRD09**

**NS-DKEYBK09**

 


# Contents

<b>Welcome</b> . . . . .	<b>2</b>
<b>Safety information</b> . . . . .	<b>3</b>
<b>Features</b> . . . . .	<b>4</b>
<b>Package contents</b> . . . . .	<b>4</b>
<b>Components</b> . . . . .	<b>5</b>
<b>Using the digital picture key chain</b> . . . . .	<b>7</b>
<b>Charging the key chain's battery</b> . . . . .	<b>8</b>
<b>Copying pictures to the key chain</b> . . . . .	<b>10</b>
<b>Viewing a slideshow</b> . . . . .	<b>13</b>
<b>Using the Options menu</b> . . . . .	<b>14</b>
<b>Setting the clock</b> . . . . .	<b>15</b>
<b>Viewing the clock and calendar</b> . . . . .	<b>17</b>
<b>Deleting pictures from the key chain</b> . . . . .	<b>19</b>
<b>Editing pictures</b> . . . . .	<b>23</b>
<b>Troubleshooting</b> . . . . .	<b>28</b>
<b>Legal notices</b> . . . . .	<b>29</b>
<b>90-day limited warranty</b> . . . . .	<b>31</b>

## Welcome

Congratulations on your purchase of a high-quality Insignia product. Your new digital picture key chain represents the state of the art in miniature picture frame design and is designed for reliable and trouble-free performance.

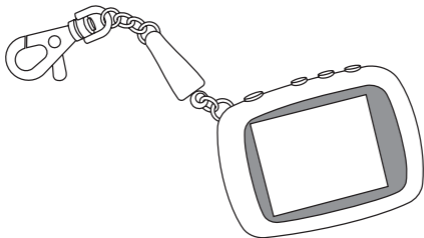

### ***If the key chain does not turn on***

Make sure that the key chain's battery is fully charged before use. For more information, see "Charging the key chain's battery" on page 8.

# Safety information

Always follow these basic safety precautions when using your digital picture key chain. This will reduce the risk of fire, electric shock, and injury.

## Warning

To reduce the risk of fire or shock hazard, do not expose the digital picture key chain to rain or moisture.

To prevent the risk of electric shock, do not remove the cover. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.

- **Water and moisture**—Do not use this key chain near water (such as near a bath tub, sink, washing machine, in wet basements, or near a swimming pool).
- **Object and liquid entry**—Never push objects of any kind into this key chain. Doing so may result in objects touching dangerous voltage points or could short-circuit parts that could result in a personal or property damage or injury, including fire or electric shock. Never spill liquid of any kind onto the key chain.
- **Heat**—The key chain should be kept away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
- **Power sources**—This key chain should be recharged and programmed only from a computer's powered USB port. For products intended to operate from battery power or other sources, refer to the operating instructions.
- **Servicing**—Do not attempt to service this product yourself, because opening or removing the case may expose you to dangerous voltage or other hazards and may void your warranty. Refer all servicing to qualified service personnel.

## Features

 
The digital picture key chain includes these features:

- Displays digital pictures (JPG/JPEG) in slideshow or static mode
- Easy connection to a computer to transfer pictures
- Built-in picture management software for your computer
- Clock/calendar display mode
- Auto power-off to conserve battery charge
- Bright TFT LCD screen
- Internal memory for 40 pictures
- Key clip with quick release


## Package contents

- Digital picture key chain
- *User Guide*
- Key clip with quick release
- Mini USB cable


## Components

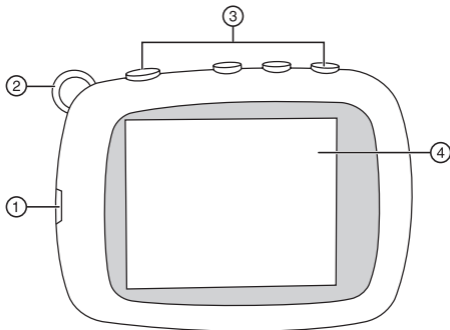

Item	Description
1	Mini USB port
2	Key chain ring
3	Control buttons
4	LCD

 

Item	Description
1	Mini USB port—Connect to your computer using the mini USB cable to transfer pictures to the key chain and to recharge its internal battery.

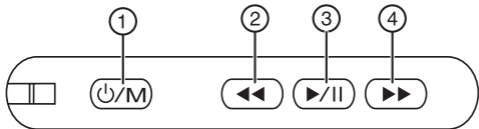 

Item	Description
1	Power/Menu—Press and hold to turn the key chain on or off. Press and release to enter the Options menu.
2	Reverse—Press to move the selection left or display the previous picture.
3	Play/Pause—Press to select menu items. During a slideshow, press to pause or resume.
4	Forward—Press to move the selection right or display the next picture.



# Using the digital picture key chain

You can use your key chain to:

- Play a slideshow of pictures
- Display a single picture
- Change display settings

Before using the key chain for the first time, you should first charge its internal battery. For instructions, see “Charging the key chain’s battery” on page 8.

 
## Charging the key chain's battery

### Important

You should make sure that the key chain's battery is fully charged before use. A computer or other device with a self-powered USB port is required to charge the internal battery. To charge the battery, connect the key chain to the powered USB port using the included mini USB cable.

### To charge the key chain's internal battery:

- 1 Connect the smaller end of the included mini USB cable to the key chain's USB connector.

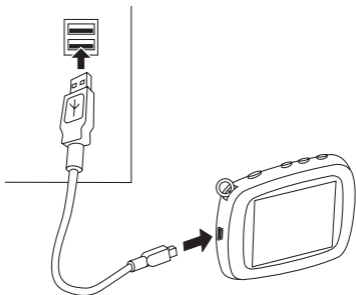

- 2** Connect the larger end of the USB cable to your computer's USB port. The battery charging indicator appears on the LCD and shows the status of the battery charging process.



- 3** Keep the key chain connected until the battery indicator shows that the battery is fully charged.

	Blinking battery indicator—The battery is being charged.
	Solid battery indicator—The battery is fully charged.
	Blinking battery indicator—The battery is low.


## Copying pictures to the key chain
 
### Note


Windows XP or Windows Vista is required to use the key chain's built-in software for copying pictures to the key chain.

### To copy pictures from your computer:

- 1 Connect the smaller end of the supplied mini USB cable to the key chain's USB port, then connect the larger end to your computer's USB port. The key chain's LCD displays the message "Connecting..."

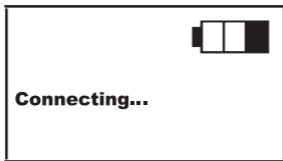


 The picture editing software starts on your computer.

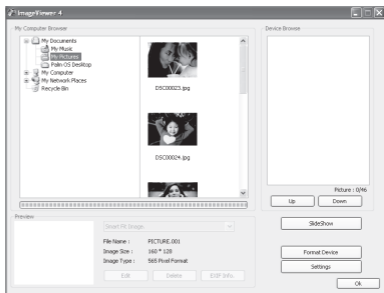

 - 2 On the left side of the computer screen, click the folder on your computer that you want to copy pictures from. Thumbnail images of the pictures in the selected folder are shown in the *My Computer Browser* window.
- 3 Click the thumbnail images of the pictures you want to copy to the key chain. Hold down **Shift** or **Ctrl** to select multiple images.




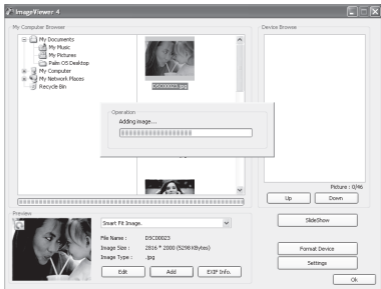

- 4 Click **ADD** to begin copying the images to the key chain. The pictures appear under the *Device Browser* window after they have been transferred to the key chain.



 - 5 Click **OK** to close the software. You can now disconnect the key chain from the computer and view a slideshow of the pictures you've transferred.

## Viewing a slideshow


### To view a slideshow:

 
- 1** Press and hold . A slideshow of the stored pictures begins.
- 2** To skip forward through pictures, press .  
To skip backward, press .
- 3** To pause the slideshow, press . To resume, press  again.




## Using the Options menu

You can change how the key chain displays pictures and performs other functions.

**To set viewing options:**

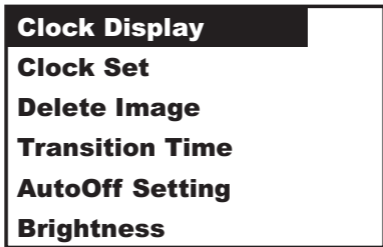 - 1 Press . The *Options* menu opens.



- 2 Press  to select the next item and press  to select the previous item.
- 3 To confirm your selection, press .



## Setup options

The following table lists all possible *Setup* menu options, submenu options, and a description of their actions in all viewing screens:

Menu option	Description
Clock Display	Enters clock/calendar display mode.
Clock Set	Sets the date and time for clock display.
Delete Image*	Deletes the currently displayed image.
Transition Time*	Sets how long each picture is displayed during a slideshow.
AutoOff Setting*	Sets the amount of time that must pass with no user interaction before the key chain turns off.
Brightness*	Adjusts the brightness of the display.
<i>*These settings can also be set using the built-in software.</i>	

## Setting the clock

 
You can set the date and time that are displayed in clock mode.

### Note


When you connect the key chain to your computer, the key chain's clock is automatically set to the time on your computer.

## To set the date and time:

- 1 Press . The *Options* menu opens.
- 2 Press to select **Clock Set**, then press .

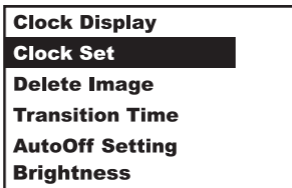

 - 3 Press and to adjust the selected (underlined) value.

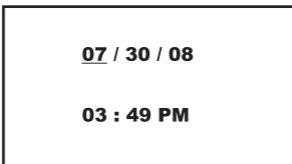


- 4 Press to save your changes and move to the next item to adjust.


## Viewing the clock and calendar

  You can display the current time and date on the key chain. The clock can be displayed in two ways:

- Normal mode fills the entire screen.
- Water Mark mode displays the clock in the bottom right of the screen during slide shows.

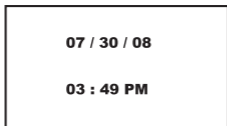 



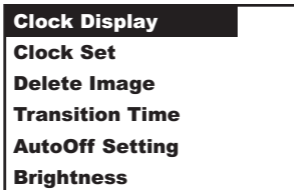 
Normal

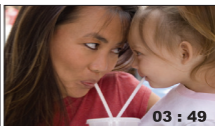




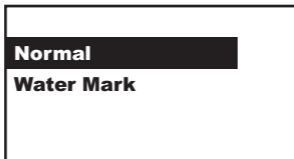 
Water Mark

## To view the clock and calendar:

- 1 Press  to enter the *Options* menu, then press  to enter the clock display mode.



- 2 Press  and  to choose the mode you want to use (**Normal** or **Water Mark**), then press .



 
## Deleting pictures from the key chain

You can delete pictures using the built-in photo management software for your computer or using the key chain's own menu.


### To delete selected pictures using the built-in computer software:


- 1 Connect the key chain to your computer using the USB cable, then select **Update Photos** from the menu on the key chain to start the built-in picture editing software on your computer.


- 2 Click to select the pictures on the right side of the screen that you want to delete from the *Device Browser*, then click **DELETE**. The pictures are removed from the key chain.

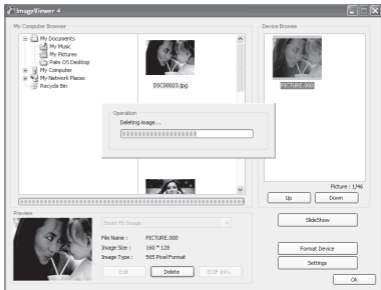

### To delete selected pictures using the key chain's menu:

 - 1 Select the image you want to delete and display it on the key chain's LCD.
- 2 Press . The *Options* menu opens.

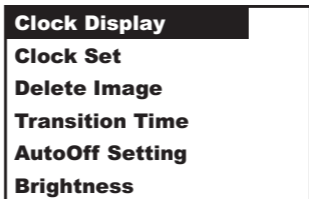 


- 3 Press  to highlight **Delete Image**, then press  to confirm and delete the picture.

### To delete all pictures:

 - 1 Connect the key chain to your computer using the USB cable, then select **Update Photos** from the menu on the key chain to start the built-in picture editing software on your computer.

- 2 Click **FORMAT**. All pictures are erased from the key chain.

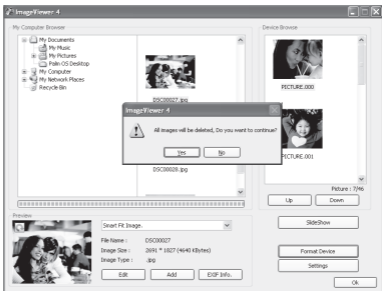




## Editing pictures

You can change the way your pictures are displayed on the key chain by using Zoom, Rotate, and Flip/Mirror.

### To zoom an image:

 - 1 Connect the smaller end of the supplied USB cable to the key chain's USB port, then connect the larger end to your computer's USB port. The key chain's LCD displays the message "Connecting..." and the built-in software starts on your computer.
- 2 Select the picture in the ImageViewer.

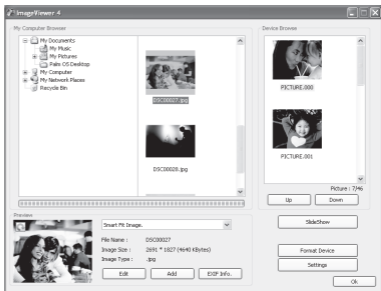

- 3 Click **EDIT**. The editing screen appears.




- 4 Click **ZOOM (+)** to zoom in on the area of the screen you want magnified. After you zoom in, you can use the mouse to drag the desired area to the center of the screen.



- 5 Click **OK** to save your changes.

## To rotate an image:

 - 1 With the editing screen active, click the right or left **ROTATE** buttons to rotate the image counter-clockwise or clockwise in 90° increments.

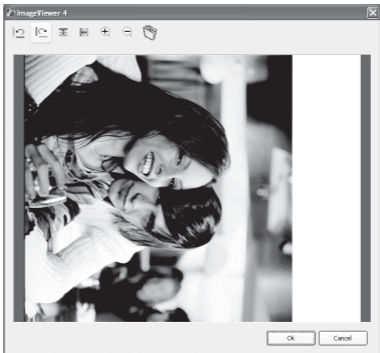

- 2 Click **OK** to save your changes.


## To flip or mirror an image:

 - 1 With the editing screen active, click **FLIP** to vertically flip the image, or click **MIRROR** to horizontally mirror the image.



- 2 Click **OK** to save your changes.

## Troubleshooting

Problem	Solution
The key chain won't turn on.	Make sure that you press and hold  for several seconds. If the key chain still does not turn on, connect it to a computer's USB port with the included mini USB cable and charge the key chain's internal battery.

## Specifications

Color	NS-DKEYBL09: Blue NS-DKEYRD09: Red NS-DKEYBK09: Black
Screen size	1.8 inches (45.7 mm)
Screen format	Standard
Screen resolution	160 × 128 pixels
File format	Standard JPG/JPEG
Features	Slideshow mode, Auto power off
USB	Mini-A USB port
Power input	Powered USB
Internal memory	2 MB

# Legal notices

## ***FCC Part 15***

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## ***FCC warning***

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

## ***DHHS and FDA safety certification***

This product is made and tested to meet safety standards of the FCC, requirements and compliance with safety performance of the U.S. Department of Health and Human Services, and also with FDA Radiation Performance Standards 21 CFR Subchapter J.

## ***Canada ICES-003 statement***

This Class B digital apparatus complies with Canadian ICES-003.

## ***RSS 310 statement***

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.





## 90-day limited warranty

Insignia Products ("Insignia") warrants to you, the original purchaser of this new **NS-DKEYBL09**, **NS-DKEYRD09**, or **NS-DKEYBK09** ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of 90 days from the date of your purchase of the Product ("Warranty Period"). This Product must be purchased from an authorized dealer of Insignia brand products and packaged with this warranty statement. This warranty does not cover refurbished Product. If you notify Insignia during the Warranty Period of a defect covered by this warranty that requires service, terms of this warranty apply.

### *How long does the coverage last?*

The Warranty Period lasts for 90 days from the date you purchased the Product. The purchase date is printed on the receipt you received with the Product.

### *What does this warranty cover?*

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## ***How to obtain warranty service?***

If you purchased the Product at a retail store location, take your original receipt and the Product to the store you purchased it from. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from an online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

## ***Where is the warranty valid?***

This warranty is valid only to the original purchaser of the product in the United States and Canada.

## ***What does the warranty not cover?***

This warranty does not cover:

- Customer instruction
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as lightning strikes
- Accident
- Misuse
- Abuse
- Negligence
- Commercial use
- Modification of any part of the Product

This warranty also does not cover:

- Damage due to incorrect operation or maintenance
- Attempted repair by anyone other than a facility authorized by Insignia to service the Product
- Products sold as is or with all faults
- Products where the factory applied serial number has been altered or removed

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

[www.insignia-products.com](http://www.insignia-products.com)

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645

© 2008 Best Buy Enterprise Services, Inc.

All rights reserved. INSIGNIA is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.



08-1571

[www.insignia-products.com](http://www.insignia-products.com)

(877) 467-4289

Distributed by Best Buy Purchasing, LLC  
7601 Penn Avenue South, Richfield, MN USA 55423-3645

© 2008 Best Buy Enterprise Services, Inc.

All rights reserved. INSIGNIA is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries.

All other products and brand names are trademarks of their respective owners.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>