

 
# INSIGNIA flex™

## 9.7" Flex™ Android Tablet | NS-13T001 QUICK SETUP GUIDE



### WE ARE GOING GREEN!


A copy of your *User Guide* is not provided in the box but is available online. You can go to [www.insigniaproducts.com](http://www.insigniaproducts.com), click **Support & Service**, enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click ►.

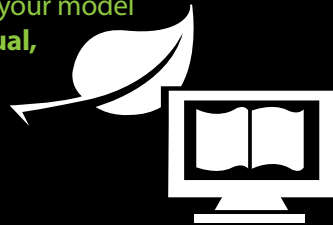



Before using your new product, please read these instructions to prevent any damage.

### In the box

 - USB power adapter
- 30-pin to USB cable
- Important Information
- *Quick Setup Guide*

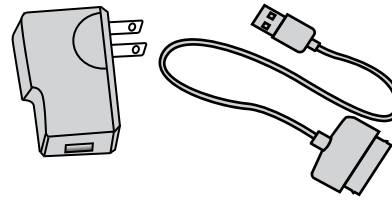

### Features

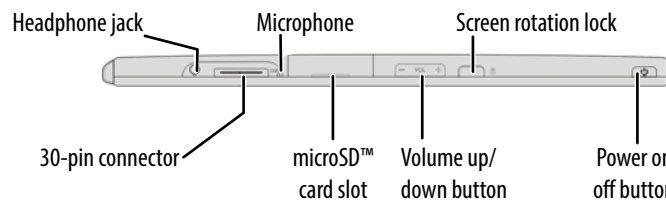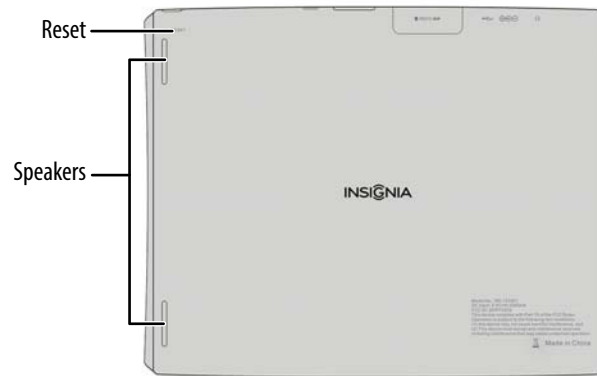  


Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.


### Charging the battery

 Before using your tablet for the first time, you need to charge the battery for a minimum of eight hours.

- 1 Insert the 30-Pin connector into your tablet's charger port.
- 2 Insert the USB connector into the USB power adapter (wall charger), then plug the USB power adapter into a power outlet to start charging the battery. When fully charged the tablet provides approximately 6-8 hours of battery life (or 7 hours video playback) depending on usage type.

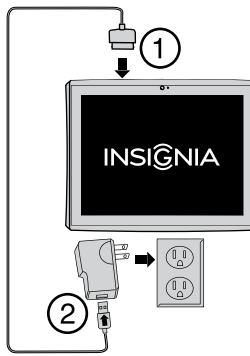


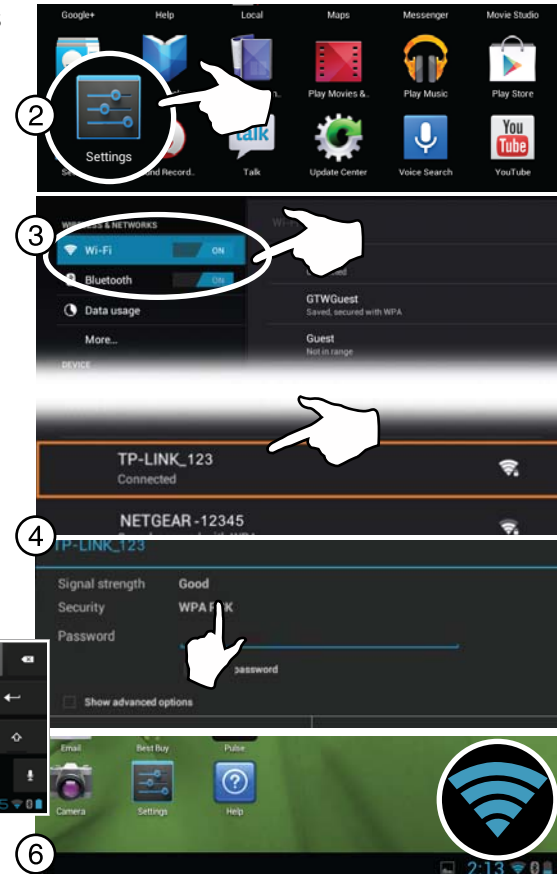 
### Turning on your tablet

Press the  (power) button on the top, right side of your tablet. When you turn on the tablet for the first time, you will be prompted to sign in to your Google account. Follow the instructions displayed on your tablet.


### Turning on Wi-Fi and connecting to a Wi-Fi access point

To use the Wi-Fi feature, you need access to a wireless access point or hotspot.

 
- 1 Touch the  (applications) icon.
- 2 Touch the  (settings) icon.
- 3 Touch **Wi-Fi** to access the list of available networks.
- 4 Select the Wi-Fi network you want to connect to. If you are prompted to enter a password, touch the password field.
- 5 When the on-screen keyboard opens, touch the keys to enter the password, then touch **Enter**.
- 6 Touch **Connect** to connect to the wireless access point. If the connection is successful, the connected icon appears.



## To open an application:


1 Touch the  icon.

2 Touch the application you want to open.

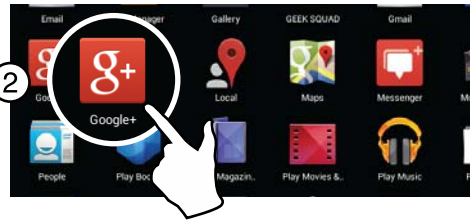

## For additional help, see your *User Guide*:

 
• Touch the **Help** icon. Your *User Guide* opens.

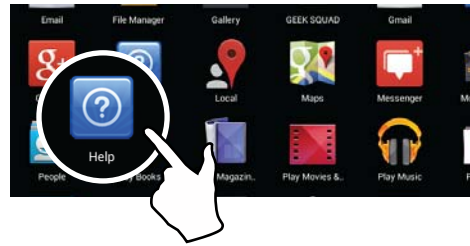

## To turn off your tablet:



  
1 Press and hold the  (power) button until the options menu opens.

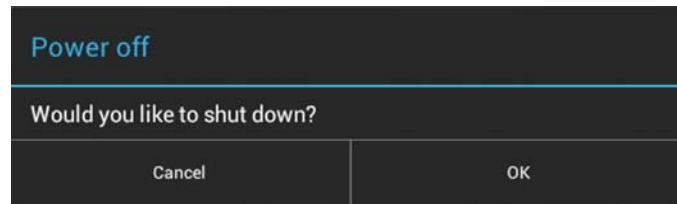





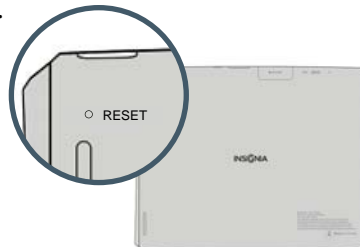


2 Touch **OK** to turn off your tablet.

**Caution:** Use only the included power adapter to charge your tablet's battery. Even if a different brand of power adapter has the same type USB port, using it may damage your tablet.










**Note:** If the battery does not charge using the included power adapter, use a small tool (like a straightened paperclip) to press the RESET button on the back of your tablet.



## Using gestures to navigate

<b>Touch</b>		Touch application or other item with your finger to open or select it.
<b>Touch and hold</b>		Touch an item with your finger and do not release it until your tablet responds.
<b>Drag</b>		Touch and hold an item with your finger, then move your finger to the position where you want the item.
<b>Flick</b>		Quickly slide your finger either vertically or horizontally across the screen.
<b>Double-touch</b>		Quickly touch the screen twice.
<b>Pinch</b>		Pinch your fingers together or move them apart.
<b>Rotate</b>		To change the screen orientation from portrait to landscape (or from landscape to portrait) turn your tablet sideways. When entering text, you can turn the tablet sideways to switch to landscape mode and make the keyboard bigger.

## Function buttons

Key	Icon	Function
<b>Text search</b>		Search on Google.
<b>Voice search</b>		Voice search on Google.
<b>Return</b>		Return to the previous screen.
<b>Home</b>		Return to the Home screen.
<b>Multi-task</b>		Open the list of recently used applications and running applications.
<b>APPS</b>		View all applications installed on the tablet.
<b>Option</b>		Open an options menu.
<b>Close</b>		Close the keyboard.
<b>Drop – down</b>		Open a drop-down menu.

## One-year limited warranty

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## Need additional help?

See your **Online User Guide!** This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online. To find your manual, touch the **?** icon on your tablet. You can also go to [www.insigniaproducts.com](http://www.insigniaproducts.com), click **Support & Service**, enter your model number in the *Product Search* field, then click **Search**.

Check out our online **community forum** at [www.insigniaproducts.com](http://www.insigniaproducts.com) for helpful information from other Insignia Tablet owners.

## We're here for you

[www.insigniaproducts.com](http://www.insigniaproducts.com)

For customer support, call:

**1-877-467-4289 (U.S. and Canada) or  
01-800-926-3000 (Mexico)**

INSIGNIA is a registered trademark of BBY Solutions, Inc. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2013 BBY Solutions, Inc. All Rights Reserved.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>