 


# 1 Loading the rechargeable battery

## KODAK Li-Ion Rechargeable Digital Camera Battery, KLIC-7000

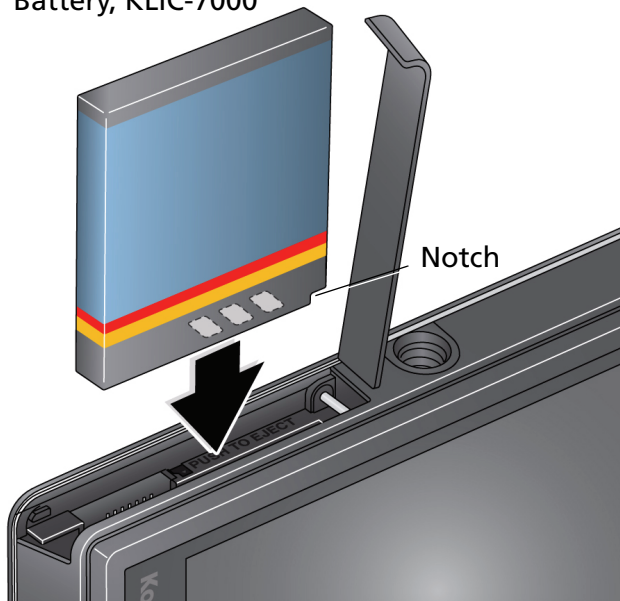

**Charge the battery**

[see page 2](#)

**Purchase extra batteries for your trip or event**

[www.kodak.com/go/sliceaccessories](http://www.kodak.com/go/sliceaccessories)

 
**See the Extended user guide**

[www.kodak.com/go/slicesupport](http://www.kodak.com/go/slicesupport)


## 2 Charging the battery

If your package includes an adapter:

- 1 Turn OFF the camera.
- 2 Connect the KODAK Camera USB Cable, Micro B / 5-Pin and charger. (Use only the cable included with this camera!)

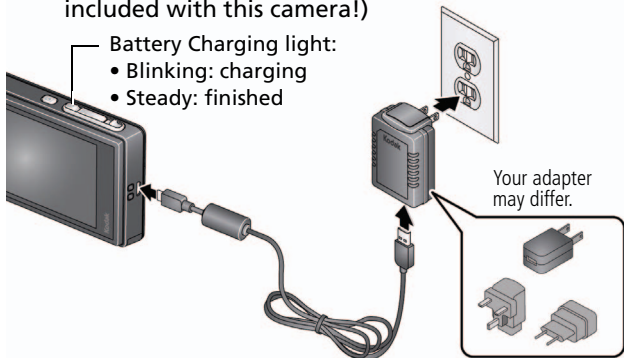

If your package includes a charger:

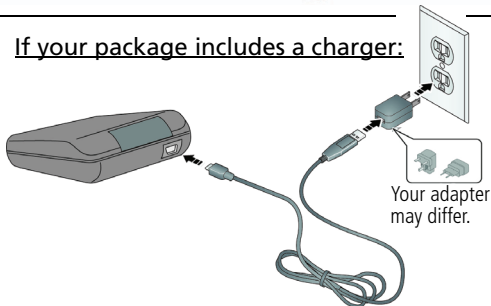 

### 3 Storing pictures on a microSD/SDHC Card

You must purchase a microSD or microSDHC Card to store more pictures and videos.



#### CAUTION:

**Inserting or removing a card when the camera is on may damage the pictures, card, or camera.**

 
- 1 Turn off the camera.
- 2 Insert or remove the card.
- 3 Turn on the camera.

NOTE: Avoid touching the card's metal contacts. To clean the contacts, use a dry cotton swab or a lint-free cloth.

Notch



### 4 Turning on the camera

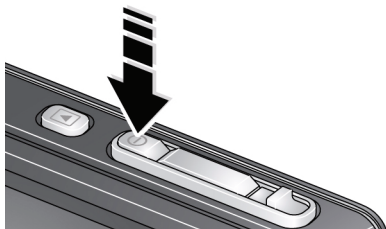


## 5

## Setting the language, date/time




- ① Drag or swipe to scroll.
- ② Tap your language.
- ③ Tap X to accept.



 
- ① Tap Set Date/Time.
- ②  to change date format, date, and time. (Tap/hold to scroll quickly.)
- ③ Tap X to accept.

To learn more about using the touchscreen, [see page 13](#).

## 6 Taking a picture

When you turn on the camera, it's ready to take pictures in Smart Capture mode .

- 1 Press the Shutter button halfway to lock the focus.
- 2 When the framing marks turn green, press the Shutter button completely down.

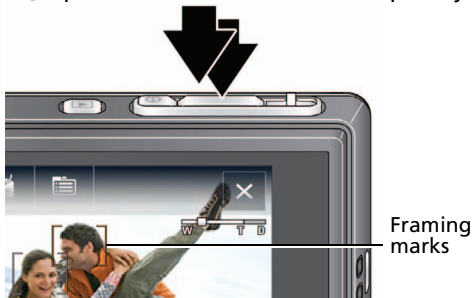

**IMPORTANT:** When you take a picture, your camera saves:

- full-size pictures on your card, *and*
- smaller copies of pictures in the SLICE Album

When you transfer pictures/videos to your computer, only the full-size versions (from your card or internal memory) are transferred. Your SLICE Album keeps copies, so you can relive the experience of each picture!

**Learn more about SLICE Album** [see page 18](#)

**See the Extended user guide** [www.kodak.com/go/slicesupport](http://www.kodak.com/go/slicesupport)

## Using picture-taking shortcuts

If shortcuts are hidden, tap the top of the LCD to show them.



**IMPORTANT:** *Know when your battery needs charging.*

The battery level icon works like the gas gauge in your car but appears only when the battery requires your attention. Charge the battery whenever necessary.

**Charge the battery**

[see page 2](#)

**Purchase extra batteries for your trip or event**

 
[www.kodak.com/go/sliceaccessories](http://www.kodak.com/go/sliceaccessories)

## 7 Reviewing pictures



② For previous/  
next picture...

tap the left/right  
side of the LCD

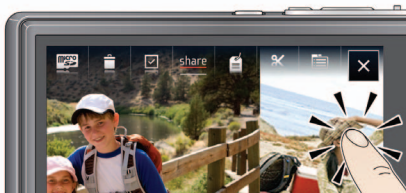

or

swipe



If the microSD Card icon is displayed, the newest picture/video from the card appears. (If the SLICE Album icon is displayed, tap it, then tap the microSD Card icon.)

## Using the review shortcuts

If shortcuts are hidden, tap the top of the LCD to show them.



See the Extended user guide

 
[www.kodak.com/go/slicesupport](http://www.kodak.com/go/slicesupport)



## 8 Transferring pictures to your computer

Download KODAK Software—so it's easy to transfer and share pictures and videos. Make sure the computer is connected to the Internet. When you connect the camera to the computer, the KODAK Software Downloader automatically runs. Follow the prompts to download and install KODAK Software.\*

- 1 Turn off the camera.
- 2 Use the KODAK Camera USB Cable, Micro B / 5-Pin to connect camera to computer. (Use only the cable included with this camera!)
- 3 Turn on the camera.
- 4 Follow the prompts to run the KODAK Software Downloader on your computer.
- 5 After the software is installed, follow the prompts to transfer pictures and videos to your computer.

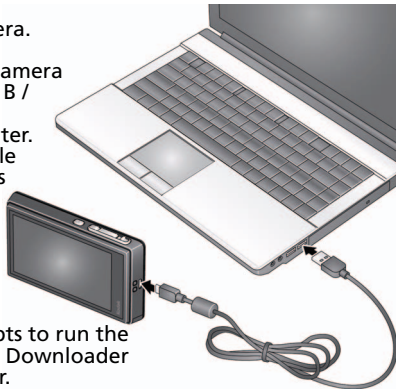

\* If the KODAK Downloader does not run, find and launch it here:



- WINDOWS OS: in My Computer
- MAC OS: on the Desktop


NOTE: You can also use a card reader to transfer your pictures/videos.

**Download Software later**

 [www.kodak.com/go/camerasw](http://www.kodak.com/go/camerasw)


## Using on-camera Help

- ① Tap the Menu  icon.
- ② On a main menu, Tap/hold a menu item.  
(Or, when an  icon is available, tap it.)
- ③ Drag or swipe to scroll through a Help topic.

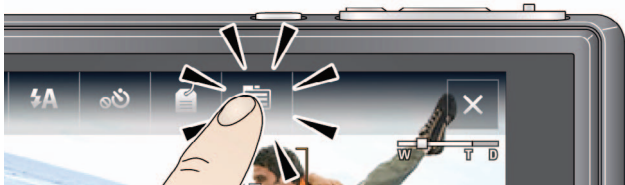

## Sharing via social networking sites

**IMPORTANT:** To use the social networking features, you need to download KODAK Software.

- ① Press the Review button , then find a picture/video.
- ② Tap the Share share icon.
- ③ Tap one or more social networking sites so a check mark appears. (Drag or swipe the list of sites.)
- ④ When finished, tap X.  
When you transfer the picture to your computer, it is sent to the networking site(s) that you chose.

See the **Extended user guide**

[www.kodak.com/go/slicesupport](http://www.kodak.com/go/slicesupport)

---

## Keep learning about your camera!

---

### Keep learning!

Finish reading this book, so you can take and share your best pictures!

 
### Go to [www.kodak.com/go/slicesupport](http://www.kodak.com/go/slicesupport) for:

- the Extended user guide
- Step-by-Step Solutions & Repair
- interactive tutorials
- FAQs
- downloads
- accessories
- printing information
- product registration


---

## Front view

---

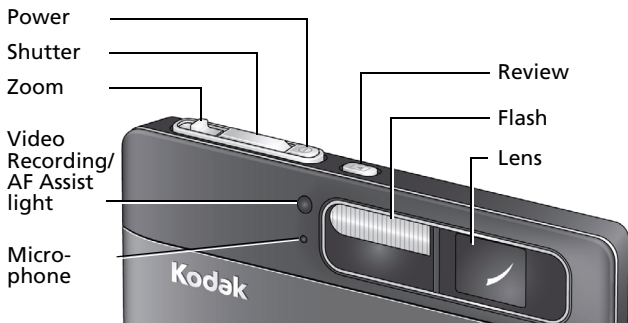


## Back view

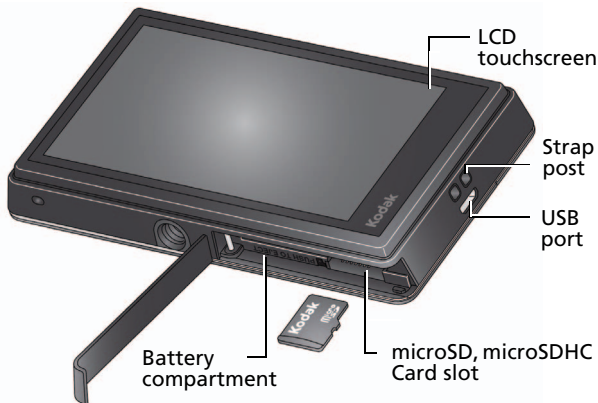 

## Using the touchscreen

 Tap

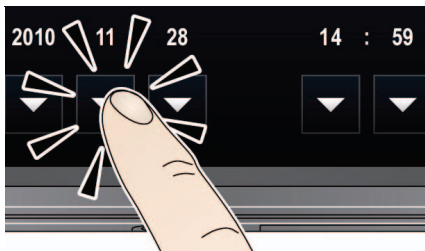

Swipe




Drag



# 1

## Taking pictures/videos

### Taking a video

- 1 Tap the Capture icon.
- 2 Tap the Video icon .
- 3 Press the Shutter button completely down and release. (To stop recording, press and release again.)



### Reviewing the picture/video just taken

After you take a picture/video, the LCD displays a quickview for several seconds. (To dismiss the quickview sooner, press the Shutter button halfway or touch the screen.)

#### Delete



 
#### Play a video





To review pictures/videos anytime, see [page 7](#).

## Capture modes

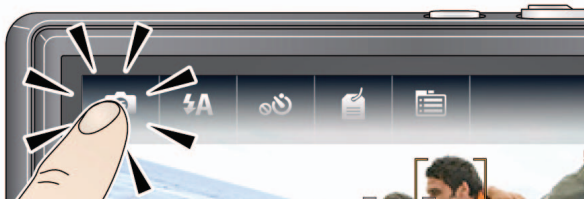Tap the Capture icon, then tap the mode that suits your subjects and surroundings.



Capture mode	For
 <b>Smart Capture</b>	General picture taking—it offers excellent image quality and ease of use.
<b>Program (P)</b>	More creative control. (See the Extended user guide at <a href="http://www.kodak.com/go/manuals">www.kodak.com/go/manuals</a> .)
 <b>Video</b>	Video with sound. (See <a href="#">page 14</a> .)
<b>Scene</b>	Point-and-shoot simplicity when taking pictures under special conditions. (See <a href="#">page 16</a> ).

To access the camera Help system, see [page 10](#).

## Scene modes

Scene modes are preset for a variety of unique situations.

 
- 1 Tap the Capture icon (see page 15), then tap Scene **SCN**.
- 2 Tap a Scene mode to read its description.

NOTE: If the description turns off before you finish reading it, tap it again.

- 3 Tap X to choose a Scene mode (Portrait, Sport, Landscape, Close-up, Sunset, Backlight, Children, Bright, Self-portrait, Night Portrait, Night Landscape, High ISO, Panorama L-R, Panorama R-L).

## Using zoom

Use optical zoom to get up to 5X closer to your subject while taking pictures. Press Telephoto (T) to zoom in. Press Wide Angle (W) to zoom out.

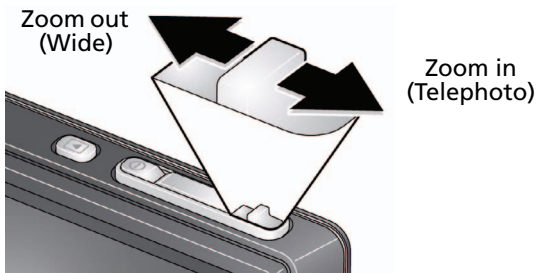








## Using the flash

Use the flash when you take pictures at night, indoors, or outdoors in heavy shadows. Flash settings are limited in some capture modes.

- 1 Tap the Flash icon to view flash modes.
- 2 Tap the desired Flash mode.



Flash modes		Flash fires
<b>Auto</b>		When the lighting conditions require it.
<b>Fill</b>		Every time you take a picture. NOTE: Not available in Smart Capture mode.
<b>Red-eye Reduction</b> Choose a setting in the Setup menu.		A preflash fires, shrinking the eye pupil, before the picture is taken.
		A preflash does not fire; the camera corrects red eye. NOTE: Image processing takes longer than when using preflash.
<b>Off</b>		Never.

## 2

## Using your SLICE Album

Your camera stores a copy of every picture you take, so your collection—your SLICE Album—is always complete and portable! When you take pictures, your camera saves:

- full-size pictures on your card, *and*
- smaller copies in the SLICE Album

To view your SLICE Album, press and hold the Review button—even if the camera is off—or tap the card or SLICE Album icon, then tap SLICE Album.




### Tips:

- Tag the pictures to make them easier to find, [see page 19](#).
- Use the Search feature to find pictures, [see page 20](#).

## Tagging pictures so they are easy to find


Tag pictures to make them easy to find, later. You can tag people, locations, or keywords. For example, the camera can find pictures that contain "Mary" or "Boston" or "Dad's 60th."

### Assigning people tags to pictures

- 1 Press the Review  button. Tap the left/right side of the screen (or swipe) to find a picture that contains faces.
- 2 Tap the Tag icon, tap Tag People, then tap Apply Tags.  
*A Name box is superimposed over each detected face (up to 5).*
- 3 If the camera recognizes a face, confirm it. (If you do nothing, the camera assumes that the names are correct.) If the camera is not correct, tap the Name box, then choose an existing name or add a new one.

*Repeat these steps to assign names to other faces. When finished, tap X.*

### Assigning location tags to pictures


- 1 Press the Review  button, then find a picture to tag.
- 2 Tap the Tag icon, then tap Location.
- 3 Tap Enter New Location or Recent Location.

*When finished, tap X.*



 
*Navteq is a trademark in the U.S. and other countries.*


## Assigning keyword tags to pictures

- 1 Press the Review  button, then find a picture to tag.
- 2 Tap the Tag icon, then tap Keyword Tag.
- 3 Tap an existing keyword or tap Add New.

## Using the Search feature to find pictures

Tag pictures to make them easy to find, later. (See page 19.)

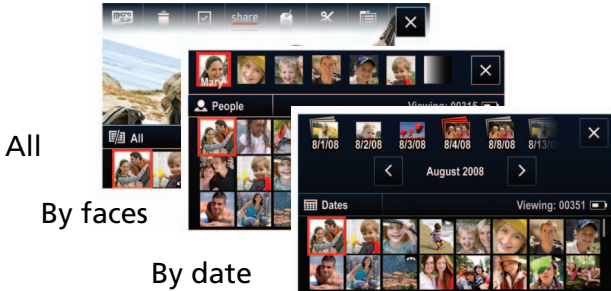

- 1 Press the Review  button.
- 2 Tap the microSD Card or SLICE Album icon.
  - To view the previous/next picture, either swipe left/right or touch the left/right side of the screen.
  - To view thumbnails, tap (or drag up) the thumbnail bar.
  - To exit the Search feature, tap X.

## More details about the SLICE Album

- When you transfer pictures to your computer, only the full-size versions are transferred.
- If you delete a picture during a quickview, that picture is **not** created in the SLICE Album.
- If you delete a picture from a card or internal memory, that picture is **not** deleted from the SLICE Album.
- If you edit a picture on the card or internal memory, that picture is updated in the SLICE Album.

## Getting help

For product support, go to [www.kodak.com/go/slicesupport](http://www.kodak.com/go/slicesupport) and choose Step-by-Step Solutions & Repair.

---

### If the camera does not turn on/off:

If battery power is extremely low, the camera may turn off. In most cases, this is normal and can be corrected by recharging the battery.

### In the U.S. and other countries where the Step-by-Step Solutions & Repair tool is available:

- Recharge the battery or install a new one. [See page 1.](#)
- If the problem persists, go to [www.kodak.com/go/slicesupport](http://www.kodak.com/go/slicesupport) and select Step-by-Step Solutions & Repair to resolve or to set up a repair request.

---

### In countries where the Step-by-Step Solutions & Repair tool is not available:

- Recharge the battery or install a new one. [See page 1.](#)

If the problem persists:

- Verify that you are using the correct battery. Go to [www.kodak.com/go/batterychart](http://www.kodak.com/go/batterychart).
- Recharge the battery or install a new one. [See page 1.](#)
- If the problem persists, go to [www.kodak.com/go/wwcontacts](http://www.kodak.com/go/wwcontacts) to locate your nearest repair center.

---

<b>Download software</b>	<a href="http://www.kodak.com/go/slicedownloads">www.kodak.com/go/slicedownloads</a>
--------------------------	--

---

<b>Register your camera</b>	<a href="http://www.kodak.com/go/register">www.kodak.com/go/register</a>
-----------------------------	--

---

<b>Email, write, or chat with Kodak (where available)</b>	<a href="http://www.kodak.com/go/contact">www.kodak.com/go/contact</a>
---	--

---

Upgrading your software and firmware

Download the latest versions of KODAK Software and the camera firmware (the software that runs on the camera). See [www.kodak.com/go/slicedownloads](http://www.kodak.com/go/slicedownloads).

FCC compliance and advisory

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The KODAK High Performance USB AC Adapter K20-AM complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canadian DOC statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observance des normes-Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

MPEG-4

Use of this product in any manner that complies with the MPEG-4 visual standard is prohibited, except for use by a consumer engaging in personal and non-commercial activities.

CE

Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Australian C-TickChina RoHS环保使用期限 (EPUP)

在中国大陆，该值表示产品中存在的任何危险物质不得释放，以免危及人身健康、财产或环境的时间期限（以年计）。该值根据操作说明中所规定的产品正常使用而定。

有毒有害物质或元素名称及含量标识表							
部件名称	有毒有害物质或元素						
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚	
数码相机电路板元件	×	○	○	○	○	○	○
锂电池	×	○	○	○	○	○	○
交流变压器	×	○	○	○	○	○	○
电池充电器	×	○	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。  
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。



USB 数据线

### VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としています。この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。

## Kodak

Eastman Kodak Company | Rochester, NY 14650 | Kodak, 2010

All screen images are simulated.

Kodak and Slice are trademarks of Eastman Kodak Company.

Naveq is a trademark in the U.S. and other countries.

microSD and microSDHC are trademarks of the SD Card Association.

P/N 4H5258\_en



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>