

---

# KODAK EASYSHARE SPORT Camera / C123



## Extended user guide

[www.kodak.com](http://www.kodak.com)

For interactive tutorials:

[www.kodak.com/go/c123demos](http://www.kodak.com/go/c123demos)

For help with your camera:

[www.kodak.com/go/c123support](http://www.kodak.com/go/c123support)

---

# Kodak

Eastman Kodak Company  
Rochester, New York 14650


© Eastman Kodak Company, 2010

All screen images are simulated.

Kodak, EasyShare Sport, Max, Perfect Touch, and Pulse are trademarks of Eastman Kodak Company.

4H7428\_en

## Front view

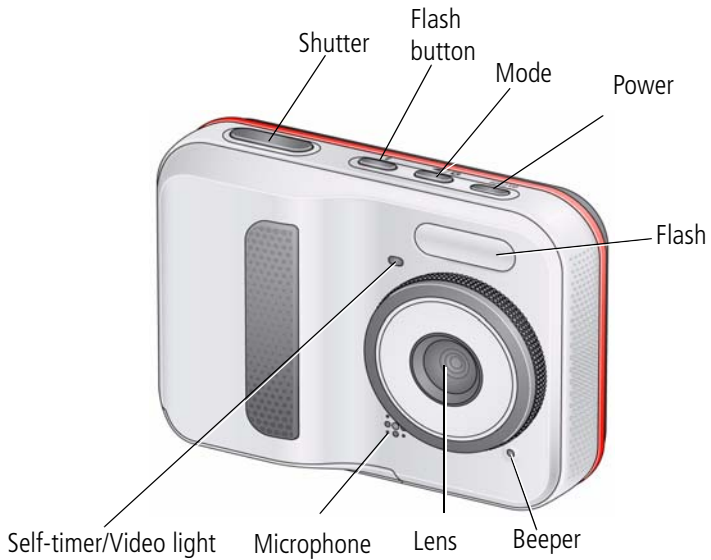

## Back view



---

# Table of contents

<b>1</b>	<b>Setting up your camera</b>	<b>1</b>
	Attaching the wrist strap	1
	Opening the doors	2
	Loading the AA batteries	3
	Turning on the camera	4
	Setting the language and date/time	4
	Storing pictures on an optional SD or SDHC Card	5
<b>2</b>	<b>Taking pictures/videos</b>	<b>6</b>
	Taking pictures	6
	Taking a video	6
	Understanding the picture-taking icons	8
	Know when your batteries need attention	8
	Using the digital zoom	8
	Using the flash	9
	Using different modes	10
	Using shortcuts	12
	Using the self-timer	13
	Using the camera under water	14
<b>3</b>	<b>Sharing pictures/videos</b>	<b>15</b>
	Sharing through social networks	15
	Tagging pictures/videos with keywords	17
	Marking pictures/videos for emailing	18
<b>4</b>	<b>Reviewing and editing</b>	<b>19</b>
	Reviewing pictures/videos	19
	Deleting pictures/videos	19
	Viewing pictures/videos in different ways	21
	A smarter way to find and enjoy your pictures	22
	Understanding the review icons	23
	Creating a slide show	24

Displaying pictures/videos on a television.....	25
Using the menu button in review.....	26
Cropping pictures.....	26
Editing videos.....	27
Selecting multiple pictures/videos.....	29
Rotating pictures.....	29
Using KODAK PERFECT TOUCH Technology.....	30
Adding a date stamp.....	30
<b>5 Doing more with your camera.....</b>	<b>31</b>
Using the menu button to change settings.....	31
Using the Setup menu.....	33
<b>6 Transferring, printing pictures.....</b>	<b>35</b>
Printing pictures.....	36
Marking your pictures for print.....	38
<b>7 Troubleshooting.....</b>	<b>39</b>
Getting help from your camera.....	39
Troubleshooting.....	40
Getting help on the Web.....	43
<b>8 Appendix.....</b>	<b>44</b>
Camera specifications.....	44
Care and maintenance.....	46
Upgrading your software and firmware.....	46
Storage capacities.....	47
Important safety instructions.....	47
Battery replacement, battery life.....	48
Limited warranty.....	49
Regulatory compliance.....	50


# 1

## Setting up your camera

### Attaching the wrist strap




## Opening the doors

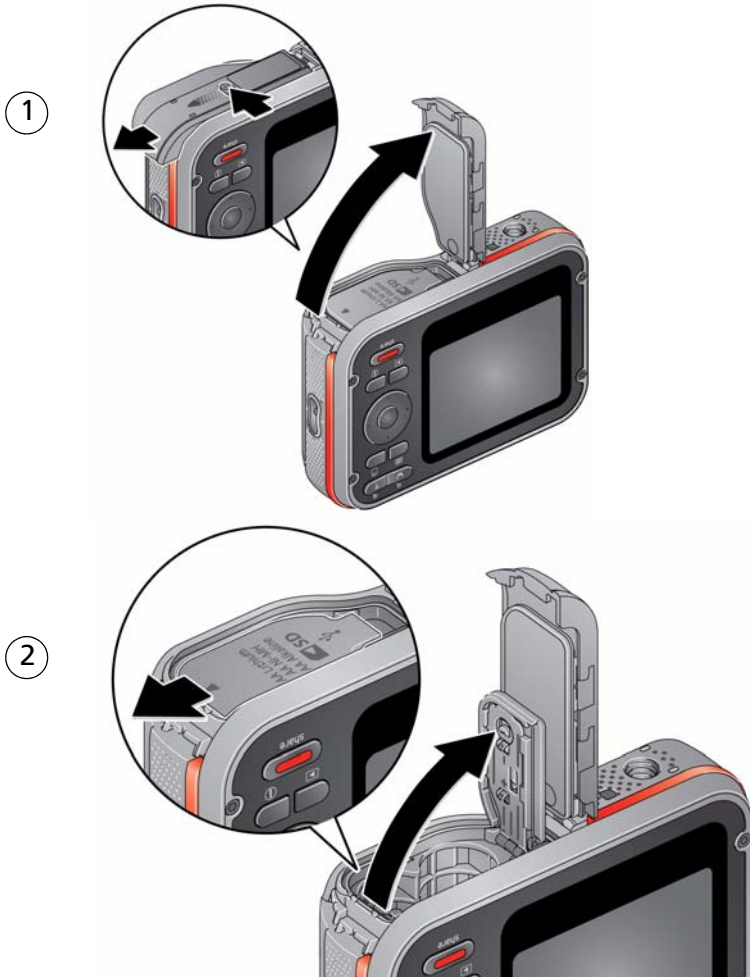




## Loading the AA batteries

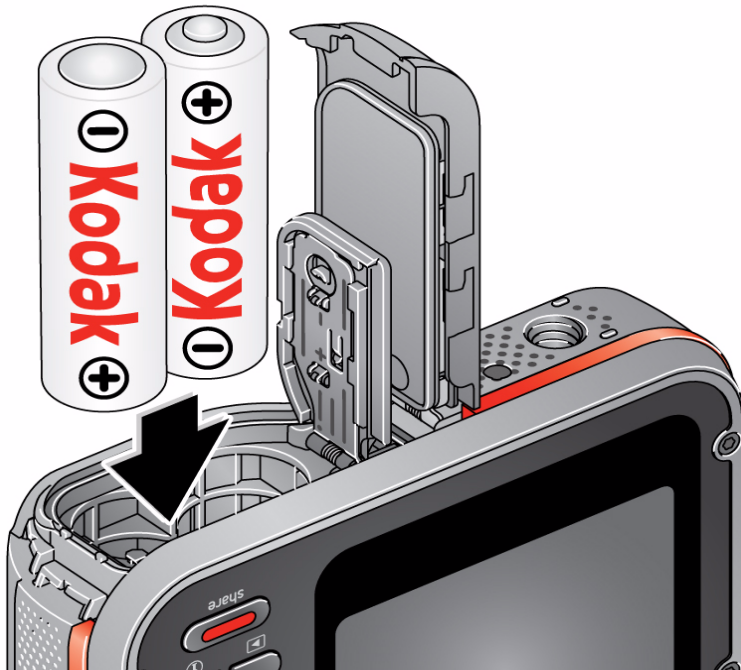

Purchase extra batteries for your event

[www.kodak.com/go/accessories](http://www.kodak.com/go/accessories)

## Turning on the camera

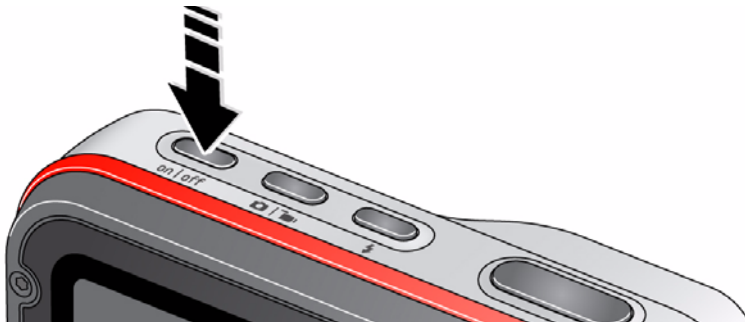

## Setting the language and date/time



Language:

▲▼ to change.

OK to accept.

Date/Time:

At the prompt, press OK.

▲▼ to change current field.

◀▶ for previous/next field.

OK to accept.

NOTE: To change language in the future, use the Setup Menu ([see page 33](#)).

## Storing pictures on an optional SD or SDHC Card

Your camera has internal memory. We recommend purchasing an SD or SDHC Card to conveniently store more pictures/videos.



### CAUTION:

**A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while the camera is on may damage the pictures, the card, or the camera.**

- 1 Turn off the camera.
- 2 Insert a card until it clicks.
- 3 Turn on the camera.



**Purchase accessories** [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories)



 

**IMPORTANT:** *When you turn on the camera, it checks to see if a card is inserted. If so, new pictures/videos are stored on the card. If no card is inserted, new pictures/videos are stored in the camera internal memory. If pictures/videos are detected in internal memory and a card is inserted, the camera prompts you to move the pictures to the card (and erase those in internal memory).*

# 2

## Taking pictures/videos


 
 

### Taking pictures



- 1 The camera turns on in Auto mode.  
(If it's in a different mode, press the Mode  button, then   until the LCD displays Auto , then press OK.)
- 2 Compose the picture.
- 3 Press the Shutter button all the way down.

### Taking a video



- 1 Press the Mode  button, then   until the LCD displays Video , then press OK.
- 2 Press the Shutter button all the way down, then release it. To stop recording, press and release the Shutter button again.

To review and work with videos, see [page 19](#).


## Reviewing the picture/video just taken

After you take a picture/video, the LCD briefly displays the picture or the first frame of a video.



NOTE: Audio is captured during video recording. Audio can be heard when the video is played on a computer or when the camera is connected to a TV ([see page 25](#)).  
To review pictures/videos anytime, [see page 19](#).

## Understanding the picture-taking icons

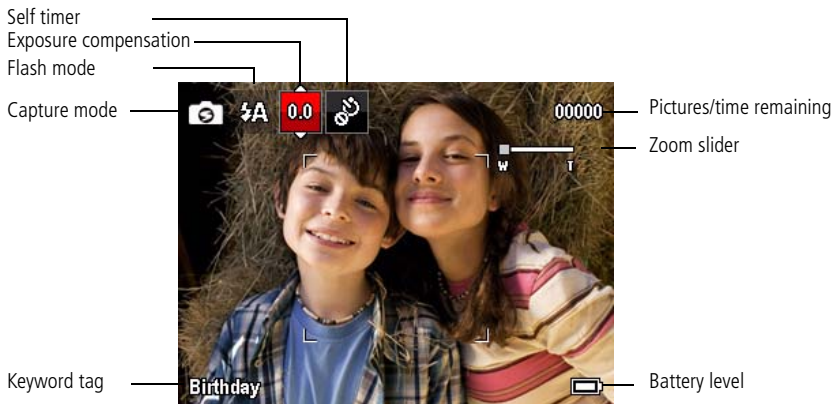

## Know when your batteries need attention

The battery level icon appears when the battery requires your attention. (If you're viewing shortcuts, the battery level is always displayed. [See page 12.](#))

**Purchase extra batteries for your special event** [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories)

## Using the digital zoom



1 Use the LCD to frame your subject.

2 To zoom in, press Telephoto (T).

To zoom out, press Wide Angle (W).


*The zoom slider shows the zoom level on the LCD.*





3 Take the picture.

**NOTE:** You may notice decreased image quality when using digital zoom.
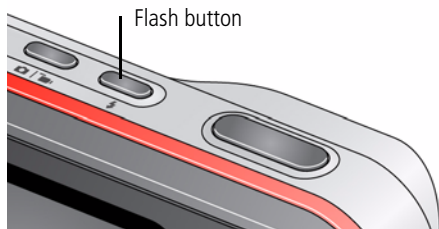
## Using the flash


Press the Flash button repeatedly until the LCD displays the desired flash mode.




 


Flash modes	Flash fires
<b>Auto</b> 	When the lighting conditions require it.
<b>Fill (Flash On)</b> 	Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the light is behind the subject). NOTE: Not available in Auto mode.
<b>Red-eye Reduction</b> 	A preflash fires, shrinking the eye pupil, before the picture is taken.
<b>Off</b> 	Never

## Using different modes

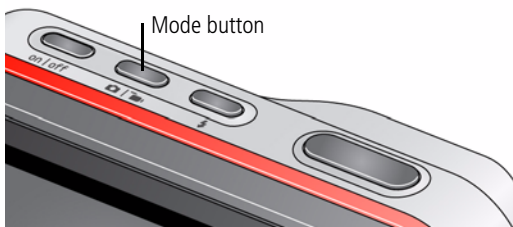Press the Mode  button, then  until the LCD displays the mode that best suits your subjects and surroundings, then press OK.







Use this mode	For
 <b>Auto</b>	General picture taking—it offers excellent image quality and ease of use. You can choose the best picture size and aspect ratio for your needs—just press the Menu  button and choose Picture Size.
 <b>Video</b>	Capturing video with sound. Audio can be heard when the video is played on a computer or when the camera is connected to a TV (see <a href="#">page 6</a> .)
<b>SCN</b> <b>Scene</b>	Point-and-shoot simplicity when taking pictures in practically any situation. (See <a href="#">page 11</a> .)
 <b>Picture</b>	Best for taking pictures under water.
<b>Video</b>	Best for taking videos under water.



## Using Scene (SCN) modes

Choose a Scene mode—for great pictures in practically any situation.

- 1 Press the Mode  button, then  until the LCD displays SCN, then press OK.
- 2 Press   to view scene mode descriptions.  
*If the mode description turns off before you finish reading it, press OK.*
- 3 Press OK to choose a Scene mode.

SCN mode	For
<b>Portrait</b>	Full-frame portraits of people.
<b>Sport</b>	Action pictures.
<b>Sunset</b>	Subjects at dusk.
<b>Backlight</b>	Subjects that are in shadow or “backlit.”
<b>Children</b>	Action pictures of children in bright light.
<b>Bright</b>	Bright scenes that include a beach or snow.
<b>Fireworks</b>	Fireworks. For best results, place the camera on a steady surface or tripod.
<b>Night Portrait</b>	Red-eye reduction in people in night scenes or low-light conditions.

## Using shortcuts

Your camera has a clean, uncluttered interface. For quick access to the most popular capture and review functions:

- 1 Press the Info **i** button.

*The shortcuts appear. To hide the shortcuts again, press **i**.*

- 2 Press **◀▶** to access functions like Exposure Compensation and Self-timer. (You'll see different functions in different modes.)



- 3 Press **▲▼** to choose a setting.



## Using the self-timer and burst


Use the self-timer when you want to be included in a picture or to ensure a steady Shutter button press. For best results, place the camera on a tripod or steady surface. You can turn on the self-timer using a shortcut (see page 12) or these steps:


1 Press the Menu  button. Press   to choose Self-timer, then press OK.

2 Press   to choose a Self-timer setting:

**Off**—Self-timer is turned off.

**10 Seconds**— A picture is taken after a 10-second delay (so you have time to get into the scene).

**2 Seconds**— A picture is taken after a 2-second delay.

**2 Picture Timer**— The first picture is taken after a 10-second delay. A second picture is taken 8 seconds later.

**Burst On**—Take several pictures in succession

3 Compose the scene. Press the Shutter button all the way down.





*The camera takes the picture/pictures after the delay.*

To take a video after a 2- or 10-second delay, use the same procedure.

## Using the camera under water

The camera does not float. To prevent it from sinking, secure it with the wrist strap (see a floating wrist strap at [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories)). To keep the camera waterproof, tightly close and latch all doors. **Do not open doors in water or when hands are wet.** Waterproof integrity may be compromised if the camera is dropped.

For the best focus and color balance under water:

- 1 Press the Mode   button.
- 2 Press   to choose Underwater Pictures or Underwater Videos, then press OK.
- 3 When finished taking underwater videos/pictures, go back to Step 1 and choose a non-underwater setting.

## After using the camera in water

- Wipe off water or debris. If the camera was used in chemically treated water or saltwater, rinse it in fresh water, then use a soft towel to dry it.
- If water has entered the camera, remove the card. Allow all components to air-dry for at least 24 hours before using the camera. [See page 46.](#)

# 3

## Sharing pictures/videos

### Sharing through social networks

It's never been easier to share pictures on your favorite social networking sites.

**IMPORTANT:** *To use the social networking features, you need to download KODAK Software. (See page 35.)*

1 Press the Review  button, then   to find a picture.

2 Press the Share button.

*If it's your first time, a Help screen appears.*

3 Press   to choose a social networking site, then press OK.

*A check mark appears. Repeat this step to choose more sites. (You can press OK again to remove a check mark.)*

4 Press   to choose Done, then press OK.

*The picture is displayed with the Share icon. When you transfer the picture to your computer, it will be uploaded to the networking site(s) that you chose.*







 




**Tip:** Do you upload pictures to the same sites each time?


Find a picture, then press and hold the Share button for about 1 second.

*The camera applies the networking site(s) that you used previously and adds the Share icon to the picture.*

## Choose which social networking sites to display on your camera


 


You can show/hide networking sites on your camera so that only your favorite sites appear.



- 1 Press the Menu  button.
- 2 Press   to choose the Setup tab, then   to choose Share Button Settings, then press OK.
- 3 Press   to choose a social networking site, then press   to choose Show or Hide. Repeat this step until you have chosen Show/Hide for each social network.
- 4 When finished, press   to choose Done, then press OK.


 


To return to picture-taking mode, press the Review  button.

## Manage email addresses and KODAK PULSE Digital Frames

You can add, edit, or delete email addresses and KODAK PULSE Digital Frames on your camera.

- 1 Press the Share button. Press   to choose Manage Email Addresses (or Manage Frames), then press OK.
- 2 To add an email address or frame, press   to choose Add Email or Add Frame, then press OK. Use the on-screen keyboard to make the addition. See [page 17](#). (Example: JohnDoe@domain.com)













To edit an email address or a KODAK PULSE Digital Frame, press   to choose the address's nickname or the frame, then press OK. Use the on-screen keyboard to make edits.


To delete an email address or frame, choose Delete Email or Delete Frame, then press OK. Press   to choose the address or frame, then press OK so that a check mark appears. Press   to choose Delete, then press OK.

- 3 When finished, press   to choose Done, then press OK.

## Tagging pictures/videos with keywords







You can tag pictures/videos with a keyword to make them easy to find, later. You can tag pictures using a shortcut (see page 12) or these steps:

- 1 Press the Review  button, then   to find a picture.
- 2 Press the Menu  button. Press   to choose Keyword Tag, then press OK.
- 3 Press   to choose an existing keyword or New Keyword (see [Using the keyboard](#)) to add a new one, then press OK.
- 4 Press   to add keywords to other pictures. When finished, press   to choose Done, then press OK.

*To return to picture-taking mode, press the Review  button.*

## Using the keyboard

The keyboard appears when you need it.



- 1 Press     to choose a letter, then press OK.
- 2 When finished, press   to choose OK, then press OK.

## Marking pictures/videos for emailing

It's simple to mark pictures/videos so that they're ready to email using KODAK Software. First, create a new email address. (See [page 17.](#))


1 Press the Review  button. Press   to find a picture.

2 Press the Share button.

3 Press   to find a nickname, then press OK.

*To mark other pictures/videos with the same address, press  , then press OK.*

*To send the pictures/videos to more than one address, repeat this step.*

*To return to picture-taking mode, press the Review  button.*

When you transfer the marked pictures/videos to your computer, the software prompts you to send the pictures/videos. (For other software applications, refer to their documentation.)

**IMPORTANT:** *Your camera offers a built-in Help system. See [page 39.](#)*


 


# 4


## Reviewing and editing

### Reviewing pictures/videos





- 1 Press the Review  button.
- 2 Press  for previous/next picture/video.
  - To exit, press the Review button.
  - To view pictures/videos as thumbnails, press the Wide Angle (W) button. (For more information, see [page 21](#).)
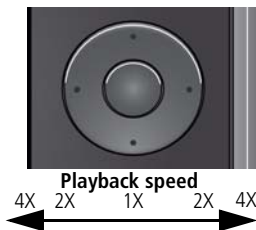
### Playing a video





Press OK to play a video. Press OK to pause/resume. During playback:

- Press  to play at 2X speed; press again for 4X.
- Press  to reverse at 2X speed; press again for 4X.

NOTE: Audio can be heard when the video is played on a computer or when the camera is connected to a TV ([see page 25](#)).

### Deleting pictures/videos





- 1 Press the Review  button.
- 2 Press  for previous/next picture/video.
- 3 Press the Delete button.
- 4 Follow the screen prompts.


 
NOTE: To delete protected pictures/videos, remove protection before deleting. (See [page 20](#).)

## Using the undo delete picture feature

If you accidentally delete a picture, you may be able to use Undo Delete to retrieve it. This feature is only available immediately after you delete a picture.

## Protecting pictures/videos from deletion

- 1 Press the Review  button.
- 2 Press the Menu  button.
- 3 Press  to choose Protect, then press OK.
- 4 Press  to choose Protect again, then press OK.

*A check mark indicates that the picture/video is protected. Pressing OK again removes the check mark. Press  to protect other pictures/videos, or press  to choose Done, then press OK.*

- Press the Menu  button to exit the menu.

**IMPORTANT:** *Your camera offers a built-in Help system. See [page 39](#).*



### **CAUTION:**

**Formatting internal memory or an SD or SDHC Card deletes all (including protected) pictures/videos.**

## Viewing pictures/videos in different ways

### Magnifying a picture



- 1 Press Telephoto (T) to magnify 2X–8X.
- 2 Press ◀▶ ▲▼ to view other parts of a picture.
  - Press OK to return to 1X.

### Viewing as thumbnails

- 1 Press the Review  button.

*The camera shows the last picture/video that was taken.*

- 2 Press the Wide Angle (W) button to view pictures/videos as thumbnails. (Press it again to see more, smaller thumbnails.)








*To view all pictures/videos, choose the All tab.*


*To sort by favorites, date, or keywords, press ◀▶ and choose the appropriate tab.*


- 3 To see a single picture/video, press ◀▶ ▲▼ to choose it. Then press the Telephoto (T) button.
  - To select multiple pictures/videos, see [page 29](#).
  - Press the Review button to exit Review.

## A smarter way to find and enjoy your pictures


Tag pictures with a keyword (page 17) to make them easy to find, later.

- 1 Press the Review  button.
- 2 Press the Wide Angle (W) button to view pictures by thumbnail (or choose View Thumbnails shortcut).
- 3 Press   to choose the All, Date, Favorite, or Keyword tab.
- 4 Press     to choose a picture or picture stack, then press OK.

*Press Telephoto (T) see pictures in a stack or to see an individual picture. Press Wide Angle (W) to see thumbnails or picture stacks. To return to picture-taking mode, press the Review  button.*

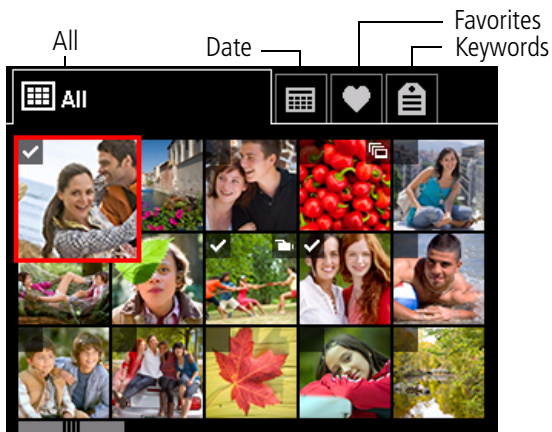

## Understanding the review icons

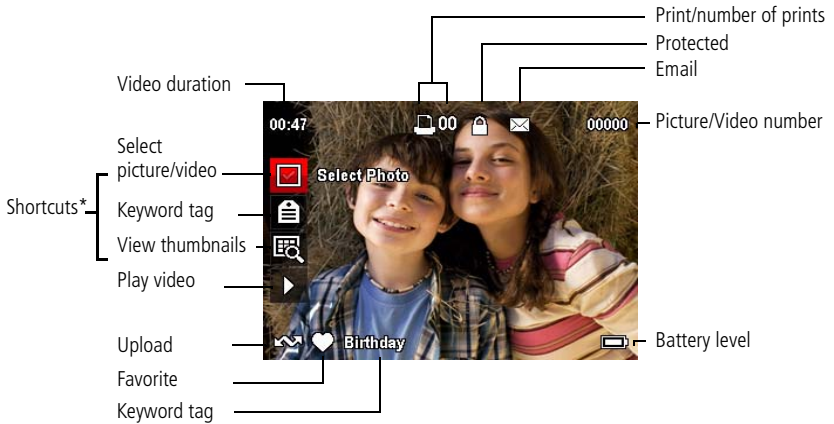









\* For more about shortcuts, see [page 12](#).

## Creating a slide show

Use Slide Show to display your pictures/videos on the LCD. You can play all pictures/videos, or choose pictures to include in the slide show.

### Make a slide show

 





- 1 Press the Review  button. Select pictures (see [page 29](#)). If you select no pictures, all pictures are shown.
- 2 Press the Menu  button, then   to choose the Review tab.
- 3 Press   to choose Slide Show, then press OK.
- 4 Press   to choose Begin Show, then press OK.

*Each picture/video is displayed once. To interrupt the slide show, press OK. You can also determine the slide interval duration.*

**IMPORTANT:** *Your camera offers a built-in Help system. See [page 39](#).*

### Play a slide show loop

When you turn on Loop, the slide show is continuously repeated.

- 1 On the Slide Show menu, press   to choose Loop, then press OK.
- 2 Press   to choose On, then press OK.
- 3 Press   to choose Begin Show, then press OK.

*The slide show repeats until you press OK or until the batteries are exhausted.*

## Displaying pictures/videos on a television

You can display pictures/videos on a television, computer monitor, or any device equipped with a video input. To connect the camera directly to a television, use an A/V cable (may be sold separately). On your TV, select the source that corresponds to the camera cable input.



---

**Purchase accessories** [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories)






 
---

**NOTE:** To control the audio portion of a video, use the camera or TV (or TV remote control) volume controls. Ensure that the Video Out setting (NTSC or PAL) is correct ([see page 34](#)). The slide show stops if you connect or disconnect the cable while the slide show is running. Image quality may appear lower on a television screen than on a computer monitor or when printed.

[www.kodak.com/go/support](http://www.kodak.com/go/support)

EN 25

 
## Using the menu button in review


 


 


 

 
- 1 Press the Review  button, then press the Menu  button.
- 2 Press   to choose a tab:
  - **Review**
  - **Edit**
  - **Setup**
- 3 Press   to choose a setting, then press OK.
- 4 Choose an option, then press OK.


**IMPORTANT:** *Your camera offers a built-in Help system. See page 39.*

## Cropping pictures

You can crop a picture so that only the desired portion of the picture remains.



- 1 Press the Review  button, then   to find a picture to crop.
- 2 Press the Menu  button, then   to choose the Edit tab. Choose Crop, then press OK.
- 3 Press Telephoto (T) to shrink the crop area or Wide (W) to enlarge it. Press     to move the crop box. When satisfied with the crop box, press OK.
- 4 Follow the screen prompts.

*The picture is cropped. (The original is saved.) Cropped pictures cannot be cropped again on the camera. To return to picture-taking mode, press the Review  button.*

**IMPORTANT:** *Your camera offers a built-in Help system. See page 39.*








## Editing videos


You can do incredible things with your videos.
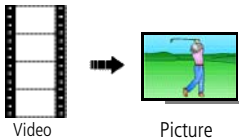
### Making a picture from a video

You can choose a single frame from a video, then make a picture suitable for a 4 x 6-inch (10 x 15 cm) print.




- 1 Press the Review  button, then  to find a video.
- 2 Press the Menu  button, then  to choose the Edit tab. Choose Make Picture, then press OK.
- 3 Follow the screen prompts.






 
*A picture is created. (The original video is saved.) To return to picture-taking mode, press the Review  button.*

**IMPORTANT:** *Your camera offers a built-in Help system. See page 39.*
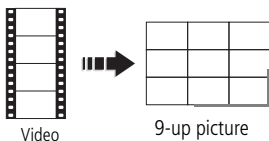
## Making a video action print

From a video, you can make a 9-up picture, suitable for a 4 x 6-inch (10 x 15 cm) print.









 
- 1 Press the Review  button, then   to find a video.
- 2 Press the Menu  button, then   to choose the Edit tab. Choose Action Print, then press OK.
- 3 Choose an option, then press OK.


*A 9-up picture is created. To return to picture-taking mode, press the Review  button.*
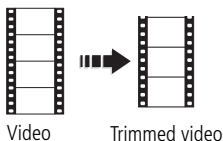
## Trimming a video

You can remove an unwanted start or end from a video, saving only the desired portion.





 
 
- 1 Press the Review  button, then   to find a video.
- 2 Press the Menu  button, then   to choose the Edit tab. Choose Trim, then press OK.
- 3 Follow the screen prompts.

*The video is trimmed. (You can save it as a new video or replace the original.) To return to picture-taking mode, press the Review  button.*

## Selecting multiple pictures/videos

Use the multi-select feature when you have two or more pictures/videos to print, transfer, delete, etc. Multi-select is used most effectively with thumbnails, [page 21](#).

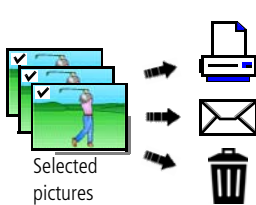



 


 





- 1 Press the Review  button, then   (and   if you're in multi-up mode) to find a picture/video.
- 2 Press OK to select pictures/videos.

*A check mark appears on the picture. (Press OK again to remove a check mark.) You can now print, transfer, delete, etc. the selected pictures.*







## Rotating pictures

You can rotate a picture to portrait or landscape orientation.

- 1 Press the Review  button, then   to find the previous/next picture.
- 2 Press the Menu  button. Press   to highlight the Edit tab.
- 3 Press   to highlight Rotate Picture, then press OK.
- 4 Press   to highlight an option:
  - **Rotate Right**—rotates the picture 90 degrees clockwise.
  - **Rotate Left**—rotates the picture 90 degrees counterclockwise.
- 5 Press OK.
- Press the Review  button to return to Picture-taking mode.

## Using KODAK PERFECT TOUCH Technology






KODAK PERFECT TOUCH Technology helps ensure better, brighter pictures.

- 1 Press the Review  button, then  for previous/next picture.
  - 2 Press the Menu  button, then  to highlight the Edit tab. Highlight PERFECT TOUCH Tech, then press OK.  
*The enhancement is previewed. Press  to view other parts of the picture.*
  - 3 Choose Continue or Cancel.
  - 4 Press OK. Follow the screen prompts to replace the original picture or to save the enhanced picture as a new one.
- Press the Review  button to return to Picture-taking mode.

NOTE: You cannot apply PERFECT TOUCH Technology to videos or to pictures to which PERFECT TOUCH Technology is already applied.

## Adding a date stamp

You can add a stamp—showing the date/time that it was taken—to a picture.

- 1 Press the Review  button, then  to find a picture.
  - 2 Press the Menu  button, then  to choose the Edit tab. Choose Date Stamp, then press OK.  
*The date/time is added to the picture.*
- Press the Review  button to return to Picture-taking mode.

# 5






## Doing more with your camera

**IMPORTANT:** *Your camera offers a built-in Help system. To get the most from your camera, see [page 39](#).*

### Using the menu button to change settings in picture taking mode

You can change settings to get the best results from your camera.

**NOTE:** Some modes offer limited settings. Some settings remain until you change them; others, until you change modes or turn off the camera.

- 1 Press the Menu  button.
- 2 Press   to choose a tab:
  - **Capture/Video** for the most common picture- and video-taking settings
  - **Setup** for other camera settings
- 3 Press   to choose a setting, then press OK.
- 4 Choose an option, then press OK.

#### Using the capture tab

Settings	More information
<b>Picture Size</b> Choose a picture resolution.	See Camera specifications, starting on <a href="#">page 44</a> .
<b>Self-timer</b> Choose Self-timer feature.	See Camera specifications, starting on <a href="#">page 44</a> .

Settings	More information
<b>Exposure Compensation</b> Make a picture lighter or darker. To access this feature with a shortcut, see <a href="#">page 12</a> .	See Camera specifications, starting on <a href="#">page 44</a> .
<b>ISO Speed</b> Control the camera sensitivity to light.	See Camera specifications, starting on <a href="#">page 44</a> .
<b>Long Time Exposure</b> Choose how long the shutter stays open (normally in low-light conditions). For best results, place the camera on a tripod or steady surface.	See Camera specifications, starting on <a href="#">page 44</a> .
<b>Color Mode</b> Choose color tones. Unavailable in Video and Auto modes.	See Camera specifications, starting on <a href="#">page 44</a> .
<b>White Balance</b> Choose your lighting condition.	<b>Auto</b> —Automatically corrects white balance. Ideal for general picture taking. <b>Daylight</b> —For pictures in natural lighting. <b>Tungsten</b> —Corrects the orange cast of incandescent light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash. <b>Fluorescent</b> —Corrects the green cast of fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash. <b>Open Shade</b> —For pictures in shade in natural lighting.
<b>Exposure Metering</b>	<b>Face priority</b> (default) <b>Multi-pattern</b> <b>Center-weight</b>

Settings	More information
<b>Sharpness</b> Control picture sharpness or softness.	See Camera specifications, starting on <a href="#">page 44</a> .

## Video settings

**IMPORTANT:** *Your camera offers a built-in Help system. See [page 39](#).*


Settings	More information
<b>Self-timer</b> Choose Self-timer feature.	<b>Off</b> <b>10 Seconds</b> <b>2 Seconds</b>

## Using the Setup menu

Use Setup to customize other camera settings.

**IMPORTANT:** *Your camera offers a built-in Help system. See [page 39](#).*

Settings	More information
<b>Date &amp; Time</b>	Set date and time.
<b>Share Button Settings</b> Choose what is displayed when the Share button is pressed in Review.	Show or hide: <ul style="list-style-type: none"> <li>■ Individual social networking sites</li> <li>■ E-mail addresses (all or none)</li> <li>■ KODAK Digital Frames (all or none)</li> </ul>
<b>LCD Brightness</b> Choose LCD brightness during picture/video capture.	<b>High Power</b> —Brighter LCD; uses more battery power. <b>Power Save</b> —Dimmer LCD; uses less power.

Settings	More information
<b>Video Out</b> Choose the regional setting that lets you connect the camera to a television or other external device.	<b>NTSC</b> —Used in North America and Japan; most common format. <b>PAL</b> —Used in Europe and China.
<b>Language</b>	Choose your language.
<b>Reset Camera</b> Reset settings to their default.	<b>Reset All Camera Settings</b> —Settings revert to their factory defaults. <b>Reset Startup Application</b> —Resets camera to startup mode to allow KODAK Software download.
<b>Format</b>  <b>CAUTION:</b> <b>Formatting deletes all pictures/videos, including those that are protected. Removing a card during formatting may damage the card.</b>	<b>Memory Card</b> —Deletes everything on the card; formats the card. <b>Cancel</b> —Exits without making a change. <b>Internal Memory</b> —Deletes everything in internal memory including keyword tags; formats the internal memory.
<b>KODAK Camera Software</b> View URL to download KODAK Software.	
<b>About</b> View camera information.	
<b>Camera Sounds</b> Choose whether to play a sound during certain events or have all sounds off.	<b>All On</b> <b>Shutter Only</b> <b>All Off</b>



# 6

## Transferring, printing pictures

Install KODAK Software—so it's easy to transfer and share pictures and videos.

Make sure the computer is connected to the Internet. When you connect the camera to the computer, the KODAK Camera Setup App automatically runs. Follow the prompts to download and install KODAK Software.\*

- 1 Turn off the camera.
- 2 Use the KODAK Camera USB Cable, Micro B / 5-Pin to connect camera to computer. (Use only the cable included with this camera!)
- 3 Turn on the camera.

After the software is installed, follow the prompts to transfer pictures and videos to your computer.



\* If the KODAK Software Downloader doesn't run, find and launch it here:

- WINDOWS OS: in My Computer
- MAC OS: on your Desktop

NOTE: You can also use a card reader to transfer pictures/videos.

---

**Download KODAK Software later**

[www.kodak.com/go/camerasw](http://www.kodak.com/go/camerasw)

---

**Get Software help**

[www.kodak.com/go/support](http://www.kodak.com/go/support)

---

**To use this camera on more than one computer, use the Reset Startup Application feature**

[see page 34](#)

---

## Printing pictures

### Direct printing with a KODAK All-in-One Printer

Your camera is compatible with PICTBRIDGE Technology, so you can print directly to PICTBRIDGE enabled Printers. You need a camera, a PICTBRIDGE enabled Printer, and a USB cable.

#### Connecting the camera to a KODAK All-in-One Printer

- 1 Turn off the camera and printer.
- 2 Connect the USB cable from the camera to the printer.

#### Printing from a KODAK All-in-One Printer

- 1 Turn on the printer. Turn on the camera.

*The PictBridge logo is displayed, followed by the current picture and menu. (If no pictures are found, a message is displayed.) If the menu turns off, press any button to redisplay it.*

- 2 Choose a printing option, then press OK.

**Current Picture**—Press ◀▶ to choose a picture.

**Tagged Pictures**—If your printer is capable, print pictures that you marked for printing.

**Index Print**—Print thumbnails of all pictures. (This option requires one or more sheets of paper.)

**All Pictures**—Print all pictures in internal memory or on a card.

NOTE: During direct printing, pictures are not permanently transferred or saved to the printer. To transfer pictures to your computer, see [page 35](#).

---

**Purchase cables, accessories** [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories)

---

## Disconnecting the camera from a KODAK All-in-One Printer

- 1 Turn off the camera and printer.
- 2 Disconnect the USB cable from the camera and the printer.

## Ordering prints online



KODAK Gallery ([www.kodakgallery.com](http://www.kodakgallery.com)) makes it easy to:

- Upload your pictures.
- Edit, enhance, and add borders to your pictures.
- Store pictures, and share them with family and friends.
- Have prints, photo greeting cards, frames, and albums delivered to your door.

## Printing from an optional SD or SDHC Card


- Automatically print tagged pictures when you insert your card into a printer with an SD/SDHC Card slot. See your printer user's guide for details.
- Make prints at an SD/SDHC Card-capable KODAK Picture Kiosk. Go to [www.kodak.com/go/picturemaker](http://www.kodak.com/go/picturemaker).
- Take the card to your local photo retailer for professional printing.

## Marking your pictures for print

- 1 Press the Review  button. Press ◀▶ to find a picture.
- 2 Press the Menu  button.
- 3 Press ▲▼ to choose Print, then press OK.
- 4 Press ▲▼ to choose the number of copies.

**Optional:** You can apply a print quantity to other pictures. Press ◀▶ for previous/next. Repeat this step until the desired print quantity is applied to each picture.

- 5 Press OK.

*To return to picture-taking mode, press the Review  button.*

**IMPORTANT:** *Your camera offers a built-in Help system. See [page 39](#).*

# 7



## Troubleshooting

### Getting help from your camera

Your camera offers a built-in Help system. It describes every setting for every menu choice. If you learn nothing else about your camera, learn how to use on-camera Help.

#### Turning on camera Help



- 1 Press the Menu  button, then make a menu choice.
- 2 Press the Info  button.  
▲▼ Scroll through a Help topic.

# Troubleshooting

## Camera problems

Status	Solution
Camera does not turn on	<ul style="list-style-type: none"> <li>■ Make sure the batteries are installed correctly (<a href="#">see page 3</a>).</li> <li>■ Make sure batteries are new. If batteries are rechargeable, make sure they are fully charged (see charger documentation).</li> </ul>
Camera does not turn off	
Camera buttons and controls do not function	
In Review, a blue or black screen is displayed instead of a picture	<ul style="list-style-type: none"> <li>■ Transfer <i>all</i> pictures to the computer (<a href="#">see page 35</a>).</li> <li>■ Take another picture.</li> </ul>
Pictures remaining number does not decrease after taking a picture	<ul style="list-style-type: none"> <li>■ Continue taking pictures. The camera is operating normally. (The camera estimates the number of pictures remaining after each picture is taken, based on picture size and content.)</li> </ul>
Flash does not fire	<ul style="list-style-type: none"> <li>■ Check the flash setting, and change as needed (<a href="#">see page 9</a>).</li> </ul> <p>NOTE: The flash does not fire in all modes.</p>
Memory card is almost or entirely full	<ul style="list-style-type: none"> <li>■ Transfer the pictures to the computer (<a href="#">see page 35</a>).</li> <li>■ Delete pictures from the card (<a href="#">see page 19</a>) or insert a new card.</li> </ul>
Battery life is short	<ul style="list-style-type: none"> <li>■ Make sure the correct battery type is installed (<a href="#">see page 48</a>).</li> <li>■ Insert new/charged batteries (<a href="#">see page 3</a>).</li> <li>■ See <a href="#">Extending battery life, page 48</a>.</li> </ul>
Cannot find the desired picture/video	<ul style="list-style-type: none"> <li>■ To view pictures on a card or in internal memory, <a href="#">see page 19</a>.</li> </ul>

Status	Solution
You cannot take a picture	<ul style="list-style-type: none"> <li>■ Turn the camera off, then on again.</li> <li>■ Depress the Shutter button all the way (see page 6).</li> <li>■ Insert new/charged batteries in the correct orientation (see page 3).</li> <li>■ Memory is full. Transfer pictures to the computer (see page 35), delete pictures (see page 19), or insert another card.</li> </ul>
Memory card not recognized or camera freezes with card	<ul style="list-style-type: none"> <li>■ Remove and reinsert the card (see page 5).</li> </ul> <p><b>IMPORTANT:</b> <i>Insert a card until it clicks.</i></p> <ul style="list-style-type: none"> <li>■ Card may be corrupted. Format the card in the camera (see page 34).</li> <li>■ Use another memory card. Only SD or SDHC Cards are supported.</li> </ul>
The camera gets wet inside	<ul style="list-style-type: none"> <li>■ If the camera is wet inside, open all doors.</li> <li>■ Remove the card. Do not turn on the camera.</li> <li>■ Let it dry for at least 24 hours.</li> <li>■ Keep doors watertight.</li> </ul>

## Computer/connectivity problems

Status	Solution
Computer does not communicate with the camera	<ul style="list-style-type: none"> <li>■ Turn off the camera, then turn it back on.</li> <li>■ Make sure the batteries are charged and installed correctly (see page 3).</li> <li>■ Make sure the KODAK Camera USB Cable, Micro B / 5-Pin is connected to the camera and directly to the computer (not through a USB hub). See page 35. Then turn on the camera.</li> </ul> <p><b>IMPORTANT:</b> <i>Use only the cable included with this camera!</i></p> <ul style="list-style-type: none"> <li>■ See KODAK Software Help at <a href="http://www.kodak.com/go/camerasw">www.kodak.com/go/camerasw</a>.</li> </ul>

## Picture quality problems

Status	Solution
Picture is not clear	<ul style="list-style-type: none"><li>■ Clean the lens (<a href="#">see page 46</a>).</li><li>■ Place the camera on a flat, steady surface or use a tripod (especially in low light).</li><li>■ Use a larger picture size (<a href="#">see page 31</a>).</li><li>■ If you're manually adjusting the ISO speed, realize that a high ISO setting may cause grainy pictures (<a href="#">see page 32</a>).</li></ul>
Picture is too dark	<ul style="list-style-type: none"><li>■ Reposition the camera for more available light.</li><li>■ Use Fill flash (<a href="#">see page 9</a>) or change your position so light is not behind the subject.</li><li>■ Move so that the distance between you and the subject is within the effective flash range (see Camera specifications starting on <a href="#">page 44</a>).</li></ul>
Picture is too light	<ul style="list-style-type: none"><li>■ Reposition the camera to reduce the amount of available light.</li><li>■ Turn the flash off (<a href="#">see page 9</a>).</li><li>■ Move so that the distance between you and the subject is within the effective flash range (see Camera specifications starting on <a href="#">page 44</a>).</li></ul>
Underwater videos are not clear.	Use an underwater mode ( <a href="#">see page 14</a> ).

## Direct printing (PICTBRIDGE enabled printer) problems

Status	Solution
Cannot find the desired picture	<ul style="list-style-type: none"><li>■ Use the Direct printing menu to change the image storage location.</li></ul>
The Direct printing menu interface turns off	<ul style="list-style-type: none"><li>■ Press any camera button to redisplay the menu.</li></ul>



Status	Solution
Cannot print pictures	<ul style="list-style-type: none"> <li>■ Make sure there is a connection between the camera and the printer (see page 36).</li> <li>■ Make sure the printer and the camera have power.</li> </ul>
Camera or printer displays an error message	<ul style="list-style-type: none"> <li>■ Follow the prompts to resolve the issue.</li> </ul>

## Getting help on the Web

Get support for your product (FAQs, troubleshooting information, arrange for repairs, etc.)	<a href="http://www.kodak.com/go/c123support">www.kodak.com/go/c123support</a>
Purchase camera accessories	<a href="http://www.kodak.com/go/accessories">www.kodak.com/go/accessories</a>
Download the latest camera firmware and software	<a href="http://www.kodak.com/go/c123downloads">www.kodak.com/go/c123downloads</a>
See online demonstrations of your camera	<a href="http://www.kodak.com/go/c123demos">www.kodak.com/go/c123demos</a>
Chat, email, write, or phone Kodak (Chat not available in all languages)	<a href="http://www.kodak.com/go/contact">www.kodak.com/go/contact</a>
Download KODAK EASYSHARE Software	<a href="http://www.kodak.com/go/easysharesw">www.kodak.com/go/easysharesw</a> (or see Help in EASYSHARE Software)
Get information on KODAK All-in-One Printers	<a href="http://www.kodak.com/go/inkjet">www.kodak.com/go/inkjet</a>

## Camera specifications

**CCD**—1/2.3-type

**Effective pixels**—12 MP (4026 x 3026)

**LCD**—2.4 in. (6.1 cm) LCD; 112 pixels; 4:3 aspect ratio

**Image storage**—Optional SD/SDHC Card  (The SD logo is a trademark of the SD Card Association.) Maximum supported card size: 32 GB

**Internal storage capacity**—32 MB internal memory (19 MB available for image storage. 1 MB equals one million bytes.)

**Taking lens**—f/4.5; 35 mm equivalent: 35 mm

**Lens protection**—Built-in

**Digital zoom**—5X continuous

**Shutter speed**—1/8–1/1400 seconds

**Long time exposure**—0.5–8 seconds

**ISO speed**—Auto: 80–360; Manual: 80, 100, 200, 400, 800, 1000, 1250

**Exposure compensation**—+/-2.0 EV with 1/3 EV step

**White Balance**—Auto, Daylight, Tungsten, Fluorescent, Open Shade


**Electronic Flash**—Auto flash; Auto, Fill, Red Eye, Off; Guide No. 6.4 (m); working range @ ISO 250: 0.3–2.4 m (1–7.9 ft)

**Self-timer mode**—10 seconds, 2 seconds, 2 picture timer

**Capture modes**—Auto, Scene modes, Video, Underwater still, Underwater video

**Image file format**—

Still: EXIF 2.21 (JPEG compression); file organization DCF

Video: AVI (CODEC Motion JPEG; audio: -Law)

**Picture size—**

12 MP (4:3): 4000 x 3000 pixels

11 MP (3:2): 4000 x 2664 pixels

9 MP (16:9): 4000 x 2248 pixels

6 MP (4:3): 2880 x 2160 pixels

3 MP (4:3): 2048 x 1536 pixels

**Color modes—**Vivid, Full, Basic, Black & White, Sepia

**Sharpness modes—**Sharp, Normal

**Video capture—**4 GB maximum; VGA (640 x 480 @ 30 fps)

**Communication with computer—**USB 2.0 high speed (PIMA 15740 protocol);  
via KODAK Camera USB Cable, Micro B / 5-Pin

**Video output—**NTSC or PAL

**Microphone—**Yes

**Beeper—**Yes

**PICTBRIDGE support—**Yes

**Power—**KODAK MAX Alkaline Batteries AA; KODAK Ni-MH Rechargeable Digital  
Camera Batteries AA, Lithium batteries AA

**Tripod mount—**1/4 inch

**Size—**92.2 x 66.6 x 29.4 mm (3.6 x 2.6 x 1.1 in.) @ power off

**Weight—**175 g (6.1 oz) with batteries and card

**Operating temperature—**0–40° C (32–104° F)

**Waterproof capability—**Conforms to IEC60529 IPX8, up to 3 meters (9.8 ft)

**Dust proof capability—**Conforms to IEC60529 IP6X

## Care and maintenance

- If you suspect water has gotten inside the camera, remove the batteries and card. Allow all components to air-dry for at least 24 hours before using the camera.
- Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements may be available in your country. Contact a dealer of KODAK Products for more information.
- For digital camera disposal or recycling information, contact your local authorities. In the US, go to the Electronics Industry Alliance site at [www.eiae.org](http://www.eiae.org) or Kodak at [www.kodak.com/go/c123support](http://www.kodak.com/go/c123support).
- In water, do not use below a depth of 3 meters (9.8 ft).
- Do not open/close camera doors in water.
- The camera will not float. Use the strap at all times.
- If water has entered the camera, remove the card. Allow all components to air-dry for at least 24 hours before using the camera.
- If the camera was used in chemically treated water or saltwater, rinse it in fresh water, then use a soft towel to dry it.
- Wipe off dirt or sand from the door seals—debris could compromise the seal and cause a leak when in water.

## Upgrading your software and firmware

Download the latest versions of KODAK Software and the camera firmware (the software that runs on the camera). Go to [www.kodak.com/go/c123downloads](http://www.kodak.com/go/c123downloads).

## Storage capacities

The LCD displays the approximate number of pictures (or minutes/seconds of video) remaining. For average SD Card capacities, go to [www.kodak.com/go/SDcapacities](http://www.kodak.com/go/SDcapacities). Actual storage capacity varies depending on subject composition, card size, and other factors. You may be able to store more or fewer pictures and videos.

## Important safety instructions



### CAUTION:

**Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.**

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, go to [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories).
- Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing the batteries, allow them to cool; they may be hot.
- Follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.

- Remove the batteries when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Go to [www.kodak.com/go/reach](http://www.kodak.com/go/reach) for information about the presence of substances included on the candidate list according to article 59(1) of Regulation (EC) No. 1907/2006 (REACH).
- Dispose of batteries according to local and national regulations. Go to [www.kodak.com/go/kes](http://www.kodak.com/go/kes).
- Do not charge non-rechargeable batteries.  
For more information on batteries, go to [www.kodak.com/go/batterychart](http://www.kodak.com/go/batterychart).

## Battery replacement, battery life

Lithium batteries AA, KODAK MAX Alkaline Batteries AA: 250 pictures. Battery life per CIPA testing method. (Approx. number of pictures in Auto mode, using an SD Card.) Actual life may vary based on usage. For other compatible batteries, see the Power section in [Camera specifications, page 44](#).

### Extending battery life

- Charge Ni-MH batteries when they are nearly depleted.
- Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading batteries in the camera.
- Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable.

## Limited warranty

Kodak warrants its digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for the warranty period specified on your KODAK Product packaging. Retain the original dated sales receipt. Proof of purchase date is required with any request for warranty repair.

### Limited warranty coverage

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

### Limitations

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be the length of the express warranty period

[www.kodak.com/go/support](http://www.kodak.com/go/support)

specified on your Kodak product packaging. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.

### **Your rights**

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

### **Outside the United States and Canada**

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

## **Regulatory compliance**

### **FCC compliance and advisory**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that



interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

## Waste Electrical and Electronic Equipment/Battery disposal



In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste.) For more information, contact your retailer, collection facility, or appropriate local authorities; or go to [www.kodak.com/go/recycle](http://www.kodak.com/go/recycle). Product weight: 174 g (6.1 oz) with batteries and card.



## Canadian DOC statement

**DOC Class B Compliance**—This Class B digital apparatus complies with Canadian ICES-003.

**Observation des normes-Classe B**—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## CE

Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

## Australian C-Tick



## Korean Class B ITE

B급 기기  
(가정용 방송통신기기)

이 기기는 가정용(B급)으로 전자파적합등록을  
한 기기로서 주로 가정에서 사용하는 것을 목적  
으로 하며, 모든 지역에서 사용할 수 있습니다.

## Russian GOST-R



Eastman Kodak Company  
Rochester, NY 14650

Фотокамера изготовлена в Китае; остальные элементы -  
АЮ-40 в соответствии с маркировкой.

## China RoHS

### 环保使用期限 (EPUP)

在中国大陆, 该值表示产品中存在的任何危险物质不得释放, 以免危及人身健康、财产或环境的时间期限 (以年计)。该值根据操作说明中所规定的产品正常使用而定。

有毒有害物质或元素名称及含量标识表						
部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
数码相机电路板元件	×	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。  
×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。



USB 数据线

---

# Index

## A

- A/V out, 25
- about this camera, 34
- accessories
  - battery, 48
  - buying, 43
  - SD/SDHC Card, 5
- add keywords, 17
- add keywords, names, 17
- auto, 10
  - enhancement, 30

## B

- backlight, 11
- battery
  - expected life, 48
  - loading, 3
  - purchase, 8
  - status, 8
  - types, 48
- beach, 11
- button
  - delete, 7
  - zoom, 8

## C

- cable
  - audio/video, 25
- camera sounds, 34
- Canadian compliance, 51
- care and maintenance, 46
- children, 11

- clock, setting, 4
- color mode, 32
- computer
  - connect camera, 35
  - transfer to, 35
- connector, USB / A/V, 25
- copy pictures
  - to computer, 35
- cropping pictures, 26
- customize camera, 33

## D

- date setting, 4
- date/time stamp, 30
- deleting
  - during quickview, 7
  - from internal memory, 19
  - from SD/SDHC Card, 19
  - protecting pictures, videos, 20
- displaying slide show, 24
- disposal, recycling, 46
- download
  - KODAK Software, 35
- download pictures, 35

## E

- edit videos, 27
- emailing pictures, videos, 18
- expected battery life, 48
- exposure
  - long time, 32, 33
- exposure compensation, 31

external video device  
viewing pictures, videos, 25

## F

FCC compliance, 50  
find pictures, 22  
fireworks, 11  
firmware, upgrading, 46  
flash, using, 9  
flower, 11  
format, 34

## G

guidelines, battery, 48

## H

help  
camera help, 39  
Web links, 39

## I

icons, modes, 10  
installing  
battery, 3  
SD/SDHC Card, 5  
ISO speed, 32

## K

keyboard, 17  
KODAK EASYSHARE Software  
upgrading, 46  
KODAK PERFECT TOUCH  
Technology, 30  
KODAK Software, download, 35  
Kodak Web sites, 39

## L

language, 33, 34  
LCD  
brightness, 33  
reviewing pictures, 19  
reviewing videos, 19  
LCD brightness, 33  
lens  
cleaning lens, 46  
loading  
battery, 3  
SD/SDHC Card, 5  
locate pictures, 22  
long time exposure, 32, 33

## M

magnify a picture, 21  
maintenance, camera, 46  
make picture from video, 27  
marking  
for email, 18  
memory  
inserting card, 5  
menu settings, 31  
modes, 10  
backlight, 11  
beach, 11  
children, 11  
fireworks, 11  
flower, 11  
night portrait, 11  
scene (SCN), 11  
modes, capture  
auto, 10

multiple selections, 29  
multi-up, 21

## N

night portrait, 11

## O

online prints, ordering, 37

## P

PERFECT TOUCH Technology, 30

PICTBRIDGE enabled printer, 36

picture size, 31

pictures

- adding date/time stamp, 30

- cropping, 26

- emailing marked, 18

- KODAK PERFECT TOUCH, 30

- marking, 38

- protecting, 20

- review icons, 23

- reviewing, 19

- taking, modes, 10

- transfer to computer, 35

pictures/video

- deleting, 19

playing a video, 19

power

- camera, 4

printing

- from a card, 37

- optimizing printer, 39

- order online, 37

- PICTBRIDGE, 36

- tagged pictures, 37

protecting pictures, videos, 20

## Q

quickview, using, 7

## R

recycling, disposal, 46

regulatory information, 50

repair, 43

reset camera, 34

reviewing pictures/video

- as you take them, 7

- deleting, 19

- LCD, 19

- protecting, 20

- slide show, 24

running slide show, 24

## S

safety, 47

scene modes (SCN), 11

SD/SDHC Card

- inserting, 5

- printing from, 37

search pictures, 22

select multiple pictures/videos, 29

self-timer, 13

setting

- camera sounds, 34

- color mode, 32

- date and time, 4

- ISO, 32

- language, 33, 34

- LCD brightness, 33

- long time exposure, 32, 33

- picture size, 31
- picture-taking mode, 10
- self-timer, 13
- sharpness, 32
- video out, 33
- white balance, 32
- setting up the camera, 1
- setup menu, 33
- Share button, 33
- sharpness, 32
- shutter
  - problems, 41
  - self-timer delay, 13
- slide show
  - continuous loop, 24
  - running, 24
- smart display, 33
- smart find, 22
- software
  - upgrading, 46
- software downloader, 35
- sounds, 34
- specifications, camera, 44
- strap, 1

## T

- taking pictures, videos, 6
- television, slide show, 25
- text, entering, 17
- time, setting, 4
- timer, shutter delay, 13
- tips
  - battery guidelines, 48
  - care & maintenance, 46

- transfer pictures, 35
- trash can, deleting, 7
- trimming a video, 28
- troubleshooting, 39
- turning camera on and off, 4
- typing, 17

## U

- undelete, undo, 20
- underwater, 14
- upgrading software, firmware, 46
- URLs, Kodak Web sites, 39
- USB
  - transfer pictures, 35

## V

- video
  - action print, 28
  - edit, 27
  - emailing marked, 18
  - out, 33
  - playback, 19
  - protecting, 20
  - review icons, 23
  - transfer to computer, 35
  - viewing, 19
- video out, 33
- viewing
  - by multi-up, 21
  - picture, after taking, 7, 19

## W

- warranty, 49
- water, 14
- white balance, 32

**Z**

zoom, 8

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>