


■ TOWER FAN

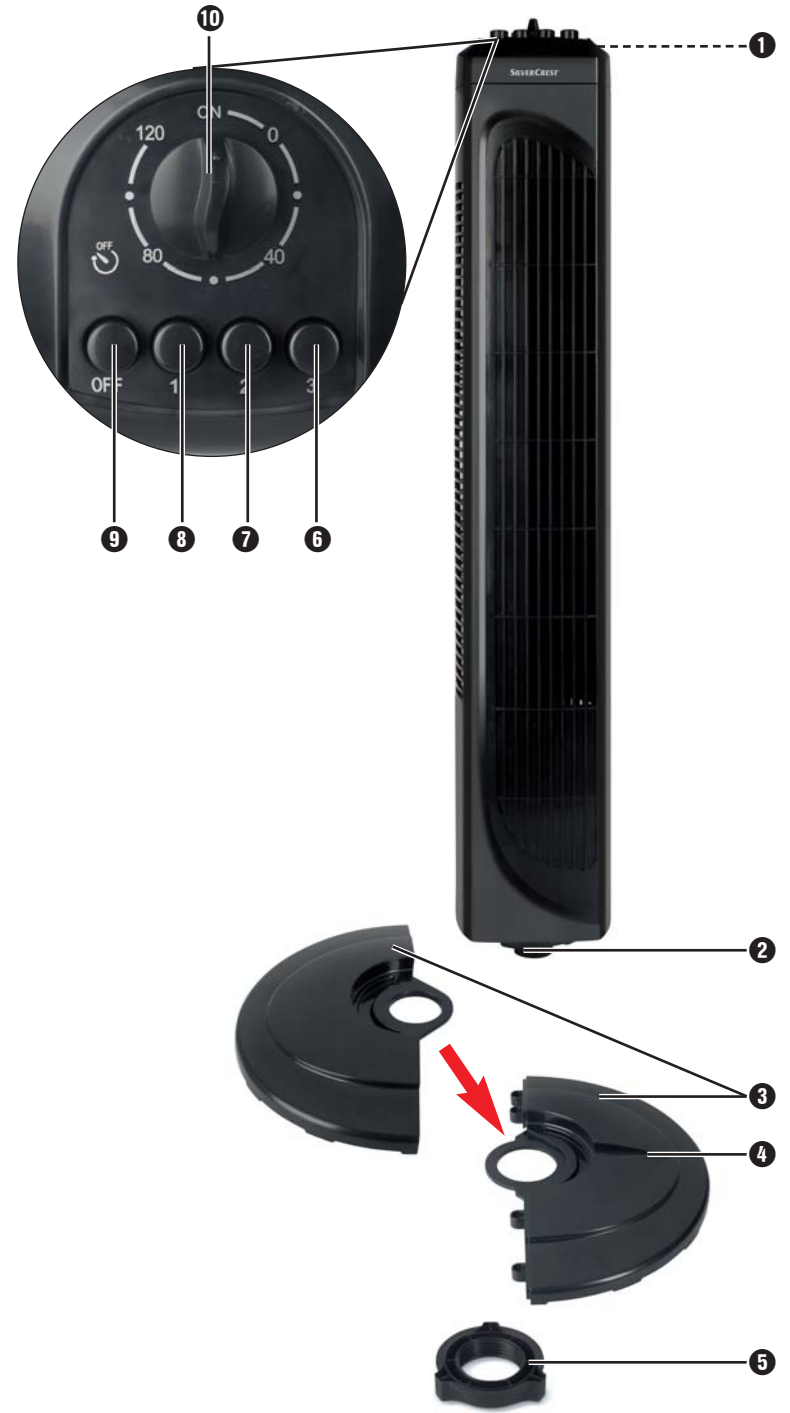

GB **Tower Fan**
IE **Operating instructions**
CY



Tower Fan KH1520

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass the manual on to whomsoever might acquire the appliance at a later date.

Intended use

This appliance is designed to circulate air in indoor rooms in domestic households. This appliance is not intended for commercial or industrial applications.

Safety information

Risk of electric shock!

- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.
- Never take hold of the appliance if you have wet hands or if you are standing on a wet floor.
- In the event of operating malfunctions and before cleaning the appliance, remove the power plug from the wall socket.

Risk of personal injury!

- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- Children should be supervised to ensure that they do not play with the appliance.
- Place the power cable such that no one can trip on or stumble over it.
- Never insert your fingers or other objects through the ventilation slots.

- Do not use extension cables. The appliance plug must be easily accessible in the event of an emergency.
- Under no circumstances should the tower ventilator be used in the vicinity of water, for example in a bath, shower, washbasin or in humid cellar rooms. The proximity of moisture presents a risk, even when the appliance is switched off.
- Do not operate the appliance if it has fallen or is damaged. Arrange for the appliance to be checked and, if necessary, repaired by qualified technicians.

Attention! Appliance damage!

- Do not subject the appliance to moisture or rain. Use the appliance Only in dry rooms, Never in the bathroom or similar.
- Do not fold or crush the power cable.
- Do not leave the appliance unattended at any time when it is in use.
- Never cover or block the ventilation slots.
- Do not place clothing items or other objects on the appliance.
- Connect this appliance only to a correctly installed and earthed wall power socket providing electrical energy at the level detailed on the rating plate.
- To disconnect, always pull the plug itself out of the power socket, do not pull on the power cable.
- Do not place water-filled receptacles, e.g. flower vases, on the appliance.




Under no circumstances may the appliance be submersed in fluids or fluids be allowed to permeate the housing. Do not expose the appliance to humidity and do not use it outdoors. There is the risk of electrocution. Should fluids nonetheless gain access into the appliance housing, immediately remove the plug from the wall socket and arrange for the appliance to be repaired by qualified specialists.

Items supplied

Ventilator KH1520
Plinth (2 pieces)
Nut (assembled on screw-thread)
Operating instructions

Check the items supplied for completeness directly after unpacking. Remove all packaging material.

Technical data

Mains voltage: 220 - 240 V~, 50 Hz
Power consumption: 45 W
Protection class: II / 

Appliance description

- ❶ Switch for oscillation
- ❷ Screw-thread
- ❸ Plinth
- ❹ Recess for power cable
- ❺ Connection nut
- ❻ Switch 3 (high speed)
- ❼ Switch 2 (medium speed)
- ❽ Switch 1 (slow speed)
- ❾ Switch "OFF"
- ❿ Rotary switch (Timer function)

Before taking into use

1. Unscrew the connection nut ❺ from the screw-thread ❷ on the ventilator tower.
2. Combine the two parts of the plinth ❸ together so that they form a circular plate and the pins protrude into the recesses.
3. Insert the screw-thread ❷ of the ventilator tower through the hole in the plinth ❸. Ensure that the power cable lies in the recess ❹ of the plinth ❸.
4. Rescrew the connection nut ❺ handtight onto the screw-thread ❷, such that the ventilator tower and the plint ❸ are securely connected.
5. Stand the ventilator upright.
6. Connect the plug with a wall power socket.

Operation

1. Position the rotary switch ❿ at "ON".
2. Select the desired speed level by using the switches:
1 ❸ = slow speed
2 ❷ = medium speed
3 ❹ = high speed
3. To switch the ventilator off for a short period, press the button "OFF" ❾. To completely switch the ventilator off, press the button "OFF" ❾ and position the rotary switch ❿ at "0".

Oscillation (Turn function)

- Should you wish to activate the oscillation (turn function), press the button "Oscillation" ❶.
- To deactivate the turn function, press the button "Oscillation" ❶ once more.

Timer-Function

You can programme the ventilator to run for a specific time (up to 120 minutes). It switches itself off on expiry of the time period.

1. Place the rotary switch **10** at the required operating time.
2. Select the required speed level.

On expiry of the selected time period, the ventilator switches itself off.

Cleaning and Care

⚠ Risk of personal injury!

Before cleaning, ALWAYS remove the plug from the wall power socket. There is a risk of receiving an electric shock!

Wipe the appliance with a damp cloth. For stubborn soiling use a mild detergent on the cloth.

⊘ *Never submerge any parts of the appliance in water or other liquids! This can create the risk of a life-threatening electrical shock if residual liquid comes into contact with powered components.*

Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of the packaging materials in an environmentally responsible manner.

Warranty and Service

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

Importer

KOMPERNASS GMBH
BURGSTRASSE 21
44867 BOCHUM, GERMANY

www.kompernass.com

GB DES UK LTD

Tel.: 0871 5000 700 (£ 0.10 / minute)

e-mail: support.uk@kompernass.com

IE Kompernass Service Ireland

Tel: 1 850 930 412 (0,082 EUR/Min.)

Standard call rates apply. Mobile operators may vary.

e-mail: support.ie@kompernass.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>