





**Instructions for use** 

Download from Www.Somanuals.com. All Manuals Search And Download.

#### Kompernaß Handelsgesellschaft mbH Burgstraße 21 D–44867 Bochum Deutschland/Germany

www.kompernass.com

KH 2244	v.1.1
En	10-27-2004

Download from Www.Somanuals.com. All Manuals Search And Download.

# Index

1. Safety instructions4
2. Scope of delivery6
3. Usage6
4. Technical data6
5. Operating controls7
6. Preparing the radio for use8
7. Radio operation11
8. Turning the radio off11
9. Cleaning the radio12
10. Troubleshooting12
11 Disposing of the radio

## 1. Safety instructions

## Danger!

Do not place or hang the radio ...

- → in areas exposed to direct sunlight! Otherwise the radio could overheat and be damaged beyond repair. This could cause a fire!
- → in the immediate vicinity of heat sources such as ovens, heaters and similar devices or vent openings of other electrical devices! Otherwise the radio could be damaged beyond repair. This could cause a fire!

### Warning!

The radio contains no user-serviceable parts. The warranty is void if the casing of the radio is opened!

For repairs, please contact our service partner nearest you. You will find the addresses of our service partners on the warranty card. The warranty card is included in delivery of the radio.



No liability will be taken and no guarantee will be made for damages ...

- → due to opening the case of the radio
- → resulting from repair attempts not made by qualified experts
- → use of the radio for purposes other than intended!



Battery acid could leak out, especially if the batteries are old. Therefore you should remove all batteries if you do not plan to use the radio for long periods of time. This protects the radio from battery acid leakage.

# 2. Scope of delivery

Radio

Stand

Suction hook for wall mounting

These instructions for use

### 3. Usage

The radio is exclusively intended ...

- → as an entertainment device
- → as a receiver for frequency modulation (FM) radio stations
- → for private non-commercial use.

### 4. Technical data

Direct Current (DC):


3 V (2 × AAA/LR03/Micro type batteries)

FM frequency range:

87,5-108 MHz

## 5. Operating controls

- Eyelet to hang on suction hook
- On/Off switch
  Volume+ button
- Volume- button
- Volume buttLoudspeakerStandBattery comp
- Battery compartment (on the back of the radio)
- 8 Scan button
- Reset button

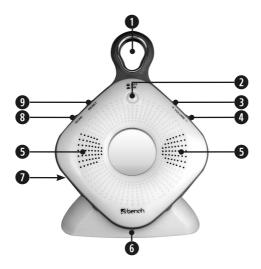

## 6. Preparing the radio for use

Carefully remove the radio from the packaging. Do not drop the radio! Otherwise it could be damaged beyond repair.

#### 6.1. Inserting the batteries

- 1 If the radio is turned on: Press the on/off switch once.
- 2 Take the cover off the battery compartment on the back of the radio. To do this pull the cover down.
- 3 Open the battery compartment.
- 4 Place two AAA/LR03/Micro batteries in the battery compartment. Please insert the batteries in the battery compartment as shown in the picture.
- 5 Close the battery compartment again.
- 6 Slide the cover to its original position. You should hear a click when the cover is moved into the proper positioned. Now the radio is ready for operation.

#### 🕝 Note:

The batteries should be replaced if ...

→ playback volume decreases without having adjusted the volume control knob

- → the sound is distorted during playback or
- → radio reception is interrupted abruptly.

In order to obtain maximum performance from the radio: always replace both batteries.

#### 6.2. Positioning or hanging the radio

You can either stand the radio or hang it ...

To place the radio in standing position using the stand included in delivery:

Place the radio in the stand included in delivery. Only place the radio on a level, scratchproof, non-slip surface.

To hang the radio using the suction hook included in delivery:

Press the suction hook onto a smooth, clean, non-oily surface. Suitable surfaces include tiled walls or mirrors.

## Warning!

Please make sure that the selected surface is smooth, clean and free from oil. Otherwise the suction hook could loose traction and the radio could fall down. This could cause the radio to be damaged beyond repair!

Subsequently hang the radio on the suction hook using the eyelet.

If you want to remove the suction hook again: Carefully pull the suction hook from the surface.

### Danger!

Do not place or hang the radio ...

- → in areas exposed to direct sunlight! Otherwise the radio could overheat and be damaged beyond repair. This could cause a fire!
- → in the immediate vicinity of heat sources such as ovens, heaters and similar devices or vent openings of other electrical devices! Otherwise the radio could be damaged beyond repair. This could cause a fire!

#### Warning!

Do not place or hang the radio in areas exposed to extreme physical shock or constant vibrations. Physical shock and constant vibrations could lead to malfunctions and longterm damage.

## 7. Radio operation

#### 7.1. Receiving radio stations

To receive a radio station:

- 1 Turn on the radio by pressing the on/off switch.
- 2 Press the scan button to scan for the next available radio station.

Each time you press the scan button, the radio will scan for the next available station.

To return to the first received radio station: Press the Reset button once.

3 Adjust the volume by pressing the buttons Volume+ or Volume-.

#### 7.2. Improving radio station reception

The radio has an integrated antenna for radio reception. Simply turn the radio until reception of the radio station has improved.

## 8. Turning the radio off

Press the on/off switch once to turn off the radio.

## 9. Cleaning the radio

Clean the radio casing only using a slightly damp cloth. To remove persistent dirt, add a few drops of mild dishwashing liquid to the damp cloth. When cleaning the device, make sure that no moisture seeps into the radio!



If moisture enters the radio, it could cause electric shock and a fire!

## 10. Troubleshooting

#### 10.1. The radio is not functioning at all

- A Make sure the batteries have been inserted in the battery compartment according to the picture.
- B The batteries may be old. If this is the case, replace the batteries.

#### 10.2. No reception or poor reception quality

Press the scan button to scan for a radio station with better reception.

#### 10.3. No sound

Press the Volume+ button to increase the volume.

#### 10.4. Other malfunctions

Please contact your nearest service partner if ...

- → the malfunctions described in sections 10.1. to 10.3. can not be rectified as described or
- → other malfunctions occur upon operating the radio.

You will find the addresses of our service partners on the warranty card delivered with the radio.

## Warning!

The radio contains no user-serviceable parts. The warranty is void if the casing of the radio is opened!

For repairs, please contact our service partner nearest you. You will find the addresses of our service partners on the warranty card. The warranty card is included in delivery of the radio.

### 🕝 Note:

No liability will be taken and no guarantee will be made for damages ...

- → due to opening the case of the radio
- → resulting from repair attempts not made by qualified experts
- → use of the radio for purposes other than intended!

## 11. Disposing of the radio

Do not dispose of the radio in the household waste! Please contact those responsible for waste management in your city or community and ask how to properly dispose of electronic devices.

## 🚰 Note:

You should remove all batteries before disposing of the radio. Do not dispose of the batteries in the household waste! Return the used batteries to an appropriate recycling collection center. Used batteries can usually be returned to the store in which they were bought.





Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com