

UK


Kompernaß GmbH · Burgstrasse 21 · D-44867 Bochum
www.kompernass.com

ID-Nr.: KH1129-06/06-V1

bifinett



GB Toaster KH 1129
Operating instruction

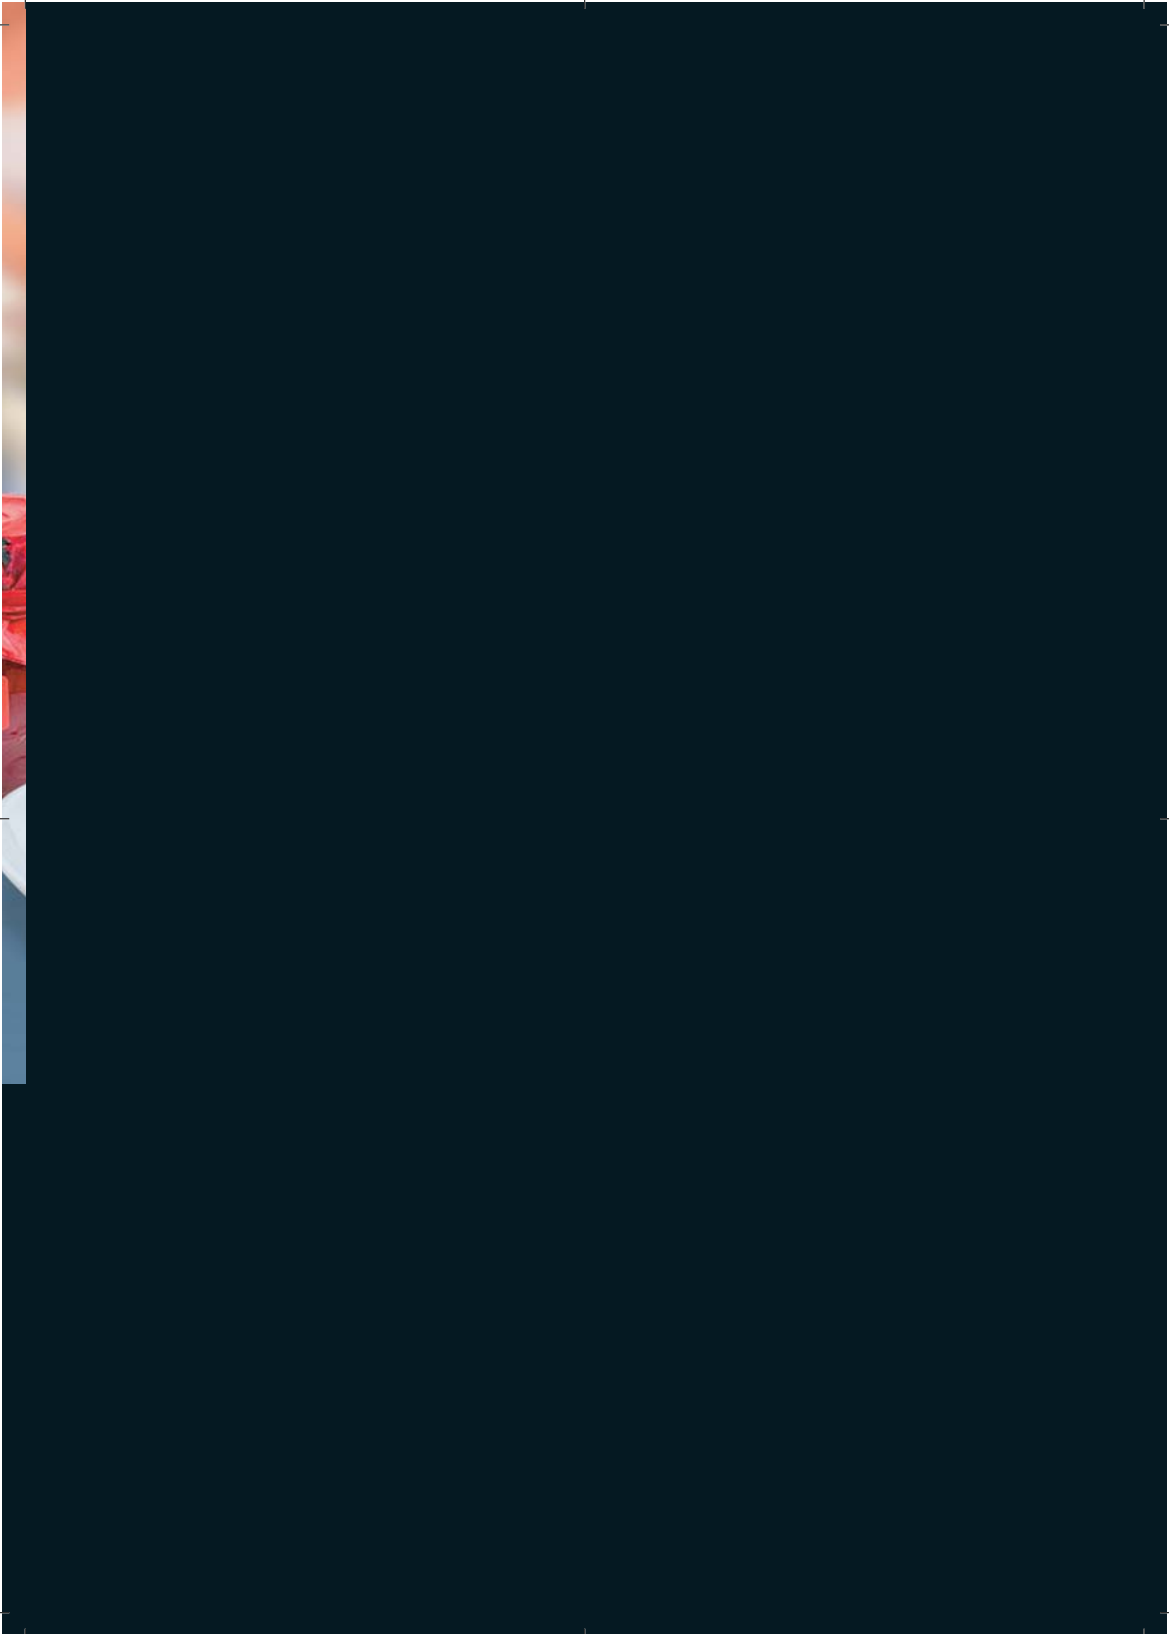

bifinett KH 1129



Toaster KH 1129

1. Intended use

This appliance is meant to be used:

- For toasting slices of bread, rolls and toasted waffles.
- For household use.

It is not meant to be used:

- For use with other foods or other materials.
- For commercial or industrial use.

2. Technical data

Voltage: 230 V / ~50 Hz

Power consumption: 800 W

3. Important instructions for your safety!

To avoid life-threatening electric shocks:

- Never put cutlery or other metallic objects into the toaster slots.
- Never allow the toaster to come into contact with water as long as the plug is in the socket. This applies especially if you use it in a kitchen near the sink.

- Make sure that the power cable never gets wet or moist when the toaster is in use. Lay the cord such that it cannot be pinched or otherwise damaged. When the power cable or the plug get damaged, that the customer service replace it before you use the toaster again.
- Always pull the plug out of the power socket after use to make sure that it does not work unintentionally.

To prevent fire hazards and the risk of injury:

- The toaster parts may get hot when in use. Therefore, only touch the handle.
- Bread can catch fire! Therefore, never put the toaster around flammable objects, especially flammable curtains.
- Never cover the toaster when it is in use.
- Never leave the toaster unattended when it is in use.
- Do not allow children or infirm persons to handle heatgenerating household appliances without supervision. They may not always be able to correctly assess potential hazards.
- Only use the toaster on a stable, nonslippery and flat surface.

bifinett KH 1129

4. Toaster description

- ❶ Roll attachment
- ❷ Slide
- ❸ Crumb tray
- ❹ Toasting dial
- ❺ STOP button

5. Starting up

Before starting up the appliance, make certain that ...

- toaster, plug and power cable are in good working order and...
- all packaging materials have been removed from the toaster.

⇨ First clean the appliance as described under 8.

Heat up the toaster a couple of times to melt off any deposits on the heating wires. This usually produces a certain odour:

- ⇨ Put the plug into the socket and turn the toasting dial ❹ to "7"
- ⇨ Press the slide ❷ down until it locks into place.

The toaster heats up for a few minutes. The slide springs up by itself and the toaster switches off.

- ⇨ Press the STOP button ❺ to stop heating early. The slide springs up by itself and the toaster switches off.

Caution: Do not press the slide upwards by hand. This may damage the mechanism.

- ⇨ Now pull the power plug out of the socket and allow the appliance to cool.
- ⇨ Clean the appliance again as described under 8.

6. Toasting

- ⇨ Put the slices of bread into the slots.
- ⇨ Turn the toasting dial ❹ to the desired setting and ...
- ⇨ press the slide ❷ downwards until it locks into place.

As soon as the toast is done, the slide springs up by itself and the toaster switches off by itself.

- ⇨ Press the STOP button ❺ to stop heating early. The slide springs up by itself and the toaster switches off.

7. Toasting Rolls

- ⇨ Attach the roll attachment ❶ to the toaster as shown.
- ⇨ Now put your rolls on it and start toasting as described under 6. Set the toasting dial to maximum on level 5-6.
- ⇨ You can remove the roll attachment as soon as it has cooled down.

8. Cleaning and care

Life-threatening danger of electrical shock:

- Never open the toaster housing. There are no operating elements inside.
- Never immerse the toaster components into water or other liquids!

Before cleaning the appliance:

- ⇨ Pull the power plug out from the power socket.
- ⇨ Let the appliance cool off.
- ⇨ Pull out the crumb tray **3** on the side. Remove all the residual crumbs from bread and rolls.

Warning: Bread may catch fire!

Clean the toaster every time you use it to keep flammable crumbs from accumulating.

- ⇨ Then clean all surfaces and the power cable with a slightly damp piece of cloth. Always dry the appliance well before using it again.
- ⇨ Do not use cleaning agents or solvents. They may not only damage the toaster, but also leave residues in the next bread you toast.

In case of stubborn residues:

- ⇨ Never use hard objects as aid
- ⇨ Never stick any objects into the slots. You may damage the toaster by doing so.
- ⇨ Instead, place a damp piece of cloth on the stubborn residues, in order to soften them.

9. Storage

Let the toaster cool off completely before storing it.

- ⇨ Wind the power cable around the holder under the bottom of the toaster.
- ⇨ Store the appliance in a dry place.

10. Disposal



Do not throw the device in your normal domestic waste.

Dispose of the appliance through an approved disposal centre or at your community waste facility.

Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.

11. Warranty & service

The warranty conditions and the service address can be found on the warranty slip.

Kompernaß GmbH
Burgstrasse 21
D-44867 Bochum
www.kompernass.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>