

### 2-Slice Toaster STOD 800 A1



GB **2-Slice Toaster**  
IE Operating instructions

KOMPERNASS GMBH  
BURGSTRASSE 21 · D-44867 BOCHUM  
www.kompernass.com  
ID-Nr.: STOD 800 A1-04/10-V2  
IAN: 54350



# INDEX

# PAGE

|  |          |
|--|----------|
| <b>Intended Usage</b>                    | <b>2</b> |
| <b>Technical Data</b>                    | <b>2</b> |
| <b>Important safety instructions</b>     | <b>2</b> |
| <b>Tips on usage</b>                     | <b>3</b> |
| <b>Description of the appliance</b>      | <b>3</b> |
| <b>Placement</b>                         | <b>3</b> |
| <b>Before taking into use</b>            | <b>3</b> |
| <b>Adjusting the browning level</b>      | <b>3</b> |
| <b>Toasting</b>                          | <b>4</b> |
| <b>Interrupting the toasting process</b> | <b>4</b> |
| <b>Warming function</b>                  | <b>4</b> |
| <b>Thaw function</b>                     | <b>4</b> |
| <b>Crumb tray</b>                        | <b>5</b> |
| <b>Bread-roll holder</b>                 | <b>5</b> |
| <b>Anti-blockage Function</b>            | <b>5</b> |
| <b>Cleaning and Care</b>                 | <b>5</b> |
| <b>Storage</b>                           | <b>6</b> |
| <b>Disposal</b>                          | <b>6</b> |
| <b>Warranty and Service</b>              | <b>6</b> |
| <b>Importer</b>                          | <b>6</b> |

Read these operating instructions carefully before using the appliance for the first time and preserve this booklet for future reference. Pass this booklet on to whoever might acquire the appliance at a future date.

# 2-SLICE TOASTER

---

## Intended Usage

---

This appliance is intended for the toasting of slices of bread, rolls and waffles in domestic environments. It is not intended for use with other foodstuffs, other materials or for use in commercial or industrial environments. All other usages or modifications are regarded as being contrary to the operating instructions and carry with them a real risk of serious accidents.

## Technical Data

---

Power rating: 220 - 240V ~ 50 Hz  
Power consumption : 800 W

## Important safety instructions

---

### **To avoid potentially fatal electric shocks:**

- NEVER insert cutlery or other metallic objects into the toaster slots.
- Ensure that the appliance never comes into contact with water when the plug is inserted into a mains power socket, especially if it is being used in a kitchen and close to the sink.
- Ensure that the power cable never becomes wet or damp during operation. Lay the cable such that it cannot be clamped or otherwise damaged.
- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.

- After use, always remove the plug from the mains socket, this will prevent the unintentional switching on of the appliance.
- The plug must always be easily accessible, so that the appliance can be quickly separated from the mains power supply in the event of an emergency.

### **To avoid the risks of fire or injury:**

- The appliance can become hot when it is in use. Therefore, only touch the operating elements.
- Bakery products can burn! You should therefore NEVER locate the appliance close to or underneath inflammable objects, especially not under curtains or suspended cupboards.
- The appliance may not be used in close vicinity to flammable material.
- NEVER cover the toaster when it is in use.
- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- Children should be supervised to ensure that they do not play with the appliance.
- Operate the appliance only on a stable, non-slippery and level surface.
- Do not use an external timing switch or a separate remote control system to operate the appliance.
- Unwind the power cable completely from the cable winder before using the appliance.
- Never leave the appliance unsupervised whilst in use!

## Tips on usage

---

- Toast mixed-flour breads at higher browning levels than white bread. Matured, dry bread browns faster than fresh bread.
- Avoid using slices that are too big or too thick, as these can easily become jammed in the appliance.

### **Attention:**

In the event of a malfunction and when cleaning the appliance, remove the power plug from the wall socket. Risk of electric shock!

- Loosen jammed slices of bread with a blunt wooden object (e.g. a wooden spatula or spoon). Do NOT touch the heater elements.
- Differences in bread sorts, moisture and the thickness of individual slices influence the browning of the toast. Therefore the bread for toasting should be kept in sealed packaging until required.





### **Notice**

Each time you press a button, and also when pressing the operating slide down, you will hear a signal tone to confirm the activation.

When a toasting process is complete, 3 signal tones sound.

## Description of the appliance

---

- 1 Operating slide
- 2 Button for the thaw function 
- 3 Browning button
- 4 Button for the warm-up function 
- 5 Stop button for interrupting the toasting process 
- 6 Lever for bread-roll attachment 
- 7 Bread roll holder
- 8 Toasting slots
- 9 Crumb tray

## Placement

---

- Unwind the cable from the cable storage on the bottom of the appliance and run it through one of the side clamps so that it cannot be trapped.
- Place the toaster on a dry and level surface.

## Before taking into use

---

- Heat the toaster up twice, at the maximum setting (8), without the insertion of bread slices. For details on cleaning the appliance read the section »Cleaning and Care«.

### **Please take note:**

The operating slide ❶ only engages when the cable is connected to a mains power socket. With the first usage a slight smell can arise (minimal smoke development is also possible). This is normal and dissipates after a short time. Provide for sufficient ventilation.

## Adjusting the browning level

---

The desired level of browning, from "light" (1) to "dark" (8), can be adjusted with the browning buttons ❸.

- ❶ Take note that, subject to the demand made on the toaster, the level of browning can vary somewhat with an unvarying adjustment of the browning level! The less the number of slices inserted, the higher is the browning level. Thus, if you are not intending to toast many slices, always adjust the browning level a little lower.

## Toasting

---

### **Attention:**

When the appliance is in operation, do NOT cover the toasting slots **8**. There will be a risk of fire! The appliance could be irreparably damaged!

- After setting the desired browning level using the browning buttons **3**, insert the bread into the toaster slots **8**.
- Press the operating slide **1** downwards. The appliance emits an acoustic signal. The control lamp on the stop button **5** glows. The automatic bread aligner centres the inserted bread into the toasting slots **8**.

When the desired level of browning has been reached, the toaster automatically switches itself off and the slices are ejected to the top. 3 Signal tones sound.

- i** This appliance has a lifting function, which makes it easier and safer for you to take the hot slices of toast from the toasting slots **8**. For this, slide the operating slide **1** upwards.

## Interrupting the toasting process



If you wish to interrupt the toasting process, press the STOP button **5**. A signal tone sounds. The toaster switches itself off. The control lamp extinguishes. The slices of bread are ejected.

## Warming function

---

The warming function **4** makes it possible for you to warm bread without browning it. For example, toast that has gone cold. The bread is only briefly warmed.

- Insert the bread and press the operating slide **1** down. A signal tone sounds.
- Activate the button for the warming function **4**. The control lamp integrated into the button for the warming function **4** glows. A signal tone sounds.
- The toaster switches itself off automatically, the control lamp extinguishes, 3 signal tones sound and the bread slices are ejected to the top.

## Thaw function

---

Through activation of the thaw function **2** frozen bread can also be thawed. With this, the toaster slowly warms the bread.

- Using the browning buttons **3**, set the browning level to level 1.
- Insert the bread and press the operating slide **1** down. A signal tone sounds.
- Activate the button for the thaw function **2**. The control lamp integrated into the button for the thaw function **2** glows. A signal tone sounds.
- The toaster switches itself off automatically, the control lamp extinguishes and the bread slices are ejected to the top. 3 signal tones sound.

- i** If you set the browning at a level higher than 1, it is possible that the bread may be slightly browned.

## Crumb tray


---

During toasting, the falling crumbs accumulate in the crumb tray ❸. To remove the crumbs, pull out the crumb tray out ❹ to the side.

## Bread-roll holder

---

- NEVER lay bread rolls directly onto the toaster, ALWAYS use the bread roll holder ❶.
- Press the lever for the bread roll holder ❷ down. The bread roll holder ❶ elevates itself.
- Place the bread-rolls onto the holder and start the toasting procedure. Using the browning buttons ❸, set the browning level to about level 2. Please discover the best setting for you by trying different levels. Depending on the desired level of browning or the consistency of the item to be toasted, the level of browning can vary.

 Place the rolls onto the bread roll holder ❶ so that they cannot fall through the holder rails.

### **Attention!**

After toasting, the rolls will be very hot.  
Risk of Burns!

- As soon as the toaster switches itself off and 3 signal tones sound, check the level of browning. Should the bread-roll have the desired level of browning, turn it over to brown the other side.
- Switch the toaster back on.
- When you no longer require the bread roll holder ❶, push the bread roll holder lever ❷ upwards. The bread roll holder ❶ folds itself away.

## Anti-blockage Function

---

This toaster is equipped with an anti-blockage function, i.e. if a slice of bread becomes stuck in the toaster slots ❸, the toaster switches itself off and 3 signal tones sound:

- First, disconnect the plug from the mains power socket and allow the appliance to cool down.
- Loosen jammed slices of bread with a blunt wooden rod (e.g. a wooden spatula or spoon handle). Take care not to touch the heating elements.

### **Notice**

If signal tones sound continuously, immediately disconnect the plug! In this case, the bread is jammed such that the mechanics cannot switch the toaster off.


Allow the appliance to cool down. Loosen the jammed slice of bread with a blunt wooden rod (e.g. a wooden spatula or spoon handle). Take care not to touch the heating elements.

## Cleaning and Care

---

### **Danger!**

Before cleaning, remove the plug from the mains power socket and allow the toaster to cool down. Injury hazard!

 NEVER submerge the appliance in water or other liquids. The appliance could be irreparably damaged!

### **Warning about damage to the appliance!**

Do not use aggressive or abrasive cleaning agents. These can damage the upper surfaces of the appliance.

- Clean the appliance housing only with a dry or lightly moistened cloth.
- To avoid the risk of fire, empty the crumb tray ❹ at regular intervals.

## Storage

---

- Store the toaster at a cool and dry location.
- Clean the appliance as described in the chapter "Cleaning and Care".
- Wrap the power cable around the cable retainer on the underside of the toaster.

## Disposal

---



**Do not dispose of this appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.**

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally friendly manner.

## Warranty and Service

---

You receive a 3-year warranty for this appliance as of the purchase date. This appliance has been manufactured with care and meticulously examined before delivery.

Please retain your receipt as proof of purchase. In the case of a warranty claim, please make contact by telephone with our Customer Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, not for transport damages, worn parts or for damage to fragile components, e.g. buttons or batteries.. This product is for domestic use only and is not intended for commercial applications.

In the event of misuse and improper handling, use of force and interference not carried out by our authorised service branch, the warranty will become void. Your statutory rights are not restricted in any way by this warranty.

The warranty period is not extended by repairs effected under warranty. This applies also to replaced and repaired parts. Damages or defects discovered after purchase are to be reported directly after unpacking, at the latest two days after the purchase date. Repairs carried out after lapse of the warranty period are subject to charge.

**GB DES UK LTD**

Tel.: 0871 5000 700 (£ 0.10 / minute)  
e-mail: support.uk@kompernass.com

**IE Kompernass Service Ireland**

Tel: 1850 930 412 (0,082 EUR/Min.)  
Standard call rates apply. Mobile operators may vary.  
e-mail: support.ie@kompernass.com

## Importer

---

KOMPERNASS GMBH  
BURGSTRASSE 21  
44867 BOCHUM, GERMANY

[www.kompernass.com](http://www.kompernass.com)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>