

KOSS[®]

KS4192









**DVD/VCD/CD RECEIVER HOME THEATRE
RÉCEPTEUR DE CINÉMA MAISON AVEC
LECTEUR DVD/VCD/CD**




**INSTRUCTION MANUAL/
GUIDE D'UTILISATION**

Progressive Scan



 <div style="display: inline-block; border: 1px solid black; padding: 5px; text-align: center; margin: 0 10px;"> CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN </div> 				
<table style="width: 100%; border: none;"> <tr> <td style="width: 15%; text-align: center; vertical-align: top;">  </td> <td style="padding-left: 10px;"> <p><i>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</i></p> </td> </tr> <tr> <td style="text-align: center; vertical-align: top;">  </td> <td style="padding-left: 10px;"> <p><i>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.</i></p> </td> </tr> </table>		<p><i>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</i></p>		<p><i>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.</i></p>
	<p><i>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</i></p>			
	<p><i>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.</i></p>			
<p><u>WARNINGS:</u></p> <p><i>To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.</i></p> <p><i>DO NOT REMOVE COVER or OPEN THE CABINET.</i> <i>Dangerous high voltages are present inside the enclosure. No user serviceable parts inside. Refer servicing to qualified personnel only.</i></p> <p><i>Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.</i></p>				

<div style="border: 2px solid black; padding: 5px; display: inline-block;"> <p>CLASS 1 LASER PRODUCT</p> </div>	<p>LASER:</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 30%;">Type:</td> <td>Dual semiconductor laser GaAlAs</td> </tr> <tr> <td>Wavelength:</td> <td>650nm and 780nm</td> </tr> <tr> <td>Output Power:</td> <td>7mW</td> </tr> <tr> <td>Beam Divergence:</td> <td>60 degree</td> </tr> </table>	Type:	Dual semiconductor laser GaAlAs	Wavelength:	650nm and 780nm	Output Power:	7mW	Beam Divergence:	60 degree
Type:	Dual semiconductor laser GaAlAs								
Wavelength:	650nm and 780nm								
Output Power:	7mW								
Beam Divergence:	60 degree								
	<p><i>INVISIBLE LASER RADIATION WHEN OPEN OR INTERLOCK FAILED OR DEFEATED.</i></p>								
<p><u>WARNINGS:</u></p> <p><i>DO NOT STARE INTO BEAM. Avoid direct exposure to laser beam.</i></p> <p><i>To prevent direct exposure to laser beam, do not try to open the enclosure.</i></p>									

GB

To ensure proper use of this product, please read this owner manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit does not contain any parts that can be repaired by the user:

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water:
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades, one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
- Only use attachments/ accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Use only with a cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the

apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.



S3125A

PORTABLE
CART
WARNING

- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- **Disc Tray**
Keep your fingers well clear of the disc tray as it is closing. It may cause serious personal injury.
- **Burden**
Do not place a heavy object on, or step on the product. The object may fall, causing serious personal injury and serious damage to the product.
- **Disc**
Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and product malfunction.
- **Damage Requiring Service**
Unplug this product from the wall outlet and refer servicing to

qualified service personnel under the following conditions:

- a) When the power-supply cord or plug is damaged.
 - b) If liquid has been spilled, or objects have fallen into the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way.
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
- **Servicing**
Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
 - **Replacement Parts**
When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
 - **Safety Check**
Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
 - USA & Canada version complies with UL marking.



Contents

Introduction

Safety	E 1
Important Safety Instructions	E 2
Contents, Packing	E 3
Player Zones, Anti-copy Disc Protection, Installation	E 4
DVD Discs & Cleaning DVD Discs	E 4
Remote Control	E 5
Front Panel	E 6
Rear Panel	E 7

Connection

Setup and Installation - Video Connections	E 9
Audio Connections, Speaker Connections	E 10
Speaker Placement	E 12
Switch on for the first time, Special on screen message	E 12

Function Setup

Basic Operations	E 13
Play, Play Mode, Lock	E 14
Display	E 15
Sound	E 16
Language	E 17

Basic Playback

General Operation	E 19
Surround Sound & Surround Effects	E 20
Radio	E 21
Clock&Timer	E 23
Playing DVD Discs	E 25
When DVD is playing	E 25
When DVD Disc is stopped	E 26
Playing Music CD	E 28
When Music CD is playing	E 29
When CD Disc is stopped	E 30
Playing VCD Discs	E 32
When VCD is playing	E 32
Playing MP3 / WMA / JPEG Discs	E 33
MP3 / WMA files alone	E 33
JPEG files alone	E 33
MP3 files along with JPEG files	E 34
Selections and play logic	E 34
When disc is playing	E 34
When disc is stopped	E 35

Problems

Disc you can play	E 38
Problems?	E 39

IMPORTANT: Since DVD circuitry may cause interference to other radio tuners nearby, switch this unit off when not in use or move it away from the affected radio tuner.

NOTE : This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television, which can be determined by tuning the equipment off and the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Software Licence and Copyright Notice

All software that is supplied as part of this equipment is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. This software is licensed, not sold and is intended for use on this device only.

All title and copyrights in and to the software (including but not limited to any images, photographs, animations, video, audio, music, text, instructions, code and 'applets' incorporated into the software) are owned by Orient Power Video Manufacturing Ltd. or its suppliers.

You may not reverse engineer, decompile, or disassemble this software for any purpose. No part of this software may be copied, reproduced, loaned, rented, leased or transmitted in any form or by any means electronic or mechanical, without the express written permission of Orient Power Video Manufacturing Ltd.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, 4,819,098, and 4,907,093 licensed for limited viewing uses only.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the "standart definition" output. If there are questions regarding our TV set compatibility with this model 525p and 625p DVD player, please contact our customer service center.

Packing

Examine the contents of the box for your DVD Receiver. There should be the following:

- DVD Receiver with attached power cord
- Remote Control with 2 batteries
- Instruction Book
- A/V Cable
- AM loop antenna and FM antenna
- Subwoofer with wire
- 2 front speakers with wire
- Center speaker with wire
- 2 rear speakers with wire
- Surround back speaker with wire
- Warranty Card

GB

Player Zones

For the purpose of distribution of DVD Discs, the world has been separated into 6 zones. The zone your unit is intended for is indicated on the Zone Label. This should be the same as the label on discs available in your region. If you have any difficulties in playing a disc, make sure that the disc is for the same zone as your player.



Region 1

Anti-copy Disc Protection

Some DVD discs have anti-copying devices.





With these discs the playback on a Television will give the highest quality picture, however you will not be able to record this signal on a VCR.

Installation

Install your unit on a stable flat surface. There must be sufficient room in front of the unit for the drawer to be opened and the unit should be positioned so that it can see the remote control.

Do not expose your unit to extremes of temperature or humidity. Avoid standing it on a hot surface such as on top of other hot running equipment and ensure that there is adequate ventilation to the unit.

*** Caution : Do not install this equipment in confined space such as a book case or similar unit!**

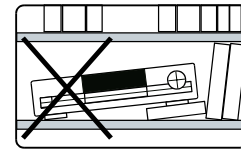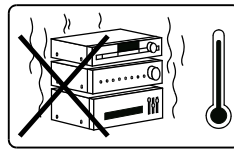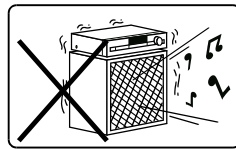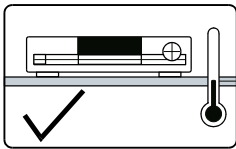

DVD Discs

There are several types of DVD Disc.

Single sided discs.

Single sided two layer discs.

Double sided discs.

Double sided with 2 layers on both sides.

They play for approximately

They play for approximately

They play for approximately

They play for approximately

2 HOURS

4 HOURS


4 HOURS

8 HOURS

DVD discs have Titles and Chapters. There can be several Titles on one disc and each Title can contain several Chapters. Titles and Chapters are numbered, e.g. Title 1, Title 2 etc. & Chapter 1,2,3 etc.

Usually Title one will show the disc publisher and studio logos. The next Title will be the film. Other Titles contain trailers for other films, production notes, or alternative endings for the film. There are many possibilities with Digital Versatile Disc. Chapters within the main Title allow you to search quickly for a specific point on the disc. Many discs have a Chapter Menu sometimes called Scene Index or Scene Menu that displays the first shot from each Chapter, which allows you to select a shot and play the disc from that point onwards. DVD discs can be PAL or NTSC. This player can play both types (if the player zone is correct).

DVD discs allow up to 8 Languages and 32 subtitles on a single disc. You can select and change the language and subtitle to suit yourself and play the whole disc or just part of it and view it from different angles.

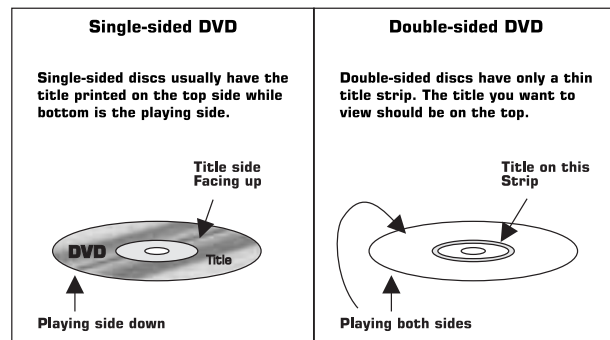


Cleaning DVD Discs




 


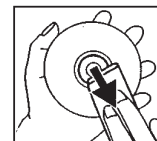


Picture freezing & sound skipping or repeating can occur if the disc inside the player is dirty.


- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out.
- Do not wipe in a circular motion. Circular scratches can cause picture distortion or render the disc unplayable.



CAUTION - Do not use solvents, commercially viable cleaners, or antistatic spray intended for analog discs.




Remote Control

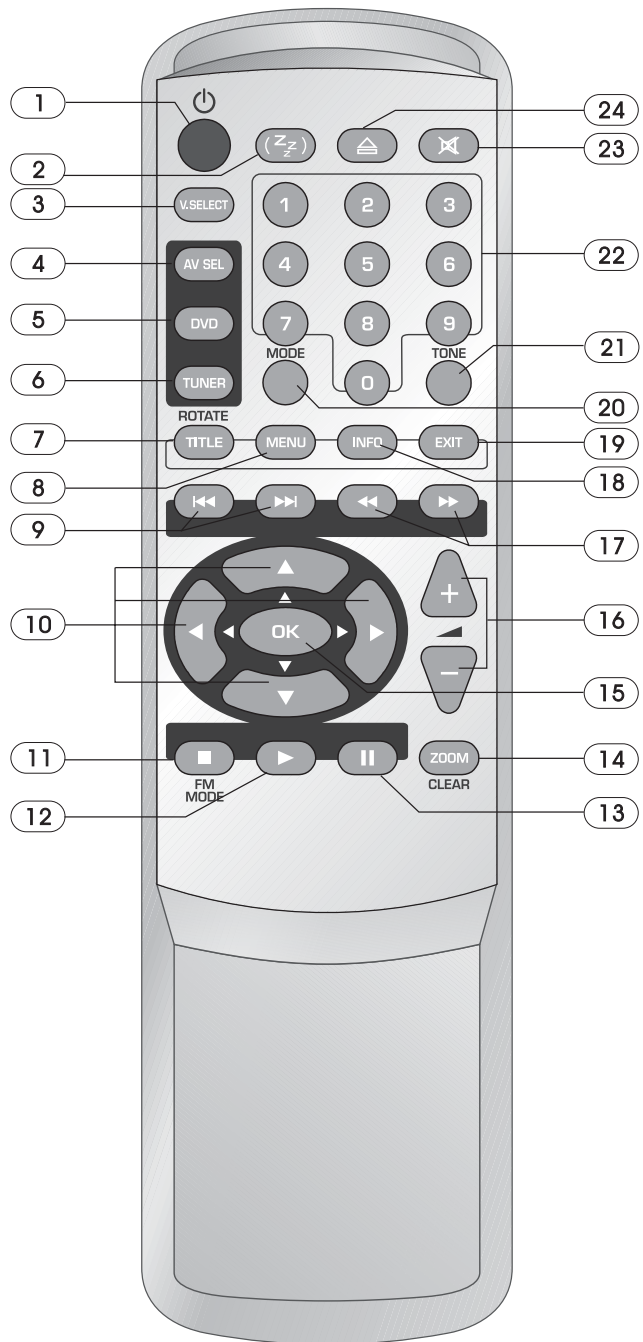1.  turns unit on/off.
2.  sets the sleep (auto-off) timer function.
3. **V.SELECT** toggles between progressive scan and switching different video output modes.
4. **AV SEL** selects external AV inputs (press repeatedly).
5. **DVD** selects DVD/CD/VCD mode.
6. **TUNER** selects Tuner mode, switches between AM and FM bands.
7. **TITLE (ROTATE)** 1) displays the Title Menu if present on disc (DVD mode only), 2) rotates pictures when playing Picture CDs.
8. **MENU** 1) enters Disc Contents Menu in DVD mode, 2) enters System Setup for SPEAKER, CLOCK or TIMER settings in all other modes.
9.  skip backward/forward to the previous or next chapter/track.
10.  (Active Navigation keys) advance in indicated directions for making selections in menus, Active Navigation mode, clock and tuner settings.
11.  1) stops playing, 2) selects Mono / Stereo in Tuner mode.
12.  starts playing.
13.  freezes picture and sound during play.
14. **ZOOM** selects zooming options when playing DVD by pressing repeatedly. (**CLEAR** exits menus and Active Navigation mode)
15. **OK** 1) enters or selects in menu and setup navigation, 2) in Tuner mode, enters preset programming mode or confirms a preset.
16.  increases or decreases the volume.
17.  start reverse or forward search.
18. **INFO** enters or exits Active Navigation mode.
19. **EXIT** exits menus and Active Navigation mode.




20. **MODE** selects surround modes or soundfield modes.
21. **TONE** selects EQ modes.
22. **0 - 9** (Numeric keys) used for direct selections of title, chapter, track, tuner channel and time input.
23.  mutes and unmutes sound output.
24.  opens or closes the disc tray.

Front Panel

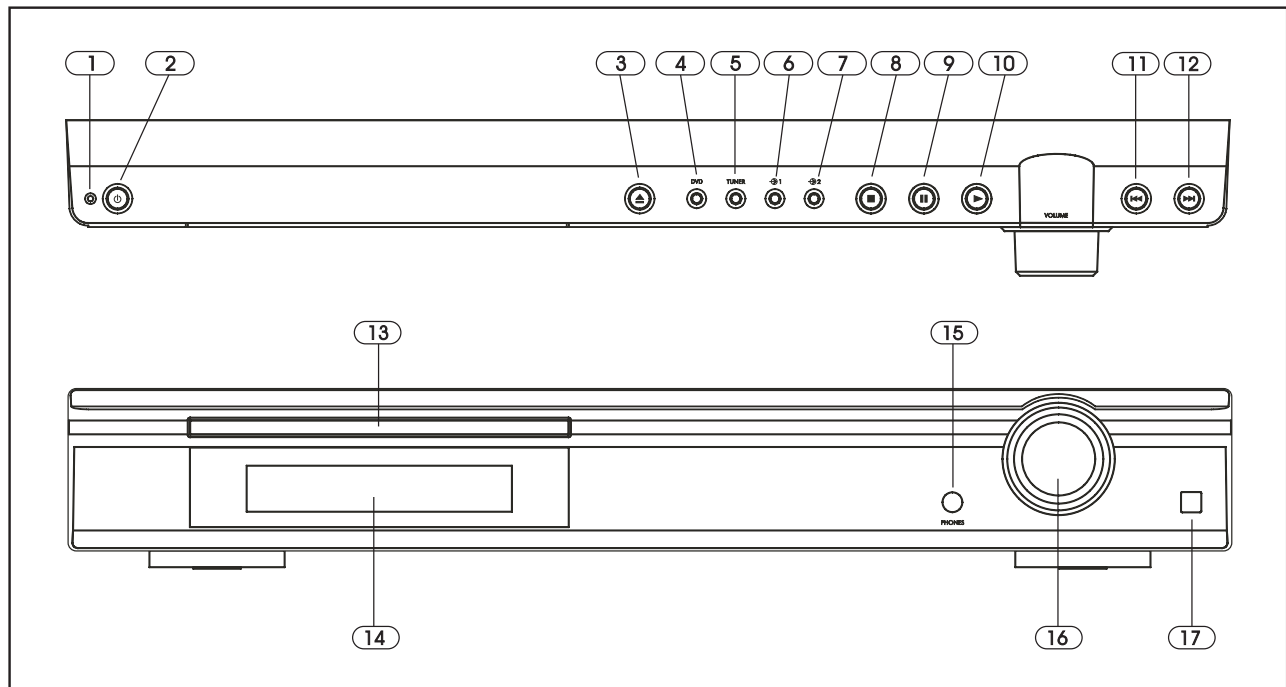

1. Standby Indicator
2. Standby On / Off
3. Opens or closes the disc loading tray
4. **DVD** Selects DVD/VCD/CD as the input source
5. **TUNER** Selects tuner as the input source. Also switches between AM and FM bands.
6. Selects AV1 as the input source
7. Selects AV2 as the input source
8. Stops playing
9. Pauses playing in DVD/VCD/CD mode
10. Starts playing in DVD/VCD/CD mode.
11. SKIP 1) skips to previous chapter/track in DVD/VCD/CD mode, 2) tunes down frequency in tuner mode. When the preset function applied, you can search downwards to select the channel you want or start the preset programming mode.
12. SKIP 1) skips to next chapter/track in DVD/VCD/CD mode, 2) tunes up frequency in tuner mode. When the preset function applied, you can search upwards to select the channel you want or start the preset programming mode.
13. Disc Tray
14. VFD Display Area
15. **Headphone Jack**
16. **VOLUME** Adjusts the master volume. Turn clockwise to increase the volume and anti-clockwise to decrease
17. Infra-Red Receiver Window

Rear Panel

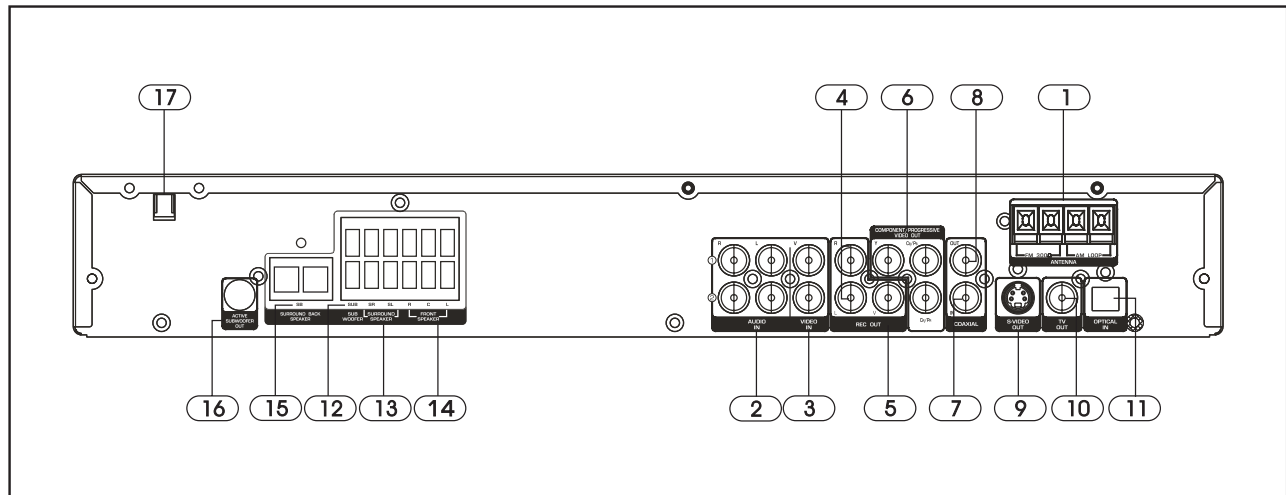

IMPORTANT!

Connect the AC cord only after the speakers, antenna and all optional equipment have been connected.

Never make or change any connections with the power switched on.


The rating plate is located at the rear panel of the system.

1. FM Antenna Input Connections

For FM reception, connect the FM antenna to the FM jack. Move the antenna in various directions until the clearest signal is received.

AM Loop Antenna Connections

For AM reception, connect the AM loop antenna to the AM jack. Position the loop antenna to receive the clearest sound.

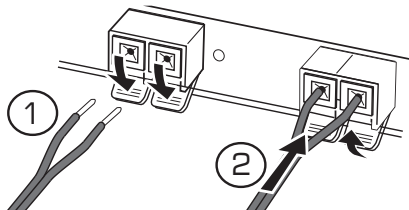

Fully insert the stripped portion of the antenna into the terminal as shown above.

Note: Position the antenna as far away as possible from a TV, VCR or other radiation source.

2. Audio Inputs

For connecting audio (Left / Right) input signals from auxiliary sources such as VCR, TV or Satellite Receiver and playing them through this Home Theater System. These connections are labelled AUX1 and AUX2 and are selected by the AUX1 and AUX2 buttons on the front panel.

3. Video Inputs

For connecting video signals from the corresponding video out jacks on the auxiliary items, e.g. TV, VCR or satellite receiver.

4. Audio Outputs - VCR

For connecting audio (Left / Right) signals to external recording devices such as VCR or Tape Recorder.

5. Video Output - VCR

For connecting VCR or other recording device (Most DVDs cannot be recorded, however you can use this connection to record from the auxiliary inputs, e.g. satellite receiver, as well).

6. Component Video & Progressive Outputs

For connecting TV with component video input (using component video cable, not provided).

Rear Panel

7. Digital Coaxial Input

For connecting external equipment that has a digital coaxial output jack.

8. Digital Coaxial Output

For connecting external equipment that has digital audio input jack, such as a CD Recorder.

9. S - Video Output

For connecting the S-VIDEO IN jack on the TV using an optional S-Video cable. This type of connection will provide superior picture quality. However, your TV must be equipped with an S-Video input socket.

10. Video Output - TV

For connecting to TVs (Most TVs have this type of connection. If your TV has Component Video or S-Video, you will get a better picture by using them instead).

11. Digital Optical Input

For connecting external equipment that has a digital optical output jack.

12. Subwoofer Speaker (Included)

Connect the included subwoofer with colored wire to "+" and black wire to "-".

13. Surround Speaker (Left & Right)

For connecting the left surround speaker to "SL" terminals and right surround speaker to "SR" terminals. Connect the colored wire to "+" and black wire to "-".

14. Front Speaker

For connecting the left front speaker to "L" terminals, right front speaker to "R" terminals and center speaker to "C" terminals. Connect the colored wire to "+" and black wire to "-".

15. Surround Back Speaker

For connecting the surround back speaker to "SB" terminal. Connect the colored wire to "+" and black wire to "-".

16. Active Subwoofer Out (for optional powered subwoofer)

For connecting an optional external powered subwoofer.

17. Power Cord

Setup and Installation


The following setup and installation diagrams show the different video and audio connections to TV, VCR or CD Recorder.

Important

Make sure the AC Voltage matches your local voltage.


Connect the AC cord only after the speakers, antennas, and all optional equipment have been connected.

(1) Video Connections

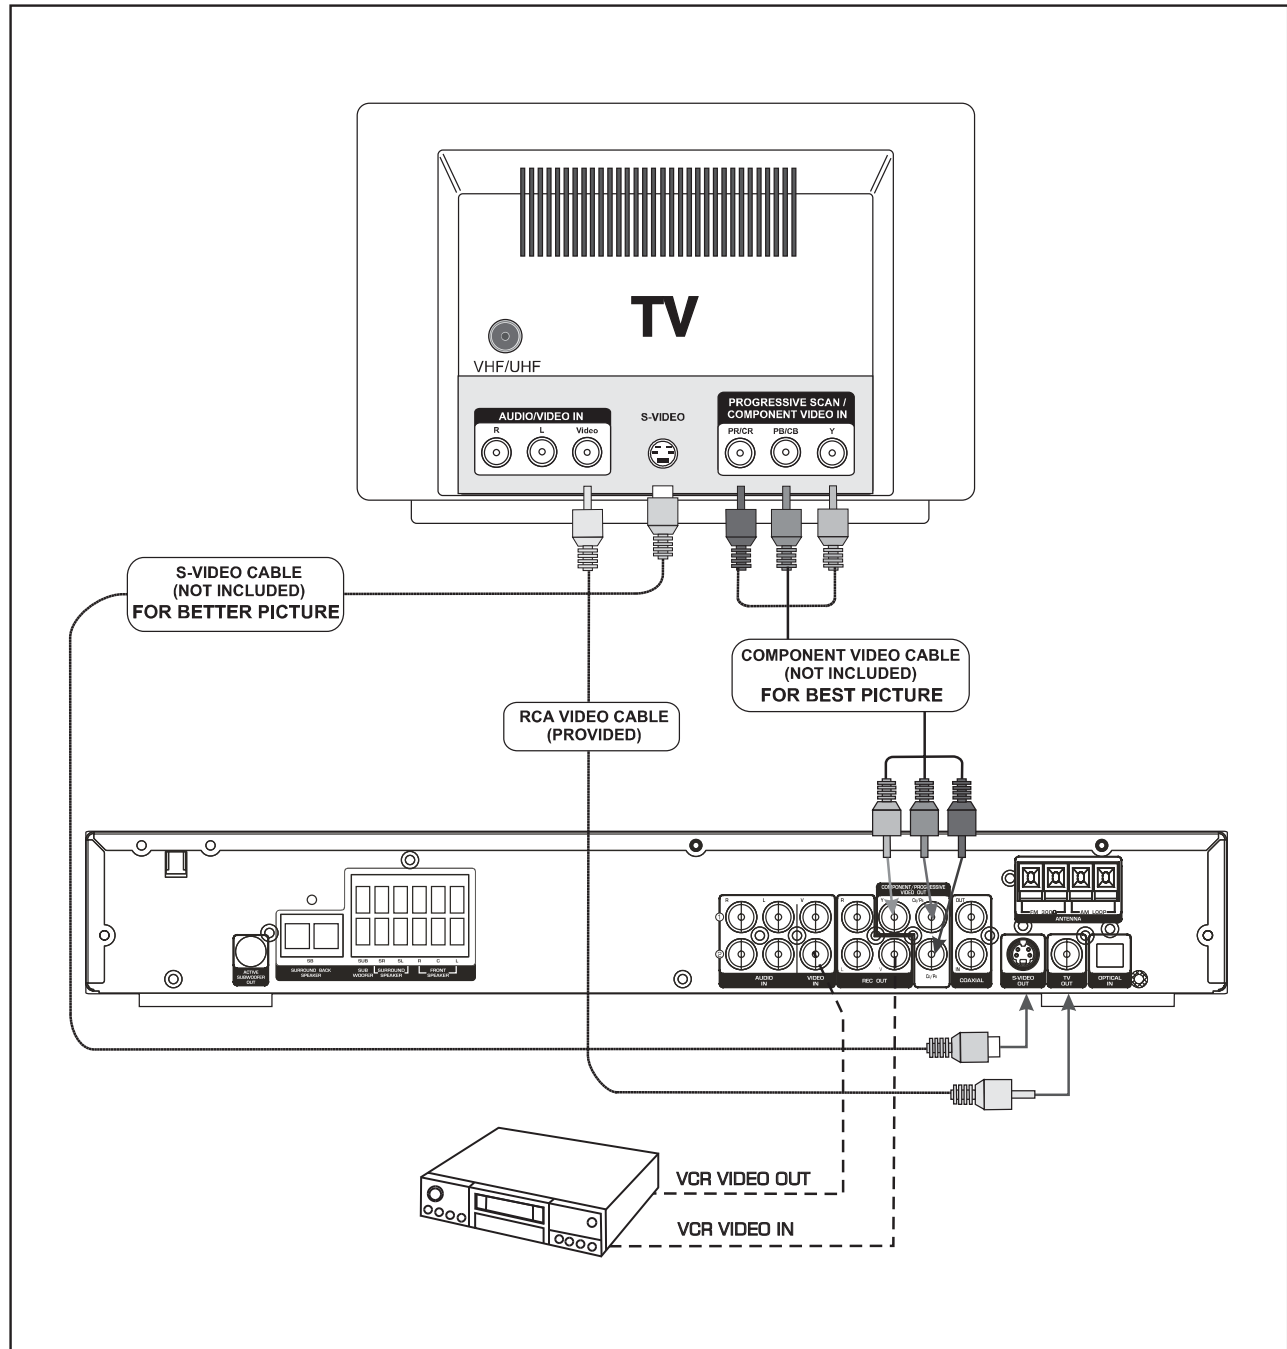

NOTE: When in AV1 or AV2 mode, only composite video sources will have video output signal, therefore, connect only RCA video output or TV Out to your TV sets.

(2) Audio Connections

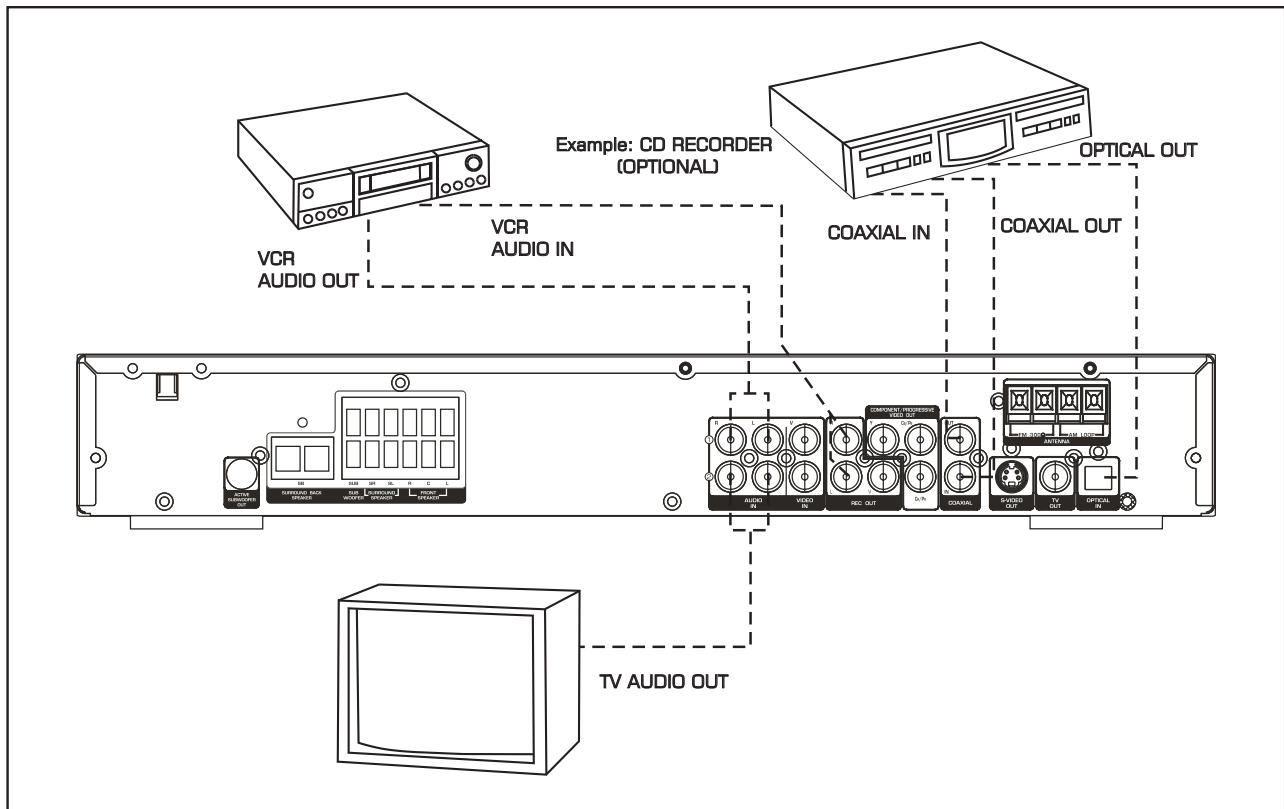


(3) Speaker connections

Before Connecting

This DVD Receiver is designed to reproduce optimum sound quality when the supplied speakers are used. If you wish to connect other speakers to the system instead of the supplied speakers, they should be 4 ohms impedance with a minimum power handling of 95 watts each.



Maintain correct polarity when connecting speakers (colored wire for positive and black wire for negative). To prevent damage to circuits, never short-circuit the positive and negative speaker output terminals.

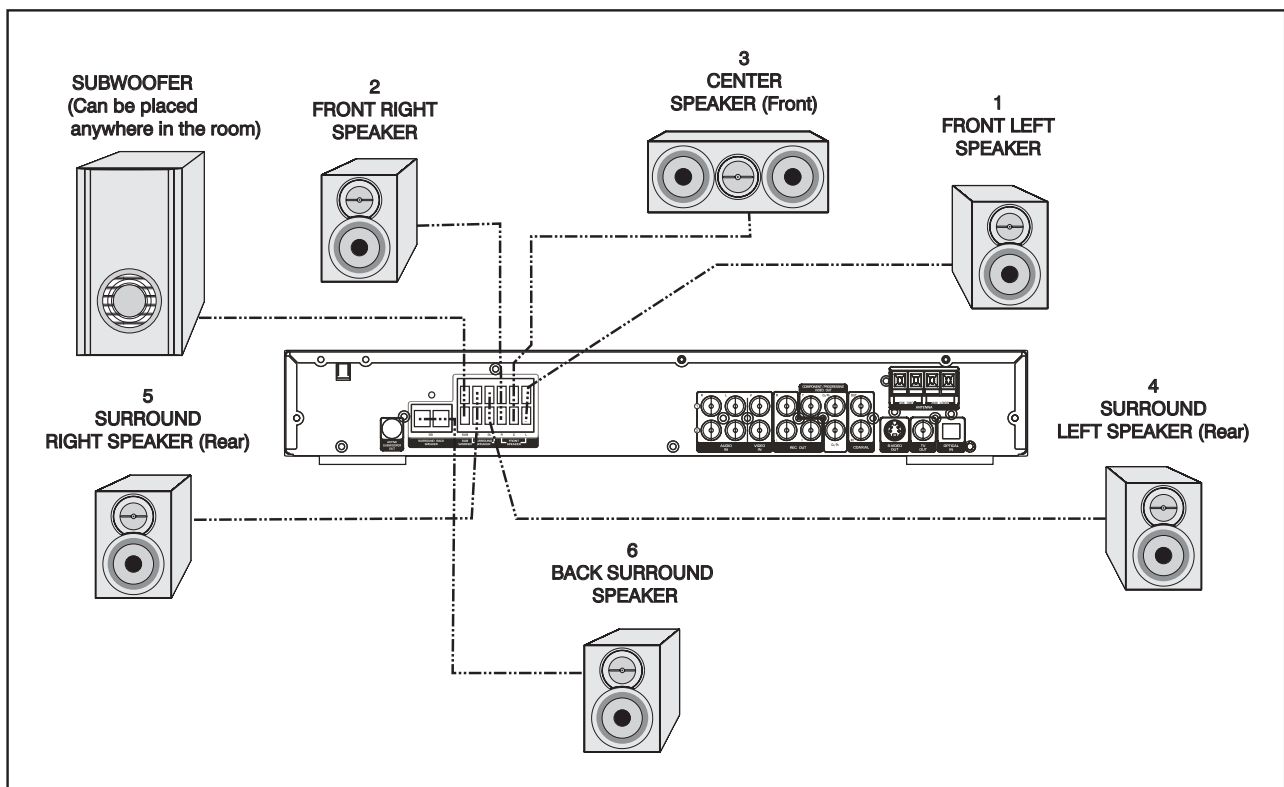

The above connections can be expressed by the below table:

SPEAKERS	FRONT LEFT		FRONT RIGHT		CENTER		SURROUND LEFT (REAR)		SURROUND RIGHT (REAR)		BACK SURROUND		PASSIVE SUBWOOFER		
	Unit Terminals	L+	L-	R+	R-	C+	C-	SL+	SL-	SR+	SR-	SB+	SB-	+	-
Use Wires	White	Black	Red	Black	Green	Black	Blue	Black	Grey	Black	Brown	Black	Purple	Black	
Speakers Terminals	White	Black	Red	Black	Green	Black	Blue	Black	Grey	Black	Brown	Black	Purple	Black	
<p>Note: always connect colored wire to colored speaker terminal (+). always connect black wire to black speaker terminal (-).</p>															

Press the button down & insert the wire, then release the button.

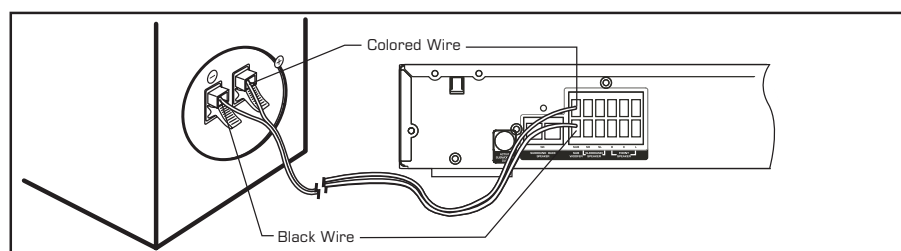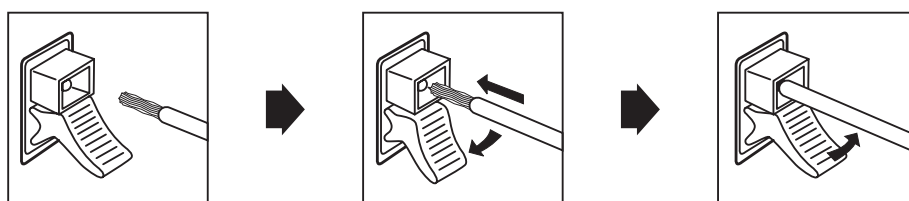


Connection of all speakers are the same.

Notes

- Do not remove excessive amount of insulation on the wire cords, to avoid the stripped portion from touching each other. The optimal length for the stripped part should be around 1/3 inch (or 1cm).
- Do not push the stripped part too far into the speaker connectors.

Speaker Placement

Placement of speakers play an important role in the reproduction of surround sound. Particular attention should be taken when designing the speaker layout. For the best surround effects, all speakers should be installed.

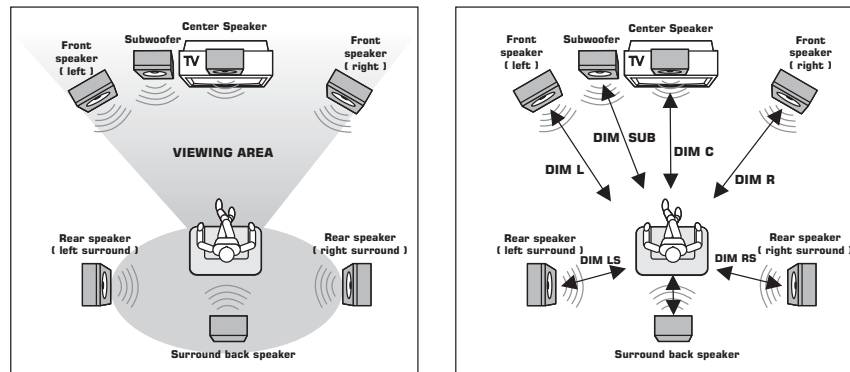

A typical room layout will have the left, center, and right speakers placed across the front and the left surround and right surround speakers placed along the sides towards the rear and the back surround speaker placed right behind the listener as shown in the above left picture. The center speaker can be positioned above or below the video screen or TV. A subwoofer can be installed for powerful bass sounds and can be positioned anywhere in the room.

The 'speaker to listener dimensions' shown in the above right picture is used for proper setup of the surround system (*Please refer to Speaker Setup on P.16*).

Note:

- **Do not connect more than one speaker to any one pair of +/- speaker terminals.**
- **Do not connect speakers with an impedance lower than the speakers supplied.**

Switch on for the First Time

- You have connected up the Home Theater System as shown in the preceding pages.
- Connect Power to the DVD Player.
- The DVD Player should have the Standby Light illuminated.
- Press the Power on key (either on the panel or the remote control), the player will be in AV 1 mode.
- Press DVD (either on the panel or the remote control), the DVD Player will switch on in DVD mode. After a few seconds the panel will show "NO DISC".
- Switch on your TV and select the AV input that the DVD Player is connected to. You should see the DVD Screen and a message "Insert a disc".
- Press the open key (on the panel or the remote control). The drawer will open. Place a DVD in the drawer, and press close (same as open). The player will read the disc and start playing it. Before the movie starts to play, a menu will be shown. You will need to select 'PLAY MOVIE' and press [OK] before the movie will start.
- Although you can watch a movie immediately, to get the best result from your Home Theater, you should now press 'STOP' and proceed to do the system setup options on the next page. This will set up all the functions on your theater. You only need to do this when you first install your Home Theater.
- If you choose to watch the movie you can find out about DVD options and navigation of the DVD disc in the section "Playing a DVD disc" and onward.

Special On Screen Message




This symbol when displayed, means that the key you have pressed is not available at this time, or that this action is not allowed by the disc at this time.

Function Setup


Proper setup of the unit will let you enjoy better sound and picture quality as well as many useful features. The selections are the preferred options that will be chosen, provided they are available on the disc. **NOTE: If the disc loaded does not have the preferred option then the disc's own preference should be used.**

BASIC OPERATIONS



To access the setup menu the unit must be in **STOP** mode.

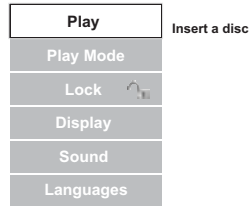


Use the Active Navigation keys to browse and make selections in the menus.

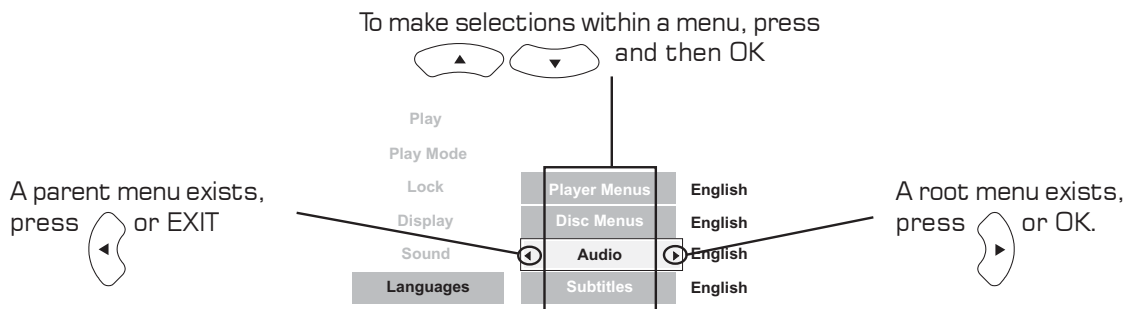

 Example shows how to select "French" as "Disc menus" language in the "Languages" menu.

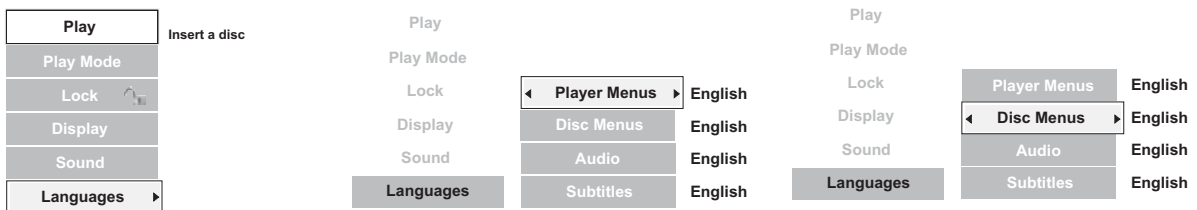

GB

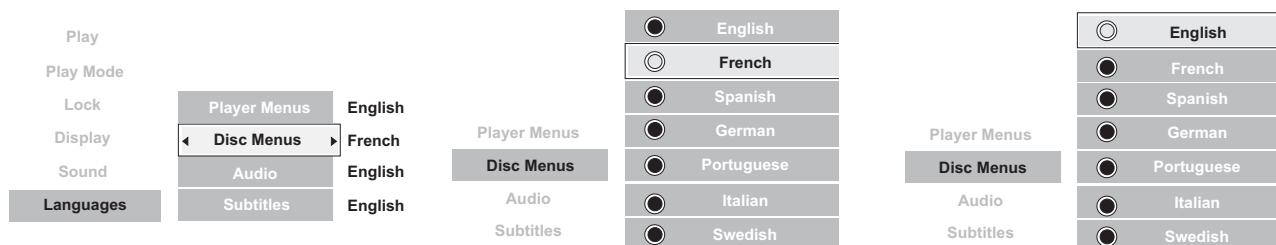

PLAY



Play

No menu is available without disc loaded. (See under "When DVD is stopped" or "When CD is stopped")



PLAY MODE



Play Mode


No menu available without disc loaded. (See under "When DVD is stopped" or "When CD is stopped")

LOCK

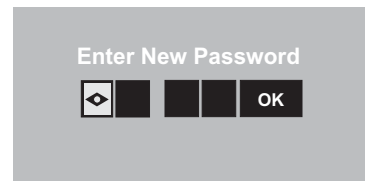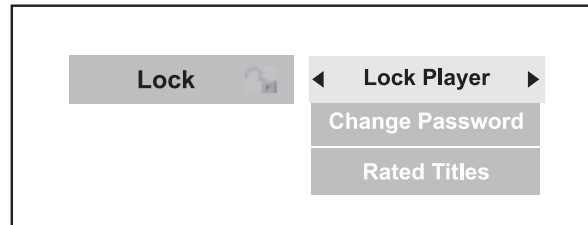


Lock Player

Create your password here using the numeric keys. The player is delivered without a password. When you set the rating limits (see under "Rated Titles") for the first time, you are required to enter your own password (e.g. 1,2,3,4). This becomes the password for the unit. **You must memorize this password in order to change it in future.**

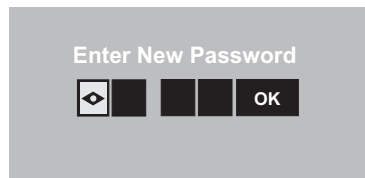

Change Password

Change your existing password to a new one using the numeric keys to replace the existing one.

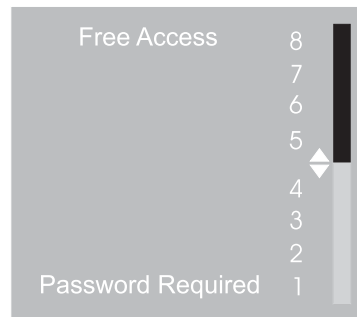

Rated Titles


 
DVD discs have parental levels assigned to them. The range of parental controls are from 1 to 8.

The player can be set in a similar way by pressing . If the unit's rating limit is set to 8, it will play all discs. If the player's rating limit is set below 8, only discs with a lower or equal parental level will play.

For example if the player is set to 5, only discs with parental control ratings of 5,4,3,2, & 1 will play. To play a higher rated disc you must change the unit's rating to a higher number.

When alternative scenes with lower rating are included, the player will play the highest rated scene that the parental setting allows. For example, consider a disc which is generally suitable for most audiences, and is rated as level 2 for most part. However, in the middle there are also scenes rated at 5 & 7 (not suitable for children).


The Disc

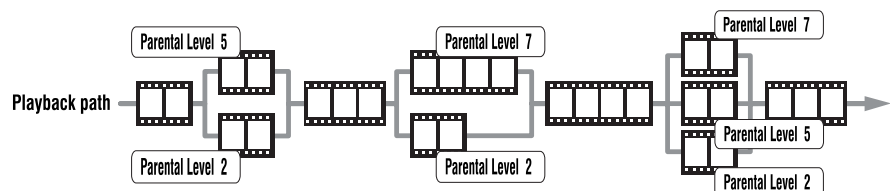


The Unit

The unit's behavior depends on the setting in the parental menu.


Parental Level Set between 2 & 4

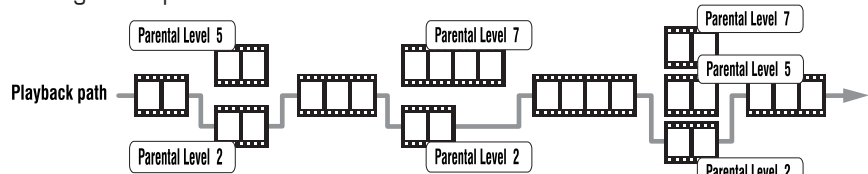

Parental Level Set to 5 or 6

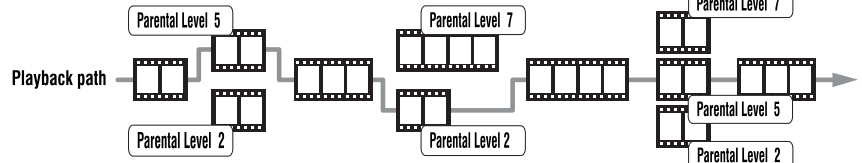

Parental Level Set to 7 or 8

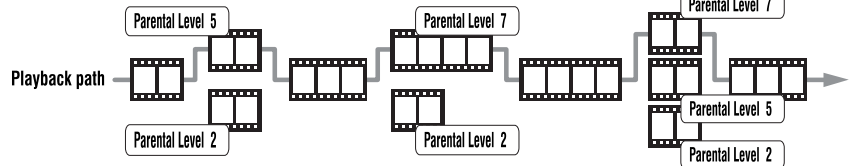



A section of the disc can have several different sequences which vary in parental control level. In the above example of a disc with parental control, the player will show a different section depending on the parental control level set in the player menu.

In this way, parents can control the content of films and there is no indication that any censorship has occurred.

The meaning of the levels 1 to 8 varies depending upon the country and the type of content of the disc.

Some films do not have parental control assigned and will play irrespective of the player setting.

DISPLAY

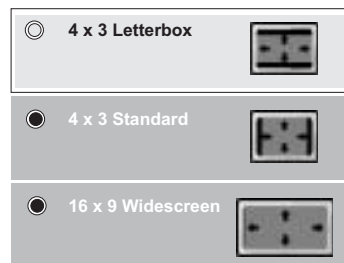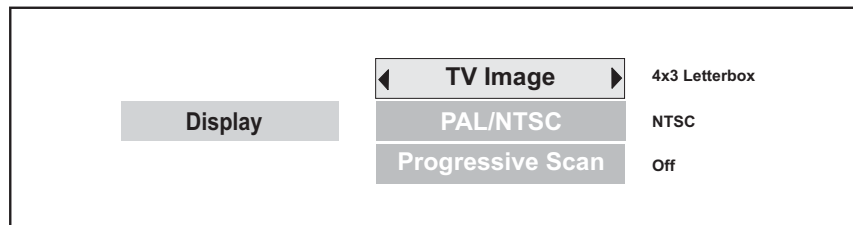

TV Image

Three options available: 1) 4x3 Letter Box, 2) 4x3 Standard & 3) 16x9 Wide Screen. Press OK to select a suitable one.

Select TV Image according to your TV type.

If you have a wide-screen (16:9) TV, select "16x9 Widescreen"

- for 16:9 movie, you will have full screen viewing.
- for 4:3 movie, black bars show on left and right sides of screen.

For conventional 4:3 TV,

- if you select 4x3 Letter Box for 16:9 movie, black bars show on top and bottom of screen.
- if you select 4x3 Standard for 16:9 movie, left and right edges of the screen are hidden.
- if you select either 4x3 Letter Box or 4x3 Standard for 4:3 movie, you will have full screen viewing.



PAL/NTSC

Press OK to select between PAL or NTSC output to match your TV or other equipment.

Warning: You MUST have a PAL system TV if you choose to select the PAL setting. If you have an NTSC North American television set and you switch the setting to PAL, you will lose your ability to switch the DVD Player back to NTSC because the On Screen Menu will no longer be readable.

Progressive Scan

Off

The setting will change to Progressive Scan ON. Incorrect setting of this item can distort the picture or no video can be observed after proceeding this step. To retrieve correct video output, you can press V.SELECT key several times. Do you want to continue?

No, switch to Component output.
Yes, switch to Progressive Scan output.

Does your TV support Progressive Scan mode? and Have you connected the Component Video Output cable to your TV and your TV has set up accordingly?

No
Yes



Progressive Scan

By displaying all the lines of a picture simultaneous (instead of displaying odd and even lines alternatively such as a conventional TV), Progressive Scan greatly enhances picture resolution while minimizing distortion and flickering.


To use this feature, your TV must be Progressive Scan compatible with Component Video input jacks connected to the DVD unit.

1. Set your unit to NTSC output mode.
2. Select the Progressive Scan option and press OK (or V.Select on the remote control) to activate.
3. A caution message will display. Press OK to continue.

Caution: If you see distorted or no picture after pressing OK, then check the following:


- i) Your TV may not be Progressive Scan compatible. Wait a few seconds and the unit will return to the previous setting before it was changed.
 - ii) Make sure your TV is connected with Component Video output from the DVD unit and is now switched to view such input through which Progressive Scan signals are transmitted. There will be no video signal from AV output, in case you have both Component Video and AV connections.
4. A message requesting for confirmation will appear on screen. Select Yes (confirm) or No (return to previous setting) by   and press OK to confirm.

SOUND

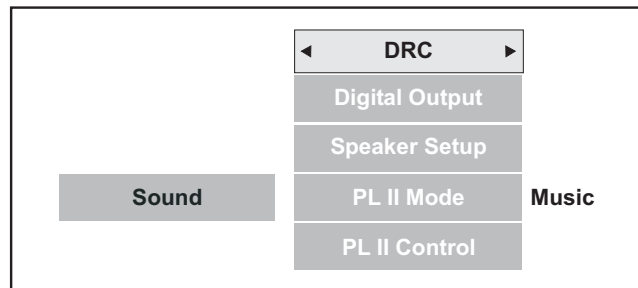

DRC

 Press OK to turn on/off. This controls the Dynamic Range Compression (DRC) for night time listening. DRC reduces the difference between normal voices and sounds such as like explosion to avoid waking your neighbours. The amount of range control available depends on the disc.



Digital Output


Press OK to check the box if you have connected the unit's digital audio output to a receiver with Dolby Digital or DTS.

Speaker Setup

Three options are available to adjust your speakers setting to best fit your listening environment.

Speakers

You can indicate the presence and size of speakers you have connected to your system within this menu. Options available are as below. Press OK to confirm your selections.

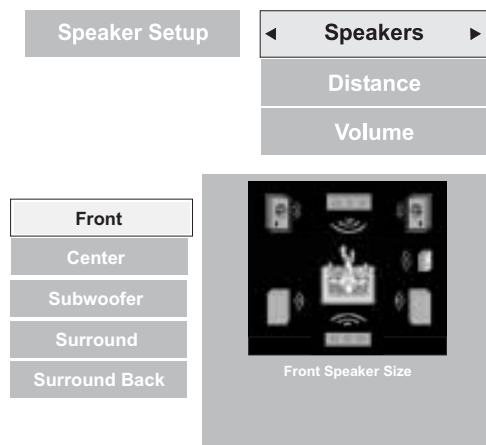

Front Speaker Size - Small
 Center Speaker Size - None, Small
 Subwoofer Speaker - None or Yes
 Surround Speaker Size - None, Small
 Back Surround Speaker size - None, Small

Note: Absent speakers are shown with dotted outline.

Distance

You can specify the distance (changing the sound delay) between speakers (front, center and surround speakers) and the listener for optimal stereo sound.

The default distance is 10 feet for front and center speakers and 5 feet for surround speakers. Change the distance from 1 to 30 feet according to your actual listening environment by pressing



 




Volume

You can make fine adjustment to the loudness of each speaker from -10 to +10 dB. When this option is selected, a test noise will generate automatically from each speaker, one by one. To go to the next speaker manually, press




Adjust loudness by pressing and press OK to confirm setting and exit the menu.

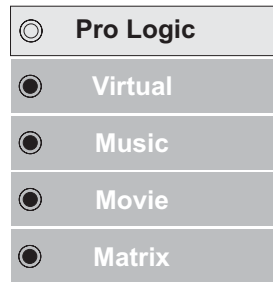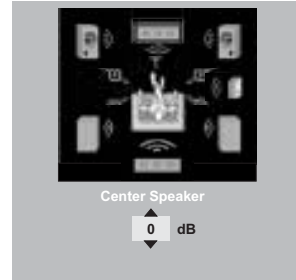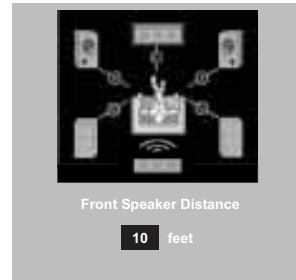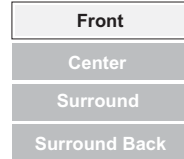

Pro Logic II Mode

The additional flexibility of Pro Logic II allows it to be tailored for specific applications. Five standard modes are available:

- Pro Logic - it offers users the robust surround processing of the original Pro Logic.
- Virtual - it's usually used when Pro Logic II is connected to a virtual process for speaker use.
- Music - it's recommended as the standard mode for autosound music systems (without video), and is optional for A/V systems.
- Movie - It can be called simply "Pro Logic II". It has stereo surround channels and no surround filter, unlike Pro Logic which has a mono surround channels and a 7KHz surround filter. Movie mode is the standard required for all A/V systems.
- Matrix - It the same as the Music mode except that the directional enhancement logic is turned off. It may be used to enhance mono signals by making them seem "larger".

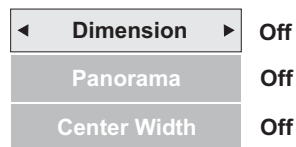


Pro Logic II Control

PL II Control lets you to customize the Pro Logic II Music Mode Sound Effect. The option is available only when the player is in Music Mode.

Dimension

A simple control that alters the ratio of L+R to L-R for the two-channel input signals. It allows the user to gradually adjust the soundfield either towards the front or towards the rear. If a recording is too spacious or strong from the surrounds, it can be adjusted "forward" to get a better balance. Likewise, if a stereo recording is somewhat too "mono" or "narrow" sounding, it can be adjusted toward the rear to get a more enveloping, immersing result.

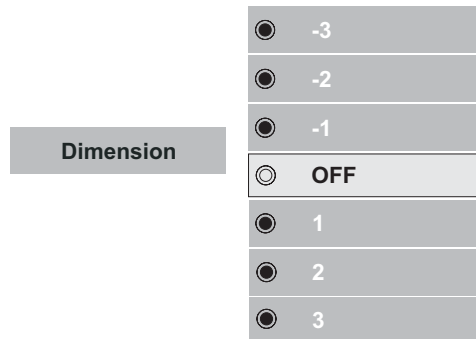

Panorama

Extends the front stereo image to include the surround speakers for an exciting “wraparound” effect with side-wall imaging.


<input type="radio"/>	OFF
<input checked="" type="radio"/>	ON

Center Width Control

With Pro Logic decoding, dominant center signals can come only from the center speaker. If no center speaker is present, the decoder splits the center signals equally to the left and right speakers to create a “phantom” center image. The Center Width control allows variable adjustment of the center image so it may be heard only from the center speaker; only from the left/right speakers as a phantom image; or from all three front speakers to varying degrees. It’s recommended to set the control to use the position 3 values for the Music mode. This will also help distinguish the Music mode from the Movie mode, which automatically presets teh Center-width control to position 0.

<input type="radio"/>	OFF
<input checked="" type="radio"/>	1
<input checked="" type="radio"/>	2
<input checked="" type="radio"/>	3
<input checked="" type="radio"/>	Soft
<input checked="" type="radio"/>	5
<input checked="" type="radio"/>	6
<input checked="" type="radio"/>	7

LANGUAGES

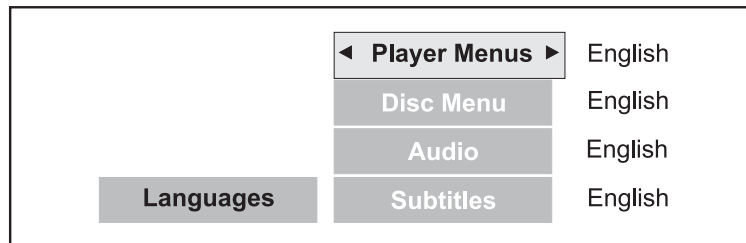

<input type="radio"/>	English
<input checked="" type="radio"/>	Français
<input checked="" type="radio"/>	Español
<input checked="" type="radio"/>	Deutsch
<input checked="" type="radio"/>	Português
<input checked="" type="radio"/>	Italiano
<input checked="" type="radio"/>	Svenska

Player Menu

Select among the 7 languages as default language for player menus. Press OK to confirm selection.

<input type="radio"/>	English
<input checked="" type="radio"/>	French
<input checked="" type="radio"/>	Spanish
<input checked="" type="radio"/>	German

Disc Menus

Select among the 7 languages (if available on disc) as default language for disc menus. Press OK to confirm selection.

<input type="radio"/>	English
<input checked="" type="radio"/>	French
<input checked="" type="radio"/>	Spanish
<input checked="" type="radio"/>	German

Audio

Select amongst the 7 languages (if available on disc) as the default audio language. Press OK to confirm selection.

<input type="radio"/>	English
<input checked="" type="radio"/>	French
<input checked="" type="radio"/>	Spanish
<input checked="" type="radio"/>	German

Subtitle

Select among the 7 languages (if available on disc) as the default subtitle language. Press OK to confirm selection.

General Operation

 
Selecting the source

Press one of the input selector buttons (on the front panel or remote control) to select the below input source:

- AV SEL (press AV1/ AV2 or AV SEL)






- TUNER




 

- OPTICAL/ANALOG/COAXIAL INPUT SELECTIONS

 
1. In AV1 / AV2 or TUNER, press MENU button.



2. Press   until Input Mode is selected.



 
3. Press OK, select AV1 or AV2, and press OK again. Then use   to choose amongst OPTICAL, ANALOG and COAXIAL inputs.





4. Press OK to save.

 
NOTE: Analog is set as the default input. Ensure your input selection matches your AV1 or AV2 audio connection. Mis-matching input selection will result in no audio signal.

- DVD/CD/VCD





Adjusting the Master Volume

 The master volume adjusts all channels at the same time: Press   on the remote control, OR rotate the master volume knob on the front panel.



Muting the Sound

  
Press MUTE to mute the speaker output. The Speaker Indicator will disappear on the display and the MUTE icon appears. Press MUTE or the volume button on the remote or volume knob on the front panel to restore the speakers output.




Selecting Surround Output Modes

The number of output modes varies according to the system setup and the input sources. Press MODE repeatedly on the remote control to select the different surround modes as shown below:

 
- Dolby Pro Logic II Surround




- 3 Stereo

 


- Stereo

 

 
- Digital Soundfield Simulation - Stadium




- Stage

 


- Hall

 

- Disco

 

- Live

 


Selecting EQ Modes

There are 6 EQ modes available while you are listening to 2 channel output (e.g. Music CD). Press TONE repeatedly on remote control for selection amongst FLAT, ROCK, POP, CLASSIC, JAZZ, and EXTENDED BASS.


After selected each EQ modes, press OK, then use (◀ ▶) to adjust the system TREBLE, BASS level and

 DRC ON/OFF. Press (▲ ▼) to adjust the level or DRC setting.



Surround Sound & Sound Effects

Display Indicators

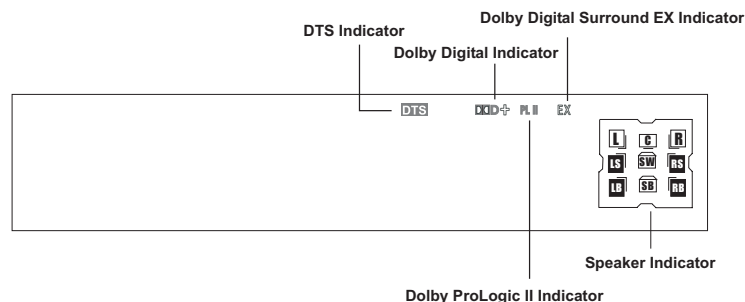

Note: For proper surround sound make sure you have followed the setup and installation procedure fully.

Dolby Digital Surround

The Dolby Digital Surround system requires connections of all 5 speakers (front left, center, front right, surround right, surround left) for the correct surround sound reproduction. This 5.1 channel digital surround format enables five individual full-range (20Hz-20KHz) channels plus an LFE (Low Frequency Effects) channel for the low-range (20Hz-120Hz) effects. It creates a realistic sound similar to the theaters and cinemas. A large proportion of DVD discs use this system for sound.

Dolby Pro Logic II Surround

The Dolby Pro Logic II Surround system is the next generation in Dolby Surround decoding. It creates five full-bandwidth output channels from two-channel sources. This is done using an advanced, high-purity matrix surround decoder that extracts the spatial properties of the original recording without adding any new sounds or tonal colorations.

Dolby Digital Surround EX

Dolby Digital Surround EX uses encoding techniques as Dolby Digital 5.1, however an additional rear center channel is matrix encoded onto the left and right surround channels for an even more exciting, enveloping surround-sound effect.

3 Stereo

3 Stereo produces three channels (front left, center, front right) of sound from a two channels analog signal. It is not a surround format so it does not require surround speakers.


Soundfield Effects

The digital Soundfield Effects recreates the effects of sounds reflected from walls or ceilings to obtain the sound presence of real environments.

- Stadium: recreates a large stadium using very long reverberation times.
- Stage: recreates a stage environment, emphasizing sound from the front speakers.
- Hall: recreates a hall using lots of reflections. Suitable for orchestral music such as classical and opera.
- Disco: recreates the disco or club music effect. It is suitable for all types of music that are played in disco.
- Live: suitable for all types of music.

Radio


Display Indicators

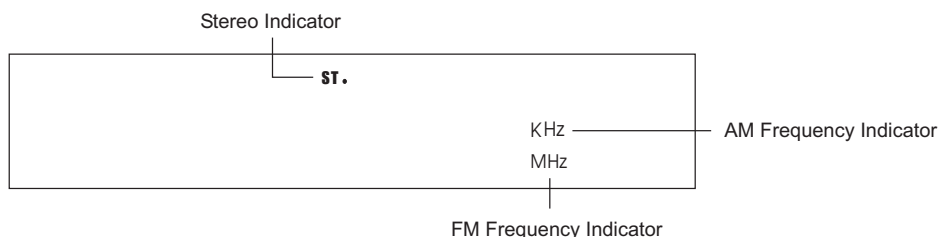





Tuning

 

Manually

1. Press TUNER to select tuner mode, the display will change to show the current band and frequency.



2. If necessary, press TUNER again to switch between AM and FM band.
3. Press   or  /  on the Front Panel or use the remote's numeric keys to change the frequency.

 
Automatic tuning

1. Press TUNER to select tuner mode.
2. After two seconds the display will change to show the current band and frequency.
3. If necessary, press TUNER again to switch between AM and FM band.
4. Press and hold  or  for more than one second to activate auto tuning mode. When a station is reached, auto tuning will stop.


Note: Press "Pause" button on the Front Panel can toggle between the frequency tune up & down and preset channel up & down.

Tuning to a weak FM stations

1. Press   to tune in a weak FM station manually.



 2. Press FM MODE on the remote control to switch to Mono mode. This will reduce the background noise and make the station easier to listen.




Preset Stations


When a preset station is selected, the preset number will appear next to the frequency on the display.

Selecting Preset Stations

 1. In tuner mode, press TUNER to switch between AM and FM band if necessary.



 
2. Press OK, then use   on the Front Panel or the remote's numeric keys or   to select desired preset station.




Storing Preset Stations

The unit can store up to 20 stations in the FM and AM wavebands respectively.

 
1. In tuner mode, press TUNER to switch between AM and FM band.



 
2. Press   to tune in the desired station.



 
3. Press and hold OK until the preset channel icon flashes.



  4. Press   or use the remote's numeric keys to select the preset channel number.





5. Press OK once more to store into memory when "SAVED" icon flashes.

 




Clock & Timer


Clock

Setting the Clock


1. Start in either AV or TUNER mode (Timer cannot be set in DVD mode).
2. Press MENU button (Remote Control only) and also press   until Clock SETUP Mode is selected.



 
3. Press OK, use   to change between 12 and 24 hour mode.



 4. Press OK. When the two hour digits flash, use   to set the hour.



 5. Press   to shift to the minute field and the two minute digits will flash.




6. Use   to set the minute.



7. Press OK to confirm the setting.


ON/OFF Timer

 Setting the ON/OFF Timer

1. In AV1 / AV2 or TUNER, press MENU button.



 2. Press   until Timer Setup Mode is selected.



3. Press OK, then use   to choose On Time or Off Time.



4. Press OK to enter Set Time mode. Set Time (refer to "Setting the Clock") and press OK.

 
 
5. Press   to set the function ON or OFF.




6. Press OK for confirmation.

Clock / Sleep Timer


Displaying the Current Time

 
When in DVD/AV1/AV2/TUNER modes, press SLEEP () on the remote control to select SHOW CLK to display the current time. The clock will stay displayed. Press SLEEP () again to SLEEP OFF to resume normal display. When some keys such as MODE, TONE are pressed, it will display their corresponding options. The clock will display again, once the options disappear automatically.



Setting the Sleep Timer/Clock

 
This feature allows you to select a time for the system to switch to the Standby mode automatically.

 1. Press SLEEP () on the remote control repeatedly to cycle through the below sleep timer options. The available options are :
SLEEP OFF -> SLEEP 90 -> SLEEP 60 -> SLEEP 30 -> SLEEP 15 -> SHOW CLK




2. The 'SLEEP' icon will appear when the desired Sleep time is set on.

Checking remaining Sleep Time

When the Sleep timer is switched on, you can check the remaining time before the unit switches to Standby mode. Press SLEEP () once, the remaining time will be displayed.

Cancelling the Sleep Timer

 To switch off the Sleep Timer, press SLEEP () repeatedly until "SLEEP OFF" is displayed.



Playing DVD Discs

1. To play DVD disc, press \triangle to open the disc tray.
2. Load disc onto the tray with the label side facing upward.
3. Press \triangle to close the tray. The disc will start playing automatically. There may be a short delay before playing while the player reads the menu from the disc.

When DVD Disc is playing

Pause, Slow Motion and Frame-by-Frame Advance

Press **II** to freeze playing temporarily. Press repeatedly to select between "Pause" and "Freeze" modes. In the "Pause" mode, press \llbracket / \rrbracket to start forward/backward slow motion play (increase or decrease speed by pressing \llbracket / \rrbracket repeatedly). In "Freeze" mode, each press of \llbracket / \rrbracket will move the play forward/backward by one frame. Press **▶** to resume normal playing.

Skip

Press \llbracket / \rrbracket to skip forward or backward a chapter.

Fast Search

Press \llbracket / \rrbracket to search through the disc forward or backward quickly. Pressing \llbracket / \rrbracket will increase/decrease the search speed.

(Note: there is no sound in Fast Search, Slow Motion and Frame-by-frame Advance modes. Press **▶** to resume normal playing.)

Quick keys (MENU, TITLE)

Press corresponding keys to go into their respective disc menu. Select options in menus with navigation keys and confirm selection by pressing OK.


Stop and Resume stop

Press **■** once to resume stop. In this mode playing can be resumed from the stop point by pressing **▶**.

Press **■** twice to stop playing completely and press **▶** will start playing from the beginning.

Active Navigation

Press INFO to display the control bar on TV screen to make menu selections without interrupting playing. Select options by pressing \llbracket / \rrbracket . Press INFO or EXIT to quit from showing the control bar.

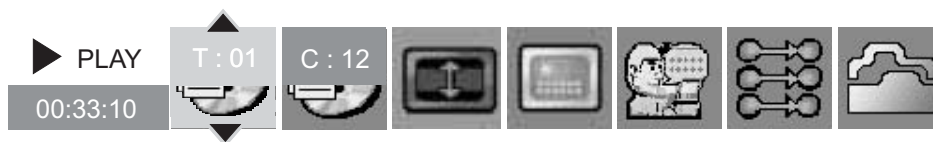

00:33:10

Input the desired time you want to play from, by using the numeric key. Associated scene will be played on screen.

T : 01

Press \triangle / ∇ to select the title you want to play.

C : 12

 
Press \triangle / ∇ to select the chapter you want to play.

Press \triangle / ∇ to select the screen fit option [Normal, Enhanced or Maximum] according to the availability on disc.

Press \triangle / ∇ to select subtitle language according to the availability on disc.




Press to select audio output mode according to the availability on disc.



Press repeatedly to select among “Standard”, “Program”, “Random”, “Disc Repeat”, “Title Repeat”, “Chapter Repeat”, and “Repeat A-B”. Press OK to confirm. The feature “Repeat A-B” allows a section to be repeated continuously. Press OK at the start of the required passage. Then press OK again at the end of the passage. The passage will then be repeated continuously.



Press OK to enter Index mode and index menu will be display on top of screen. Press OK during playing to set any scene as indexed. To play/cancel indexes, use the Active Navigation keys to select (Play) or (Cancel) in an index and press OK.

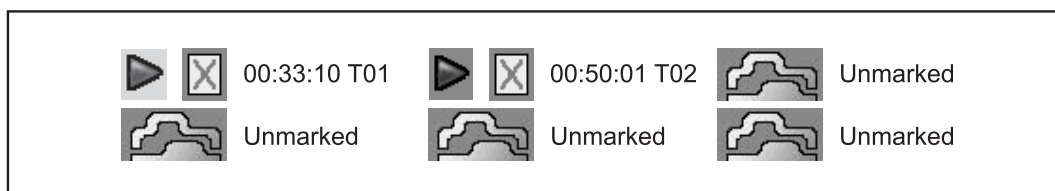

Angle




Press INFO twice to display the angle bar (if available on disc). Press to select viewing angles.

Note: When the selection is completed, exit the Navigation Bar by pressing INFO or EXIT.

When DVD Disc is stopped

The following special menus will display when playing is stopped. For other menus, please refer to “Function Setup”.

To select options, use Active Navigation keys (see under “Function Setup - Basic Operations” for detailed operations).

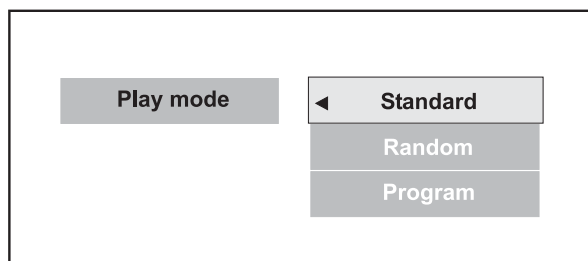

Play

Resume Play

You can resume play from the point where you have stopped previously (Multi Disc Resume). To resume play, simply press OK or . Otherwise, press once more and then to start playing from the beginning.

Play Mode

Standard

Press OK to set unit playing chapters in default order.

Random

Press OK to set unit playing chapters in random order.

Program


Press OK to create or edit program.

Create Program - Example shows how to add Title 1, and Chapter 1 in Title 2 to the program then save and start playing.


Select Title "1"




Press **OK** to Add

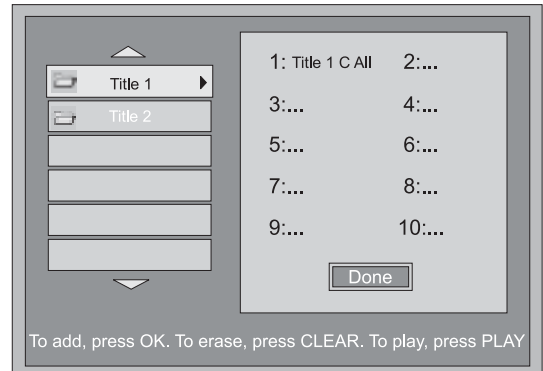


Select Chapter 1

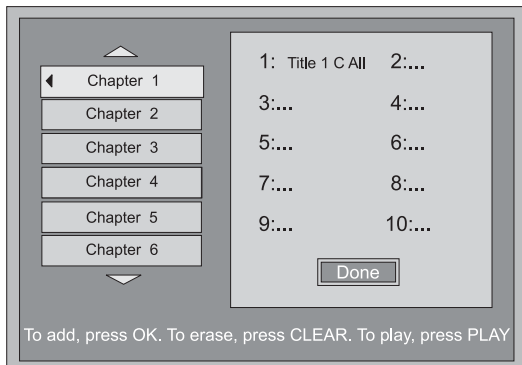


Select Title "2"

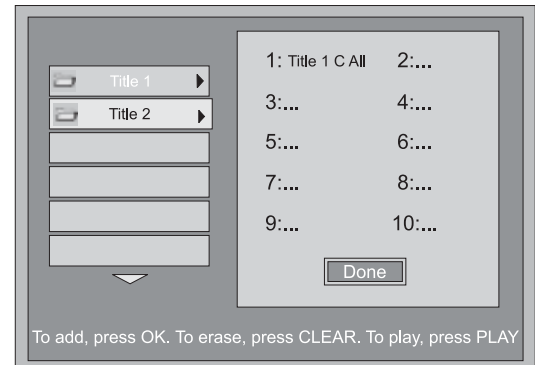

Press **OK** to Add

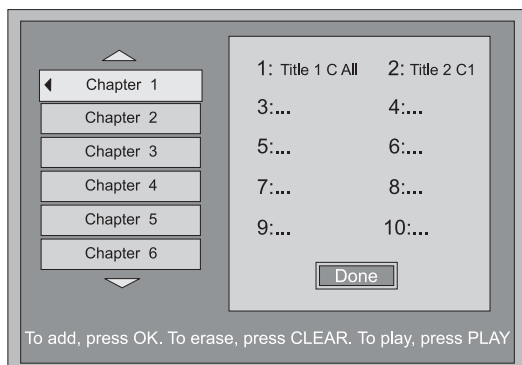


Press **▶** to select "Done" or press **▶** to save the "Program List" and start playing

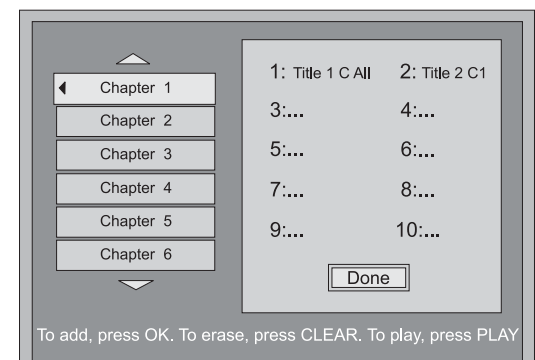



GB


Edit Program - Example shows how to delete the last selection from the program.

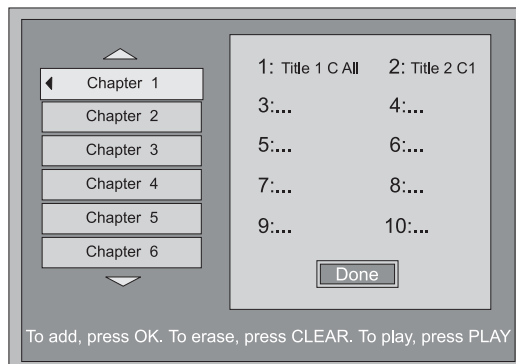

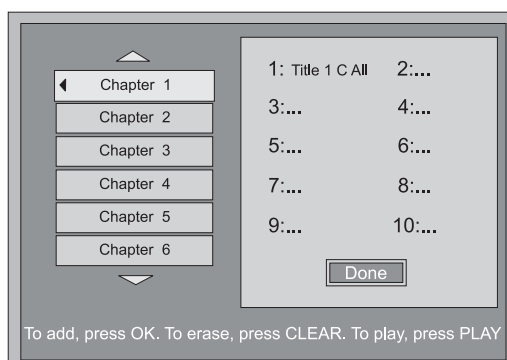

Press "Clear" to delete the last selection

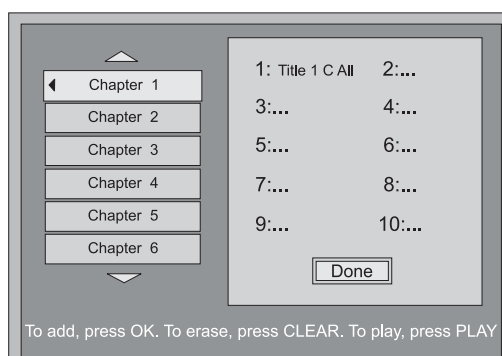

Press  to select "Done" to save the "Program List"



Playing Music CDs

1. To play music CDs, press  to open the disc tray.
2. Load disc on the tray with label side facing upward.
3. Press  to close the tray. The disc will start playing automatically. There may be a short delay before playing while the player reads menu from the disc.

When Music CD is playing

Pause

Press **II** to stop playing temporarily. Press again to resume playing.

Skip

Press **⏮**/**⏭** to skip forward or backward a track.

Fast search

To search through disc forward or backward quickly by pressing **⏮**/**⏭**. Increase or decrease speed by pressing **⏪**/**⏩**. Press **▶** to resume normal playing.

Stop and Resume Stop


Press **■** once to Resume Stop. In this mode playing can be resumed from the stop point by pressing **▶**. Press **■** twice to stop playing completely and press **▶** will start playing from the beginning.

Numeric keys (0-9)

Input track number for direct track selection.


Active Navigation


Press **INFO** to display the control bar on TV screen to make menu selections without interrupting the playing. Select options by pressing **⏪**/**⏩**. Press **INFO**, or **EXIT** to quit from showing the control bar.

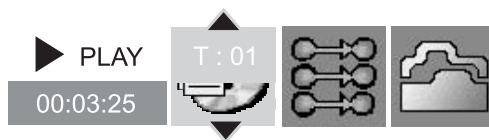


00:03:25 Display the current playing time of the track.

 T : 01
Press **⏪**/**⏩** to select track you want to play.

 Press **⏪**/**⏩** repeatedly to select among "Standard", "Program", "Random", "Disc Repeat", "Track Repeat", "Repeat A-B", and "Intro Scan". Press **OK** to confirm. Repeat A-B allows a passage to be repeated continuously. Press **OK** at the start of the required passage. Then press **OK** again at the end of the passage. The passage will then be repeated continuously. Intros can allow each track to be played for the beginning 10 seconds for introductions.

 
 Press **OK** to enter Index mode. Index menu will be displayed on top of screen. Press **OK** during playing to set any scene as indexed. To play/cancel indexes, use Active Navigation keys to select **▶** (Play) or **⊗** (Cancel) in an index and press **OK**.



Note: When the selection is completed, exit the Navigation Bar by pressing **INFO** or **EXIT**.

When CD Disc is stopped

The following special menus will display when playing is stopped. For other menus, please refer to "Function Setup". To select options, use Active Navigation keys (see under "Function Setup - Basic Operations" for detailed operations).

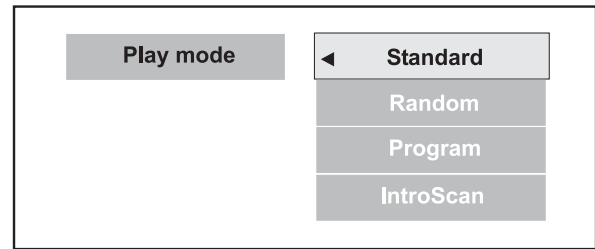

Play

Resume Play

You can resume play from the point where you have stopped previously (Multi Disc Resume). To resume play, simply press OK or ►. Otherwise, press ■ once more and then ► to start playing from the beginning.

Play Mode

Standard

Press OK to set unit playing tracks in default order.

Random

Press OK to set unit playing tracks in random order.

Program

Press OK to create or edit program.


IntroScan

Press OK to play the first 10 seconds of each track on disc.

Create Program - Example shows how to add Track 1 and Track 3 to the program then save and start playing.

Select Track "1"

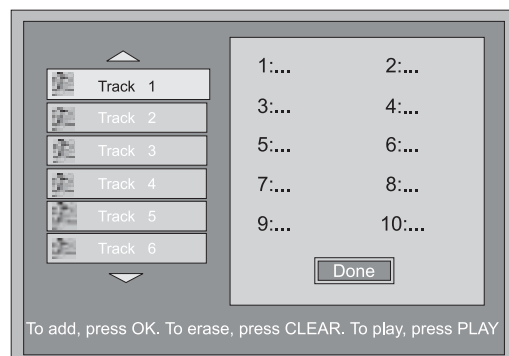

Press **OK** to Add




Press **OK** to Add

Select Track 3 **▼** x2



Press  to select "Done" or press  to save the "Program List" and start playing

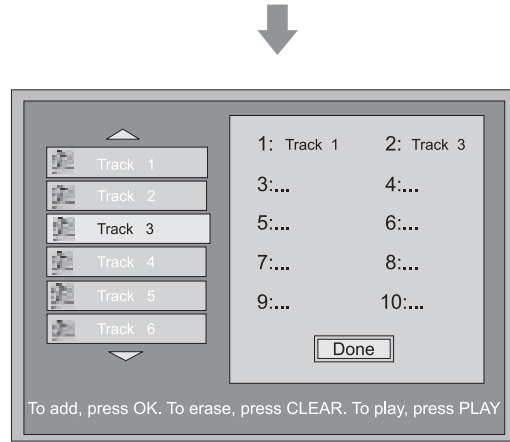


Edit Program - Example shows how to delete the last selection in the program.





Press "Clear" to delete the last selection



Press  to select "Done" to save the "Program List"




 



Playing VCDs

1. To play VCD disc, press  to open the disc tray.
2. Load disc onto the tray with label side facing upward.
3. Press  to close the tray. The disc will start playing automatically. There may be a short delay before playing while the player reads the menu from the disc.

When VCD is playing





Pause, Slow Motion and Frame-by-Frame Advance


Press  to freeze playing temporarily. Press repeatedly to select between "Pause" and "Freeze" modes. In "Pause" mode, press  will start forward slow motion play (increase or decrease speed by pressing /). In "Freeze" mode, each press of  will move forward by one frame.

Skip


 


Press   to skip forwards or backwards a Track.

Fast Search

Press / to search through discs forward or backward quickly. Pressing / will increase / decrease the search speed.

(Note: there is no sound in Fast Search, Slow Motion and Frame-by-frame Advance modes. Press  to resume normal playing.)


Stop and Resume Stop

Press  once to stop playing. Press  to play from where you stopped (Not available with PBC On). Press  twice to stop playing completely and press  will now start playing from the beginning.

Active Navigation

Press INFO to display the control bar on TV screen to make menu selections without interrupting the playing.

Select options by pressing  . Press INFO, or EXIT to quit from showing the control bar.

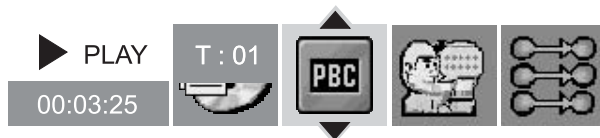



00:03:25

Display the VCD current track time.





 
Press   to select track you want to play. (Not available with PBC on)







Press   to select between PBC (Playback Control) on/off. The PBC menu consists of a list of titles, you can select a title directly with numeric keys. (Some discs may not have this function)



Press   repeatedly to select among the audio modes: Stereo > Mono L & R > Right (Channel) > Left (Channel).




Press   repeatedly to select among Standard > Disc Repeat > Track Repeat > Repeat A-B. A-B Repeat allows a passage to be repeated continuously. Press OK at the start of the required passage. Then press OK again at the end of the passage. The passage will then be repeated continuously. To resume normal playing, press   repeatedly until Standard is selected. (Not available with PBC on)

Playing MP3 / WMA / JPEG Disc


1. To play MP3/WMA/JPEG disc, press to open the disc tray.
2. Load disc onto the tray with label side facing upward.
3. Press to close the tray, then the files in disc will be detected.

The player can play either:


MP3 / WMA files alone

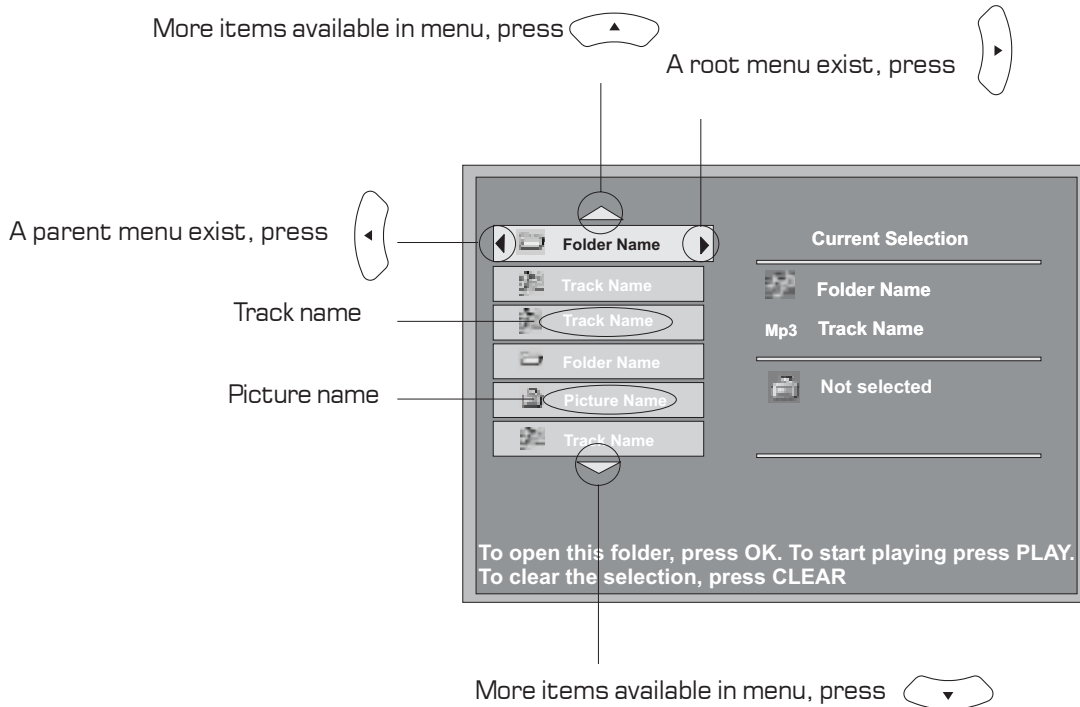

JPEG files alone

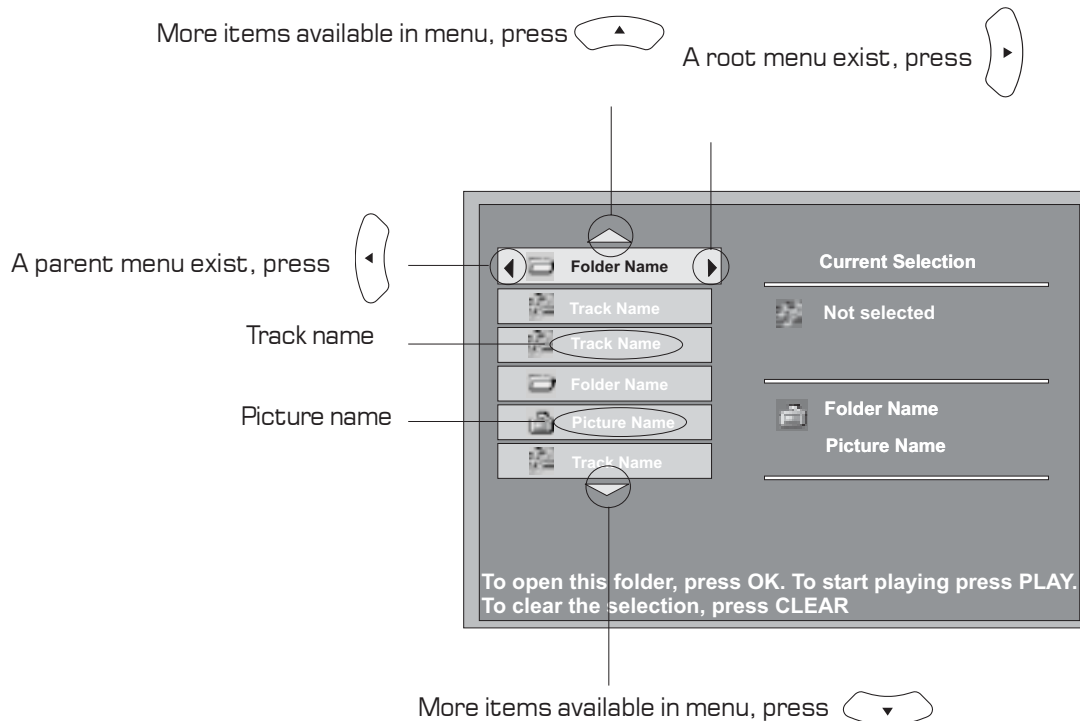

MP3 files along with JPEG files

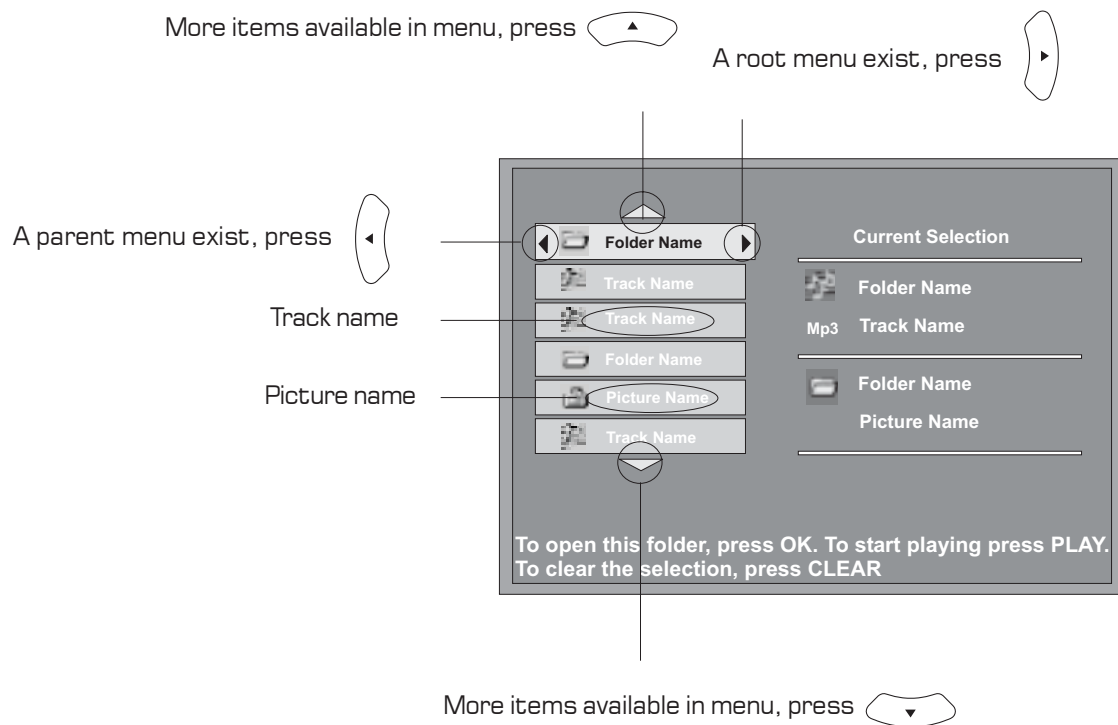

Selections and playback logic

MP3 / WMA files only:

The player begins playing all the files in the currently selected folder, and then follow by all the files in the subfolders contained within its parent folder. After that, the player plays the remaining folders in the disc.

JPEG files only:

The player starts the slideshow with the JPEG files currently selected and proceeds to display all the JPEG files in the same folder. It then goes onto the JPEG files in the subfolders contained in the same folder.

MP3 files along with JPEG files:

The player begins the slideshow with the JPEG files in the currently selected folder. At the same time, it plays the selected MP3 file, following the music-only playback. The slideshow stops when the picture playback has finished. If all the MP3 files are finished before the end of the slide show, it will play the first MP3 files again until the end of the slideshow.

Note: If you haven't confirmed a selection, the player will automatically play the first 10 seconds of the track you select.

When disc is playing

Pause

Press  to stop playing temporarily. Press again to resume playing.

 
Skip

Press  /  to skip forward or backward a track.

Stop and Resume Stop

Press **■** once to Resume Stop. In this mode playing can be resumed from the stop point by pressing **▶**.
Press **■** twice to stop playing completely and press **▶** will start playing from the beginning.



Quick keys (ROTATE, MENU, ZOOM)


Press corresponding keys to go into respective disc menu. Select options in menus with navigation keys  and confirm selection by pressing OK. Each press of ROTATE will rotate the picture by 90 degrees. Press MENU during music playback to display the music selection menu without interrupting playback. Press MENU during picture/music or picture only playback to display the picture/music selection menu, while playback stops. Press ZOOM to zoom the picture in and out during a picture slideshow.

Active Navigation

Press INFO to display the info bar on TV screen to make menu selections without interrupting the playing.


MP3 / WMA files only:

Press   to select a play mode (Standard, Program, Random, Track Repeat, Folder Repeat, and Disc Repeat).

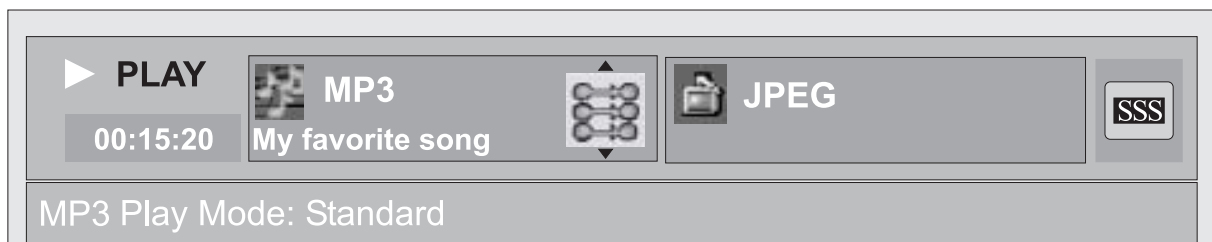

MP3 files along with JPEG files or JPEG files only:

Press   to select a slideshow speed (Slow, Normal, and Fast).

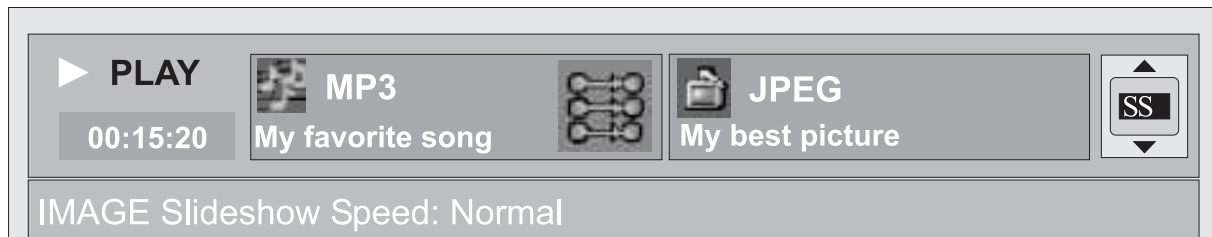

Note: When the selection is completed, exit the Navigation Bar by pressing INFO, or EXIT.

When disc is stopped

The TV screen will display the menu with the selection information. Use navigation keys to go back to the first level menu, refer to "Function Setup".

When MP3 disc is stopped, the following special menus will be displayed. For other menus, please see under "Function Setup". To select options, use Active Navigation keys (see under "Function Setup - Basic Operations" for detailed operations).

Play Mode Standard


Press OK to set unit playing tracks in default order.

Random

Press OK to set unit playing tracks in random order.


Program

Press OK to create or edit program.

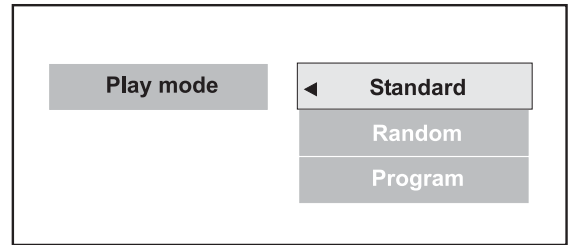


Create Program - Example shows how to add Folder 1 and Track 1 in Folder 2 to the program list then save and start playing .

Select Folder 1

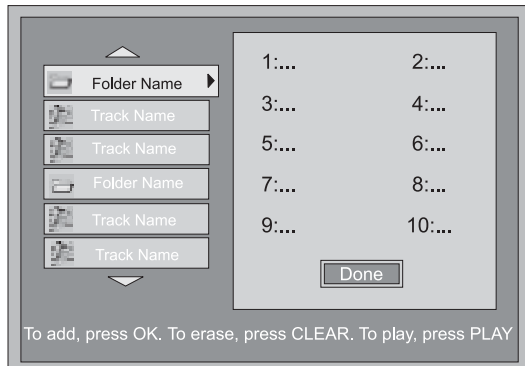


Press **OK** to Add

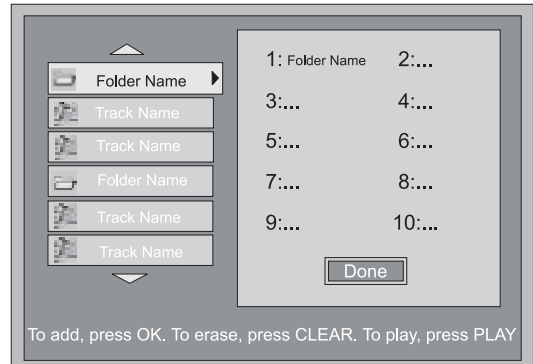

Press **OK** to Add




Select Track 1 in Folder 2 **▼** x4

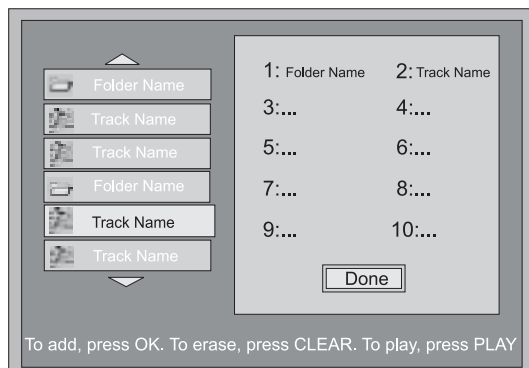



Press **▶** to select "Done" or press **▶** to save the "Program List" and start playing


Edit Program-Example shows how to delete the last selection from the program list

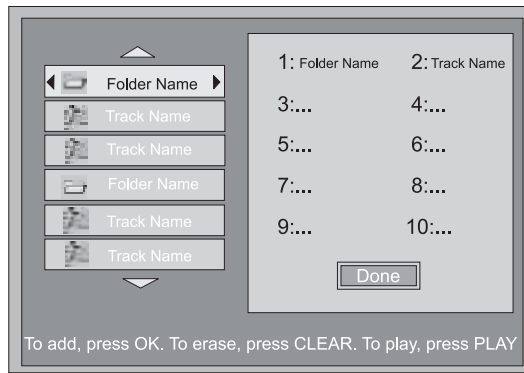

Press "Clear" to delete the last selection

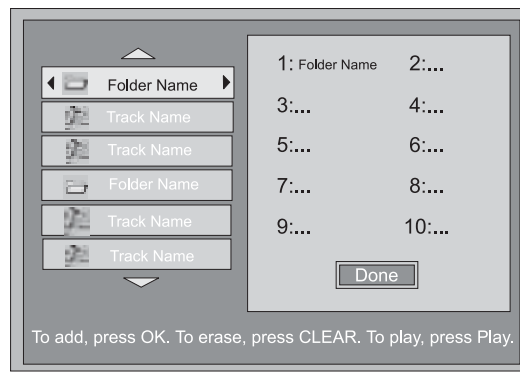

Press  to select "Done" to save the "Program List"

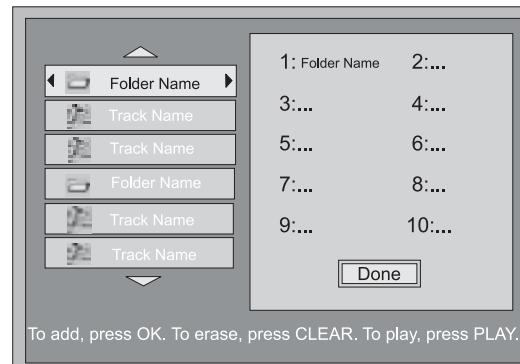

GB

DISC YOU CAN PLAY

While advances have been made to ensure that your disc player is compatible with the largest number of discs possible, however it cannot be guaranteed that you will be able to play discs which might not be compliant with audio CD standards. In the case of writable and rewritable discs, compatibility with this player depends on the CD/DVD writer, the right software and the disc used.

DVD-Video

Digital video discs - 12 cm and 8 cm, single or double sided, single or dual layer: DVDs are high-density optical discs on which high quality picture and audio are recorded by means of digital signals.

DVD-R, DVD-RW

Most DVD-R and DVD+R (one recording only), DVD-RW and DVD+RW discs (rewritable). Depending on the DVD writer and discs used. Recordings using DVD-R and DVD-RW discs must be made in Video DVD mode. Recordings using DVD+RW discs must be made in accordance with the specifications for DVD+RW discs with a 4.7 GB capacity.

Video CD(VCD)

VCD stands for Video Compact Disc which contains video footage, still images, audio tracks and interactive menus.

Audio CDs

Audio CDs (8 and 12 cm).

CD+G

CD+G is a Karaoke music format. The song words will be displayed on the TV screen and change color when it is time to sing the lyrics. There are no video scenes (movies) in the background.

CD-R & CD-RW

Most CD-R (one recording only) and CD-RW discs (rewritable). This player can play most CD-R discs. CD-Rs written during a multi-session recording can also be played, provided that the session has ended before the disc is played (depending on the write software). However, depending on the condition of the CD writer, computer and the disc used, you may find that not all discs will play successfully. When playing a CD-R disc, it is completely normal for the unit to take up to 20 seconds to recognize the disc before starting to play. If the disc is not recognized after a period of 20 seconds, remove the disc, and then insert it again.

- Irrespective of the actual recording capacity of the CD-R, do not use its full capacity.
- CD-Rs should be preferably used instead of CD-RWs (rewritable CDs) as, in certain cases, CD-RW playback may be faulty.
- Use reliable, good-quality CD write software.
- Close all other applications on the computer to ensure reliable CD-R disc recording.

MP3 Files

CD-R and CD-RW discs containing audio files in MP3 format. As for CD-R MP3 discs, please follow all the recommendations for CD-R above, along with the comments below:

- Your MP3 files should be ISO 9660 or JOLIET format. ISO 9660 format and Joliet MP3 files are compatible with Microsoft's DOS and Windows, as well as with Apple Mac. These two formats are the most widely used.
- MP3 filenames should not exceed 12 characters, and should end with the ".MP3" extension. General name format: "Title.MP3". When composing your title ensure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including (. , / , \ , = , +).
- Use a decompression transfer rate of at least 128kB/sec (kilobytes/second) when recording MP3 files. Sound quality with MP3 files basically depends on the rate of compression / decompression you choose. Obtaining audio CD quality sound requires an analog/digital sampling rate, that is converted to MP3 format, of at least 128kB/sec and up to 160kB/sec. Choosing higher rates, such as 192 kB/sec or more, will rarely produce better sound quality. Conversely, files with sampling rates below 128kB/sec will not play properly.
- Do not try recording copyright-protected MP3 files. "Secured" files are encrypted and code-protected to prevent illegal copying. You must not copy such files.

Important:

The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality. You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (i.e. degraded sound quality and even, in some cases, inability of the player to read the file).

WMA Files

CD-R with WMA files. Usable format similar to MP3 files; also see "MP3 Files" for reference.

JPEG Files

CD-R and CD-RW with JPEG files. Certain JPEG files, including progressive JPEG files, cannot be read by this player.

PROBLEMS

If it appears that your DVD-Video player is faulty, first consult this checklist. It may be that something simple has been overlooked.

Under no circumstances should you try to repair the player yourself; as this will invalidate the warranty. Only qualified service personnel can remove the cover or service this player:

** When the unit is switched on the first time, S-Video will be the defaulted video output. Press the V-SELECT button to select the correct output modes. Your current output mode will show on the VFD.*

NO POWER

- Check if the on/off button on the front of the player is set to on.
- Check if power plug of the mains cord is properly connected.
- Check if there is power at the AC outlet by plugging in another appliance.

NO PICTURE

- Check if the TV is switched on.
- Select the correct AV input on the TV.
- Check the video connection.
- Check if channel selector is set to AV on the TV. (See your TV manual for instructions).
- When Progressive Scan is on, no video output for composite video output.
- Press the V-SELECT button to select the correct video output mode. Otherwise no picture or distorted picture will be found.

DISTORTED PICTURE

- Check the disc for fingerprints and clean with soft cloth, wiping from center to edge.
- Sometimes a small amount of picture distortion may appear. This is not a malfunction.
- The disc format does not match the TV-set used (PAL/NTSC).
- Ensure that ONLY one video output is connected.

NO COLOR IN PICTURE

- The disc format is not according to the TV-set used (PAL/NTSC).
- Ensure DVD player is not connected through VCR.

PICTURE SWING

- Relocate the unit further away from possible interference or emission source (e.g. Radio, Power Amplifier, radiator etc.).

NO RETURN TO START-UP SCREEN WHEN DISC IS REMOVED

- Check to see if the program requires another disc to be loaded.
- Reset by unplugging the player from the power, then connect the power again.

THE PLAYER DOES NOT RESPOND TO THE REMOTE CONTROL

- Aim the remote control directly at the sensor on the front of the player.
- Avoid all obstacles which may interfere with the signal path.
- Inspect or replace the batteries.

NO SOUND

- Check audio connections.
- If using a Hi-Fi amplifier, try another sound source.
- Check that DTS digital out is selected in the Audio Menu if a DTS disc is played.
- Ensure there is a DTS decoder connected when selecting DTS.
- Clean the disc.
- Check if the disc is defective by trying another disc

NO AUDIO AT DIGITAL OUTPUT

- Check the digital connections
- Check the Digital Out menu to make sure that the digital output is correctly set.
- Check if the audio format of the selected audio language matches your unit capabilities.

DISC CANNOT BE PLAYED

- Ensure disc is placed properly into the disc tray.

YOU HAVE FORGOTTEN THE PASSWORD

- Under no disc condition, press Number Key 7, Number Key 6, Number Key 4, Number Key 1 and Number 8 on Remote Control in order.

FUNCTION DISTURBED

- The normal function of the product may be disturbed by external interference. Just reset the product (disconnecting and reconnecting the power cord might be required to resume normal operation).

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>