

Warning

TO PREVENT FIRE OR SHOCK HAZARD, DO APPLIANCE TO RAIN OR MOISTURE.

NOT

EXPOSE THE

fer servicing to qualified service personnel only.

e AC adaptor must only be changed at qualified service facility.

This appliance is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT MARKING is located on the re

This product contains a low power laser device. To ensure continue
cover or attempt to gain access to the inside of the product. Re
personnel only.

r panel. I safety, do not r er all servicing

Caution

A RISK OF ELECTRIC SHOCK ARSK OF MOT OPEN

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the applicance. his symbol is intended to alert the user of the presence of uninsublage" within the product enclosure that may be of sufficient magnifisk of electric shock to persons.

ments to an appropriate waste disposal center. rechargeable battery nton: Ni MH batteries must be recycled or disposition: protect the environment! nber to respect the local regulations: hand in the non-working electrical an appropriate waste disposal center.

MAINTENANCE AND CARE

- Caring for the player
 "The apparatus shall not be exposed to dripping or splashing" and that no objects filled with liquid shall be placed on the unit.
 This kind of electronic products should never be subjected to extreme temperatures or high humidity.
- lens should be cleaned using a commercially available camera lens blower, etc. Do not the lens to prevent damaging the mechanism. Also do not use a lens cleaner or disc

before operating it any further.

When the lens in the pick-up gets dirty, malfunctions including the impossibility of playback

ng falls into the cabinet, unplug the unit and have it checked by qualified personnel

Cleaning the Unit
To prevent fire or sh

cked or warped disc

- t fire or shock hazard, disconnect your unit from the AC power source when cleaning. on your unit may be cleaned with a dust cloth and cared for as other furniture. Use nen cleaning and wiping the plastic parts. Mild soap and a damp cloth may be used nel.
- olatile solvents such as alcohol, paint thinner, gasoline, or benzine, etc.

- **Disconnect power** If you are not going to use the player for a long time, be sure to disconnect the power converter from the wall outlet. To disconnect the AC adaptor, grasp the plug itself, never pull the cord.

IMPORTANT SAFEGUARDS

- AC/DC power adaptor that is packed with the unit. Using other age the unit.
 er Supply cords should be routed so that they are not likely to the splaced upon or against them. Pay particular attention to

- ower-cord protection Power Supply cords should be routed so that they are not likely to a walked on or pinched by items placed upon or against them. Pay particular attention to ords at plugs, convenience receptacles, and the point where they exit from the unit. Inclosure removal Never remove the enclosure.

 Top Do not drop the unit or apply strong shock to it.

 Total activation Avoid hindering the ventilation of the unit, when playing in the car with pouch, surie is kept the pouch opening.

 To provide the pouch opening of the ventilation of the unit, when playing in the car with power OFF bonormal smell If an abnormal smell or smoke is detected, immediately turn the power OFF or pullout the AC adaptor from wall outlet. Contact your dealer or nearest service center.

IMPORTANT SAFEGUARDS (continue)

- Heat-Avoid placing the unit under direct sunlight or near a source of heat such as heating equipment. Particularly, never leave it in an automobile or on the dashboard.
 Temperature The unit may not function properly if used at extremely low, or freezing temperatures. The ideal ambient temperature is above +5°C(41°F).
 Water and moisture The unit should not be used near water -for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
 Vibration Avoid placing the unit on an unstable place such as a shelf or in a place subject to vibration.
- <u>:</u> c fields — keep the unit away from sources of magnetic fie1ds such as TV sets, speaker, radio, motorized toys or magnetized objects.

- systems, radio, motorized toys or magnetized objects.

 12. Nonuse periods The AC adaptor of the unit should be unplugged from the outlet when left unused for a long period of time.

 13. Damage requiring service-The unit should be serviced by qualified service personnel when:

 A. The power-supply cord or the plug has been damaged.

 B. Objects have fallen, or liquid has been spilled into the unit.

 C. The unit has been exposed to rain.

 D. The unit does not appear to operate normally or exhibits a marked change in performance.

 E. The unit has been dropped, or the enclosure damaged.

 14. Servicing The user should not attempt to service the unit beyond that described in the operating instructions-All other servicing should be referred to qualified service personnel.

 15. CAUTION TO PREVENT ELECTRIC SHOCK DO NOT USE THE AC PLUG WLTH AN EXTENSLON CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY NOTHER ON USERTED TO PREVENT BLADE EXPOSURE.

 Notes on using through car stereo:

 In case of abnormality such as smoke production, immediately unplug the car adaptor from the cigar lighter socket. Do not leave the products or batteries in the car.

Getting started

Unpacking
Unpack the unit and make sure that all mend that you retain the original carton the future. accessories are put aside and packing materials for so se lost. We asport or s

with battery (CR2025)x1

Location of features

• 8 4 8

3. DIGEST BUTTON
4. STANDBY ON/OFF BUTTON
55. SCREEN ON/OFF BUTTON
Point remote control unit no more
from the remote sensor and w

-8

remove any to qualified

Remote Control Unit

1. KEY LOCK BUTTON

2. NUMBER 0 TO +9 BUTTON

3. DVD MENU BUTTON

4. TITLE MENU BUTTON

5. PBC BUTTON

6. DISPLAY BUTTON

7. NAVIGATION (*, *, *, *, *) BUTTON

8. RETURN BUTTON

9. BOOKMARK BUTTON

10. SLOW/R BUTTON

11. PAUSE/STEP BUTTON

12. RANDOM BUTTON

13. MUTE BUTTON

1. KEY LOCK BUTTON
2. NUMBER 0 TO +9 BUTTON
3. DVD MENU BUTTON
4. TITLE MENU BUTTON
5. PBC BUTTON
6. DISPLAY BUTTON
7. NAVIGATION (♠, ▼, ♠, ♠) BUTTON
9. BOOKMARK BUTTON
10. SLOW/R BUTTON
11. PAUSE/STEP BUTTON
12. RANDOM BUTTON
13. MUTE BUTTON
14. REPEAT/REPEAT A-B BUTTON
15. SEARCH FORWARD BUTTON
16. SEARCH FORWARD BUTTON
17. SKIP FORWARD BUTTON
18. SKIP REVERSE BUTTON
29. STOP BUTTON
21. PROGRAM BUTTON
21. PROGRAM BUTTON
22. SEARCH BUTTON
23. ENTER BUTTON
24. PLAY BUTTON
25. SETUP BUTTON
26. SETUP BUTTON
27. ANGLE BUTTON
28. SUBTITLE MENU BUTTON
29. AUDIO MENU BUTTON
30. AUDIO MODE BUTTON
31. ZOOM BUTTON
31. ZOOM BUTTON
32. CLEAR BUTTON
32. CLEAR BUTTON
33. CLEAR BUTTON
34. CLEAR BUTTON
35. CLEAR BUTTON
36. CLEAR BUTTON
37. CLEAR BUTTON
38. CLEAR BUTTON
39. CLEAR BUTTON
30. CLEAR BUTTON
30. CLEAR BUTTON
31. SUBTITLE MENU BUTTON
31. ZOOM BUTTON
32. CLEAR BUTTON

98889999999999999

Main unit
1. VOLUME KNOB
2. PHONES JACK
3. PHONES JACK
4. INPUT / OUTPUT LINE SELECTOR

000000

⊚′

- AUDIO JACK
 VIDEO (COMPOSITE) JACK
 S VIDEO JACK
 DC IN JACK
 TFT DISPLAY
- 11. TITLE MENU BUTTON
 12. DISPLAY BUTTON
 13. ENTER BUTTON
 14. SKIP FORWARD BUTTON
 15. PAUSE BUTTON
 16. STOP BUTTON
 17. PLAY BUTTON
 18. DVD MENU BUTTON
 19. SETUP BUTTON
 20. NETVIGATION (\(\starting \starti

0 0 0 0 0 0

€

- inside the
- 8 8

8

Power Sources

Battery installation (remote control unit)

Note: When start to operate the handset, please pull out the insulation

1. Remove the battery cover.
2. Insert one battery (CR 2025) making sure the polarity (+ *I* -) matches the marks inside the unit.
3. Replace the cover.
Do not attempt to recharge, short-circuit, disassemble, heat or throw the batteries into the fire.
Battery installation (player)
Following the diagrams below, to loading or release the battery.
Note: When release the battery, then push down and hold the lock on backside, put back to release.
Using AC Adapter for Player
Insert the DC plug at the end of the adapter cord into the DC IN jack at the right side of the player. Then plug the other end into an AC wall outlet.

 Only use with the supplied AC adapter. Using with other AC adapter could be damaged.
 Remove both DC plug & AC-IN plug, to disconnect the AC adapter when not necessary.
 Charging the Battery
 After loading the battery, then refer the step of "Using AC Adapter for player" to connect power converter. AC AC

For the kind of Ni-MH rechargeable battery, it will not be fully charged when a battery to be charged first time, please note that the discharging time will be short.

The battery will be operated normally with normal capacity after 4-5 times of charging and discharging. It is not a defect and abnormal battery.

abnormal battery.

• After a period of storage, or not use for a period, it will require users to repeat above mentioned steps to get the battery back to not.

• The battery is fully charged for approximately 4 hours after the AC: Battery is charging the CHARGE indicator at the front will light on RED. the FULL indicator will light on GREEN.

ormal condition.
adaptor is connected.
When charging is completed,

Disconnect the AC adapter plugs from both the battery and the AC outlet, when cha completed or not necessary.

Battery recharge circuit operates in OFF mode. Switch off the unit for battery recharge. When battery is fully charged and released from unit, the CHARGE indicator will light on RED, it means the charge circuit is ON battery and the AC outlet, when charging is

exhausted, the player front "STANDBY" indicator will blinking. In a while, the power will be turned off automatically. Refer "Charging the Battery" to recharge the battery.

**Note The Car Adapter (optional)*

**Plug the small end of the car adapter into the DC IN jack and the power is on.

Basic Playback

`<u></u>

DVD, VCD, Audio CD, MP3-disc Starting pl
1 To power on the unit, slide the POWER knob ON at
the unit left then the unit will turn on.
Notes: To select the power source, please refer portion
of POWER SOURCE
2 Slide the LINE SELECT IN/OUT to the "OUT"
position.
3 Press OPEN/CLOSE button, to open up the disc
compartment door (OPEN appears on screen) and
place the disc with the label side facing front on
the disc tray.
Notes: Hold the disc without touching either of its
surfaces, placed with the printed title side facing

up only.

soure. The disc will start playback automatically.

Loading the disc in any source mode will switch from the current mode to disc mode.
 For MP3 disc, the disc reading time may exceed a little bit longer, due to the large number of songs complied into one disc.
 If playing DVD disc a MENU appears on the TV screen: Press the (√ / √ or) Arrow buttons, to select the desired item, ther Playback of the selected item will start.
 Note: For more details, please refer to the jacket or case of the disc. If t inserted disc is within the Parental Ratings set, then the Password screen to enter the naceword.

then press the ENTER button.

r the password. ng MP3-disc, please refer portion of "MP3 Basic Operation". poing play If the password is set and the een will appear, prompting you

pping play sess the **STOP** button once and Press **PLAY** to continue appears on the screen. The player sess the point where you stopped. If you press the PLAY button again, play starts automatically m the point where you stopped. (Resuming Playback)

If the **STOP** but completely. ed twice, the the

Note: Some discs may not start resuming playback. 6 Adjust the volume knob to a comfortable level. Note: When in play mode, the "STANDBY" indicator Refer "POWER SOURCE" to recharge the batt CONNECTIONS

Connect headphones to player headphone CAUTION: Listening at high power for a long moment cou

the

Connect the DC plug at the end of the adapter cord, or connect the Connect the DC plug at the end of the adapter cord, or connect the Cannect the DC plug at the end of the adapter cord, or connect the Car Adapter (optional) into the DC IN jack, then plug the other end into the car cigarette lighter socket.

SYSTEM CONNECTION

Use audio cable (Red / White), video cable (Yellow) to connect from player to TV set and amplifier.

CONNECT THE PLAYER TO TV SET BY AUDIO / AV CABLE (cables not included)

Use audio cable (Red / White), video cable (Yellow) to connect the player to TV set.

6

000

player and TV set.

CONNECT THE PLAYER TO TV SET BY S-VIDEO CABLE (cables not included)

Use S-Video cable to connect the set. CONNECT OTHER MEDIA TO THE PL. d TV set.
PLAYER System with AUX IN

Slide the Line Select switch to "IN audio cable (Red / White), ect from other media to player

TE: This player does not support slow-motion for playback audio CD & MP3-disc, and slow-motion re-wind (SLOW/R) does not support playback VCD disc and * or will appear on the TV screen. PAUSE/STEP (II) button: Press button once to pause the picture.

Repeatedly press the PAUSE/STEP (II) button to play the DVD one frame at a time.

SEARCH REV(*) and FF(*) button: These buttons allow searching ahead/back at 4-level speeds 1st press: x2 = 2nd press: x4 = 3rd press: x8 = 4th press: x16

1st Press the PLAY (*) button to resume normal playback.

is feature to directly go to a specific title and/or chapter.

the **SEARCH** button once. Press the (•, •) buttons to select the TITLE, then use the numeric s to select the desired title number.

the (•, •) buttons to select the CHAPTER, then use the numeric buttons to select the desired

Title/Time Search

Use this feature to directly go to a specific title and/or time.

While in the playing mode, press the SEARCH button twice. Press the (◀, ▶) buttons to select the TITLE, then use the Number buttons to select the desired title number.

Press the (◀, ▶) buttons to select the TIME, then use the Number buttons to select the desired time.

If the Search feature is attempted in the Play mode, then you can only go to a specific chapter or time, you cannot change the title number.

If you enter a time that exceeds the time limit of the DVD, then "INPUT INVALID" will appear, and you must try again.

Repeat may not work properly with some discs.

When play VCD, the SEARCH feature can only use Number buttons to select desired track or time.

REPEAT PLAYBACK MODE BUTTONSThe repeat functions that you can enjoy are dependent on the disc types played. DVD: Title repeat, chapter repeat and given portion repeat. VCD / CD: All tracks repeat, single track repeat and given portion.

REPEAT button

DVD disc:

While in the Playback mode, press the REPEAT button once; "O CHAPTER" will appear briefly on the TV screen and the currently playing Chapter will repeat continuously.

While in the Playback mode, press the REPEAT button a second time; "O TITLE" will appear briefly on the TV screen and the currently playing Title will repeat continuously. Press the REPEAT button once

A-B REPEAT button

Note: MP3 discs does not support this function.

DVD / CD / VCD disc:

This player can repeatedly play back a specific se While in the Playback mode, press the Repeat A-B hores.

Download from Www.Somanuals.co All Manuals Search And Download.

Press the Numeric buttons to input 2 numbers for each program track : one for title, one for chapter. After input 2 numbers, the cursor will automatically jump to the next program track for input another numbers.

ed (up to 20). You

eric buttons. The unit will aut

Basic operation

Panel Key LockPress **KEY LOCK** Button: "Key Lock On" Appears on TV screen, then the function keys on main unit are disable except power button.To make all buttons available again, press **KEY LOCK** button again.

Press these buttons to go to the previous/next cnapter (υνυ) οι πανλ (υν).

SLOW/F, SLOW/R button:

Press this button to select slow-motion forward or rewind playback at 1/2,1/4,1/8,1/16 normal speed IDIE TANCEL.

IDIE TANCELLE

SKIP REV(M) and FF(M) button:

SKIP REV(M) and FF(M) button:

Acros huttons to go to the previous/next chapter (DVD) or track (CD).

Advanced Playback mode

Audio menuPress **AUDIO MENU** button, you can change the audio language from the one selected at the initial settings to a different language, if available.

Subtitle Menu
Press the SUBTITLE MENU button to select a subtitle language, and to turn off. This feature is not available on all discs. **DVD Menu**Press the **DVD MENU** button, and the Main Menu of the disc will appear, button to select the desired option, and then press the **ENTER** button. This is not available on all discs. Use the (◀, ▶,▲

9

Title Menu

Press the TITLE MENU button and the Title Menu of the disc will appear.

Press the ENTER button. Use the (◀ , ▶ , ▲ , ▼)

This is not available on all discs.

Audio Mode (Audio CDs only)

While playing an audio CD (not DVD), you can cycle between the audio modes as follows:
Press the AUDIO MODE button to cycle through the audio modes. The audio modes vary depending on the disc inserted, but include MONO LEFT, MONO RIGHT, MIX MONO, STEREO, etc. "
DISC NOT SUPPORT" will appear if the disc does not support audio mode changing.

During playback of a disc, press the 3D button repeatedly to addition the highest quanty control to following surround modes:

SURROUND ROCK - SURROUND POP - SURROUND LIVE - SURROUND DANCE
SURROUND TECHNO - SURROUND CLASSIC - SURROUND SOFT - SURROUND OFF 3D Sound ck of a disc, press the 3D button repeatedly to achieve the highest quality sound.

MUTEPress the **MUTE** button once to mute the sound, "MUTE" will appear on the TV screen, Press the MUTE button again to restore the sound.

Note: MP3 discs does not support this function. Storing bookmarks in the memory to be viewed is similar to marking your page in a book. You can quickly go to any point on the disc. To Program bookmarks: 1. Press the Bookmark button during play. 2. Press the Play(*) button to choose start marking. 3. Press the Bookmark button to leave Bookmark section. 4. Press the Skip (**)/*(*) or Search (**/**) buttons to go to desired Title/Chapter section. 7. Repeat step 1 to 4 to program remains Bookmark section again. 8. Press the Navigation button (**) to go to the empty bookmark space. 7. Repeat step 1 to 4 to program remains Bookmark section 1. Press the Bookmark button to enter Bookmark section 1. Press the Navigation buttons (*/*) to go to our desired Bookmark position. 3. Press Play(**) button to choose start Bookmark section 1. Press the Navigation buttons (*/*) to go to our desired Bookmark position. 3. Press Play(**) button to choose start Bookmark play. The playing time will display on screen. 4. Repeat steps 1 to 2, to play Bookmark. 7. Clear Bookmarks: 1. In the bookmark section, press the Coper button to clear the old bookmark marking. 2. Exit the Bookmark section by pressing the Bookmark button. Or press the OPEN/CLOSE button to eject the disc to clear all programmed bookmarks. Note: Some discs may not work Bookmark function. Storing, playing, and clearing a bookmark in the memory, up to 12 points can be memorized for each disc. 2. Zoom Function 1. In the bookmark section press the Open function. 2. Press 200M button (2 open function). 2. Press the Scop of the support this function. 2. Press 200M button (2 open function). 2. Press 200M button (2 open function).

CD / VCD disc:

To Repeat play a track, simply select the track as described on the previous page, then press the **REPEAT** button once; "C TRACK" Will appear on the TV screen and the unit will repeat the selected track continuously until the **STOP** () button is pressed.

To Repeat play all tracks on a CD, press the **REPEAT** button a second time; "C ALL" will appear on the TV screen and unit will repeat the CD continuously until the **STOP** () button is pressed.

To cancel Repeat play, press the **REPEAT** button until "REPEAT OFF" will shown on the TV screen.

This player can repeatedly play back a specific section.

While in the Playback mode, press the Repeat A-B button to define where you want the section to the Press the Repeat A-B button again to define where you would like the section to end, the unit will play the selected area continuously.

To cancel A-B Repeat mode, press the A-B button again until the icon disappear on screen.

IIMPORTANT
When the "O T symbol appears while pressing a button, this means that the cannot be performed either on the disc inserted, or in the selected mode.

Programmed Playback (DVD/CD/VCD)
Note: MP3 discs does not support this function.
This unit has a 20 track programmable memory the for playback in any desired order. You may program to playback in any desired order. s unit has a 20 track programmable memory that allows you to program up to 20 tracks on any disc blayback in any desired order. You may program 20 different tracks or you may also program certain ks to play more than once. To perform programmed playback, proceed as follows:

While in the Stop mode, press the **PROGRAM** button, the Program menu will appear on the TV

3. Repeat step 2 until all desired title & chapters have been programmed (up to 20). Y title & chapter more than once if desired.

4. Press the (, → , , ,) button to select "START" position.

5. Press the PLAY (→) button to begin programmed playback.

Playback will begin on the first title/chapter that you programmed and the player will all of the tracks that you programmed in the order in which you programmed them.

Select the track to be programmed in the select the track to be programmed.

Select the track to be programmed into memory by using the Numeric butto cally go to the next track to allow you to program.

FOR DVD:

Select the TITLE/CHAPTER to be memory by using the number buttons. The to the next track to allow you to program.

Press the STOP (■) button to stop programmed play.

TO CANCEL THE PROGRAM FUNCTION:

To cancel the Program function, press the STOP (■) button twice, or press t

e RCA plug.) A plug).

11-21, 23)



Random Playback

Press the RANDOM button once and "RANDOM" will appear on the TV screen. Press the PLAY (▶) button and the unit will play all the tracks back in random order. After 20 tracks have been randomly played, the unit will automatically stop playing and enter the Stop mode. To cancel Shuffle, press the PLANDOM button a second time "RANDOM OFF" will shown on the TV screen.

Note: When playing CD, MP3, or others audio media disc, you can press the "SCREEN ON / OFF" button, to turn off the TFT screen temporary, it will save more power when using rechargable battery for

le recorded angles differ depending on the disc used.

Play the disc that is recorded with angles.

Press the ANGLE button, when the player reaches a sequence recorded in more than one angle, the symbol " (A)" will appear on the sceen.

Press the ANGLE button again to choose the desired angle, TV screen will change within one

aunterent camera angles.
The jacket or case of discs that are recorded with angle will be marked. Example: " 完订"
Note:

Viewing from a desired camera angle (Multi-Angle) [DVD]
Some DVD discs may contain scenes which have been shot simultaneously from a number

Display Button

1. Press DISPLAY button to show the elapsed time and remaining time of the playing disc.

2. Each time display button is pressed, the time will change on the screen as follows:

DVD disc:

Title Elapsed ■ Title Remain ■ Chapter Elapsed ■ Chapter Remain ■ Display Off ■ (return ←)

VCD & CD

Single Elapsed ■ Single Remain ■ Total Elapsed ■ Total Remain ■ Display Off ■ (return ←)

MP3

Single Elapsed ■ Single Remain ■ (return ←)

Playing for CD Scan

Press the Play(*) button to start CD playback from track No. 1.

Press the DISPLAY button to display the track Elapsed time.

Press the DIGEST button to start the CD scan function.

 
Press the DIGEST button to start the CD scan function.

e first 6 seconds of each CD track will display on screen until all CD tracks finish conds introduction.

FOLDER OF FOLDER OF FOLDER SELECTED FILE or FOLDER NO. abc def 00 : 00 --00 š 00 EQ PRESET indicators

CURSOR

Playback of MP3-Disc
After disc "LOADING" or read memory card, dialog box will appear on the screen.
The Root/Folder menu and STOP(■) Mode on screen button will appear on the screen.
e.g.:



Playback track on Root.

Press the NAVIGATION (→, ▼) button to select your desired track on the Root, then press PLAY (▶) or "ENTER" button, to start playback, the PLAY (▶) indicator show on screen, and the player will continous playback all tracks in ROOT, and stop automatically after finished all tracks. TRACK 9 00 : 004 : 004 : song:

rress the NAVIGATION (♠,♥) button to select the folder, press NAVIGATION (♦) button or "ENTER" button to enter folder. Note: If had a sub-folder, repeat above IN procedure to enter the folder. Press the NAVIGATION (♠,♥) button to select your desired track, then press PLAY (♠) or "ENTER" button to playback, the PLAY (♠) indicator show on screen. The player will continous playback, until finish all tracks in such folder, the player will stop automatically. Playback track in folder.
Press the NAVIGATION (. , . , select the folder, press NAVIG IN FOLDER STA N FOL

Selecting Folder/Tracks Using the Number Buttons

During playback, press the Numeric buttons corresponding to the track numbers to select your destrack. The unit will jump to the new track and then press ENTER or PLAY (▶) button to playback.

OTHER FUNCTIONS

When playing a MP3 disc, the unit has functions like mute, audio mode, pause / step, previous / track, and forward / reverse.

You may operate as you do with a CD on Basic Operations. mode, pause / step, previous / next

OR.

When in the folder, or in the sub-folder on screen.

When in the folder, or in the sub-folder on screen.

Press the NAVIGATION (♠, ▶) button, or press "ENTER"
button, when the cursor highlights the folder (■,), the screen will back to previous folder or repeat the procedure to exit to ROOT.

If cursor highlights the track or named folder, press the NAVIGATION

(♠) button, the screen will back to the previous folder or the Root.

The above functions are also available in PLAY mode.

REPEAT PLAY

To Repeat play a track/file, simply select the track/file as described on the previous page, then press the REPEAT button once: "REPEAT ONE" will appear on the high is pressed.

(Nemote Control)

| March | Mar eat play all tracks on an MP3 CD, press the **REPEAT** button a second time; "REPEAT FOLDER" ear on the TV screen and the unit will repeat the CD continuously until the **STOP** button is

MP3

ncel Repeat play, press the **REPEAT** button until "FOLDER" appears on the TV screen.

Note: Graphic files must be stored in "jpeg" format (file extension .jpg), otherwise they won't be recognized.

When you have inserted a CD with jpeg-files you see a menu showing the folders / files on the CD. Use the navigations keys(▲, ▼)to select the desired folder, then press ENTER. The files inside are displayed.

— Use the navigation keys(▲, ▼)to choose the desired file and the picture preview on the right frame, if press the ENTER button. That picture will be displayed.

— This starts your "modern slide show" because the unit will change to the next picture automatically after a few seconds until all pictures have been shown on screen once.

— Press the PAUSE button to hold the current picture on the screen. Use the PLAY(▶) button to

continue.

Use the (★) or (▶) key to skip back or forward.

Use the (★) button to cancel the picture show and to return to the folder menu.

Press the (■) button to cancel the picture show and to return to the folder menu.

If you press the REPEAT button once, the currently displayed picture will constantly been on the screen. Press this button twice to have all pictures in the current folder repeated. ress REPEAT again to cancel this mode.

ress REPEAT again to cancel this mode.

sportant note: When you've selected "REPEAT ONE" only that picture will be displayed onstantly. Then you cannot skip using the (★) or (▶) button.

Initial Setting

MP3 Basic Operation

MP3 ON SCREEN DIALOGUE BOX FEATURES

1. Press the Setup button to display the Setup Menu. The screen shown right:
2. Press the " " or " » " Navigation buttons to move the Yellow Disc symbol underneath the icons on top of the TV screen to your desired icon page.

The following icons represent 5 Setup Page:

— General Setup Page

— Video Setup Page

— Preference Page

— Exit Setup Page 6

TV Display
TV Type
Angle Mark
OSD Lang
Screen Save PS NTSC ON ENG

Select a menu icon using the (• , •) buttons. Then Select one of the available buttons. Press the (•) button to access the submenu and use the (• , •) but Then press ENTER to confirm your selection. Return to a previous menu usin from the menus, press the SETUP button again or select the (🎇 icon and previous to a previous menu usin from the setting structure is as follows:

TV DISPLAY

1. Normal/PS** valiable options using the (•, •) •, •) buttons to select an option. •nu using the (•) button. To exit on and press **ENTER**.

"PS" stand for "Pan Scan" This is s Screen images are shown on the s selected when the unit is c screen, but with some part onnected with a normal TV. s cut automatically.

e: "LB" stand for "Letter Box" is selected when the unit is connected with is selected when the unit is connected with screen, e-screen images are shown on the screen, with a normal TV. en, with black belt on he top and bottom.

This is selected when the unit is connecte ed with a wide - screen T of the TV to be conne

TV TYPE
You may select according to the color sy
• Select "NTSC" for a NTSC TV.
• Select "PAL" for a PAL TV.

ANGLE MARK
This only works when there is an angle in the color of the color o

works when there is an angle mark on the disc.
"ON" the screen shows the angle mark when playing a DVD
"OFF" the angle mark is not shown.

OSD LANG
To change language of setup menu, choose the language

·□

dialdah.

 English / Spanish / German / French / Italian
 Screen Saver
 Sart the screen saver, the screen saver image appear when the unit stops or the image is motionless for a screen from being damaged.
 ON: Start the screen saver.
 OFF: Remove the screen saver. saver, the screen saver image appears tops or the image is motionless for app

Setup Menu ton to confirm the

Speaker Setup Page
Select Audio setup in the Setup Menu and then Select the Speaker Se buttons to navigate through the menus/screens and press the Enter buton LT/RT: The front speakers are in theatrical LT/RT downmix mode. Stereo: The front speakers are in Stereo Downmix mode.

Wideo Setup Page
Sharpness - To adjust the sharpen or soften picture.

Press the (• or •) buttons to select your desired level. The colour bar ap ENTER to confirm.

Brightness - To adjust more shining or darken picture.

Contrast - To adjust increase or decrease picture contrast.

Colour - To adjust increase or decrease the phases of colour.

That - To adjust increase or decrease the phases of colour.

Press the (• or •) button to move the cursor to increase or decrease the firm. 9

the level. Press ENTER to con-

Preference Setup Page

→ Audio - To change the dialogue language, choose the language using the (▼, ▲) buttons and press ENTER to confirm. Subtitle nguage, choose the language using the $(\, ullet \, , \, ullet \,)$ buttons and

rou can control access to the player and the type of disc the rating function. There are eight levels of parental con Rating Level: 1 KID SAF = 2 G = 3 PG = 4 PG 13 = 5 PGR = 6 R = 7!

1. Press the (▶) button and then select the rating level using the (▼ , ▶) b.

2. Press ENTER to enter the Password Verify menu.

3. Enter your four-digit password and press ENTER, if you have not choser password is 1234.

• Password change = This option allows you to set or change the password.

1. Press the (▶) button and then press ENTER to enter the Password enter the password, enter the currents. press ENTER to confirm.

To change the subtitle language, press ENTER to confirm.

To change the language of menu press ENTER to confirm. age using the (▼, ▲) buttons and

of discs your family can watch with tal conrol.

R = 7 NC-17 = 8 Adult

, •) buttons.

en one yet, the

de Change menu.

the "Old Password" column. Then
then prompted to enter it again in

X Specifications
Power requirements:
Power consumption:
Signal system:

(2) Compact disc 12cm single-sided, single-layer
12cm single-sided, dual-layer
12cm double-sided, single-layer
8 cm single-sided, single-layer
8 cm single-sided, dual-layer
8 cm double-sided, single-layer
12cm disc
8 cm disc
1 Vp-p
1 Vrms (1 KHz, 0dB)

 CD audio:
 S/N ratio:
 Wow and flutter: below measure.
 Pickup: Wave length:
 Laser power:
 Specifications are subject to cl 655nm CLASS 1 e without notice.

Troubleshooting

and press ENTER to

(, ▶)

No menu play.

No menu play.

This function works only for Video CDs with playback control.

This function works only for Video CDs with playback control.

When AC-DC adaptor plug-in a while, FULL and CHARGE indicators blink, then CHARG indicator light on RED, but rechargeable battery is released.

It is a system test for recharge circuit, and then the circuit is powered ON, which is not malfunction. then CHARGE

Dimensions:
Operating temperature range:
Operating humidity range:
Battery charging time:
Battery life(Fully charge):
Discs played:
(1) DVD-VIDEO disc AC-100-240V, 50-60Hz DC 9 11W maximium NTSC / PAL 1.47 kg. (with battery) Player, 225(L) X 170(W) X 43(H)mm (e +5°C to +35°C 5 to 90% (no condensation) Approximately 4-5 hours 2 hours DC 9V-12V, 1.5A

Video output level:
Audio output level:
Audio signal output chara
Frequency responses:
• DVD (linear audio):

20Hz-20KHz (48KHz sampling) 20Hz-20KHz (96KHz sampling) 20Hz-20KHz 70dB e level

No power

Insert the AC power plug securely into the power outlet.

Insert the AC power plug securely into the power outlet.

Play fails to start even when PLAY is pressed. Play starts but then stops immediately.

Condensation has formed: wait about 1 to 2 hours to allow the player to dry out.

This player cannot play a disc other than DVD, Video CD and CD.

The disc may be dirty and may require cleaning.

Ensure that the disc is installed with the label side up.

No picture.
Ensure that the equipment is connected properly.
LINE SELECT is set to "IN" and you are trying to play a disc.
No sound or Distorted sound.
Ensure that the equipment is connected properly.
Ensure that the input setting for the TV and stereo system are Ensure that the equipment is connected properly.

Ensure that the input setting for the TV and stereo system are correct.

*icture is distorted during rapid advance or rapid reverse.

The picture will be somewhat distorted at times: this is normal.

*Io rapid advance (or rapid reverse play).

Some discs may have sections which prohibit rapid advance (or rapid reverse.)

Some discs may have sections which prohibit rapid advance (or rapid reverse.)
No 4:3 (16:9) picture.
Choose the correct setup "TV SCREEN" item which matches the TV set used.
No operations can be performed with the remote control unit.
Check the batteries are installed with the correct polarities (+ and -).
The batteries are exhausted: replace them with new ones.
Point the remote control unit at a distance of not more than 7 m from the remote control sensor.
Remove the obstacles between the remote control unit and remote control sensor.
No key operation (by the main unit and/or the remote control unit) is effective.
Press POWER to set the player to the standby mode and then back to ON.
Alternatively, press POWER to set the player to the standby mode, disconnect the power plug and then reconnect it. (The player may not be operating properly due to lightning, static electricity or some other external factor.)

th Audio soundtrack and/or subtitle language is not the disc, the initial settings.

If the audio soundtrack and/or subtitle language is not the disc, the initial settings.

If the audio soundtrack and/or subtitle language does not exist on the language selected at the initial settings will not be seen/heard.

No subtitles.

Subtitles appear only with discs which contain them.

Subtitles are cleared from the TV monitor perform the steps on portion SUBTITLE to display the subtitles.

Alternative audio soundtrack (or subtitle) language fail to be selected.

An alternative language is not selected with discs which do not contain more than one language.

an angle cannot be changed.

 This function is dependent on software availability. Even if a disc has these angles may be recorded for specific scenes only.
 The password for rating level has been forgotten.
 Please contact your local sales dealer. 9

Disc types you can play Additional Information

VIDEO SIDEO SITAL AUDIO Audio & Video Audio & Video Disc size 12cm / 8 cm CD disc Disc size 12cm / 8 cm SVCD,CD and VCD disc Playback time 74min. / 24min. Disc size 12cm
Single side, single layer / single side,
PAL and NTSC DVD disc
Playback time 135min/240min max.

Only the above types of discs can be played on this unit.

DVD-ROM, CD-ROM, CDV, etc. cannot be played.

Some CDR, CDRW disc cannot be played depending on the condition of the. This unit is to be used exclusively with the NTSC or PAL colour system. SEC cannot be used with this unit.

DVD discs are divided into titles. and the titles conditions of the played discs are divided into titles. f the player and the disc SECAM system discs

Music CD disc Music CD discs are are divided into tracks. into chapter.

MP3MP3 is the abbreviation of "MPEG 1 Audio Layer 3" MPEG Audio is a compression specification that compresses the audio portion only. This image compression method is used in DVD etc. The audio data has been compressed into about 1/10.

Notes on handling discs

Do not scratch discs.

Do not expose the disc to direct sunlight, high humidity, or high temperatures for extended periods

of time.

Discs should be returned to their cases after use.

Do not apply paper or write anything on the disc surface.

Handle the disc by its edge. Do not touch the playing sur

Fingerprints and dust should be carefully wiped off the cloth. the with a

4,907,093; 5,315,448;

Disc Cleaning

Never use chemicals such as aerosol cleaners, benzene, anti-static liquids or any other solvent for cleaning discs. When cleaning, wipe gentle with a soft damp (water only) cloth from the center to the edge, avoiding circular motions, which could cause scratches and interference during playback. Wipe in a straight motion from the centre to the outside of the disc.

nis product incorporates copyright protection technology that is protected by method claims certain U.S. patents and other intellectual property rights owned by Macrovision Corporana and other rights owners. Use of this copyright protection technology must be authorized. Macrovision Corporation, and is intended for home and other limited viewing uses only pless of the control of

, 12:04 PM

Download from Www.Somanuals.co All Manuals Search And Download.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com