

Strider STROLLER

Operating Instructions for Single and Double models

Important: Read and follow these Safety Rules and Assembly Instructions before operating stroller. If you have any questions concerning the safe use of this product, contact InSTEP, LLC at 1-800-242-6110, M-F, 8:00 a.m. – 5:00 p.m. CST or visit our web site at www.instep.net or E-mail us at info@instep.net before using.

Safety Rules:



WARNING: Failure to follow these warnings and assembly instructions could result in serious injury or death.



WARNING: Immediately discard any plastic wrapping.



WARNING: Never allow children to fold, assemble or disassemble the stroller.



WARNING: Maximum weight capacity for the Single stroller is 50 lbs. or 22.7 kg. Double 85 lbs. or 38.6 kg.



WARNING: Never place child in stroller on their back with their head forward and feet rearward.



WARNING: Avoid serious injury from falling or sliding out. Always use seat belt.



WARNING: Never leave child unattended.



WARNING: Never use this stroller with roller skates or in-line skates.



WARNING: Never allow stroller to be used as a toy or allow children to give rides to others.



WARNING: Never use stroller if it becomes damaged.



WARNING: Always be aware of traffic around you when walking or jogging.



WARNING: Always engage brakes when you stop or when you let go of handle.



WARNING: Always use an approved bicycle helmet on child.



WARNING: Always use wrist strap.



WARNING: Accessories or parcels placed in or on the stroller may cause it to become unstable.



WARNING: Maximum weight for objects in back pouch is 2.2 lbs. or 1 kg. Double 2.2 lbs. or 1 kg. in each back pouch. Excessive weight may cause a hazardous, unstable condition.



WARNING: Child may slip into leg openings and strangle. Never use in a reclined carriage position unless T-shield and shoulder strap placement has been readjusted to the seat's new position.

IMPORTANT

Tires are shipped deflated, DO NOT OVERINFLATE. Please inflate slowly, with short bursts, to 20-25 PSI maximum. 25 PSI will provide a comfortable ride for your child.

We appreciate your purchase of one of our many fine products. We are sure that you will be satisfied with your selection. We regret that although great care and effort have been taken, occasionally problems may occur. PLEASE DO NOT RETURN PRODUCT TO THE STORE. To ensure prompt and correct handling of problems, or to answer questions, please contact us at either our Toll-Free Customer Service Number or E-mail us at our number listed below. Service will be quicker if you have your model number (found on the product and box) along with this instruction sheet ready when calling. If you have any questions concerning the safe use of this product, Please contact us 1-800-242-6110 press "1" for customer service and then "2" to speak to a representative or E-mail us at info@instep.net or visit our web site at www.instep.net.

EZStrider Assembly Instructions

Parts List

Description	Qty.	Description	Qty.
Frame Assembly w/seat, canopy, basket and wrist strap	1	Rear Wheel Assembly w/nuts	2
Front Wheel Assembly w/nuts and tab washers	1	Front Fender	1
		#8 – 1½" Phillips head screws	2 (Double has 4)



Tools Required

- Phillips screw driver
- Adjustable wrench

Stroller Assembly Instructions

Step 1. Unfold Stroller

Grasp handle with one hand, and pull up on the front axle mount with your other hand. Lock both plastic latches onto the lower frame (Figures A1 and A2).

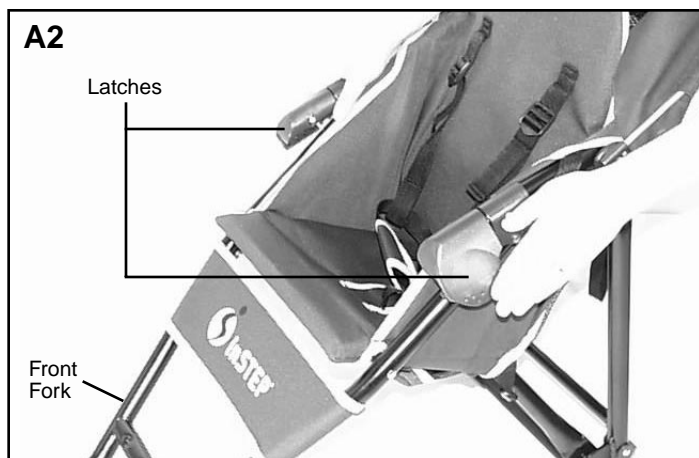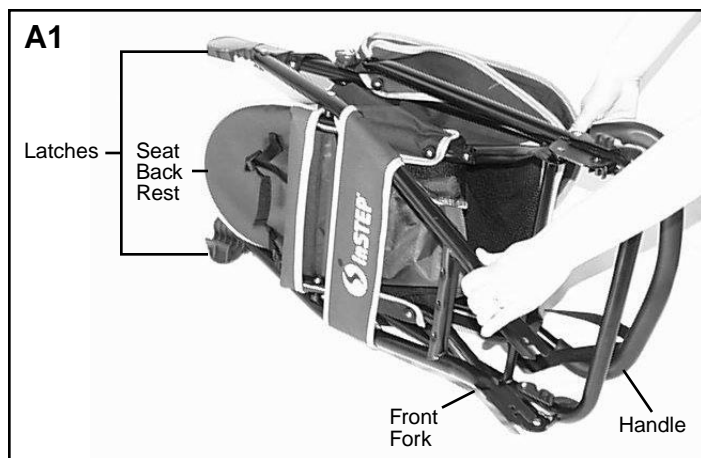


Step 2. Rear Wheel Assembly

Remove the rear wheel lock nut from the rear wheel axle. Mount rear wheel to the rear wheel bracket by inserting the axle through the hole in the bracket. Attach the lock nut and tighten completely using an adjustable wrench. Repeat for other side (Figure B). **WARNING:** The interior jam nuts are factory installed and do not need adjustment.

Step 3. Front Wheel Assembly

Turn stroller upright onto its rear wheels, then tip stroller back so the handlebar is down on the ground and the front fork is up. Attach the front wheel by loosening the exterior lock nut on each side of the front wheel far enough to allow the axle and tab washer to slide into the front fork. The tab washer's tab should be inserted into the small hole on the outside of the front fork (Figure C). Center the wheel between the front fork. Tighten the nuts with an adjustable wrench.

IMPORTANT: The alignment of the front wheel determines if the stroller will roll straight, or pull to the right or left during use. In the event you notice the stroller pulling to one direction, loosen front axle nuts, point the front wheel in the opposite direction the stroller is pulling, ensure the tab washers are seated in the holes and tighten the nuts. If you need help making this adjustment, please call our Customer Service department for assistance.

 **WARNING:** The interior jam nuts are factory installed and do not need adjustment.

Step 4. Front Fender Assembly



Insert the #8 – 1/2" screws into the holes located on the front support between the front forks. Align the 2 holes on the bottom side of the fender with the screws and tighten with a Phillips screwdriver. Note: The Double EZStrider has 4 screws (Figure D).


Step 5. Canopy Positioning

The canopy has adjustable positions. Pull the canopy down to the desired position.

Step 6. To Attach Wrist Strap

Place strap on top of handle bar. The wrist strap has different sized loops. The large loop will go on your wrist, the small loop will be on handlebar. Slide end with large loop through the small loop, then grasp the end with the large loop and pull strap to tighten on handlebar.

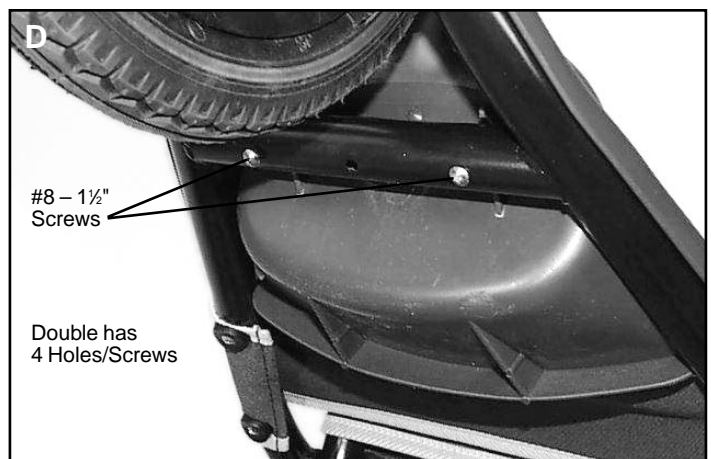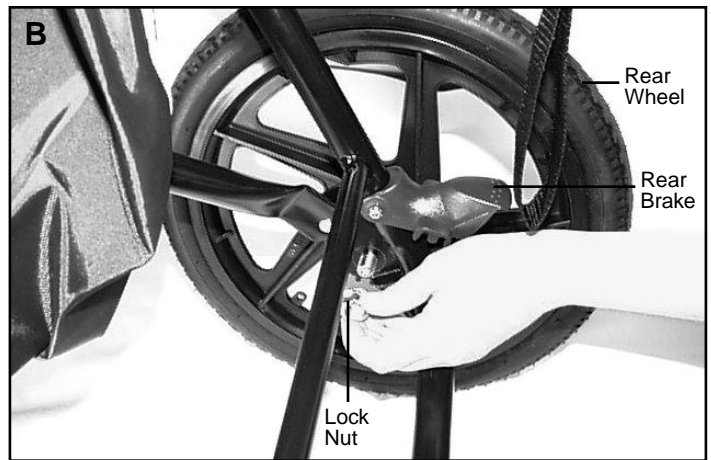


 **WARNING:** Whenever child is in stroller always use the wrist strap. Before you remove the wrist strap from your wrist make sure you first engage the rear brakes.

Congratulations – assembly is now complete!

Use Instructions

To close/fold stroller:


 **WARNING:** Always remove child from stroller before folding.

Pull the seat/seats forward, locate the plastic latches on the side of the stroller frame. Using one hand on each lever, pull the levers from the lower bar. The stroller will automatically begin to fold, the front wheel will fold under frame and the handle will fold backwards (Figure E).

NOTE: The stroller will be easier to fold if the seats are not in the recline position. If the seats are in the recline position please pull forward.

To open stroller:

Grasp handle with one hand and pull up on the front axle mount with your other hand. Lock both plastic latches onto the lower frame (Figure F).

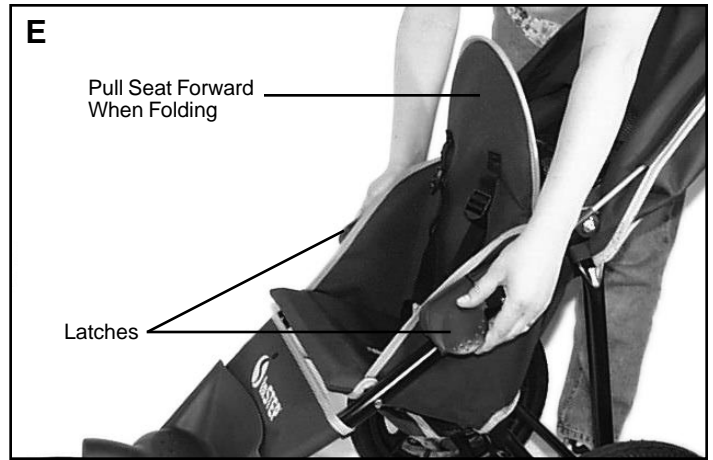


Single EZ Strider




Double EZ Strider

To engage rear brakes:

Step lightly on the levers next to the rear wheels until the cogs of the brakes engage the cogs of the wheel. Repeat on other side. To release brake, lift levers using your toe until cogs disengage (Figure G).

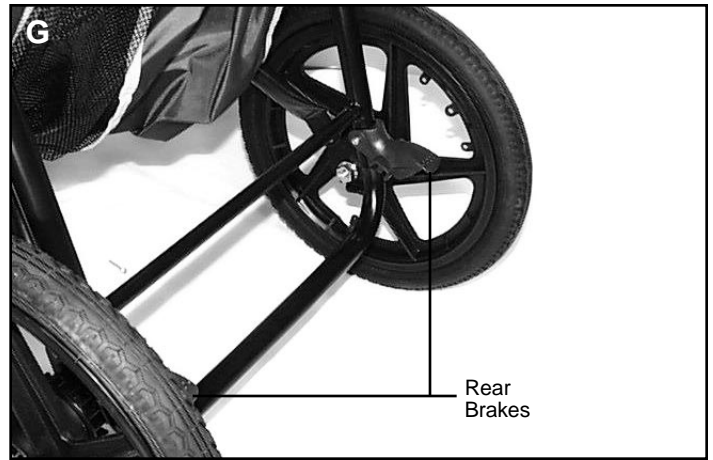

Proper use of seat belts & shoulder straps:

 **WARNING:** Avoid Serious Injury. Always use seat belts.

1. Place child in seat. Make sure T-shield is between the child's legs.
2. When child is seated, place shoulder straps over the child's shoulders.
3. Slide waist straps through lower loops of shoulder straps, bring lap belt ends together and clip into place around child's waist. Adjust waist and shoulder straps for snug fit (Figure H).




To recline seat:

To fully recline, unhook buckle on back of the seat. (Figure I).

To place seat in upright position, push seat forward and reconnect buckle located on back of seat.

To adjust the recline position, adjust the slide on the strap.

 **WARNING:** Child may slip into leg openings and strangle. Never use in a reclined carriage position unless T-shield and shoulder strap have been readjusted to the new seat position.



Care and Maintenance

Check fasteners

After one hour of use, check all fasteners to make sure they are secure. Adjust if necessary. Periodically check the stroller to ensure that it is in good operating condition.

To adjust the stroller from pulling to the left or right (not rolling straight):

Loosen the front axle nuts and check to see that the tab washers are inserted in the holes of the front fork. Point the front wheel forward or in the opposite direction the stroller is pulling, then tighten the nuts with an adjustable wrench.

NOTE: Sometimes it is a very slight adjustment to eliminate the pulling and this step may need to be repeated.

To clean seat and canopy:

If light cleaning is required, use a soft cloth with warm water and mild soap then air dry. Do not put into washing machine. Do not put in dryer. DO NOT BLEACH.

To clean frame:

Wipe using a soft cloth with warm water and mild soap. Air dry. DO NOT USE polish or abrasives.



WARNING: If you have any questions concerning the safe use of this product, please contact InSTEP LLC before using:

1-800-242-6110



**InSTEP LLC
2425 Enterprise Drive
Suite 900
Mendota Heights, MN 55120**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>