

Congratulations on your purchase of this high-quality Insignia product. Your NS-P9DVD15 represents the state of the art in personal DVD player design and is designed for reliable and trouble-free performance.

## PACKAGE CONTENTS

- AC adapter
- Car power adapter
- Audio/Video adapter cable
- Quick Start Guide
- Y-cable for 2 earphones (headphone splitter)
- Built-in rechargeable battery with up to 2.5 hours playback time


Before using your new product, please read these instructions to prevent any damage.

## FIND YOUR USER GUIDE ONLINE!

We are going green so a copy of your *User Guide* is not provided in the box but is available online. Go to [www.insigniaproducts.com](http://www.insigniaproducts.com), then click **Support & Service**. Enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click ►.

 
## CHARGING THE BATTERY

Charge the built-in battery before using your player for the first time. The power indicator lights red while charging and turns yellow when charging is complete. When fully charged, your player provides 2.5 hours of playback.

**Note:** During playback, when the battery low icon  appears on the screen, the built-in battery power is low and your player should be recharged.

### To connect to AC power:


1 Plug one end of the AC power adapter into the **DC IN** jack on the side of your player.

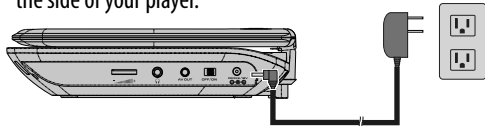

- 2 Plug the other end of the adapter into an AC wall outlet.
- 3 Turn off your player. The red charge indicator turns on.

### To connect to a 12V car power outlet:

 
1 Plug one end of the car power adapter into the **DC IN** jack on the side of your player.




- 2 Plug the other end of the adapter into a 12V vehicle power outlet or vehicle cigarette lighter socket.
- 3 Turn off your player. The red charge indicator turns on.

## FEATURES
 
### Front

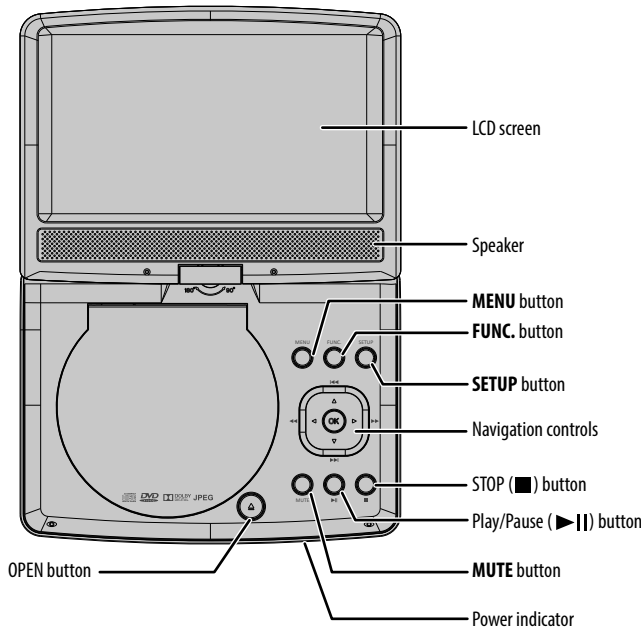


### Side

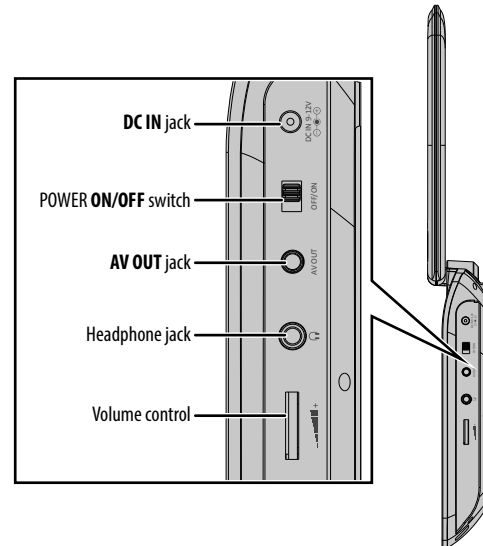 

ITEM	DESCRIPTION
LCD screen	Displays the picture.
Speaker	Provides audio output when headphones are not connected.
<b>MENU</b> button	Press to access or exit the disc menu on a DVD.
<b>FUNC.</b> button	Press to enter or exit the functions menu.
<b>SETUP</b> button	Press to access or exit the <i>SETUP</i> menu.
Navigation controls	During playback, press the ◀◀ and ▶▶ buttons to fast forward or fast reverse the disc. When using the menus, press the arrow buttons to navigate and the <b>OK</b> button to confirm selections. See <i>Player navigation controls</i> for additional information.
STOP (■) button	Press to stop playback.
Play/Pause (▶  ) button	Press to pause or resume playback.
<b>MUTE</b> button	Press to MUTE or unmute.
Open button	Press to open the disc door.
Power indicator	The power indicator is blue when your player is powered and turned on. It lights red when charging your player and turns yellow when charging is complete.
<b>DC IN</b> jack	Connect to an AC adapter or vehicle charger.
<b>POWER ON/OFF</b> switch	Slide to turn your DVD player on or off.
<b>AV OUT</b> jack	Connect a monitor, TV, or amplifier to this jack using the included AV adapter cable and an RCA cable (not included).
Headphone jack (◡)	Plug headphones into this jack. <b>Note:</b> When headphones are plugged in, the internal speakers are muted.
Volume control	Rotate this dial to adjust the volume.


## Player navigation controls

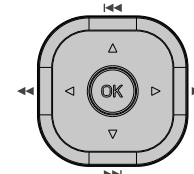 



CONTROL	DESCRIPTION
▲/◀◀	In Menu mode, press to move up in a list or menu. In playback mode, press to go to the previous title, chapter, or track.
▼/▶▶	In Menu mode, press to move down in a list or menu. In playback mode, press to go to the next title, chapter, or track.
◀/◀◀	In Menu mode, press to move left. In playback mode, press to fast reverse the playback.
▶/▶▶	In Menu mode, press to move right. In playback mode, press to fast forward the playback.
<b>OK</b>	In menu mode, press to confirm a selection.


**Note:** When using the setup menus, press the arrow keys to navigate and the **OK** button to confirm an entry or selection.

## CONNECTING HEADPHONES

 - When headphones are plugged into the  (headphone) jack, no sound comes from the built-in speaker.

### To connect headphones:

  - Plug one pair of headphones (not included) into the  (headphone) jack.
- For two headphones, plug each headphone (not included) into the included y-cable, then plug the y-cable into the  (headphone) jack.

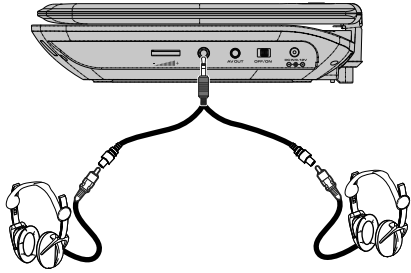


## CONNECTING TO A TV OR MONITOR

You can connect your DVD player to a TV or monitor so you can watch DVDs on the TV or monitor.

- Plug the end of the supplied AV adapter cable that has one black connector into the **AV OUT** jack on your DVD player.
- Plug the connectors on an RCA cable (not included) into the connectors on the other end of the included AV cable. Make sure that the colors on the connectors match.
- Plug the other end of the RCA cable into the AV jacks on the TV or monitor, making sure to match the colors on the connectors with the jacks.

 
**Note:** You may have to select the correct input on your TV or monitor.

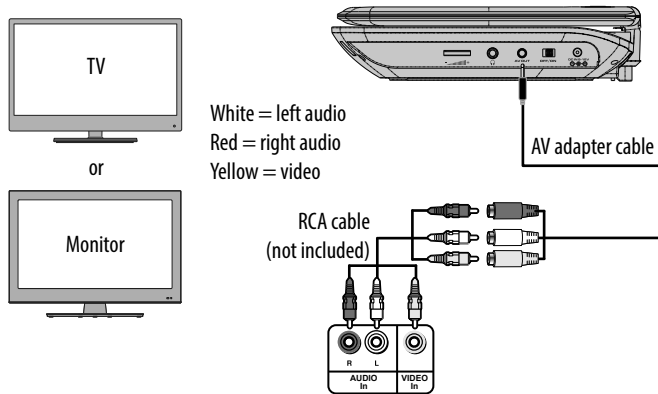

## Playing a DVD or audio CD

**Note:** Most DVDs and your DVD player have region codes that help control illegal distribution of DVDs. The region code for your player is 1.

You can only play DVDs with a region code of 1 or ALL. The region code for a DVD is printed on the DVD or the DVD packaging

- Make sure that your player is connected to power.
- Slide the **ON/OFF** switch to the **ON** position.
- Press the **OPEN** () button, the disc tray opens.
- Place a disc, label side up, in the disc tray, then close the tray. The disc starts playing automatically.

## TROUBLESHOOTING

PROBLEM	SOLUTION
No power	<ul style="list-style-type: none"> <li>Make sure that the AC power adapter is plugged in and connected.</li> <li>Make sure that your player is turned on.</li> </ul>
No sound or distorted sound.	<ul style="list-style-type: none"> <li>Adjust the volume and make sure mute is not turned on.</li> <li>Make sure that headphones are not plugged in. When headphones are plugged in, the built-in speaker is turned off.</li> <li>Make sure that all cables are inserted correctly into the appropriate jacks.</li> <li>Make sure that your player is not paused.</li> <li>Make sure that your player is not in fast forward or fast reverse mode.</li> <li>Make sure that your player is not too hot. Let it cool for 30 minutes, then try it again.</li> </ul>
Picture is distorted.	<ul style="list-style-type: none"> <li>During fast-forwarding or fast-reversing, distortion is normal.</li> <li>The DVD may be damaged. Try another DVD.</li> </ul>
Disc does not play.	<ul style="list-style-type: none"> <li>Make sure that the disc is inserted with the label side up.</li> <li>Make sure that the disc is compatible with your player. Your player can play DVDs and audio CDs.</li> </ul>

## LEGAL NOTICES

### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Download from [www.SoftManuals.com](http://www.SoftManuals.com). All Manuals Search And Download.

## IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. The wide blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specific by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.
- The wall plug is the disconnecting device. The plug must remain readily operable.

## ONE-YEAR LIMITED WARRANTY

For complete warranty, visit [www.insigniaproducts.com](http://www.insigniaproducts.com).

## CONTACT INSIGNIA

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)  
[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Registered in some countries.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2014 Best Buy. All rights reserved.  
Made in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>