

IMPORTANT
READ THIS FIRST

NON-BT

 
JABRA FreeSpeak™ QUICK START GUIDE

For Nextel Phones

Model #:100-91030000-02

Model #:100-91130000-02

Model #:100-91430000-02

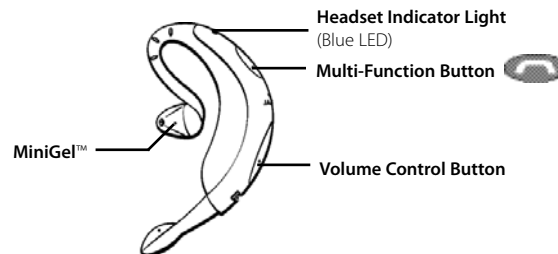

BEFORE USING YOUR HEADSET

 
Charge FreeSpeak - FreeSpeak is rechargeable and must be charged before use.

1. Insert the headset fully into its multi-adapter.
2. Plug one end of the AC power adapter into the multi-adapter and the other end into an electrical wall outlet.
3. Charge your headset for approximately 2 hours or until both blue indicator lights go out.

❗ Important: Blue indicator lights on the headset and multi-adapter will both be on while charging and will turn off when charging is complete.

Connect multi-adapter to phone


- For phones with standard 2.5mm headset jacks: Plug the multi-adapter's connector into the 2.5mm headset jack on your phone.

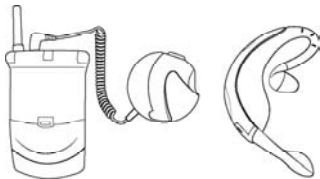



Location of phone's headset jack may vary.

- For *i2000plus*, *i2000*, *i1000plus*, *i1000*, *r750plus*, *i700plus*, *i550plus*, *i500plus* and *i500* phones: Plug the audio adapter (sold separately) into your phone. Then plug the multi-adapter's connector into the audio adapter.

 
BASIC OPERATIONS

Turn headset on/off - Press the multi-function button  for 3 to 5 seconds until you see a burst of flashes on the blue indicator light, then release. The indicator lights on the headset and multi-adapter will flash every 3 seconds while the power is on and in "Standby" mode.

If you are already wearing the headset, you'll hear a quick series of *FOUR* tones when turning the headset on or off. When turning on, their pitch will be low to high, and when turning off, their pitch will be high to low.




! Important: Do not hold the  button down too long (more than 3 to 5 seconds) when turning on headset or else the headset may go into pairing mode, and the blue indicator light will turn solid. If that happens, the section below titled "*If you press and release  and the headset stays in Standby mode*" may be applicable to you.

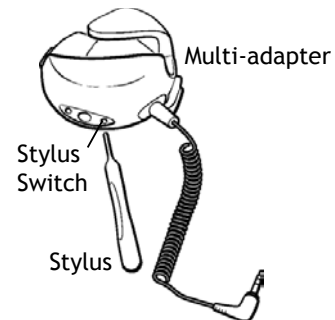Turning multi-adapter on/off - The multi-adapter turns on automatically when you undock the headset, and it turns off when you dock the headset. To turn it off without docking, you can insert the stylus into the stylus switch then press and release the switch. Repeating this will turn it on.




Choose wearing preference - FreeSpeak is ready to wear on the right ear. If you prefer the left, gently rotate the MiniGel 180°.


Make, answer, and end calls (details on p.12-15 of User Guide)

1. To make or answer calls, press and release  **ONCE** to move the headset from "**Standby**" to "**Active**" mode, turning on the audio link between the headset and the multi-adapter. (It may take a few seconds for the audio link to start, so don't press the  again.) In **Active** mode, the indicator lights flash every second.
2. You will then need to dial or answer the call using the phone's keypad.
3. When you're done with the call, use the phone's keypad to end the call.
4. Then press and release  again to return to **Standby**, turning off the audio link.

Calls can be made by using voice-activated dialing (available in certain Nextel phone models).

! Important: Do not hold the  button down too long when switching modes; this should only be a quick tap.

To answer and end calls with only the headset:

Some phones enable you to answer or end a call by pressing and releasing  without having to touch the phone. For all Nextel phone models (except the i1000), the phone's **Automatic Answer** feature needs to be activated for this headset feature to work.

For the **BlackBerry 6510**, FreeSpeak's Answer/End feature has to be turned on.

To turn on FreeSpeak's Answer/End feature:

- 1) Ensure that the AC power adapter is not connected.
- 2) Put the headset in the multi-adapter.
- 3) Use the stylus to press the stylus switch for about 12 seconds.
- 4) You will then see a number of blinks (long flashes) on the multi-adapter indicator light which tell you whether this feature is enabled or disabled according to the following table:

| Number of Blinks | Answer/End Feature | Comments |
|------------------|--------------------|-----------------|
| 4 | Enabled | -- |
| 5 | Disabled | Default Setting |

- 5) Repeat steps 1-4 to switch between enabled and disabled settings.

If you are enabling Answer/End feature for the first time, you should test answering and ending calls to ensure that your phone supports this feature.

For more information, see "Enhanced Features" at www.jabra.com/fscs.


Calls can be ended by the headset only by waiting for the line to disconnect.

STATUS INDICATORS



| What you see | What you hear | Status |
|-------------------------|--|--|
| Flashes every second | When Active Mode starts: quick series of <i>TWO</i> tones - low to high pitch | Active Mode <ul style="list-style-type: none">• Call in progress• Up to 4 hours of talk time |
| Flashes every 3 seconds | When Standby Mode starts: quick series of <i>TWO</i> tones - high to low pitch | Standby Mode <ul style="list-style-type: none">• Waiting for call• Up to 100 hours of standby time with headset in multi-adapter |

TIPS & SOLUTIONS


To prolong battery life:

- After you've ended a call using your phone's keypad, always remember to place the headset in Standby mode by pressing and releasing  when not in use.
- Dock the headset firmly in its multi-adapter when not in use.

 
If you press and release and the headset stays in Standby mode:

If FreeSpeak becomes unpaired, it will not respond to the  button. In rare cases, this may occur when you first receive the product or when you hold the  button too long while using the product.

To "pair" the headset with the multi-adapter:

1. Ensure headset is off.
2. Press  until you see a solid blue light on the headset, then release.
3. Use the stylus to press down on the stylus switch until you see a solid blue light on the multi-adapter, then release.

❗ Important: Once pairing is complete, lights on both the headset and multi-adapter will begin flashing (Standby mode).

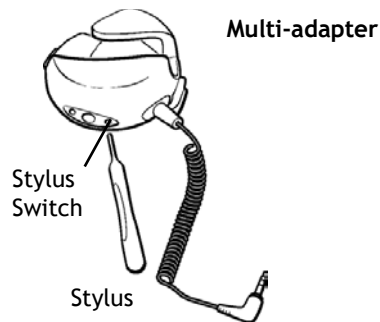

If you hear an echo of your voice - You may need to adjust microphone levels.

To reduce the echo:

1. Lower the volume of your phone and headset.
2. If echo persists, put FreeSpeak in Active mode.
3. Use the stylus to press down on the stylus switch (as shown above) until you see a solid blue light on the multi-adapter. Continue to press down until you see/hear 1, 2, or 3 flashes/beeps, then release. The last number of flashes/beeps corresponds to the final setting.
4. Repeat step 3 to cycle between different microphone levels.

| Flashes or Beeps | Microphone Level |
|------------------|------------------|
| 1 | High (default) |
| 2 | Medium |
| 3 | Low |

If the headset is not responding or the light will not turn off after pairing - You may need to reset your headset.

1. Plug one end of the AC power adapter into the multi-adapter and the other end into an electrical wall outlet.
2. Insert the headset into the multi-adapter for about 3 seconds, then remove.

To improve audio clarity:

Stay within 30 feet (10 meters) of your multi-adapter. In general, you will get the best performance when there are no obstructions (including parts of the body) between your headset and the multi-adapter.

Need more help?

1. Consult the complete User's Guide
2. Web: www.jabra.com/fscs (for the latest support info)
3. Telephone: (858) 622-9955, Monday to Friday 8am to 5pm PST
(800) EAR-2230 (USA and Canada)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>