



Expand Your Factory Radio



GM

Satellite Radio
Operation

iSimple Connect



iSimple®
A Division of AAMP of America™
13190 56th Court Clearwater, FL 33760
Ph. 866-788-4237
support@isimplesolutions.com
©2012 AAMP of Florida, Inc.
www.isimplesolutions.com

10-26-12

Table of Contents

	Pages
SXV100/200 Operation	
1. Non-Navigation Radios	2-4
2. Navigation Radios	4-6
SCC1 Operation	
3. Non-Navigation Radios	7
4. Navigation Radios	7-8
5. Troubleshooting	9
6. Warranty Info	10

SXV100/200 Operation

1. Non-Navigation Radios Basic Features

Entering Mode Select Menu

Press the **BAND** button until “**XM**” is displayed on the screen. Immediately turn the **TUNE KNOB** in the top right corner to scroll through the available sources. Once “**SIRIUS/XM**” is displayed, press the **FWD>>** button to select the displayed mode.

Channel Up

Turn the **TUNE KNOB** clockwise to move up through the channels

Channel Down

Turn the **TUNE KNOB** counter-clockwise to move down through the channels

Category Selection

Press the **CAT** button then press the button that corresponds with the category you wish to select.

Store Presets

Press and hold the preset button on which you want to store the channel.

Please Note: If you are using the Connect to add Sirius/XM but still have factory XM installed, it is important to keep the presets in separate banks.

Recall Presets

Press the preset button that corresponds with the channel you want to recall.

Changing Display:

Press the “**i**” button to display artist and track information

Steering Wheel Controls

Press the “**▲**” button to cycle up through the categories.

Press the “**▼**” button to cycle down through the categories.

Press the “**▶|**” button to move up through the channels.

Advanced Features

The SXV100 satellite radio tuner offers advanced features such as the ability to tag an artist, song or sports game and be alerted whenever they are playing. The Connect has the ability to store 50 artists, songs or games in any combination.

It also offers an instant replay feature in which the tuner records the last 30 minutes of playback and gives you the ability to fast-forward, rewind, skip backwards or forwards in one minute intervals or skip backwards or forwards by track.

Artist/Song/Game Tagging

Tagging an Artist or Song

To initiate tagging of an artist or song press and hold the <<**SEEK** button to enter the tagging menu. Use the **TYPE>>** button to choose favorite artist or favorite song. Press the <<**SEEK** button to select the displayed option. “**Saved**” and then “**# of 50**” will be displayed.

PLEASE NOTE: If all 50 slots are full the radio will display “full” when you try to tag a favorite. If “unavailable” is displayed when you try to tag something, it means that the station is not currently sending the ID information for that song or artist. If you cannot choose either artist or song, then that info is also not being sent. Comedy, news and talk stations do not allow tagging. Non-Navigation radios cannot be in channel number text field when tagging. Any other text field will function properly.

Tagging a Game

To tag a favorite team in games you must go into the SAT+ mode from the mode select menu.

Press the **BAND** button until “**XM**” is displayed on the screen. Immediately turn the **TUNE KNOB** in the top right corner to scroll through the available sources. Once “SAT+” is displayed, press the **FWD>>** button to select the displayed mode.

Once in SAT+ mode, use the **TUNE KNOB** to scroll to “**GAME**” and press the **FWD>>** button. Scroll through the different sport options (MLB, NFL, NHL, NBA, CFB, CBB) with the **TUNE KNOB**. Press the **FWD>>** button when you want to make a selection. Once in the selected sport, scroll through the cities with the **TUNE KNOB**. Press the **FWD>>** button to make a selection. An * will appear next to the city once it has been selected.

Alerts

Once you have tagged favorite artists, songs or games you will be alerted whenever any of these selections are broadcast. When an alert happens the radio will beep and display alert text in a flashing manner. Press the <<**SEEK** button to immediately tune to the alerted artist, song or game.

PLEASE NOTE: You must be in Sirius/XM mode for the alert feature to function.

Viewing/Deleting Tagged Favorites

To view/delete what artists, songs or games you have tagged you must go into the SAT+ mode from the mode select menu.

Press the **BAND** button until “**XM**” is displayed on the screen. Immediately turn the **TUNE KNOB** in the top right corner to scroll through the available sources. Once “SAT+” is displayed, press the **FWD>>** button to select the displayed mode.

Once in SAT+ mode use the **TUNE KNOB** to scroll through song, artist or game. Once the option you wish to select is displayed, press the **FWD>>** button to choose. The first option in any category is “**Del All**”. If you select this “**CONFIRM**” will be displayed on the radio. Pressing the **FWD>>** button again will erase all tagged items in that category. Otherwise use the **TUNE KNOB** to scroll through the artists, songs or games. If you wish to delete one press the **FWD>>** button. “**CONFIRM**” will be displayed on the radio. Press the **FWD>>** button again to confirm and delete the displayed favorite.

Instant Replay

Instant Replay

To activate instant replay, press the **CATEGORY** button until you see “**I-Replay**” in the categories section. Press **I-Replay**. Once the I-Replay button is pressed the music will pause and the text “**IR**” will be displayed in front of the channel name. When the instant replay feature is active you have many options:

Fast Forward/Rewind - Press and hold **<<SEEK** to rewind or **SEEK>>** to fast forward

Skip Forward/Backward by One Minute Intervals - Press **<<SEEK** to skip back one minute at a time or **SEEK>>** to skip ahead one minute at a time

Skip Forward/Backward by Song - Turn the **TUNE KNOB** back one click to go back to the start of the song or turn the **TUNE KNOB** forward one click to advance to the next song.

Pressing the **▶I** button on the steering Wheel Controls (SWC) at any time will turn the instant replay feature off and return you to the live broadcast (**29-bit vehicles only, Vehicle MUST be equipped with SWC**). If you have an 11-bit vehicle or your vehicle is not equipped with SWC you must fast-forward or skip forward to return to the live broadcast.

2. Navigation Radios

Basic Features

Entering Mode Select Menu

Press the “**XM**” icon on the navigation screen. Immediately turn the **TUNE KNOB** in the top right corner to scroll through available sources. Once “**SIRIUS/XM**” is displayed, press the “**▶**” icon on the screen to select the displayed mode.

Channel Up

Turn the **TUNE KNOB** clockwise to move up through the channels.

Channel Down

Turn the **TUNE KNOB** counter-clockwise to move down through the channels.

Category Selection

Press the “**Browse**” icon then press the icon that corresponds with the Category you wish to select.

Store Presets

Press and hold the preset button on which you want to store the channel.

Please Note: If you are using the Connect to add Sirius/XM but still have factory XM installed, it is important to keep the presets in separate banks.

Recall Presets

Press the preset button that corresponds with the channel you want to recall.

Changing Display:

Press the “i” button to display artist and track information

Advanced Features

The SXV100 satellite radio tuner offers advanced features such as the ability to tag an artist, song or sports game and be alerted whenever they are playing. The Connect has the ability to store 50 artists, songs or games in any combination.

It also offers an instant replay feature in which the tuner records the last 30 minutes of playback and gives you the ability to fast-forward, rewind, skip backwards or forwards in one minute intervals or skip backwards or forwards by track.

Artist/Song/Game Tagging

Tagging an Artist or Song

To initiate tagging of an artist or song press scan down to enter the tagging menu. Use category channel up to scroll through favorite artist or favorite song. Press category channel down to select the displayed option. “Saved” and then “# of 50” will be displayed.

PLEASE NOTE: If all 50 slots are full the radio will display “full” when you try to tag a favorite. If “unavailable” is displayed when you try to tag something, it means that the station is not currently sending the ID information for that song or artist. If you cannot choose either artist or song, then that info is also not being sent. Comedy, news and talk stations do not allow tagging. Non-Navigation radios cannot be in channel number text field when tagging. Any other text field will function properly.

Tagging a Game

To tag a favorite team in games you must go into the SAT+ mode from the mode select menu.

Press the “XM” icon on the navigation screen. Immediately turn the **TUNE KNOB** in the top right corner to scroll through available sources. Once “**SAT+**” is displayed, press the “▶” icon on the screen to select the displayed mode.

Once in SAT+ mode, use the **TUNE KNOB** to scroll to “GAME” and press the “▶” icon. Scroll through the different sport options (MLB, NFL, NHL, NBA, CFB, CBB) with the **TUNE KNOB**. Press the “▶” icon when you want to make a selection. Once in the selected sport, scroll through the cities with the **TUNE KNOB**. Press the “▶” icon to make a selection. An * will appear next to the city once it has been selected.

Alerts

Once you have tagged favorite artists, songs or games you will be alerted whenever any of these selections are broadcast. When an alert happens the radio will beep and display alert text in a flashing manner. Press the **scan down** button to immediately tune to the alerted artist, song or game.

PLEASE NOTE: You must be in Sirius/XM mode for the alert feature to function.

Viewing/Deleting Tagged Favorites

To view/delete what artists, songs or games you have tagged you must go into the SAT+ mode from the mode select menu.

Press the "XM" icon on the navigation screen. Immediately turn the **TUNE KNOB** in the top right corner to scroll through available sources. Once "**SAT+**" is displayed, press the "▶" icon on the screen to select the displayed mode.

Once in SAT+ mode use the **TUNE KNOB** to scroll through song, artist or game. Once the option you wish to select is displayed, press the "▶" icon to choose. The first option in any category is "**Del All**". If you select this "**CONFIRM**" will be displayed on the radio. Pressing the "▶" icon again will erase all tagged items in that category. Otherwise use the Tune Knob to scroll through the artists, songs or games. If you wish to delete one press the "▶" icon. "**CONFIRM**" will be displayed on the radio. Press the "▶" icon again to confirm and delete the displayed favorite.

Instant Replay

Instant Replay

To activate instant replay, first press the category icon then press the down arrow on the screen until you see "I-Replay" in the categories section. Press I-Replay then press IR CHAN then press BACK. Once BACK is pressed the music will pause and the text "IR" will be displayed in front of the channel name. When the instant replay feature is active you have many options:

Fast Forward/Rewind - Press scan down to rewind or scan up to fast forward

Skip Forward/Backward by One Minute Intervals - Press category channel down to skip back one minute at a time or category channel up to skip ahead one minute at a time

Skip Forward/Backward by Song - Turn the **TUNE KNOB** back one click to go back to the start of the song or turn the **TUNE KNOB** forward one click to advance to the next song.

Pressing the ▶| button on the steering Wheel Controls (SWC) at any time will turn the instant replay feature off and return you to the live broadcast (**29-bit vehicles only, Vehicle MUST be equipped with SWC**). If you have an 11-bit vehicle or your vehicle is not equipped with SWC you must fast-forward or skip forward to return to the live broadcast.

SCC1 Operation

4. Non-Navigation Radios

Entering Mode Select Menu

Press the “**BAND**” button a few times until XM is displayed on the screen. Immediately turn the rotary **TUNE KNOB** in the top right hand corner to scroll through available sources. Once “**SIRIUS**” is displayed, press the “**FWD>>**” button to select the displayed mode.

Channel Up

Turn the rotary **TUNE KNOB** clockwise to move up through the channels

Channel Down

Turn the rotary **TUNE KNOB** counter-clockwise to move down through the channels

Category Selection

Press the “**CAT**” button then press the button that corresponds with the Category you wish to select.

Store Presets

Press and hold the preset button on which you want to store the channel.

Please Note: If you are using the Media Connect to add Sirius but still have factory XM installed, it is important to keep the presets in separate banks.

Recall Presets

Press the preset button that corresponds with the channel you want to recall.

Changing Display:

Press the “**I**” button to display artist and track information

Steering Wheel Controls

Press the “**▲**” button to cycle up through the categories.

Press the “**▼**” button to cycle down through the categories.

Press the “**▶**” button to move up through the channels.

5. Navigation Radios

Entering Mode Select Menu

Press the “**XM**” icon on the navigation screen. Immediately turn the rotary **TUNE KNOB** in the top right hand corner to scroll through available sources. Once “**SIRIUS**” is displayed, press the “**▶**” icon on the screen to select the displayed mode.

Channel Up

Turn the rotary **TUNE KNOB** clockwise to move up through the channels.

Channel Down

Turn the rotary **TUNE KNOB** counter-clockwise to move down through the channels.

Category Selection

Press the **"Browse"** icon then press the icon that corresponds with the Category you wish to select.

Store Presets

Press and hold the preset button on which you want to store the channel.

Please Note: If you are using the Media Connect to add Sirius but still have factory XM installed, it is important to keep the presets in separate banks.

Recall Presets

Press the preset button that corresponds with the channel you want to recall.

Changing Display:

Press the **"i"** button to display artist and track information

Steering Wheel Controls

Press the **"▲"** button to cycle up through the categories.

Press the **"▼"** button to cycle down through the categories.

Press the **"▶|"** button to move up through the channels.

5. Troubleshooting

Symptom	Cause	Remedy
Radio shows "DEV INIT"	Connect device is initializing	This only occurs the first time the Connect is powered on. Wait a few minutes, cycle ignition off and on then enter SAT Mode.
Connect does not recognize the satellite tuner as a source	Satellite tuner was not plugged in during initialization.	Press reset button to clear the memory and re-initialize the Connect
Not all channels are being displayed	Connect is uploading channels	The first time the Connect sees the satellite tuner it takes some time to upload the channels. This is a one time process.
"Unavailable" is displayed when I try to save a favorite.	The channels is not sending the ID for that artist or song.	There is no remedy

6. Warranty

One Year Limited Warranty

The quality controls used in the manufacture of this product will ensure your satisfaction. This warranty applies only to the original purchaser of this product from an authorized iSimple® dealer. This warranty covers any supplied or manufactured parts of this product that, upon inspection by iSimple® authorized personnel, is found to have failed in normal use due to defects in material or workmanship. This warranty does not apply to installation expenses. Attempting to service or modify this unit, operating this unit under conditions other than the recommended voltage will render this WARRANTY VOID.

Unless otherwise prescribed by law, iSimple® shall not be liable for any personal injury, property damage and or any incidental or consequential damages of any kind (including water damage) resulting from malfunctions, defects, misuse, improper installation or alteration of this product. All parts of this iSimple® product are guaranteed for a period of 1 year as follows:

Within the first 12 months from date of purchase, subject to the conditions above, iSimple® will repair or replace the product at their discretion, if it is defective in material or workmanship providing it is returned to an Authorized iSimple® dealer, with PROOF OF PURCHASE from an authorized iSimple® dealer.

Warning:

This equipment may be reset by unintentional electrostatic discharge during operation. Exposure to direct sunlight or extreme heat may cause damage or malfunction.

FCC Class B Radio Frequency

Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Re-orientate or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that of which the receiver is connected.
4. Consult the dealer or an experienced radio / television technical for help.

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.



www.isimplesolutions.com



For Best Performance Have It
Professionally Installed.



Powered by
CEA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>