

UB18D FLASHLIGHT



JOHN DEERE

OPERATOR'S
MANUAL



CAUTION
RISK OF INJURY!
READ MANUAL BEFORE OPERATING!
THIS MANUAL IS AN IMPORTANT PART OF THE FLASHLIGHT
AND SHOULD REMAIN WITH THIS UNIT WHEN YOU SELL OR RENT IT.

Introduction

Congratulations on the purchase of your new flashlight! You can be assured your flashlight was constructed and designed with quality and performance in mind. Each component has been rigorously tested to ensure the highest level of acceptance.

This operator's manual was compiled for your benefit. By reading and following the simple safety, installation, operation, maintenance and troubleshooting steps described in this manual, you will receive years of trouble-free operation from your new flashlight. The contents of this manual are based on the latest product information available at the time of publication. The manufacturer reserves the right to make changes in price, color, materials, equipment, specifications or models at any time without notice.

Once the unit has been removed from the box, immediately write in the serial number of your unit in the space provided below.

SERIAL NUMBER _____

Inspect for signs of obvious or concealed freight damage. If damage does exist, file a claim with the transportation company immediately. Be sure that all damaged parts are replaced and that the mechanical problems are corrected prior to operation of the unit. If you require service, contact your Customer Service.

Mi-T-M® Corporation, 8650 Enterprise Drive, Peosta, IA 52068
1-877-JD-KLEEN / (1-877-535-5336) Fax 563-556-1235
Monday - Friday 8:00 a.m. - 5:00 p.m. CST

Please have the following information available for all service calls:

1. Model Number
2. Serial Number
3. Date and Place of Purchase

Table of Content

SAFETY	3
GENERAL SAFETY RULES	3
OPERATION	3
OPERATION	3
SPECIFICATIONS	3



CAUTION

Do not look at the light directly.

Do not open the front cover immediately after using the flashlight because the bulb is very hot.

Be sure to turn the switch OFF before replacing the bulb or when not using.

Do not expose the flashlight to rain.

Do not shock or disassemble the flashlight.

Do not allow the flashlight to contact gasoline, thinner etc.

Do not leave the flashlight in a car or the like that tends to be exposed to the scorching heat of the sun (above 60°C). Otherwise, troubles can result.

Operation

OPERATION:

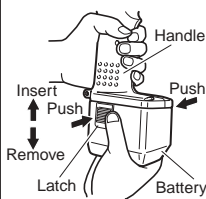 


Fig. 1

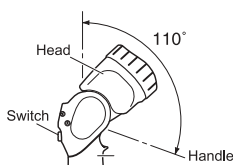 


Fig. 2

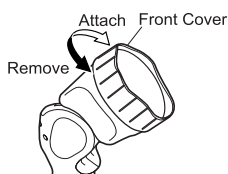 


Fig. 3

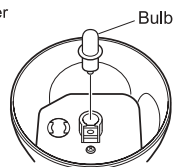 


Fig. 4

1. BATTERY INSERT/REMOVAL

Correctly insert the battery into the flashlight (Fig. 1)

Pressing on the latch, remove the battery from the flashlight. (Fig. 1)

2. HEAD ANGLE ADJUSTMENT

Adjusting the lighting angle, hold the handle then adjust the head angle.

It can be adjusted at 0°, 30°, 60°, 90° and 110°. (Fig. 2)

3. BULB REPLACEMENT

a. Remove the front cover. (Fig. 3)

b. Replace the bulb. (Fig. 4) (A spare bulb is set in the head.)

Specifications

Battery	EB14, EB18 series (sold separately)
Bulb	18 V, 0.6 A
Operating time	Approx. 3 hours (Using full charged EB1820 battery)
Dimensions (without battery)	85 mm (diameter) x 252 mm (length)
Weight (without battery)	0.3 kg



#37-0701-090403

©Copyright 2003. John Deere

Manufactured for Deere & Company,
Moline, Illinois 61265

Flashlight Operator's Manual
110 Code No. C99513861 N

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search and Download

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>