




IMPRESSA
if you love coffee

Art. 65478 - XF70 GB - 12/2005

Download from [Www.Somanuals.com](http://www.somanuals.com). All Manuals Search And Download.

IMPRESSA X70
Short operating instructions

 Control elements

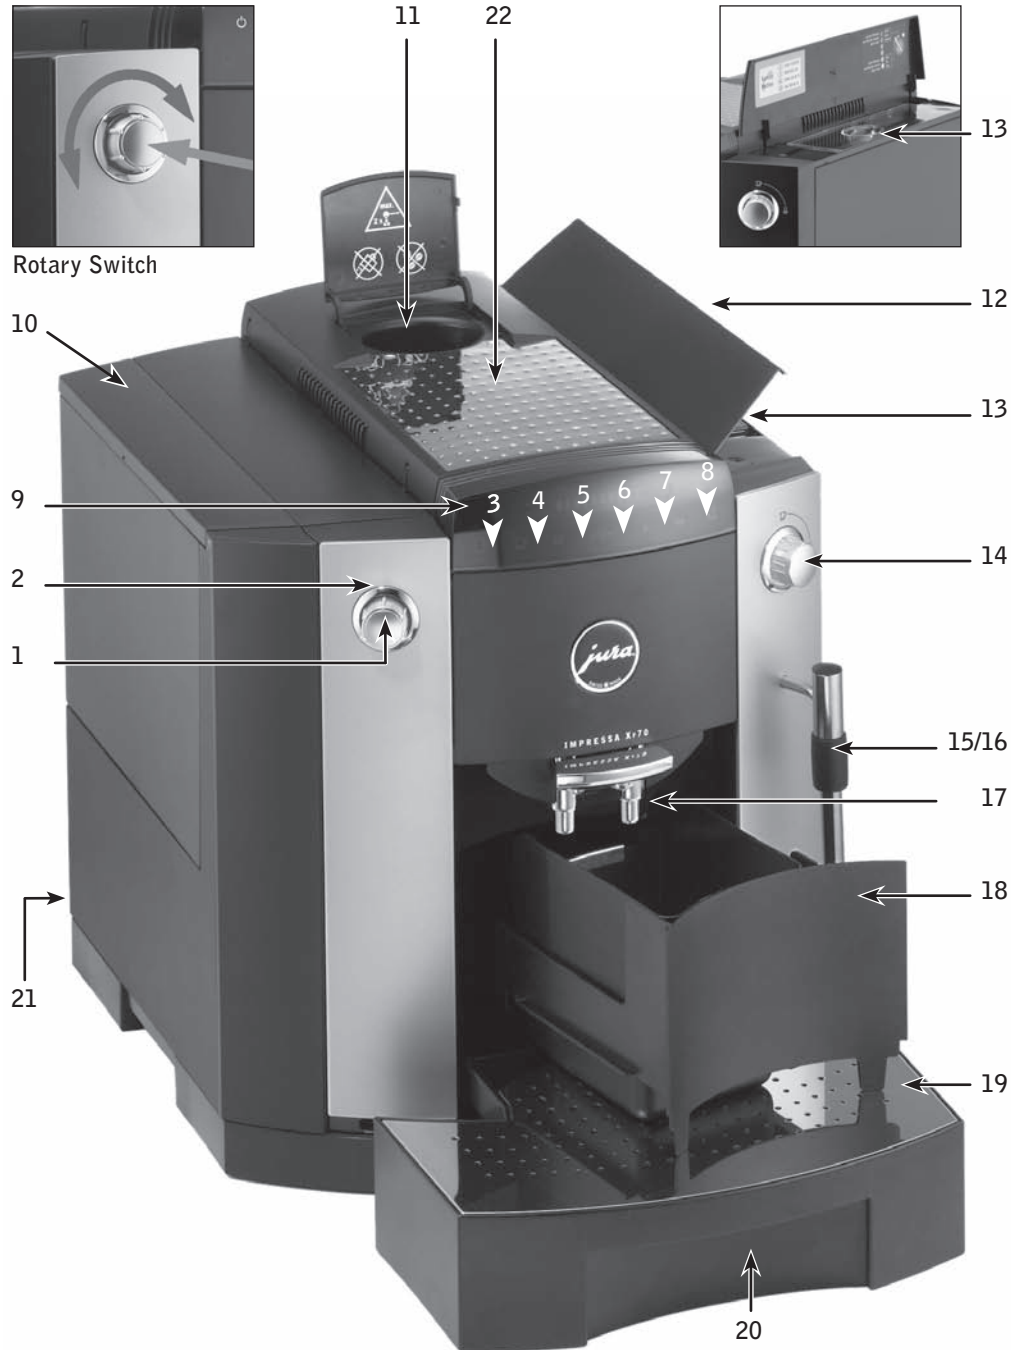


Control elements

1. Rotary Switch
2. Illuminated ring
3. ON/OFF key
4. Programming key
5. Draw-off key 1 cup
6. Draw-off key 2 cups
7. Maintenance key
8. Steam pre-selection key
9. Display dialog system
10. Water tank with carrying handle
11. Filler funnel for pre-ground coffee
12. Bean tank cover
13. Aroma preservation cover
14. Steam/hot water draw-off valve
15. Replaceable 2-stage frothing jet
16. Replaceable hot water nozzle mounted in illustration
17. Height-adjustable coffee spout
18. Coffee grounds container
19. Drip grate
20. Drip tray
21. Power Switch
22. Metal shelf

First use



- Press power switch (I) (on rear)
- Fill bean tank
- Touch symbol 




Display text: **SPRACHE - DEUTSCH**

- Turn the Rotary Switch until the required language is displayed
- Confirm selected language by pressing the Rotary Switch
- Lift out water tank
- Fill water tank and place back into the machine




Display text: **OPEN TAP**

- Place a receptacle (ca. 1 litre) under the hot water nozzle
- Turn tap to position 
- Turn it back to the initial position when display prompts you to do so

 


Display text: **PRESS - MAINT.**

- Place receptacle under height-adjustable coffee spout
- Touch symbol  when display prompts you to do so

The machine is ready for use

Insert filter (first use)

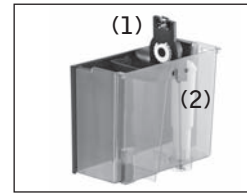

- Remove water tank and empty it
- Flip up cartridge (1) holder
- Insert filter cartridge (2) into water tank, applying slight pressure
- Close cartridge holder (1) (engages audibly)
- Fill water tank and insert




- Hold Rotary Switch down until the display shows **FILTER**
- Confirm setting by pressing the Rotary Switch



- Turn Rotary Switch until the display shows **YES**
- Confirm setting by pressing the Rotary Switch




- Place a receptacle (ca. 1 litre) under the hot water nozzle
- Turn tap to position 
- Turn it back to the initial position when display prompts you to do so

The machine is ready for use


Cleaning (duration: approx. 15 minutes)




Display text: READY - CLEAN

- Touch the maintenance symbol  until the display shows EMPTY - TRAY
- Empty drip and grounds tray and place back into the machine



- Remove drip tray
- Place a receptacle (ca. 1 litre) under the coffee spout
- Touch the maintenance symbol 



- Drop an original JURA cleaning tablet into the filler funnel for ground coffee when display prompts you to do so
- Close lid
- Touch the maintenance symbol 



- Empty drip and grounds tray and place back into machine when display prompts you to do so
- Wipe out filler funnel for ground coffee with a dry cloth after the cleaning program has finished.

The machine is ready for use

Changing the filter





 
Display text: READY - FILTER

NOTE:

- After having used 50 litres of water or after two months at the latest, the filter cartridge will be used up.




- Touch symbol  to switch machine off
- Touch maintenance symbol  until the display shows CHG FILTER - OPEN TAP

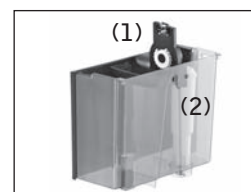

- Remove and empty water tank
- Flip up cartridge holder (1)
- Remove old CLARIS plus filter cartridge from the tank
- Place new filter cartridge (2) into water tank, applying slight pressure
- Close cartridge holder (1) (engages audibly)



- Fill water tank and place back into machine
- Place a receptacle (ca. 1 litre) under the hot water nozzle
- Turn tap to position 
- Turn it back to the initial position when display prompts you to do so

The machine is ready for use


Decalcifying (duration: approx. 40 minutes)



Display text: **READY - DECALOIFY**

- Touch symbol  to switch machine off




- Touch maintenance symbol  until the display shows **EMPTY - TRAY**
- Empty drip and grounds tray and place back into machine
- Remove 2-stage frothing jet or hot water nozzle



- Remove water tank and empty it
- Completely dissolve contents of a blister (3 tablets) in 0.6 litres of water
- Pour solution into the empty water tank
- Place water tank back into machine




- Place a receptacle (ca. 1 litre) under the spout
- Turn tap to position 
- Turn it back to the initial position when display prompts you to do so

Decalcifying (continuation)



- Empty drip and grounds tray and place back into machine when display prompts you to do so
- Rinse water tank well, fill with cold, fresh tap water and place it back into the machine




- Place receptacle under spout
- Turn tap to position 
- Turn it back to the initial position when display prompts you to do so



- Empty drip and grounds tray and place back into machine when display prompts you to do so
- Fit 2-stage frothing jet or hot water nozzle



- Shift receptacle under height-adjustable coffee spout
- Touch maintenance symbol  when display prompts you to do so

The machine is ready for use

 
Cleaning the 2-stage frothing jet

Notes

TIP:

To ensure perfect operation of the 2-stage frothing jet, we recommend you clean it regularly.

- Hold the nozzle at the top and at the bottom end or use a 7 mm open-ended spanner
- Screw the nozzle apart

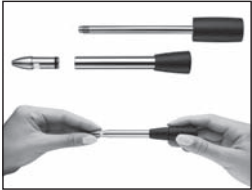

- Thoroughly rinse the 3 parts under running water

NOTE:

The display will not prompt you to clean the 2-stage frothing jet

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>