

JVC




MICRO COMPONENT SYSTEM

UX-H35— Consists of CA-UXH35 and SP-UXH35

UX-H33— Consists of CA-UXH33 and SP-UXH33

UX-H30— Consists of CA-UXH30 and SP-UXH30

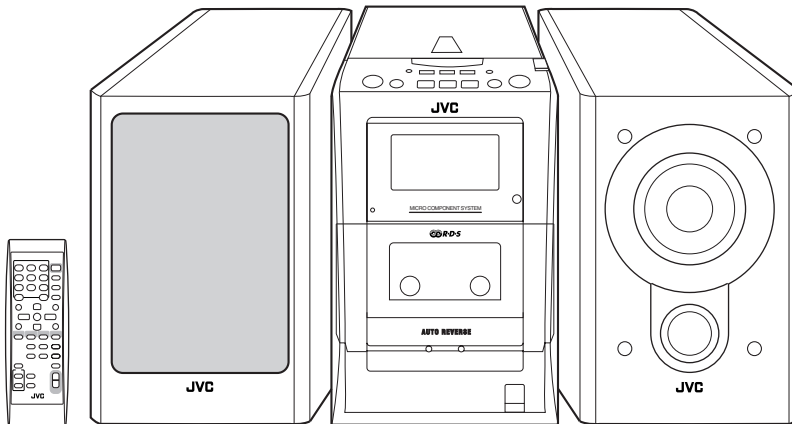

COMPACT
disc
DIGITAL AUDIO



INSTRUCTIONS

For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

GVT0101-008A

[B]

Warnings, Cautions and Others

IMPORTANT for the U.K.

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

BE SURE to replace the fuse only with an identical approved type, as originally fitted.

If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied fitted with a mains plug then follow the instructions given below:

IMPORTANT:

DO NOT make any connection to the terminal which is marked with the letter E or by the safety earth symbol or coloured green or green-and-yellow.

The wires in the mains lead on this product are coloured in accordance with the following code:


Blue : Neutral
Brown : Live

As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

CAUTION— (standby/on) button!

Disconnect the mains plug to shut the power off completely (all lamps and indications go off). The  (standby/on) button in any position does not disconnect the mains line.

- When the unit is on standby, the STANDBY lamp lights red.
- When the unit is turned on, the STANDBY lamp goes off.

The power can be remote controlled.

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.


CAUTION

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

IMPORTANT FOR LASER PRODUCTS

REPRODUCTION OF LABELS

① CLASSIFICATION LABEL ON EXTERIOR SURFACE

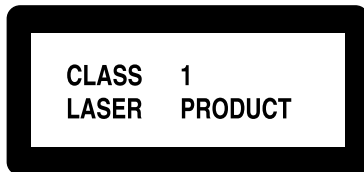

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.

② WARNING LABEL INSIDE THE UNIT

CAUTION: Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

ADVARSEL: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling. (d)

WARNING: Osynlig laserstråling når denna del är öppen och spärren är urkopplad. Beträkta ej strålen. (s)

VARO: Avattaessa ja suo-jalukitus ohitettaessa olet alltiina näkymättömälle lasersäteilylle. Älä katso säteeseen. (f)

SAFETY INSTRUCTIONS

“SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT”

This equipment has been designed and manufactured to meet international safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

☆☆

Do read the operating instructions before you attempt to use the equipment.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

Do be careful with glass panels or doors on equipment.

☆☆

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way—switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure that your family know how to do this.

Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs with wood screws—to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.


ABOVE ALL

- NEVER let anyone, especially children, push anything into holes, slots or any other opening in the case—this could result in a fatal electrical shock.
- NEVER guess or take chances with electrical equipment of any kind—it is better to be safe than sorry!

CAUTION: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

- 1 Front: No obstructions and open spacing.
- 2 Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
- 3 Bottom: Place on a level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

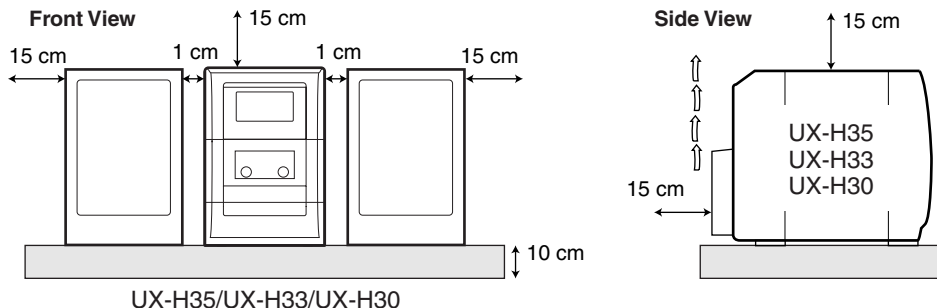

Introduction

We would like to thank you for purchasing one of our JVC products. Before operating this unit, read this manual carefully and thoroughly to obtain the best possible performance from your unit, and retain this manual for future reference.

About This Manual

This manual is organized as follows:

- **The manual mainly explains operations using the buttons on the remote control. You can use the buttons both on the remote control and on the main unit for the same operations if they have the same or similar names (or marks), unless mentioned otherwise.**
- Basic and common information that is the same for many functions is grouped in one place, and is not repeated for each procedure. For instance, we do not repeat the information about turning on/off the unit, setting the volume, changing the sound effects, and others, which are explained in the section “Common Operations” on pages 10 and 11.
- The following symbols are used in this manual:



Gives you warning and caution to prevent damage or risk of fire/electric shock.

Furthermore, it gives you information about what is not good for obtaining the best possible performance from the unit.



Gives you information and hints you should know.

Precautions

Installation

- Install in a place which is level, dry and neither too hot nor too cold—between 5°C and 35°C.
- Install the unit in a location with adequate ventilation to prevent internal heat buildup in the unit.
- Leave sufficient distance between the unit and the TV.
- Keep the speakers away from the TV to avoid interference with TV.



DO NOT install the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

Power sources

- When unplugging the unit from the wall outlet, always pull on the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting heating in the room
- In a damp room
- If the unit is brought directly from a cold to a warm place

Should condensation occur, the unit may malfunction.

In this case, leave the unit turned on for a few hours until the moisture evaporates, unplug the AC power cord, then plug it in again.

Others

- Should any metallic object or liquid fall into the unit, unplug the power cord and consult your dealer before operating any further.
- If you are not going to operate the unit for an extended period of time, unplug the power cord.



DO NOT disassemble the unit since there are no user serviceable parts inside.

If anything goes wrong, unplug the power cord and consult your dealer.

Contents


Location of the Buttons	3
Main Unit	3
Remote Control	5
Getting Started	6
Supplied Accessories	6
Connecting Antennas	6
Connecting Speakers	7
Connecting Other Equipment	8
Putting the Batteries into the Remote Control	9
Common Operations	10
Setting the Clock	10
Turning On the Power	11
Adjusting the Volume	11
Adjusting the Tone (Bass/Treble)	11
Reinforcing the Bass Sound	11
Listening to FM and AM (MW) Broadcasts	12
Tuning in to a Station	12
Presetting Stations	12
Tuning in to a Preset Station	13
Receiving FM Stations with RDS	13
Changing the RDS Information	14
Searching for Programs by PTY Codes (PTY Search) ...	14
Switching Temporarily to a Program Type of Your Choice	15
Playing Back Discs	16
Playing Back the Entire Disc—Normal Play	16
Basic Disc Operations	17
Programming the Playing Order of the Tracks —Program Play	17
Playing at Random—Random Play	18
Repeating Tracks—Repeat Play	18
Playing Back Tapes	19
Playing Back a Tape	19
Recording	20
Recording on a Tape	20
Disc Direct Recording	21
One Track Recording	21
Using the Timers	22
Using Daily Timer and Recording Timer	22
Using Snooze Timer	24
Using Sleep Timer	24
Maintenance	25
Troubleshooting	26
Additional Information	27
Specifications	28

Location of the Buttons


Become familiar with the buttons on your unit.

Main Unit

Top view

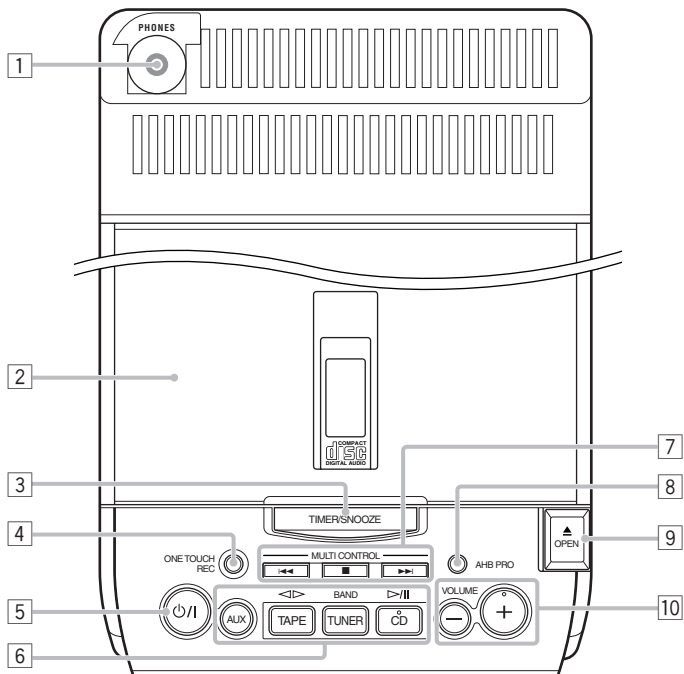


Front view

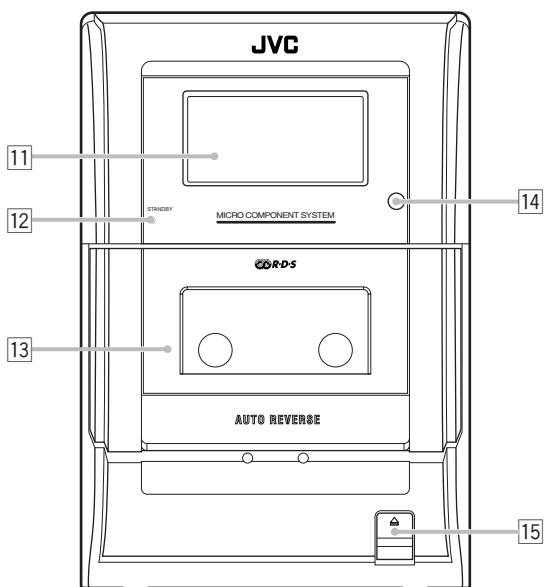



Display window

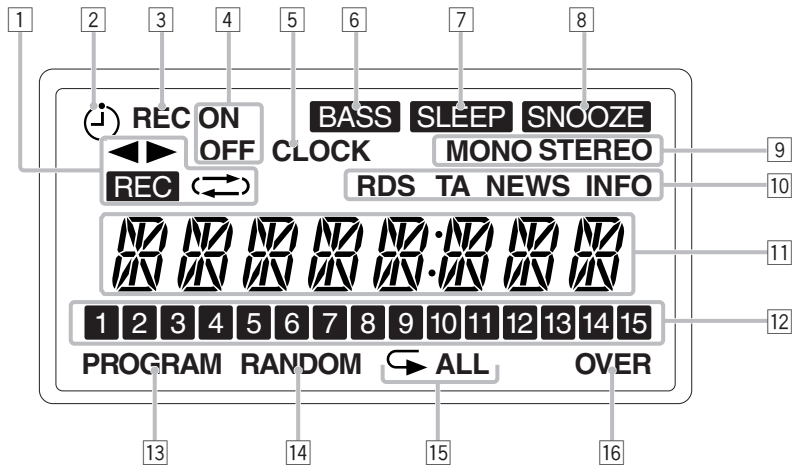

See the pages in parentheses for details.

Main unit


- 1 PHONES jack (11)
- 2 Disc cover
- 3 TIMER/SNOOZE button (10, 22 – 24)
- 4 ONE TOUCH REC (recording) button (20, 21)
- 5 **⏻/I** (standby/on) button (11, 23)
- 6 Source buttons
 - AUX, **<|>** TAPE, BAND TUNER, and **>||** CD

Pressing one of these buttons also turns on the unit.
- 7 MULTI CONTROL buttons
 - **⏮** (reverse skip), **■** (stop), and **⏭** (forward skip)
- 8 AHB (Active Hyper Bass) PRO button (11)
- 9 **▲** OPEN (disc cover open) button (16)
- 10 VOLUME + / - buttons (11)
- 11 Display window
- 12 STANDBY lamp (11)
- 13 Cassette holder
- 14 Remote sensor
- 15 **⏮** (cassette holder open) button (19 – 21)

Display window

- 1 Tape operation indicators
 - **⏮** (tape direction), **REC** (recording), and **↔** (reverse mode)
- 2 **⌚** (timer) indicator
- 3 REC (recording timer) indicator
- 4 ON/OFF (timer on-time/off-time) indicators
- 5 CLOCK indicator
- 6 **BASS** indicator
- 7 **SLEEP** indicator
- 8 **SNOOZE** indicator
- 9 MONO and STEREO indicators
- 10 RDS operation indicators
 - RDS and TA/NEWS/INFO
- 11 Main display
 - Shows the source name, frequency, etc.
- 12 Track calendar indicators
- 13 PROGRAM indicator
- 14 RANDOM indicator
- 15 Repeat indicators
 - **↺** and ALL
- 16 OVER indicator


Remote Control

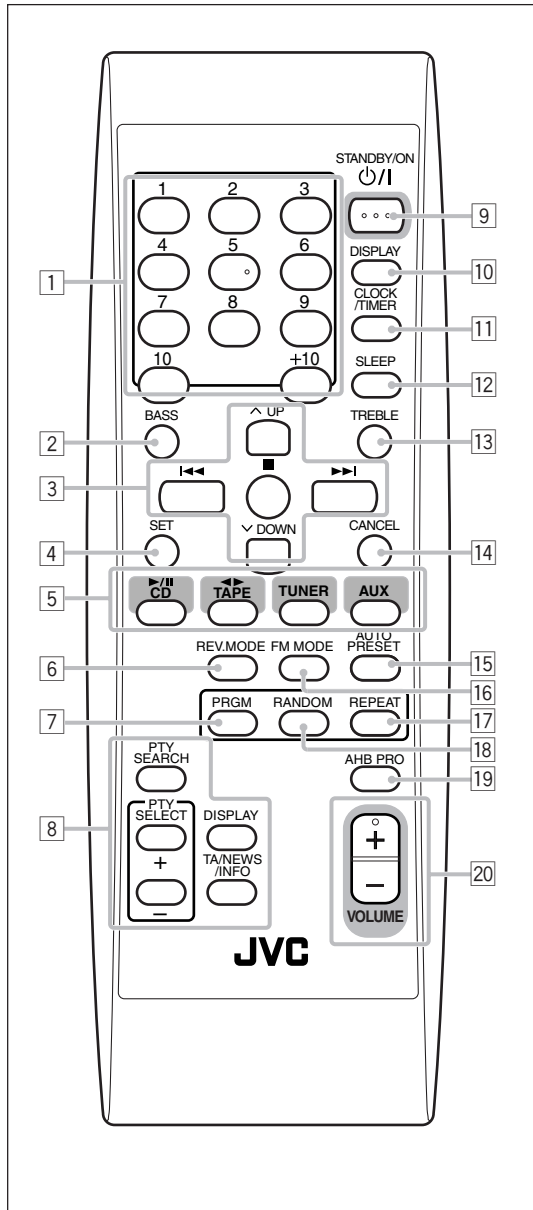

See the pages in parentheses for details.

- 1 Number buttons
- 2 BASS button (11)
- 3 Multi control buttons
 - **▲** UP, **◀◀** (reverse skip), **■** (stop), **▶▶** (forward skip), and **▼** DOWN
- 4 SET button (13)
- 5 Source buttons
 - **▶/||** CD, **◀▶** TAPE, TUNER, and AUX

Pressing one of these buttons also turns on the unit.
- 6 REV.MODE (reverse mode) button (19 – 21)
- 7 PRGM (program) button (17)
- 8 RDS operation buttons (14, 15)
 - PTY SEARCH, PTY SELECT + / -, DISPLAY, and TA/NEWS/INFO
- 9 STANDBY/ON **⏻/⏻** button (11, 23)
- 10 DISPLAY button (10)
- 11 CLOCK/TIMER button (10, 22, 23)
- 12 SLEEP button (24)
- 13 TREBLE button (11)
- 14 CANCEL button (18)
- 15 AUTO PRESET button (12)
- 16 FM MODE button (12)
- 17 REPEAT button (18)
- 18 RANDOM button (18)
- 19 AHB (Active Hyper Bass) PRO button (11)
- 20 VOLUME + / - button (11)

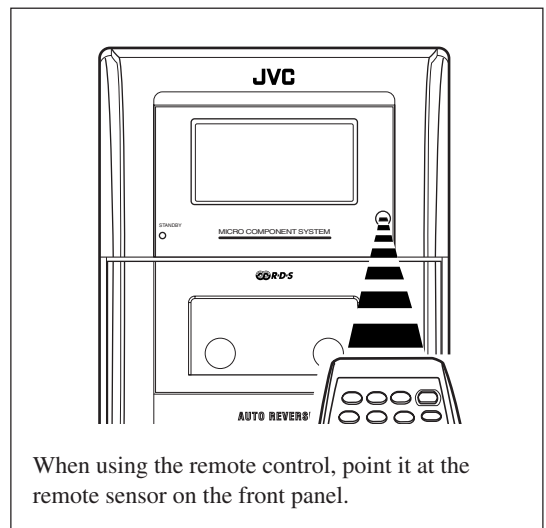

When using the remote control, point it at the remote sensor on the front panel.

Supplied Accessories


Make sure that you have all the following items. The number in parentheses indicates the quantity of each piece supplied.

- AM loop antenna (1)
- FM antenna (1)
- AC power cord (1)
- Remote control (1)
- Batteries (2)

If anything is missing, consult your dealer immediately.

Connecting Antennas

FM antenna

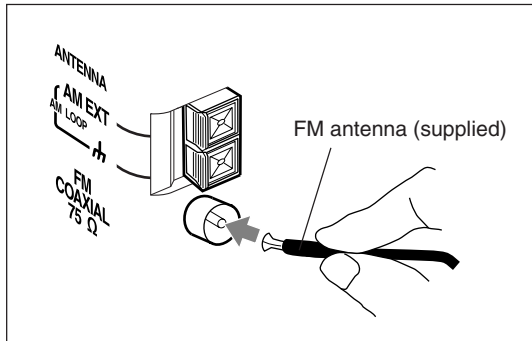

- 1 **Attach the FM antenna to the FM COAXIAL 75 Ω terminal.**
- 2 **Extend the FM antenna.**
- 3 **Fasten it up in the position which gives you the best reception, then fix it on the wall, etc.**




About the supplied FM antenna


The FM antenna supplied with this unit can be used as temporary measure. If reception is poor, you can connect an outdoor FM antenna.

To connect an outdoor FM antenna

Before connecting the antenna, disconnect the supplied FM antenna.

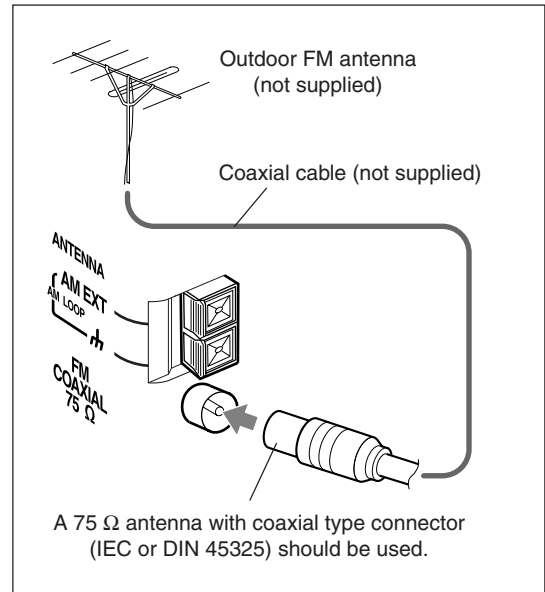

AM (MW) antenna

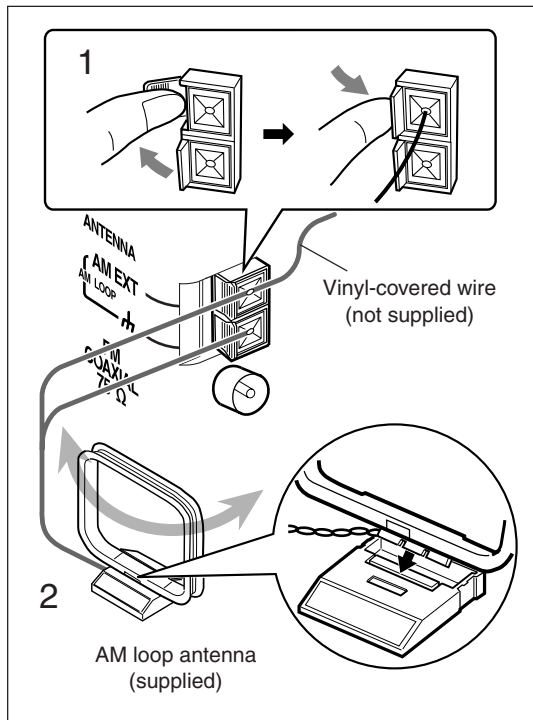

- 1 Connect the AM loop antenna to the AM LOOP terminals as illustrated.
- 2 Turn the AM loop antenna until you have the best reception.

To connect an outdoor AM (MW) antenna


When reception is poor, connect a single vinyl-covered wire to the AM EXT terminal and extend it horizontally. The AM loop antenna must remain connected.



For better reception of both FM and AM (MW)

- Make sure the antenna conductors do not touch any other terminals and connecting cords.
- Keep the antennas away from metallic parts of the unit, connecting cords, and the power cord.

Connecting Speakers

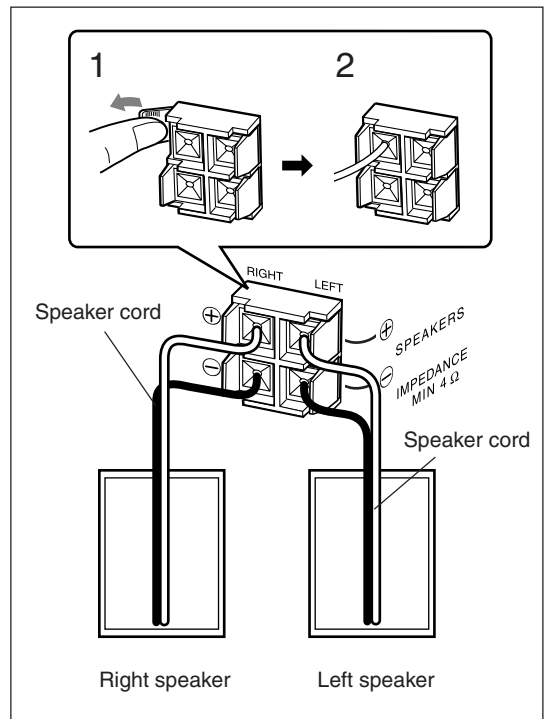

- 1 Press and hold the clamp of the speaker terminal on the rear of the unit.
- 2 Insert the end of the speaker cord into the terminal.
Match the polarity between the unit and the speaker terminals: \oplus to \oplus and \ominus to \ominus .
- 3 Release your finger from the clamp.




- DO NOT connect speakers while the power is on.
- DO NOT connect more than one speaker to each speaker terminal.

IMPORTANT: Use only speakers with the same speaker impedance as shown on the speaker terminals on the rear of the unit.

To remove the speaker grilles

The speaker grilles are removable.

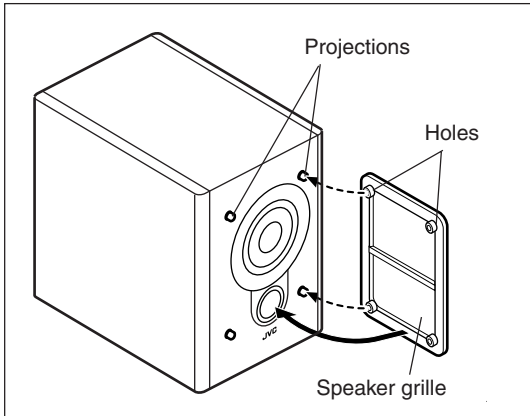

To remove the speaker grille, insert your fingers at the top of the speaker grille, pull towards you. Then pull the bottom towards you.

To attach the speaker grille, follow the illustration above.


NOW you are ready to plug in the unit and any other connected equipment.

IMPORTANT: Be sure to check all connections to be done before plugging the power cord.

This unit can be supplied with power through the AC IN connector (at home) or the DC IN connector (in a car).

- Do not connect the unit using the AC IN connector and the DC IN connector at the same time for safe and correct use.

To connect the AC power cord

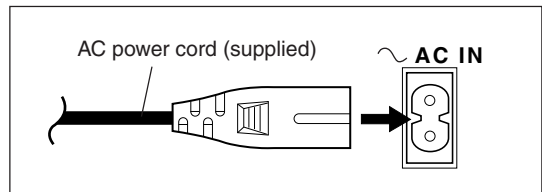

Connect the AC power cord to the AC IN connector and a wall outlet.

Connecting Other Equipment


To connect an audio equipment

You can connect audio equipment—used only as a playback device.




- DO NOT connect any equipment while the power is on.
- DO NOT plug in any equipment until all connections are complete.

Be sure that the plugs of the audio cords are colored: White plugs and jacks are for left audio signals, and red ones for right audio signals.

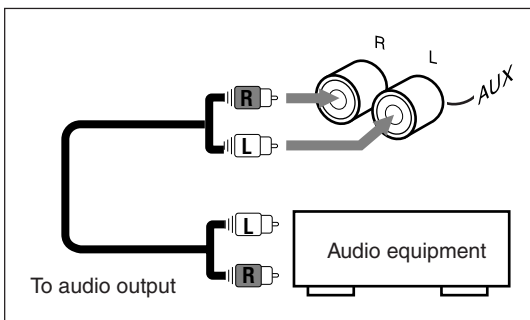

For playing other equipment through this unit, connect between the audio output jacks on the other equipment and AUX jacks by using audio cords (not supplied).

When using the unit in your car

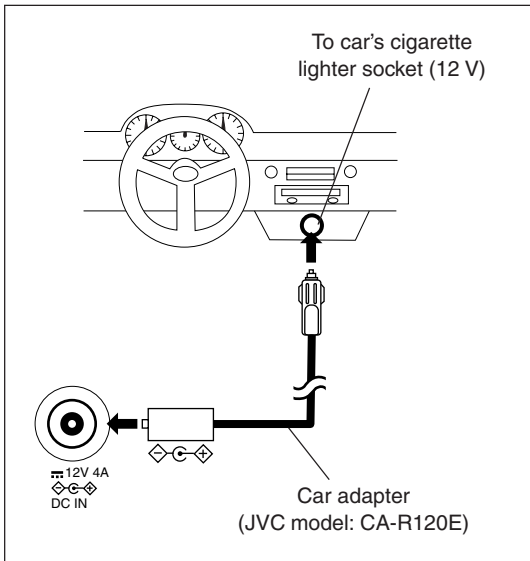

Connect a car adapter to the DC IN (12 V, 4 A) connector and the cigarette lighter socket.




- DO NOT connect the car adapter to the cigarette lighter socket before connecting it to the DC IN connector. Otherwise, a short-circuit may occur if the adapter plug makes contact with any metal part inside the car.
- DO NOT use this unit for a long time in a car while the car ignition switch is turned "OFF" (or set to "ACC"). Otherwise, the car battery will be exhausted.

Putting the Batteries into the Remote Control

Insert the batteries—R6(SUM-3)/AA(15F)—into the remote control, by matching the polarity (+ and -) on the batteries with the + and - markings on the battery compartment.

When the remote control can no longer operate the unit, replace both batteries at the same time.

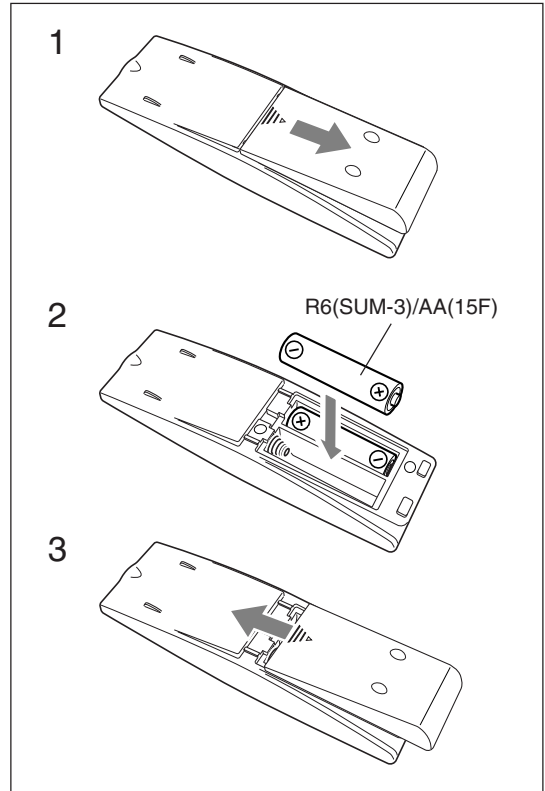

- DO NOT use an old battery together with a new one.
- DO NOT use different types of batteries together.
- DO NOT expose batteries to heat or flame.
- DO NOT leave the batteries in the battery compartment when you are not going to use the remote control for an extended period of time. Otherwise, the remote control will be damaged from battery leakage.

Setting the Clock

Before operating the unit any further, first set the unit's clock. When you plug in the power cord, the **CLOCK** indicator and "0:00" start flashing on the display. You can set the clock whether the unit is on or off.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start over from step 1.

On the remote control:

1 Press **CLOCK/TIMER**.

The hour digits start flashing on the display.

 


2 Press **^ UP** or **v DOWN** to adjust the hour, then press **CLOCK/TIMER**.

The minute digits start flashing.



3 Press **^ UP** or **v DOWN** to adjust the minute, then press **CLOCK/TIMER**.



On the unit:


1 Press **TIMER/SNOOZE**.

The hour digits start flashing on the display.



2 Press **▶▶** or **◀◀** to adjust the hour, then press **TIMER/SNOOZE**.

The minute digits start flashing.

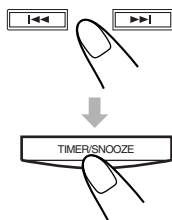


3 Press **▶▶** or **◀◀** to adjust the minute, then press **TIMER/SNOOZE**.

To check the clock time during play

On the remote control **ONLY**:

Press **DISPLAY** (grey-colored).

 - Each time you press the button, the source indication and the clock time alternate on the display.



- When you unplug the power cord or if a power failure occurs

The clock is reset to "0:00" right away. If this happens, set the clock again.

- The clock may gain or lose 1 to 2 minutes per month. If this happens, reset the clock.

To change the clock

1 Make sure the **⌚** (timer) indicator is not lit on the display.

- If it is lit, press and hold **CLOCK/TIMER** (or **TIMER/SNOOZE** on the unit) until it goes off.

 
 
 
2 Press **CLOCK/TIMER** (or **TIMER/SNOOZE** on the unit) repeatedly until the unit enters the clock setting mode (the hour digits start flashing on the display).



First time you press **CLOCK/TIMER** (or **TIMER/SNOOZE** on the unit), the unit enters the timer setting mode. (See page 22.)

3 Repeat steps 2 and 3 of the procedure of "Setting the Clock."



4 Press and hold **CLOCK/TIMER** (or **TIMER/SNOOZE** on the unit) again so that the **⌚** (timer) indicator goes off.

Turning On the Power

  To turn on the unit, press STANDBY/ON  ( / ) on the unit. The STANDBY lamp on the unit goes off.

- When you press the source button  CD,  TAPE, TUNER (or BAND TUNER on the unit) and AUX, the unit automatically turns on and starts playback if the source is ready.



To turn off the unit (standby), press STANDBY/ON  /  on the unit) again. The STANDBY lamp on the unit lights on.

- The CLOCK indicator and “0:00” flash on the display until you set the built-in clock. After setting the clock, the clock time will appear on the display while the unit is on standby.
- A little power is always consumed even while the unit is on standby.

To switch off the power supply completely, unplug the power cord.




When you unplug the power cord or if a power failure occurs

The clock is reset to “0:00” right away, while the tuner preset stations (see page 12) will be erased in a few days.

Adjusting the Volume

You can adjust the volume level only while the unit is turned on. The volume level can be adjusted between “VOL MIN” and “VOLUME 1” – “VOLUME 40 (VOL MAX).”

Press **VOLUME +** to increase the volume or press **VOLUME -** to decrease it.

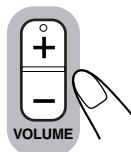

For private listening

Connect headphones to the PHONES jack. No sound comes out of the speakers. Be sure to turn down the volume before connecting or putting on headphones.



DO NOT turn the unit off (standby) with the volume set to an extremely high level; otherwise, the sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the unit or start playing any source next time. REMEMBER you cannot adjust the volume level while the unit is on standby.

Adjusting the Tone (Bass/Treble)

 
You can adjust the bass level (low frequency range) and the treble level (high frequency range) within a range of -5 to +5.



When shipped, the bass level set to “BASS 0” and the treble level set to “TREBLE +1.”


- This function only affects the playback sound, and does not affect your recording.
- There is a time limit in doing the following steps. If the setting is canceled before you finish, start over from step 1.

On the remote control ONLY:

1 Press BASS to adjust the bass level or press TREBLE to adjust the treble level.



2 Press  UP to increase the level or press  DOWN to decrease it.

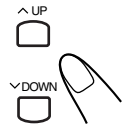

Reinforcing the Bass Sound

You can reinforce the bass sound to maintain rich, full bass at low volume—Active Hyper Bass Pro.

- This function only affects the playback sound, and does not affect your recording.

To get the effect, press AHB PRO so that the **BASS** indicator lights up on the display.



- Each time you press the button, the bass reinforcement alternates between on (AHB ON) and off (AHB OFF).

To cancel the effect, press AHB PRO again so that the **BASS** indicator goes off.



Tuning in to a Station

1 Press TUNER (or BAND TUNER on the unit) to select the band.

The unit automatically turns on and tunes in to the previously received station—either FM or AM (MW).

- Each time you press the button, the band alternates between FM and AM (MW).




FM 87.50

2 Press and hold >>> or <<< for more than 1 second.

The unit starts searching for stations and stops when a station of sufficient signal strength is tuned in.

 - If a program is broadcast in stereo, the STEREO indicator lights up.



To stop searching, press >>> or <<<.



notes When you press >>> or <<< briefly and repeatedly

The frequency changes step by step.

To change the FM reception mode

On the remote control ONLY:

When an FM stereo broadcast is hard to receive or noisy, press FM MODE so that the MONO indicator lights up on the display. Reception will improve.



To restore the stereo effect, press FM MODE again so that the MONO indicator goes off. In stereo mode, you can hear stereo sound when a stereo program is broadcast.

Presetting Stations

You can preset 30 FM and 15 AM (MW) stations—using either automatic presetting or manual presetting. In some cases, test frequencies have been already memorized for the tuner since the factory examined the tuner preset function before shipment. This is not a malfunction.

To preset stations automatically—Automatic presetting

You need to preset stations separately for the FM and AM (MW) bands.

On the remote control ONLY:

1 Press TUNER to select the band.

The unit automatically turns on and tunes in to the previously received station—either FM or AM (MW).

- Each time you press the button, the band alternates between FM and AM (MW).



2 Press and hold AUTO PRESET for more than 2 seconds.

Local stations with strong signals are searched for and stored in memory automatically. When automatic presetting is over, the station stored in preset number 1 is tuned in.

- Storing new stations erase the previously stored one.



3 Repeat steps 1 and 2 to store stations for the other band.



notes When you cannot automatically store stations you want

Stations with weak signals cannot be detected with automatic presetting. To store such stations, use manual presetting.

To preset stations manually—Manual presetting

You need to preset stations separately for the FM and AM (MW) bands.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start over from step 2.

On the remote control ONLY:

 
1 Tune in to the station you want to preset.

- See “Tuning in to a Station” on page 12.

2 Press SET.



3 Press ^ UP or v DOWN to select a preset number.



4 Press SET again.



The tuned station in step 1 is stored in the preset number selected in step 3.

- Storing a new station on a used number erases the previously stored one.



When you unplug the power cord or if a power failure occurs

The tuner preset stations will be erased in a few days. If this happens, preset the stations again.

Tuning in to a Preset Station

On the remote control ONLY:

 
1 Press TUNER to select the band.

The unit automatically turns on and tunes in to the previously received station—either FM or AM (MW).

- Each time you press the button, the band alternates between FM and AM (MW).



2 Press ^ UP or v DOWN to select a preset number.



To tune in to a preset station directly using the number buttons

On the remote control ONLY:


Pressing the number button(s) allows you to select the preset number you want.

Ex.: For preset number 5, press 5.

For preset number 15, press +10, then 5.

For preset number 20, press +10, then 10.

For preset number 30, press +10, +10, then 10.

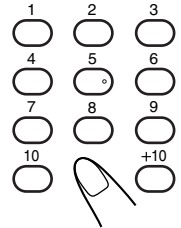

Receiving FM Stations with RDS

RDS (Radio Data System) allows FM stations to send an additional signal along with their regular program signals. For example, the stations send their station names, as well as information about what type of program they broadcast, such as sports or music, etc. When tuned in to an FM station which provides the RDS service, the RDS indicator lights up on the display.

With the unit, you can receive the following types of RDS signals.

PS (Program Service):

Shows commonly known station names.

PTY (Program Type):

Shows types of broadcast programs.

RT (Radio Text):

Shows text messages the station sends.

Enhanced Other Networks:

Provides information about the types of the programs sent by other RDS stations.



More about RDS

- Some FM stations do not provide RDS signals.
- RDS services vary among FM RDS stations. For details on RDS services in your area, check with local radio stations.
- RDS may not work correctly if the received station is not transmitting the signals properly or if the signal strength is weak.


 
Changing the RDS Information

You can see RDS information on the display while listening to an FM station.

On the remote control ONLY:

Press DISPLAY (orange-colored).

- Each time you press the button, the display changes to show the following information:

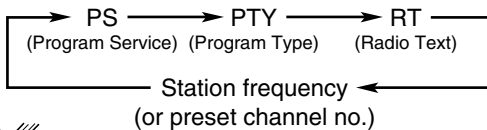

- **If no PS, PTY, or RT signals are sent by a station** “NO PS,” “NO PTY,” or “NO RT” appears on the display.
- **On the characters displayed** When the display shows PS, PTY or RT signals:
 - The display shows upper case letters only.
 - The display cannot show accented letters; for example, “A” may represent accented “A’s” like “Á, Â, Ã, Ä, Å and Ä.”

Searching for Programs by PTY Codes (PTY Search)

One of the advantages of RDS is that you can locate a particular kind of program by specifying the PTY codes.

- For details on the PTY codes, see “Additional Information” on page 27.

To search for a program using the PTY codes

REMEMBER you must preset FM RDS stations to use the PTY codes. If not yet done, see pages 12 and 13.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start over from step 1.

On the remote control ONLY:


1 Press PTY SEARCH.

“PTY” and “SELECT” appear on the display alternately.



2 Press PTY SELECT + or PTY SELECT – until the PTY code you want appears on the display.

- Each time you press the buttons, the PTY codes change as follows:

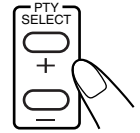

NONE	↔	NEWS	↔	AFFAIRS	↔
INFO	↔	SPORT	↔	EDUCATE	↔
DRAMA	↔	CULTURE	↔	SCIENCE	↔
VARIED	↔	POP M	↔	ROCK M	↔
EASY M	↔	LIGHT M	↔	CLASSICS	↔
OTHER M	↔	WEATHER	↔		
FINANCE	↔	CHILDREN	↔	SOCIAL	↔
RELIGION	↔	PHONE IN	↔	TRAVEL	↔
LEISURE	↔	JAZZ	↔	COUNTRY	↔
NATION M	↔	OLDIES	↔	FOLK M	↔
DOCUMENT	↔	TEST	↔	ALARM	↔
(back to the beginning)					

3 Press PTY SEARCH once again.

While searching, “SEARCH” and the selected PTY code alternately appear on the display.

The unit searches 30 preset FM stations, stops when it finds the one you have selected (“FOUND” and the selected PTY code appear), and tunes in that station.

- If no program is found, “NOTFOUND” appears on the display and the unit returns to the last received station.

To stop searching any time during the process, press PTY SEARCH while searching.



If you preset a station while PTY Search is being carried out

PTY Search may not stop. If this happens, press PTY SEARCH to stop searching manually.

Switching Temporarily to a Program Type of Your Choice

The Enhanced Other Networks function allows the unit to switch temporarily to a broadcast program of your choice (TA, NEWS, and INFO) from a different station.

- The function only works when you are listening to a preset FM RDS stations providing the data.

To activate the Enhanced Other Networks function
REMEMBER you must preset FM RDS stations to use the function. If not yet done, see pages 12 and 13.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start over from step 1.

On the remote control ONLY:

1 Press TA/NEWS/INFO until the data type you want appears on the display.



The selected data type indicator (TA, NEWS, and INFO) also flashes.

- Each time you press the button, the data type indicators change as follows:



- TA : Traffic announcement
- NEWS : News
- INFO : Program the purpose of which is to impart advice in the widest sense.
- OFF : The function is canceled. The data type indicator (TA, NEWS, and INFO) goes off.

2 Wait for about 3 seconds after specifying the data type.

The data type indicator stops flashing and remains lit.

Now, the function is activated. See “How the Enhanced Other Networks function actually works.”

How the Enhanced Other Networks function actually works:

CASE 1

If there is no station broadcasting the program you have selected

The unit continues tuning in to the current station.



When a station starts broadcasting the program you have selected, the unit automatically switches to the station. The indicator of received PTY code starts flashing.



When the program is over, the unit goes back to the previously tuned station, but the function still remains activated.

CASE 2

If there is a station broadcasting the program you have selected

The unit tunes in to the program. The indicator of received PTY code starts flashing.



When the program is over, the unit goes back to the previously tuned station, but the function still remains activated.

CASE 3

If the FM station you are listening to is broadcasting the program you have selected

The unit continues to receive the station but the indicator of received PTY code starts flashing.



When the program is over, the indicator of received PTY code stops flashing and remains lit, but the function still remains activated.



More about the Enhanced Other Networks function

- The data sent from some stations may not be compatible with this unit and also some stations may not include Enhanced Other Networks data. In this case, the function may not work correctly.
- While listening to a program tuned into by the function, the station does not change even if another network station starts broadcasting a program of the same data.
- The function is canceled when you change the source to CD, TAPE or AUX, while it is temporarily canceled when you change the source to AM (MW).
- This function is also canceled when you turn off the unit.

This unit has been designed to play back the following discs—CD, CD-R, and CD-RW.

When playing a CD-R or CD-RW

User-edited CD-Rs (CD-Recordable) and CD-RWs (CD-ReWritable) can be played only if they are already “finalized.”

 
- Usually you can play back your original CD-Rs or CD-RWs recorded in music CD format. However, sometimes they may not play depending on their characteristics or recording conditions.
- Before playing CD-Rs or CD-RWs, read their instructions or cautions carefully.
- Some CD-Rs or CD-RWs may not play on this unit because of their disc characteristics, damage or stain on them, or if the player’s lens is dirty.
- CD-RWs may require a longer readout time. This is because the reflectance of CD-RWs is lower than for regular discs.

General notes

In general, you will have the best performance by keeping your discs and the mechanism clean.

- Store discs in their cases, and keep them in cabinets or on shelves.
- Keep the unit’s disc cover closed when not in use.

Continued use of irregular shape discs (heart-shape, octagonal, etc.) can damage the unit.




Playing Back the Entire Disc—Normal Play


1 Press OPEN on the unit.

The disc cover opens.

 - You can insert a disc while listening to another source.




2 Place a disc correctly with its label side up.

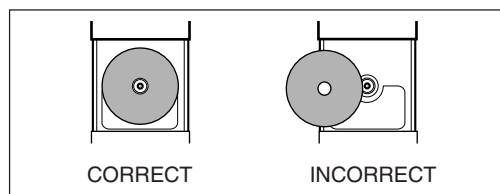

3 Close the disc cover gently.


4 Press CD.

The unit automatically turns on and the first track of the disc starts playing.

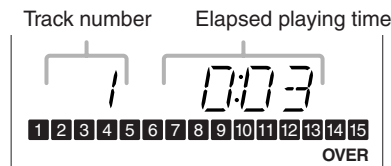

- The track number that has already played disappears from the track calendar on the display.
- The disc automatically stops when the last track has finished playing.

To stop playing, press .

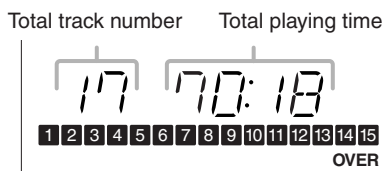

To remove the disc, press  OPEN on the unit.



- If the disc cannot be read correctly (because it is scratched, for example) or an unreadable CD-R or CD-RW is inserted
Playback will not start.
- If no disc is inserted
“NO DISC” appears on the display.
- If the loaded disc has more than 15 tracks
The OVER indicator lights on the display.



DO NOT try to open the disc cover by hand as it will be damaged.

Basic Disc Operations

While playing a disc, you can do the following operations.

To stop playing for a moment

During play, press ►/|| CD.

While pausing, the elapsed playing time flashes on the display.




To resume playing, press ►/|| CD again.

To go to another track

Before or during play, press ►►1 or 1◄◄ repeatedly.

 - ►►1: Skips to the beginning of the next or succeeding tracks.
- 1◄◄: Goes back to the beginning of the current or previous tracks.



To go to another track directly using the number buttons

On the remote control ONLY:


Pressing the number button(s) before or during play allows you to start playing the track number you want.

Ex.: For track number 5, press 5.

For track number 15, press +10, then 5.

For track number 20, press +10, then 10.


For track number 32, press +10, +10, +10, then 2.

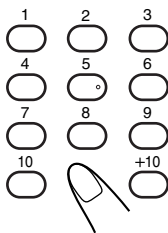

To locate a particular point in a track

During play, press and hold ►►1 or 1◄◄.

 - ►►1: Fast-forwards the tracks.
- 1◄◄: Fast-reverses the tracks.



Programming the Playing Order of the Tracks—Program Play

You can arrange the order in which tracks play before you start playing. **You can program up to 20 tracks.**

On the remote control ONLY:

1 Load a disc.

- If the current playing source is not the CD player, press ►/|| CD, then ■ before going to the next step.

2 Press PRGM (program).

 
 
The PROGRAM indicator lights up on the display.



- If a program has been stored in memory, the program is called up.

3 Press ^ UP or v DOWN to select the track number, then press SET.

- You can select the track number directly using the number button(s). (See “To go to another track directly using the number buttons.”)



Track number

Program step number

4 Repeat step 3 to program other tracks you want.



5 Press ►/|| CD.

The tracks are played in the order you have programmed.



If you try to program a 21st track “FULL” will appear on the display.

To stop playing, press ■.



To exit from Program Play, press PRGM (program) before or after playing.


- The PROGRAM indicator goes off.



To check the program contents

You can check the program contents by pressing **▶▶|** or **|◀◀** before or after playback.

- **▶▶|**: To check the contents in the programmed order.
- **|◀◀**: To check the contents in the reverse order.

 

To modify the program

On the remote control ONLY:

Before or after playing, you can erase the last programmed track by pressing **CANCEL**.

- Each time you press the button, the last programmed track is erased from the program.



To add tracks in the program before playing, simply select the track numbers you want to add by following step **3** of the programming procedure.

To erase the program, press **■** before or after playing.

- Pressing **▲ OPEN** to open the disc cover will also erase the programmed tracks.



Playing at Random—Random Play

The tracks will play in no particular order when you use this mode.

On the remote control ONLY:

1 Load a disc.

- If the current playing source is not the CD player, press **▶/|| CD**, then **■** before going to the next step.

2 Press **RANDOM**.

The **RANDOM** indicator lights up on the display.



3 Press **▶/|| CD**.

The tracks are randomly played. Random Play ends when all the tracks are played once.



To skip the current track, press **▶▶|**.

- You cannot go back to the previous track by pressing **|◀◀**.



To stop playing, press **■**.



To exit from Random Play, press

RANDOM before or after playing. Random Play is canceled and Normal Play resumes.

- The **RANDOM** indicator goes off.



 
Repeating Tracks—Repeat Play

You can have all the tracks, the program or individual track currently playing, repeat as many times as you like.

On the remote control ONLY:

To repeat playing, press **REPEAT** before or during play.

- Each time you press the button, Repeat Play changes as follows, and the following repeat indicator lights up on the display:



↶ : Repeats one track.

↶ ALL : In Normal Play, repeats all the tracks. In Program Play, repeats all the tracks in the program. In Random Play, repeats all the tracks in random order.

To cancel Repeat Play, press **REPEAT** repeatedly until the repeat indicator goes off.


- Repeat Play remains in effect even when you select another play mode (Normal, Program or Random Play).
- In Random Play, **↶** cannot be selected. If **↶** has been selected when you press **RANDOM**, it is canceled.

Playing Back Tapes


You can play back type I tapes.

Playing Back a Tape


- 1 Press  for cassette deck on the unit.
The cassette holder opens.

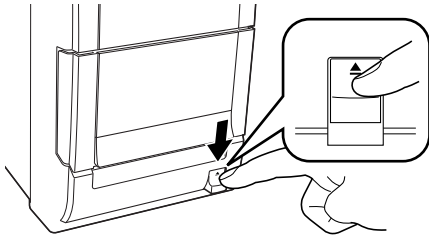

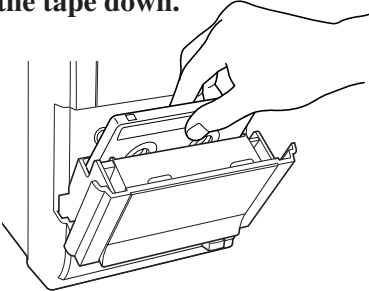

- 2 Put a cassette in with the exposed part of the tape down.

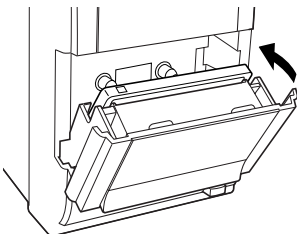



- 3 Close the cassette holder cover gently.



- 4 Press  TAPE.

The unit automatically turns on and the tape starts playing. The tape direction indicator ( or ) flashes slowly on the display.

  - Each time you press the button, the tape direction changes:
 - ▶ : plays the front side.
 - ◀ : plays the reverse side.

When the tape plays to the end, the deck automatically stops if the Reverse Mode is set to  or . (See “To play both sides—Reverse Mode.”)





If no cassette is inserted when you press



 TAPE

 
“NO TAPE” appears on the display.


To stop playing, press .



To fast-wind to the left or to the right, press  or  while the tape is not running.

The tape direction indicator ( or ) starts flashing rapidly on the display.



To remove the cassette, press  on the unit.



 
To play both sides—Reverse Mode

 
 
 

 
You can set the deck to play just one side of a tape, both sides once, or both sides continuously.

On the remote control ONLY:

Press REV.MODE (reverse mode).

- Each time you press the button, the Reverse Mode changes as follows:



-  : The deck automatically stops after playing both sides of the tape. Stops when playback in the  direction is finished.
-  : The deck continues to play both sides of the tape until  is pressed.
-  : The deck automatically stops after playing one side of the tape.




The use of C-120 or thinner tape is not recommended, since characteristic deterioration may occur and this tape easily jams in the pinch-rollers and the capstans.

IMPORTANT:

- It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable program and in any literary, dramatic, musical, or artistic embodied therein.
- The recording level is automatically set correctly, so it is not affected by the other sound settings. Thus, during recording you can adjust the sound you are actually listening to without affecting the recording level.
- If recordings you have made have excessive noise or static, the unit may be too close to a TV. Increase the distance between the TV and the unit.
- You can use type I tape for recording.

To protect your recording

Cassettes have two small tabs on the back to protect from unexpected erasure or re-recording.

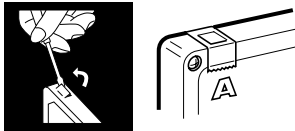

To protect your recording, remove these tabs.

To re-record on a protected tape, cover the holes with adhesive tape.




At the start and end of cassette tapes

There is leader tape which cannot be recorded onto. Thus, when recording discs or radio broadcasts, wind the leader tape first to ensure that the recording will be made without any loss.

Recording on a Tape

On the unit ONLY:

- 1 Put a recordable cassette in with the exposed part of the tape down.**

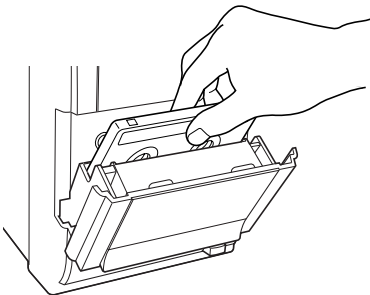

- 2 Close the cassette holder gently and check the recording direction for the tape.**

- If the tape direction is not correct, press ◀▶ TAPE twice then ■ to change the tape direction.
- If you want to record on both sides of a tape, see “To record on both sides—Reverse Mode.”

- 3 Start playing the source—FM, AM (MW) or auxiliary equipment connected to AUX jacks.**

- When the source is the CD player, see “Disc Direct Recording” on page 21.

 
- 4 Press ONE TOUCH REC (recording).**

The **REC** (recording) indicator lights up on the display and recording starts.



- If no cassette is inserted when you press REC “NO REC” appears on the display.
- If a protected tape is inserted when you press REC “NO REC” appears on the display.

To stop while recording, press ■.



To remove the cassette, press △ on the unit.



To record on both sides—Reverse Mode
On the remote control ONLY:

Press REV.MODE (reverse mode) repeatedly until ⇄ or ⇄ is lit.

- When using the Reverse Mode for recording, ⇄ lights up and start recording in the forward (▶) direction first. Otherwise, recording will stop when recording is done only on one side (reverse) of the tape.



Disc Direct Recording

Everything on the disc goes onto the tape in the order it is on the disc, or according to the order you have set in Program Play.

On the unit ONLY:

1 Put a recordable cassette in with the exposed part of the tape down.

2 Load a disc.

- If the current playing source is not the CD player, press ►/|| CD, then ■ before going to the next step.
 - If you do not want pauses of about 4 seconds recorded between selections, press ►/|| CD twice. Otherwise, a non-recorded pause will be automatically inserted between selections.
- If you want to record on both sides of a tape, see “To record on both sides—Reverse Mode.”

3 Press ONE TOUCH REC (recording).

The **REC** (recording) indicator lights up on the display and recording starts. After recording, the CD player and cassette deck automatically stop.



To stop while recording, press ■. The tape stops after 4 seconds.



To remove the cassette, press △ on the unit.



To record on both sides—Reverse Mode

On the remote control ONLY:

Press **REV.MODE** (reverse mode) repeatedly until ⇄ or ⇄ is lit.



- When using the Reverse Mode for Disc Direct Recording, ⇄ lights up and start recording in the forward (►) direction first. When the tape reaches its end while recording a song in the forward direction (►), the last song will be re-recorded at the beginning of the reverse side (◄). If you start recording on the reverse side (◄), recording will stop when recording is done only on one side (reverse) of the tape.



When making Sleep Timer settings while doing Disc Direct Recording

Set enough time to allow for the disc to finish playing; otherwise, the power will go off before recording is completed.

One Track Recording

This recording method is convenient when you record tracks while playing the disc. You can record just your favorite songs on the tape.

On the unit ONLY:

1 Put a recordable cassette in with the exposed part of the tape down.

2 Play the track on the disc you wish to record.

3 Press ONE TOUCH REC (recording).

The CD player returns to the beginning of that track and the track is recorded on the tape.

After recording, the CD player and cassette deck automatically stop.

4 Repeat steps 2 and 3 to record other tracks you want.



To stop while recording, press ■. The tape stops after 4 seconds.



To remove the cassette, press △ on the unit.




There are four timers available—Daily Timer, Recording Timer, Snooze Timer, and Sleep Timer. Before using the timers, you need to set the unit's clock (see page 10).

 

Using Daily Timer and Recording Timer

You can set the timer whether the unit is on or off.

How the timer actually works

When the on-time comes, the unit automatically turns on (the  [timer] indicator flashes just before the on-time and continues flashing while the timer is operating). Then, when the off-time comes, the unit automatically turns off (standby).

The timer setting remains in memory until you change it.


- When the  (timer) indicator is lit on the display, the timer acts as the Daily Timer. Once the timer has been set, it will be activated at the same time everyday until the timer is turned off.
- When the  (timer) and the REC indicators are lit on the display, the timer acts as the Recording Timer. After the timer-recording finishes, the details of the setting remain stored but the timer is turned off.

Before you start...


When using "TUNER" as the source to play, make sure to select the desired station before turning off the power.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start over from step 1.

1 Press CLOCK/TIMER (or TIMER/SNOOZE on the unit).





The  (timer) and the ON indicators light up and the current on-time flashes on the display.

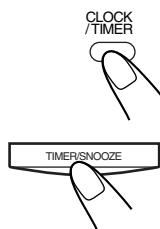
The unit enters on-time setting mode.





 

  2 Set the on-time when you want the unit to turn on.


On the remote control:

- 1) Press  UP or  DOWN to set the hour, then press CLOCK/TIMER.
- 2) Press  UP or  DOWN to set the minute, then press CLOCK/TIMER.




On the unit:

- 1) Press  or  to set the hour, then press TIMER/SNOOZE.
- 2) Press  or  to set the minute, then press TIMER/SNOOZE.

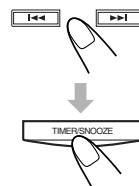



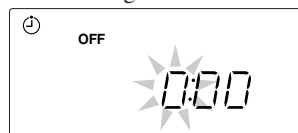

The OFF indicator lights up and the unit enters off-time setting mode.







3 Set the off-time when you want the unit to turn off (standby).

On the remote control:

- 1) Press  UP or  DOWN to set the hour, then press CLOCK/TIMER.
- 2) Press  UP or  DOWN to set the minute, then press CLOCK/TIMER.

On the unit:

- 1) Press  or  to set the hour, then press TIMER/SNOOZE.
- 2) Press  or  to set the minute, then press TIMER/SNOOZE.

The unit enters the timer selecting mode.

4 Select the timer (Daily Timer or Recording Timer) with the source to play.

 
On the remote control:

Press **▲ UP** or **▼ DOWN** to select the timer, then press **CLOCK/TIMER**.

On the unit:

Press **▶▶** or **◀◀** to select the timer, then press **TIMER/SNOOZE**.

- Each time you press **▲ UP** (**▶▶**) or **▼ DOWN** (**◀◀**), the timer mode and the source change as follows:



TUNER : tunes in to the last station you were listening to. (Daily Timer)

REC TUNER : records the last station you were listening to. (Recording Timer)

- Put a recordable cassette into the deck.

CD : plays a disc. (Daily Timer)

- Load a disc.

TAPE : plays a tape. (Daily Timer)

- Make sure that the tape is in the cassette deck.
- Make sure that the tape direction is correct.

The unit enters the volume level setting mode.

5 Select the volume level.

On the remote control:

Press **▲ UP** or **▼ DOWN** to set the volume level, then press **CLOCK/TIMER**.

On the unit:

Press **▶▶** or **◀◀** to set the volume level, then press **TIMER/SNOOZE**.

- You can select the volume level (“VOLUME --” and “VOLUME 0” to “VOLUME 40”).
If you select “VOLUME --,” the volume is set to the previous level when the unit was turned off.
- To turn off the volume while the Recording Timer (**REC TUNER**) is working, set the volume level “VOLUME 0.”

The unit enters the clock setting mode.

6 Adjust the clock if you need.

- See “Setting the Clock” on page 10.

7 Press **STANDBY/ON** (or **⏻/⏻** on the unit) to turn off the unit (standby) if you have set the timer with the unit turned on.

- When the timer turns on the unit, the **⌚** (timer) indicator starts flashing. (If the Recording Timer is selected in step 4, the **REC** indicator also starts flashing.)

To deactivate the timer temporarily, press and hold **CLOCK/TIMER** (or **TIMER/SNOOZE** on the unit) until the **⌚** (timer) indicator on the display goes off.

To activate or change the timer (with the previous setting), follow steps 1 to 7 on pages 22 and 23.

- If you want to change the timer setting after the Daily Timer be used, first deactivate the timer.



- If the unit is turned on when the timer on-time comes**
Timer does not work.
- When you unplug the power cord or if a power failure occurs**

The timer will be canceled. You need to set the clock first, then the timer again.

Using Snooze Timer

The Snooze Timer turns off the unit (standby) only for 5 minutes while the Daily Timer is in operation.

- You can set the Snooze Timer only while the Daily Timer is in operation.

Press **TIMER/SNOOZE on the unit (or **CLOCK/TIMER** on the remote control) while the Daily Timer is in operation.**



The unit turns off (standby) and the **SNOOZE** indicator lights up on the display. After 5 minutes, the unit automatically turns on.



- **If the unit is turned on when the Snooze Timer is working**
The Snooze Timer and the Daily Timer will be canceled.
- **If you set the Snooze Timer when there is less than 5 minutes until the Daily Timer off-time**
The unit will not turn on even when 5 minutes passed.
- **When you unplug the power cord or if a power failure occurs**
The timer will be canceled. You need to set the clock first, then the timer again.

Using Sleep Timer

With the Sleep Timer, you can fall asleep to music. You can set the Sleep Timer when the unit is turned on.

How the Sleep Timer actually works

The unit automatically turns off after the specified time length passes.

 
On the remote control ONLY:

1 Press **SLEEP**.

The time length until the shut-off time appears and the **SLEEP** indicator lights up on the display.



- Each time you press the button, the time length changes as follows:



2 Wait for about 5 seconds after specifying the time length.

To check the remaining time until the shut-off time, press **SLEEP** once so that the remaining time until the shut-off time appears for about 5 seconds.

To change the shut-off time, press **SLEEP** repeatedly until the desired time length appears on the display.

To cancel the setting, press **SLEEP** repeatedly until the **SLEEP** indicator goes off.

- The Sleep Timer is also canceled when you turn off the unit.



- **If you set the Sleep Timer after the Daily Timer starts playing the selected source**
The Daily Timer is canceled. When the Sleep Timer shut-off time comes, the unit will be turned off.
- **If you set the Sleep Timer after the Recording Timer starts recording**
The Recording Timer is canceled, but recording continues until the Sleep Timer shuts off the power.

Maintenance


To get the best performance from the unit, keep your discs, tapes, and mechanism clean.

Cleaning the unit

- **Stains on the unit**
Should be wiped off with a soft cloth. If the unit is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- **Since the unit may deteriorate in quality, become damaged or have its paint peel, be careful about the following.**
 - DO NOT wipe it with a rough cloth.
 - DO NOT wipe it strongly.
 - DO NOT wipe it with thinner or benzine.
 - DO NOT apply any volatile substances such as insecticides to it.
 - DO NOT allow any rubber or plastic to remain in contact with it for a long time.

Handling discs

- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.
- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.

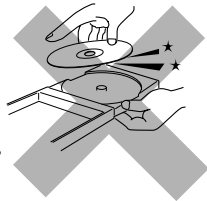

To clean the disc


Wipe the disc with a soft cloth in a straight line from center to edge.



DO NOT use any solvent—such as conventional record cleaner, spray, thinner, or benzine—to clean the disc.

Handling cassette tapes

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotating.
- If the tape is loose, it may get stretched, cut, or caught in the cassette.
- Be careful not to touch the tape surface.
- Avoid storing tapes in the following places:
 - In dusty places
 - In direct sunlight or heat
 - In moist areas
 - On a TV or speaker
 - Near a magnet

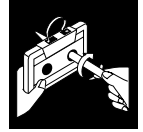


To keep the best recording and playback sound quality

If the heads, capstans, and pinch rollers of the cassette deck become dirty, the following will occur:

- Impaired sound quality
- Discontinuous sound
- Fading
- Incomplete erasure
- Difficulty in recording

To clean the heads, capstans, and pinch rollers

Use a cotton swab moistened with alcohol.

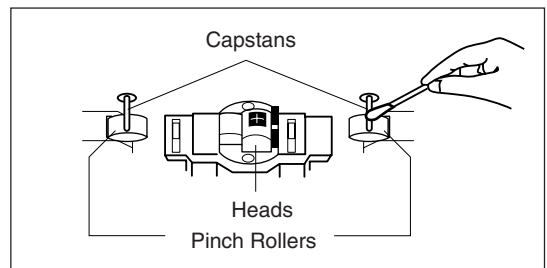

To demagnetize the heads

Turn off the unit, and use a head demagnetizer (available at electronics and audio shops).

Troubleshooting

If you are having a problem with your unit, check this list for a possible solution before calling for service. If you cannot solve the problem from the hints given here, or the unit has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Cause	Action
No sound is heard.	<ul style="list-style-type: none"> • Connections are incorrect or loose. • Headphones are connected. 	<ul style="list-style-type: none"> • Check all connections and make corrections. (See pages 6 – 9.) • Disconnect the headphones.
Hard to listen to broadcasts because of noise.	<ul style="list-style-type: none"> • Antennas are disconnected. • The AM loop antenna is too close to the unit. • The FM antenna is not properly extended and positioned. 	<ul style="list-style-type: none"> • Reconnect the antennas correctly and securely. • Change the position and direction of the AM loop antenna. • Extend the FM antenna to the best position.
The disc does not play.	The disc is placed upside down.	Place the disc with the label side up.
The disc sound is discontinuous.	The disc is scratched or dirty.	Clean or replace the disc. (See page 25.)
The cassette holder cannot be opened.	Power from the power cord has been cut off while the tape was running.	Plug in the power cord, then turn on the unit.
Impossible to record.	Small tabs on the back of the cassette are removed.	Cover the holes with adhesive tape.
Operations are disabled.	The built-in microprocessor may malfunction due to external electrical interference.	Unplug the power cord and then plug it back in.
Unable to operate the unit from the remote control.	<ul style="list-style-type: none"> • The path between the remote control and the remote sensor on the unit is blocked. • The batteries are exhausted. 	<ul style="list-style-type: none"> • Remove the obstruction. • Replace the batteries.

Additional Information

Description of the PTY codes:

NEWS:	News.
AFFAIRS:	Topical program expanding or enlarging upon the news—debate, or analysis.
INFO:	Program the purpose of which is to impart advice in the widest sense.
SPORT:	Program concerned with any aspect of sports.
EDUCATE:	Educational programs.
DRAMA:	All radio plays and serials.
CULTURE:	Programs concerning any aspect of national or regional culture, including language, theater, etc.
SCIENCE:	Programs about natural sciences and technology.
VARIED:	Used for mainly speech-based programs such as quizzes, panel games and personality interviews.
POP M:	Commercial music of current popular appeal.
ROCK M:	Rock music.
EASY M:	Current contemporary music considered to be “easy-listening.”
LIGHT M:	Instrumental music, and vocal or choral works.
CLASSICS:	Performances of major orchestral works, symphonies, chamber music, etc.
OTHER M:	Music not fitting into any of the other categories.
WEATHER:	Weather reports and forecasts.
FINANCE:	Stock Market reports, commerce, trading etc.
CHILDREN:	Programs targeted at a young audience.
SOCIAL:	Programs about sociology, history, geography, psychology and society.
RELIGION:	Religious programs.
PHONE IN:	Involving members of the public expressing their views either by phone or at a public forum.
TRAVEL:	Travel information.
LEISURE:	Programs about recreational activities.
JAZZ:	Jazz music.
COUNTRY:	Songs which originate from, or continue the musical tradition of the American Southern States.

NATION M:	Current popular music of the nation or region in that country’s language.
OLDIES:	Music from the so-called “golden age” of popular music.
FOLK M:	Music which has its roots in the musical culture of a particular nation.
DOCUMENT:	Program concerning factual matters, presented in an investigative style.
TEST:	Broadcasts for testing emergency broadcast equipment or receiver.
ALARM:	Emergency announcement.

Classification of the PTY codes for some FM stations may be different from the above list on this page.

Alarm function

If an “ALARM” (Emergency) signal is received from a station while listening to the radio, the unit automatically switches to the station broadcasting the “ALARM” signal, except when you are listening to non-RDS stations—all AM (MW) and some FM stations.

Test function

The “TEST” signal is used for testing the “ALARM” signal.

Therefore, it makes the unit work in the same way as the “ALARM” signal does.

If a “TEST” signal is received from a station while listening to the radio, the unit automatically switches to the station broadcasting the “TEST” signal, except when you are listening to non-RDS stations—all AM (MW) and some FM stations.

Specifications

Amplifier

Output Power:
20 W (10 W + 10 W) at 4 Ω (10% THD)
Audio input sensitivity/Impedance (at 1 kHz)
AUX: 500 mV/48.75 k Ω
Speakers/Impedance: 4 Ω

Tuner

FM tuning range: 87.50 MHz – 108.00 MHz
AM tuning range:
MW: 522 kHz – 1 629 kHz

CD player

Dynamic range: 85 dB
Signal-to-noise ratio: 90 dB
Wow and flutter: Immeasurable

Cassette deck

Frequency response:
Normal (type I): 50 Hz – 15 000 Hz
Wow and flutter: 0.15% (WRMS)

Speaker

Speaker units:
Full range: 8.0 cm cone x 1
Impedance: 4 Ω
Dimensions (approx.):
135 mm x 203 mm x 190 mm (W/H/D)
Mass (approx.): 1.7 kg each

Supplied Accessories

See page 6.

General

Power requirement:
AC IN: 230 V \sim , 50 Hz
DC IN: 12 V, 4 A
Power consumption: 35 W (at operation)
3.0 W (on standby)
Dimensions (approx.):
412 mm x 208 mm x 275 mm (W/H/D)
Mass (approx.): 6.5 kg

Design and specifications are subject to change without notice.



JVC
VICTOR COMPANY OF JAPAN, LIMITED



EN

© 2003 VICTOR COMPANY OF JAPAN, LIMITED



0103MWMMDWJEM

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>