



COLOUR TELEVISION INSTRUCTIONS

Thank you for buying this JVC colour television.

To make sure you understand how to use your new TV, please read this manual thoroughly before you begin.

- AV-16N311**
- AV-21V311**
- AV-21V331**
- AV-21W311**
- AV-21Y311**
- AV-25V311**
- AV-25V331**
- AV-29V311**
- AV-29V331**



Contents	
Safety precautions	2
Preparation	3
1 Confirm which remote control you have ..	3
2 Insert the batteries into the remote control ..	3
3 Connecting the aerial and VCR	4
4 Connecting other devices	5
5 Connect the power cord to the AC outlet	5
6 SETUP TOUR	6
Basic operation	7
Remote control buttons and functions	8
MUTING button	8
BASS button	8
PICTURE BOOSTER button	8
COLOUR SYSTEM button	8
SOUND SYSTEM button	8
CINEMA SURROUND button	9
DISPLAY button	9
ECO SENSOR button	9
PICTURE MODE button	10
OFF TIMER button	10
RETURN + button	10
CHANNEL SCAN button	11
FAVORITE CH button	11
Using the TV's menus	12
Basic operation	12
INPUT	13
PICTURE TILT	13
VNR	13
COMPRESS (16:9)	13
AUTO SHUTOFF	14
CHILD LOCK	14
BLUE BACK	14
VIDEO-2 SET	14
AUTO CH PRESET	15
SETUP TOUR	15
LANGUAGE	15
MANUAL CH PRESET	16
SKIP	17
SUPER BASS	17
Picture Adjustments	17
Sound Adjustments	17
AI VOLUME	18
FAVORITE CH SETTING	18
VIDEO SETTING	19
AI ECO SENSOR	19
AI ECO DISPLAY	19
Attaching the Twin Port Bass Blaster Unit	20
TV buttons and parts	21
Using the buttons on the TV	22
Troubleshooting	23
Specifications	24



Safety precautions


WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

TO ENSURE PERSONAL SAFETY, OBSERVE THE FOLLOWING RULES REGARDING THE USE OF THIS TV.

- Operate only from the power source specified on the TV.
- Avoid damaging the power cord and main plug. When you unplug the TV, pull it out by the main plug. Do not pull on the power cord.
- Never block or cover the cabinet opening for ventilation. Never install the TV where good ventilation is unattainable. When installing this TV, leave spaces for ventilation around the TV more than the minimum distances shown in the diagram.
- Do not allow objects or liquid into the cabinet openings.
- In the event of a fault, unplug the TV and bring to JVC service centre. Do not attempt to repair it by yourself or remove the rear cover.
- The surface of the TV screen is easily damaged. Be very careful with it when handling the TV. Should the TV screen become soiled, wipe it with a soft dry cloth. Never rub it forcefully. Never use any cleaner or detergent on it.
- When you don't use this TV for a long period of time, be sure to disconnect the power plug from the AC outlet.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

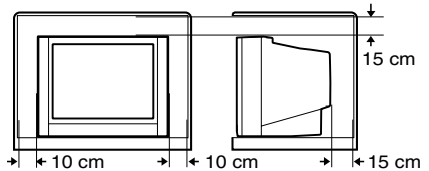

WARNING

< AV-21W311 only >

A removable plastic cover is fixed to the television's front Audio/Video connector. To prevent this cover from being accidentally swallowed by babies or children, remove it from the television and store it in a safe place. If the cover is swallowed seek the advice of a doctor immediately.

< AV-21V331/AV-25V331/AV-29V331 >

The Twin Port Bass Blaster Unit is packaged together with the TV.
Before you use the TV, mount the Twin Port Bass Blaster Unit correctly on the TV.


Preparation

1 Confirm which remote control you have

Your TV comes with one of the three remote controls shown below. Functions you can operate differ depending on the type of remote control.


RM-C1306

For TV model:
AV-21V311
AV-21W311
AV-25V311
AV-29V311

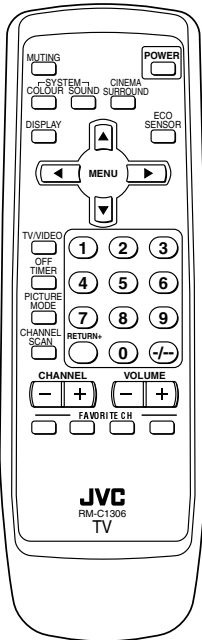


RM-C1308

For TV model:
AV-21V331
AV-25V331
AV-29V331

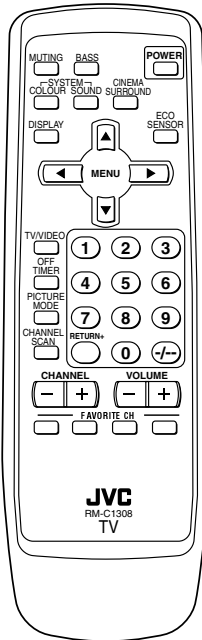

RM-C1313

For TV model:
AV-16N311
AV-21Y311

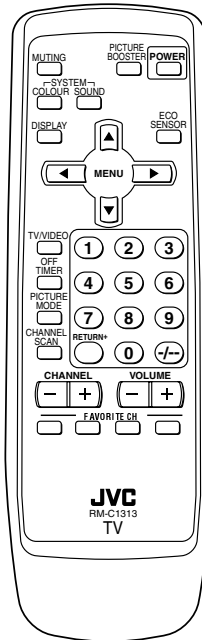

2 Insert the batteries into the remote control


Correctly insert two batteries, observing the \oplus and \ominus polarities and inserting the \ominus end first.

CAUTION:

Follow the cautions printed on the batteries.

Notes:

- Use AA/R6/UM-3 dry cell batteries.
- If the remote control does not work properly, fit new batteries.
The supplied batteries are for testing, not regular use.

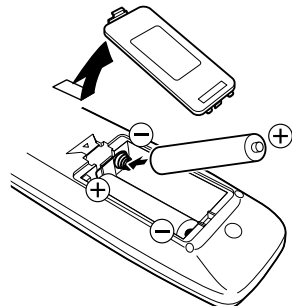

Preparation

3 Connecting the aerial and VCR


- Read the manuals provided with the devices. Depending on the device, the connection method may be different from the diagrams. Also the device settings may need to change depending on the connection method.
- Turn off all the devices including the TV.
- Connecting cables are not supplied.
- When connecting monaural audio to the TV, use the L/MONO jack.
- The AV-21Y311 and AV-16N311 are supplied with rod aerial but without matching aerial adapters.
- You can connect an S-VIDEO compatible device (such as an S-VHS VCR) to the S-CONNECTOR with an S-VIDEO cable and enjoy the high quality picture of the S-VIDEO signal (Y/C signal). In that case, do not connect it to the TV with a video cable.
- If you connect the VCR to the TV only with an aerial cable, you should preset the video channel from the VCR to the AV channel (channel number 0) on this TV. See "MANUAL CH PRESET" on page 16 and preset it manually.

Connecting the aerial

To install rod aerial:

Install into the top-rear aerial holder. Once installed, it cannot be removed.

VHF/UHF outdoor aerial

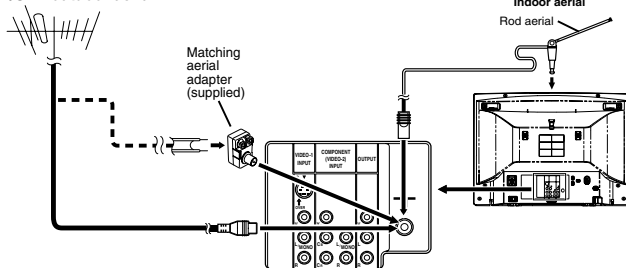


• Illustration of AV-21Y311



Connecting the aerial and VCR

VHF/UHF outdoor aerial


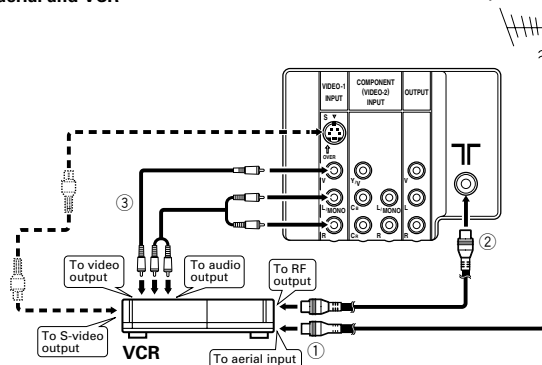


Preparation

4 Connecting other devices

If you are not connecting any other devices, skip step 4 and perform step 5.

- Use the headphones with a stereo mini jack (3.5 mm in diameter). When you connect the headphones, the TV speakers go off.
- The OUTPUT terminal outputs the video and sound signals which you are viewing on the TV. You can dub them onto the VCR connected to the OUTPUT terminal. (The OUTPUT terminal cannot output S-VIDEO signals or component video signals. Also it cannot output any signals when the TV is turned off.)
- Connect components outputting a component signal (Y/Cb/Cr signal), such as a DVD player, to the VIDEO-2 terminal, and set VIDEO-2 SET function to "COMPONENT". (See page 14.)
- The following illustrations are for the AV-21V311/AV-21V331/AV-25V311/AV-25V331. Your TV's front and rear panels may not look exactly like the illustrations.

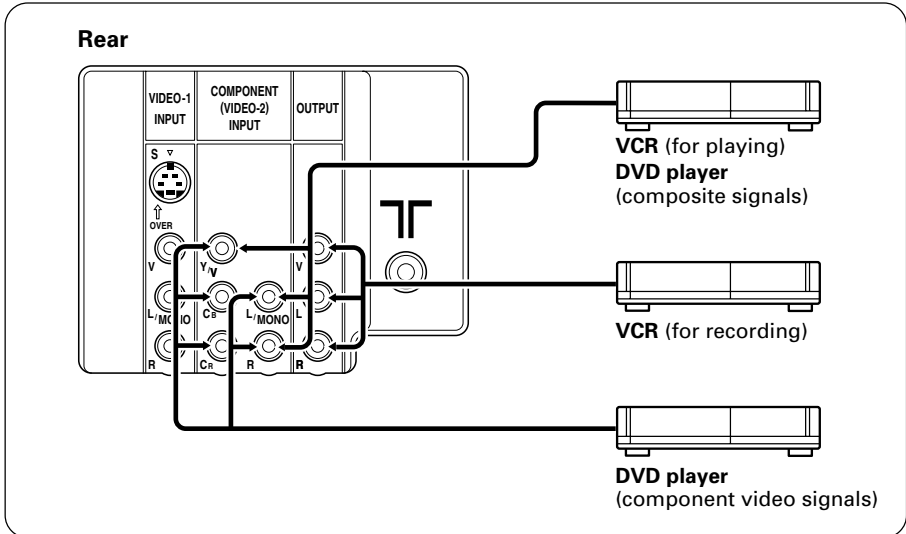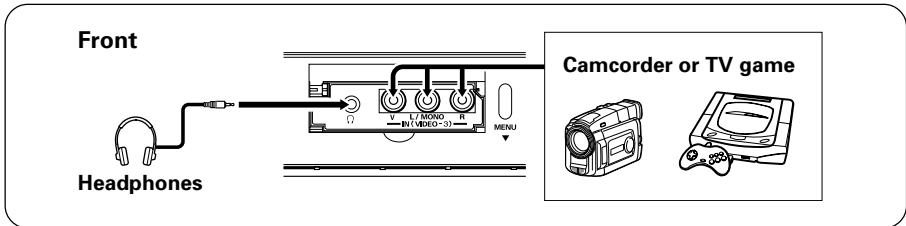

5 Connect the power cord to the AC outlet

Operate only from the power source indicated on the rear of the TV.

6 SETUP TOUR

When the TV is first turned on, it enters the SETUP TOUR mode, and the JVC logo is displayed. Follow the instructions on the on-screen display to perform the SETUP TOUR.


- In case of resetting that the reason for such as removal, you can set the AUTO CH PRESET function on the "MENU 3" menu. For details, see page 15.

1 Press the Main power button on the TV.


The POWER lamp lights. After the JVC logo has been displayed, the TV automatically switches to the language setting mode.



2 Press the CHANNEL +/- or the MENU </> buttons to select the on-screen language.

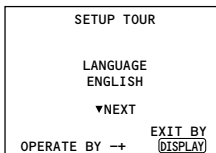


3 The AUTO PROGRAMMING function will start and the indicator blinks.

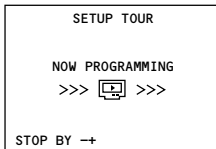


- To stop the AUTO PROGRAMMING function, press the CHANNEL +/- or the MENU </> buttons.

When all the TV channels that can be received on your TV have been preset, the display goes out and the AUTO PROGRAMMING function operation is completed.

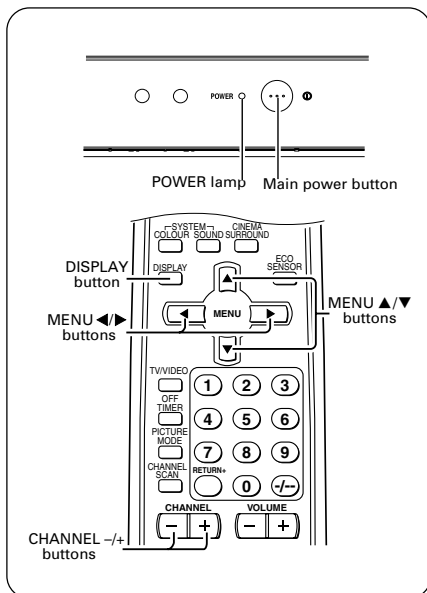


- If a TV channel you want to view is not set to the channel, set it with the MANUAL CH PRESET function. For details, see page 16.

4 Upon the completion of AUTO PROGRAMMING function, the message below is displayed.

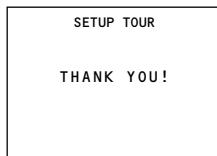

Basic operation

The illustration below is for the remote control RM-C1308. Your remote control may not look exactly like the illustration.

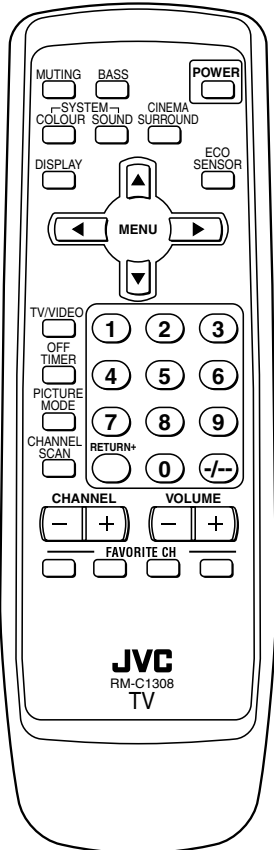

1 Press the POWER button to turn your TV on.

- If your TV does not turn on, press the Main power button on the TV, then press the POWER button again.
- You can also turn on your TV by pressing any of the following buttons;
 - the CHANNEL $-/+$ button
 - the Number buttons
 - the TV/VIDEO button

2 Select a channel.

- Press the CHANNEL $-/+$ button.
 - Up/down selection cannot be selected for channels to which the SKIP has been set to "YES".
See page 17.
- Press the Number buttons to enter the channel number.
 - If you want to enter a two-digit number, press the $-/--$ button to select the two digit mode "--", then enter the channel number.

3 Press the VOLUME $-/+$ button to adjust the sound.

4 To turn your TV off, press the POWER button.

- We recommend that you press the Main power button on the TV to turn the main power off if you do not plan to use your TV for a long time or if you wish to save energy.

If the picture is not clear:

Press the COLOUR SYSTEM button to select another colour system, see page 8.

If the sound is not clear:

Press the SOUND SYSTEM button to select another sound system, see page 8.

Viewing Images from an External Device:

Press the TV/VIDEO button to select the VIDEO mode.

- You can also use the INPUT function to select the VIDEO mode. For details, refer to page 13.

Remote control buttons and functions

MUTING button

You can turn the sound off instantly.

Press this button.

To turn the sound on, press this button again.

BASS button

< AV-21V331/AV-25V331/AV-29V331 only >

You can enjoy a powerful bass sound by using the BASS (Bass Reflex) function.

Press this button to turn the BASS function on or off.

- To use this function, you must first mount the Twin Port Bass Blaster Unit packaged with the TV on top of the TV. For details, see page 20.

PICTURE BOOSTER button

< AV-16N311/AV-21Y311 only >

When the picture is unclear because the reception level of the TV signal is low, activating the Picture Booster improves the picture clarity in some situations. Repeatedly press the PICTURE BOOSTER button to select the desired mode.

HIGH:

The Picture Booster is functioning at maximum.

LOW:

The Picture Booster is functioning at minimum.

OFF:

 
The Picture Booster is off.

- If the picture becomes abnormal when you set the Picture Booster to **HIGH**, then set it to **LOW** or **OFF**.

COLOUR SYSTEM button

If the picture is not clear or no colour appears, change the current colour system to another colour system.

Press this button to select the colour system.



AUTO:

Automatic colour system selection.

- For the colour systems in each country or region, see the table "Broadcasting systems" on Back cover.
- If the picture is not normal in the AUTO mode, change the AUTO mode to another colour system.

SOUND SYSTEM button

If the sound is not clear even when the picture appears normal, change the current sound system to another sound system.

Press this button to select the sound system.



- For the sound systems in each country or region, see the table "Broadcasting systems" on Back cover.
- You cannot select any sound system when in a VIDEO mode.

Remote control buttons and functions

CINEMA SURROUND button

< AV-21V311/AV-21V331/AV-21W311/
AV-25V311/AV-25V331/AV-29V311/
AV-29V331 only >

You can enjoy an enhanced sound for a wider audience by using CINEMA SURROUND function.

Press this button to select one of the CINEMA SURROUND mode.

HIGH/LOW:

When you listen to the stereo sound, please select HIGH mode or LOW mode. You can enjoy the sound for a wider audience similar to the experience at the theatre.

- In case that you setting up the CINEMA SURROUND function to HIGH mode, there may be slight volume distortion. In case that occurs, please switch the HIGH mode to LOW mode, the effect of CINEMA SURROUND functions will be less noticeable, however, the volume distortion will be corrected.

MONO SURROUND:

Select the MONO SURROUND mode, when you listen to the mono sound. You can enjoy the sound for a wider audience similar to stereo sound.

OFF:

The CINEMA SURROUND function swiches off.

DISPLAY button

You can continuously display the current channel number or VIDEO mode on the screen.

Press this button.

To turn the display off, press this button again.

- When selecting a VIDEO mode with no signal, indication of the VIDEO mode becomes fixed on the screen.

ECO SENSOR button

You can adjust this TV so that the screen automatically adjusts to the optimum contrast according to the brightness of your room. This function reduces eye strain and the power consumption of this TV.

Press this button to select the desired mode.

AI ECO SENSOR 1:

The AI ECO SENSOR function switches on.

Usually, it is recommended to watch the TV in this mode.

AI ECO SENSOR 2:

The AI ECO SENSOR function switches on.

If you feel the screen in the “AI ECO SENSOR 1” mode is too dark, select this mode.

AI ECO SENSOR OFF:

The AI ECO SENSOR function switches off.

- You can display on the screen the effect of the AI ECO SENSOR function. For details, see “AI ECO DISPLAY” on page 19.

Remote control buttons and functions

PICTURE MODE button

You can select one of three picture adjustment settings as you like.

Press this button to select a mode.

BRIGHT:

Heightens contrast and sharpness.

STANDARD:

Standardizes picture adjustments.

SOFT:

Softens contrast and sharpness.

- Pressing this button returns all the picture settings in "MENU 4" to their default settings.

OFF TIMER button

You can set the TV to automatically turn off after a set time.

Press this button to select the period of time.

- You can set the period of time to a maximum of 120 minutes in 10 minute increments.
- 1 minute before the OFF TIMER function turns off the TV, "GOOD NIGHT!" appears.

To display the remaining time, press this button once.

To cancel the OFF TIMER function, press this button to set the period of time to "0".

- The OFF TIMER function will not turn off the TV's main power.

RETURN + button

You can set a channel you frequently view to the Return Channel and you can view that channel at any time with one-touch.

To set the channel to the Return Channel:

- 1 Select the channel you want to set to the Return Channel.**
- 2 Press this button and hold until the message "RETURN PLUS PROGRAMMED!" appears.**
 - When you turn off the TV, the Return Channel setting is canceled.

To view the Return Channel:

Press this button.

- You can view two channels (current channel and Return Channel) alternately by pressing this button.

To cancel the Return Channel setting:

Press this button and hold until the message "RETURN PLUS CANCELED!" appears.

If no channel is set to the Return Channel:

You can view the channel selected right before the current channel by pressing this button.

Remote control buttons and functions

CHANNEL SCAN button

You can quickly view all TV channels programmes that you can view on your TV, and search for the programme you want to view.

1 Press this button to start scanning TV channels.

The TV channel programmes are each displayed for several seconds.

- The programmes of TV channels for which the SKIP function is set to "YES" are not displayed.

2 When you find the programme you want to view, press this button again to stop scanning.

FAVORITE CH button


You can correlate 4 channels out of 99 channels (PR01-PR99) with FAVORITE CH buttons RED, GREEN, YELLOW and BLUE.

Press one of the FAVORITE CH buttons for more than 3 seconds to correlate currently watching channel. After the channel and button are correlated, you can directly select favorite channel by the correlated button.

- When MENU is displayed, FAVORITE CH cannot be correlated.
- Correlation of FAVORITE CH button and the channel cannot be reset eventhough the main power is turned off.

Using the TV's menus


This TV has a number of functions you can operate using the menus. To use all your TV's functions fully, you need to understand how to use the menus.

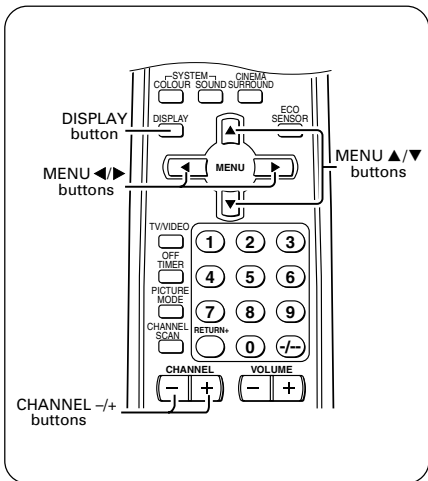

- 3 Repeatedly press the **MENU ▲/▼** buttons to select a desired function.
- 4 Press the **CHANNEL -/+** or the **MENU ◀/▶** buttons to change function settings.

Example:


Changes the AUTO SHUTOFF setting.

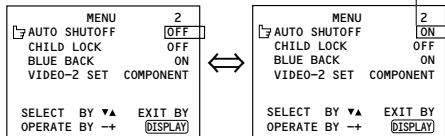

- With some functions, the operation method may differ.

Basic operation

- 1 Press the **MENU ▲/▼** buttons. One of the 6 menus is displayed.

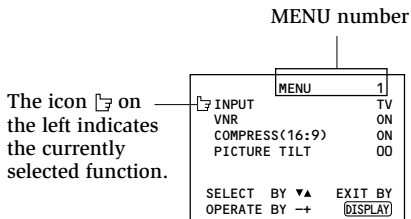

- 2 Repeatedly press the **MENU ▲/▼** buttons to display a desired menu.

- If you hold down the ▼ button, the next menu is displayed.
- If the selected function is on the first line, pressing the ▲ button displays the preceding menu.

- 5 Press the **DISPLAY** button to turn the display off.

- To operate a menu using the buttons on the front panel of the TV, refer to "Operating menus" on page 22.

Using the TV's menus

INPUT

You can view images from VCRs or other devices connected to your TV.

- 1 Press **MENU ▲/▼** to display the "MENU 1" menu, then select "INPUT".

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY →+ (DISPLAY)	

- 2 Press **CHANNEL -/+** or **MENU ◀/▶** to select "VIDEO-1", "VIDEO-2" or "VIDEO-3".

TV mode changes to VIDEO mode.

PICTURE TILT

< AV-29V311/AV-29V331 only >

There are cases where the Earth's magnetic force may make the picture tilt. If this happens, you can correct the picture tilt.

- 1 Press **MENU ▲/▼** to display the "MENU 1" menu, then select "PICTURE TILT".

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY →+ (DISPLAY)	

- 2 Continue pressing **CHANNEL -/+** or **MENU ◀/▶** until the picture becomes level.

VNR

You can reduce picture noise.

- 1 Press **MENU ▲/▼** to display the "MENU 1" menu, then select "VNR".

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY →+ (DISPLAY)	

- 2 Press **CHANNEL -/+** or **MENU ◀/▶** to select "ON".

To cancel the VNR function, select "OFF".

COMPRESS (16:9)


This function converts a normal picture (4:3 aspect ratio) into a wide picture (16:9 aspect ratio).

Use for pictures with a 16:9 aspect ratio that have been squeezed into a normal picture (4:3 aspect ratio), to restore their original dimensions.

- 1 Press **MENU ▲/▼** to display the "MENU 1" menu, then select "COMPRESS (16:9)".

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY →+ (DISPLAY)	

 - 2 Press **CHANNEL -/+** or **MENU ◀/▶** to select "ON".

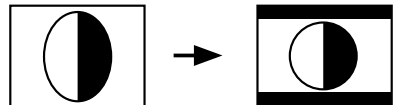

To cancel the COMPRESS (16:9) function, select "OFF".

Using the TV's menus

AUTO SHUTOFF

You can set your TV to turn off if no signals are received for about 15 minutes or longer after the end of a broadcast.

- 1 Press **MENU ▲/▼** to display the "MENU 2" menu, then select "AUTO SHUTOFF".

MENU	2
AUTO SHUTOFF	ON
CHILD LOCK	ON
BLUE BACK	ON
VIDEO-2 SET	COMPONENT
SELECT BY ▼▲	EXIT BY
OPERATE BY →←	DISPLAY

- 2 Press **CHANNEL -/+** or **MENU ◀/▶** to select "ON".

To cancel the AUTO SHUTOFF function, select "OFF".

- The AUTO SHUTOFF function does not turn off the TV's main power.
- The AUTO SHUTOFF will not work for a VIDEO mode.

CHILD LOCK

You can disable the front control buttons of the TV.

When this function is set to "ON", the TV can be operated using only the remote control.

Use this function to prevent children from operating the TV without parental consent.

- 1 Press **MENU ▲/▼** to display the "MENU 2" menu, then select "CHILD LOCK".

MENU	2
AUTO SHUTOFF	ON
CHILD LOCK	ON
BLUE BACK	ON
VIDEO-2 SET	COMPONENT
SELECT BY ▼▲	EXIT BY
OPERATE BY →←	DISPLAY

- 2 Press **CHANNEL -/+** or **MENU ◀/▶** to select "ON".

To cancel the CHILD LOCK function, select "OFF".

- The CHILD LOCK function is canceled when you turn the power off.

BLUE BACK

If no signal is being received or the signal is very weak, a blue screen automatically becomes the picture background.

If you wish to continue viewing the poor picture, you must set the BLUE BACK function to "OFF".

- 1 Press **MENU ▲/▼** to display the "MENU 2" menu, then select "BLUE BACK".

MENU	2
AUTO SHUTOFF	ON
CHILD LOCK	ON
BLUE BACK	ON
VIDEO-2 SET	COMPONENT
SELECT BY ▼▲	EXIT BY
OPERATE BY →←	DISPLAY

- 2 Press **CHANNEL -/+** or **MENU ◀/▶** to select "ON".

To cancel the BLUE BACK function, select "OFF".

VIDEO-2 SET

Set the VIDEO-2 SET correctly according to the video signal input from the external device connected to the VIDEO-2 terminal. If this setting is incorrect, images will not be displayed.

- 1 Press **MENU ▲/▼** to display the "MENU 2" menu, then select "VIDEO-2 SET".

MENU	2
AUTO SHUTOFF	ON
CHILD LOCK	ON
BLUE BACK	ON
VIDEO-2 SET	COMPONENT
SELECT BY ▼▲	EXIT BY
OPERATE BY →←	DISPLAY

- 2 Set the VIDEO-2 SET according to the video signal input from the VIDEO-2 terminal.

If a normal video signal (composite video signal) is input:

Press the CHANNEL -/+ or the MENU ◀/▶ buttons to select "VIDEO".

If a component video signal (Y/C_B/C_R signals) is input:


Press the CHANNEL -/+ or the MENU ◀/▶ buttons to select "COMPONENT".

Using the TV's menus

AUTO CH PRESET

You can automatically preset all TV channels that can be received by your TV to channels.

- 1 Press **MENU ▲/▼** to display the "MENU 3" menu, then select "AUTO CH PRESET".

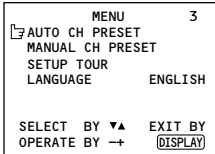

- 2 Press **CHANNEL -/+** or **MENU ◀▶** to start the AUTO CH PRESET function.

">>> ON SEARCH" is displayed on the screen.

When all the TV channels that can be received on your TV have been preset, the display goes out and the AUTO CH PRESET function operation is completed.

To stop the AUTO CH PRESET:


Press the **CHANNEL -/+** or the **MENU ◀▶** buttons.

- The AUTO CH PRESET function does not preset a TV channel to the AV channel (channel number 0).
- If the TV cannot preset the TV channel you want to view, preset it manually. For details, see "MANUAL CH PRESET" on page 16.

SETUP TOUR

You can start the SETUP TOUR function.

- 1 Press **MENU ▲/▼** to display the "MENU 3" menu, then select "SETUP TOUR".

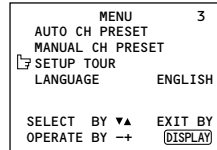


- 2 Press **CHANNEL -/+** or **MENU ◀▶**.
JVC logo appears and the SETUP TOUR function will start.
For details, see page 6.

LANGUAGE

You can select the language for the on-screen display.

- 1 Press **MENU ▲/▼** to display the "MENU 3" menu, then select "LANGUAGE".

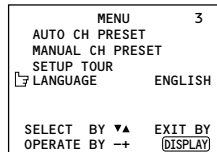


- 2 Press **CHANNEL -/+** or **MENU ◀▶** to select language.
The on-screen display indications are in the selected language.

Using the TV's menus


MANUAL CH PRESET

You can manually preset desired TV channels to desired channels.

- 1 Press MENU ▲/▼ to display the "MENU 3" menu, then select "MANUAL CH PRESET".

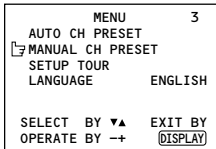

- 2 Press CHANNEL -/+ or MENU ◀/▶. The sub-menu is displayed.

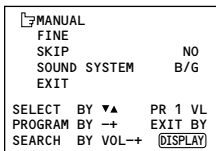

- The channel number is displayed as a PR number. For example, channel 1 will be displayed as PR 1. However, the AV channel will be displayed as AV.

- 3 Press CHANNEL -/+ or MENU ◀/▶ to select the channel number.

- 4 Press VOLUME -/+ to start searching for the TV channel.


">>>" or "<<<" is displayed on the screen.

When the TV finds a TV channel, the ">>>" or "<<<" display goes out, and the TV channel is preset to the currently selected channel number.

- If the TV channel you want to preset is not displayed, repeat step 4 until the TV finds the TV channel you want to preset.
- To stop the MANUAL CH PRESET function, press any button other than the VOLUME -/+ button.

If the picture is not clear:
Fine-tune the TV channel.


- 1 Press MENU ▲/▼ to select "FINE".

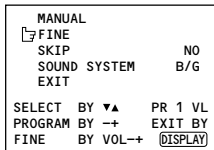

- 2 Hold VOLUME -/+ down to fine-tune the TV channel so that the best image is displayed on screen. ">" or "<" indicates that the TV is fine-tuning the TV channel.

If the sound is not clear:

- 1 Press MENU ▲/▼ to select "SOUND SYSTEM".

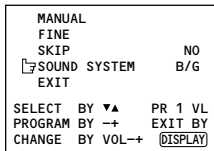

- 2 Press VOLUME -/+ to select the appropriate sound system.
 - For the sound systems in each country or region, refer to the table "Broadcasting systems" on Back cover.

- 5 Press MENU ▲/▼ to select "MANUAL".
- 6 Repeat steps 3 to 5 if you want to preset another TV channel to a channel.


Using the TV's menus

SKIP

You can set undesired channels to be skipped. Channels set to be skipped cannot be selected by the CHANNEL $-/+$ buttons or the CHANNEL SCAN button.

- Channels to which TV channels have not been preset are automatically set to be skipped.

- 1 Press MENU $\blacktriangle/\blacktriangledown$ to display the "MENU 3" menu, then select "MANUAL CH PRESET".
- 2 Press CHANNEL $-/+$ or MENU $\blacktriangle/\blacktriangledown$. The sub-menu is displayed.
- 3 Press MENU $\blacktriangle/\blacktriangledown$ to select "SKIP".

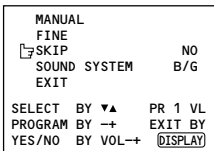


- 4 Press CHANNEL $-/+$ or MENU $\blacktriangle/\blacktriangledown$ to select the channel you want to skip.
- 5 Press VOLUME $-/+$ to select "YES". The channel is set to be skipped. To cancel the SKIP function, select "NO".
- 6 Repeat steps 4 and 5 if you want to set another channel to skip.

SUPER BASS

< AV21V331/AV-25V331/AV-29V331 only >

You can enjoy a powerful bass sound by using the SUPER BASS (Bass Reflex) function.

- 1 Press MENU $\blacktriangle/\blacktriangledown$ to display the "MENU 5" menu, then select "SUPER BASS".

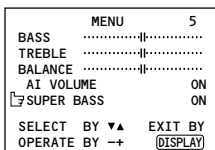


- 2 Press CHANNEL $-/+$ or MENU $\blacktriangle/\blacktriangledown$ to select "ON".

To cancel the SUPER BASS function, select "OFF".

Picture Adjustments

You can adjust the picture as you like.

- 1 Press MENU $\blacktriangle/\blacktriangledown$ to display the "MENU 4" menu.

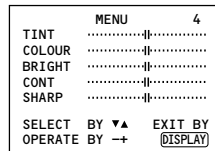

- 2 Press MENU \blacktriangledown to select an item and press CHANNEL $-/+$ or MENU $\blacktriangle/\blacktriangledown$ to adjust it.


TINT* - : Reddish + : Greenish
COLOUR - : Lighter + : Deeper
BRIGHT - : Darker + : Brighter
CONT - : Lower + : Higher
SHARP - : Softer + : Sharper

* TINT (tint) is displayed only when viewing images from NTSC3.58 or NTSC4.43 colour systems.

Sound Adjustments

You can adjust the sound as you like.

- 1 Press MENU $\blacktriangle/\blacktriangledown$ to display the "MENU 5" menu.

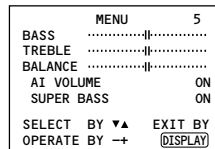


- 2 Press MENU \blacktriangledown to select an item and press CHANNEL $-/+$ or MENU $\blacktriangle/\blacktriangledown$ to adjust it.

BASS - : Weaker + : Stronger
TREBLE - : Weaker + : Stronger
BALANCE - : Left + : Right

AI VOLUME

You can prevent the sudden increase or decrease of volume that occurs when changing channels or switching VIDEO modes.

- 1 Press **MENU ▲/▼** to display the "MENU 5" menu, then select "AI VOLUME".

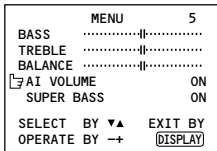

- 2 Press **CHANNEL -/+** or **MENU ◀/▶** to select "ON".


To cancel the AI VOLUME function, select "OFF".

- The AI VOLUME function may not operate as expected if the sound input level from a broadcast station (or video software) is extremely low.
- The AI VOLUME function for TV mode and VIDEO mode can be set separately. For example, you can set it to be off in TV mode and on in VIDEO mode. If you set the AI VOLUME function while viewing a TV channel, the setting is registered as the setting for TV mode. If you set the AI VOLUME function while viewing images from a VIDEO terminal, the setting is registered as the setting for VIDEO mode.

FAVORITE CH SETTING


You can set PICTURE MODE, VNR and PICTURE EFFECT functions for the favorite channels using FAVORITE CH SETTING menu.

- 1 Press **MENU ▲/▼** to display the "MENU 6" menu, then select "FAVORITE CH SETTING".

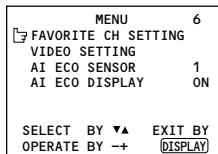

- 2 Press **CHANNEL -/+** or **MENU ◀/▶**.

The sub-menu is displayed.

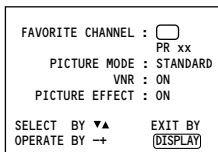

- 3 Press **CHANNEL -/+** or **MENU ◀/▶** to select one of the colours of "RED", "GREEN", "YELLOW" or "BLUE" assigned to FAVORITE CH button.
- 4 Press **MENU ▲/▼** to select "PICTURE MODE", then press **CHANNEL -/+** or **MENU ◀/▶** to select the picture mode of "BRIGHT", "STANDARD" or "SOFT".
- 5 Press **MENU ▲/▼** to select "VNR", then press **CHANNEL -/+** or **MENU ◀/▶** to select VNR "ON" or "OFF".
- 6 Press **MENU ▲/▼** to select "PICTURE EFFECT", then press **CHANNEL -/+** or **MENU ◀/▶** to select PICTURE EFFECT "ON" or "OFF".


- PICTURE MODE and VNR settings are changed only when you press the FAVORITE CH button while PICTURE EFFECT is ON. Otherwise, PICTURE MODE and VNR are not changed.

Using the TV's menus

VIDEO SETTING


You can set PICTURE MODE, VNR and PICTURE EFFECT functions for VIDEO mode using VIDEO SETTING menu.

- 1 Press **MENU ▲/▼** to display the "MENU 6" menu, then select "VIDEO SETTING".

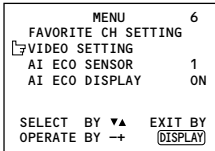

- 2 Press **CHANNEL -/+** or **MENU ◀/▶**.

The sub-menu is displayed.

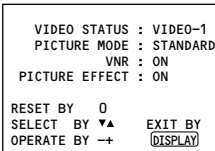

- 3 Press **CHANNEL -/+** or **MENU ◀/▶** to select "VIDEO-1", "VIDEO-2" or "VIDEO-3".

- 4 Press **MENU ▲/▼** to select "PICTURE MODE", then press **CHANNEL -/+** or **MENU ◀/▶** to select the picture mode of "BRIGHT", "STANDARD" or "SOFT".

- 5 Press **MENU ▲/▼** to select "VNR", then press **CHANNEL -/+** or **MENU ◀/▶** to select VNR "ON" or "OFF".


- 6 Press **MENU ▲/▼** to select "PICTURE EFFECT", then press **CHANNEL -/+** or **MENU ◀/▶** to select PICTURE EFFECT "ON" or "OFF".

- PICTURE MODE and VNR settings are changed only when VIDEO input mode is selected while PICTURE EFFECT is ON. Otherwise, PICTURE MODE and VNR are not changed.
- Press 0 button to reset the setting.

AI ECO SENSOR

You can enable this function so that the brightness of TV screen is automatically adjusted according to the brightness of your room.

- 1 Press **MENU ▲/▼** to display the "MENU 6" menu, then select "AI ECO SENSOR".

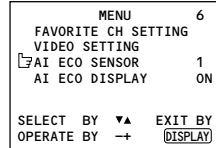


- 2 Press **CHANNEL -/+** or **MENU ◀/▶** to select "OFF", "1" or "2".

- For detailed description, see the "ECO SENSOR button" on page 9.

AI ECO DISPLAY

You can display on the screen the effect of the AI ECO SENSOR function.

- 1 Press **MENU ▲/▼** to display the "MENU 6" menu, then select "AI ECO DISPLAY".

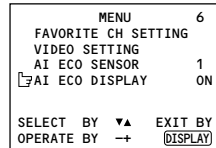

- 2 Press **CHANNEL -/+** or **MENU ◀/▶** to select "ON".

The clover mark indicating the brightness of your room is displayed for several seconds each time the brightness changes. The number of clover marks displayed on screen increases as your room becomes darker.

To cancel the AI ECO DISPLAY function, select "OFF".

Attaching the Twin Port Bass Blaster Unit

< AV-21V331/AV-25V331/AV-29V331 only >

The Twin Port Bass Blaster Unit is packaged together with the TV. Before you use the TV, mount the Twin Port Bass Blaster unit correctly on the TV.

Note:

- The BASS functions do not work unless the Twin Port Bass Blaster Unit is connected correctly to the TV. For details on the BASS functions, see page 8.



CAUTION:

- The Twin Port Bass Blaster Unit is just placed on top of the TV and is not held in place by a screw. When using the unit, pay attention to the following cautions. Otherwise, the unit or TV may fall over and be damaged, or cause unexpected injury.
 - Do not rest your hands or elbows on the Twin Port Bass Blaster Unit.
 - Do not move the TV with the Twin Port Bass Blaster Unit mounted on top of the TV. Before you move the TV, be sure to remove the unit.
 - Do not move the TV by holding the Twin Port Bass Blaster Unit.

- 1 Place the unit on top of the TV making sure that the mounting pin on the bottom of the unit fits into the mounting hole on the top of the TV.**


- When you mount the unit, make sure that the mounting pin fits properly into the mounting hole. Otherwise, it may slide off the top of the TV. This may cause damage or cause unexpected injury.

- 2 Firmly insert the Twin Port Bass Blaster Unit connector into the BASS SPEAKER OUT terminal.**

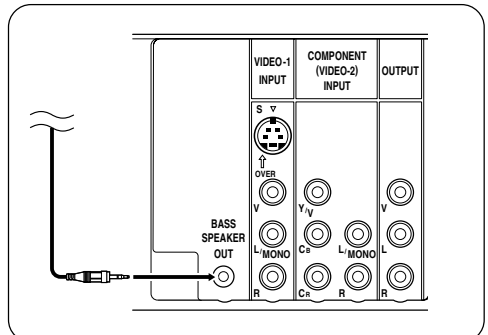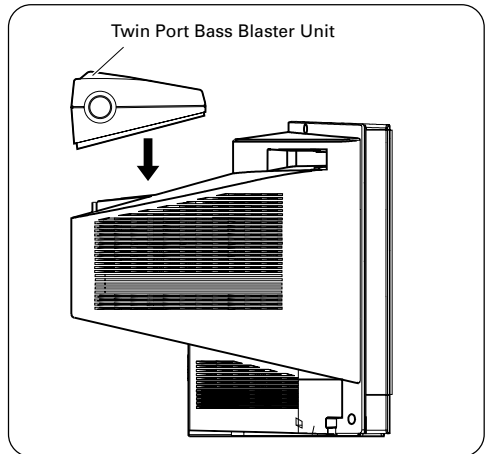


TV buttons and parts


< AV-29V311/AV-29V331 >

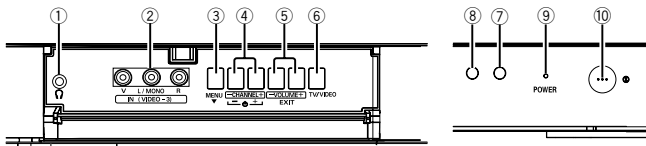


< AV-21Y311 >

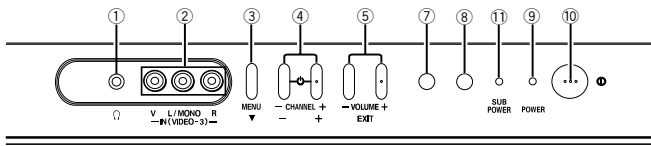


< AV-21V311/AV-21V331/AV-25V311/AV-25V331 >

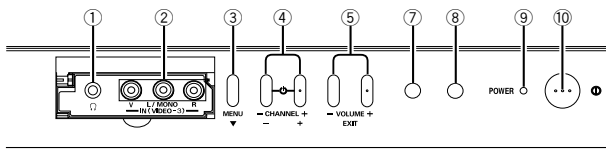

< AV-21W311 >

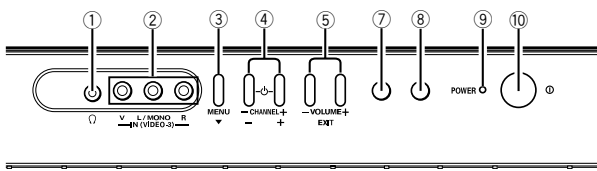

< AV-16N311 >

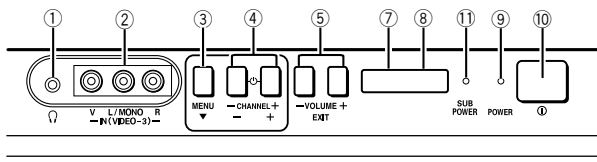

- ① Headphone jack
- ② VIDEO-3 terminal
- ③ MENU button
- ④ CHANNEL +/- buttons
- ⑤ VOLUME +/- buttons
- ⑥ TV/VIDEO button
- ⑦ ECO sensor
- ⑧ Remote control sensor

- ⑨ POWER lamp
- ⑩ Main power button
- ⑪ SUB POWER lamp

< AV-16N311/AV-21Y311 only >

When the main power is switched on, the POWER lamp turns red.

When the TV is turned on (the sub power is on), the SUB POWER lamp turns green.

Using the buttons on the TV

Basic operation

Check to make sure the CHILD LOCK function is set to "OFF". When the CHILD LOCK function is set to "ON", the TV cannot be operated using the front control buttons. For details, see "CHILD LOCK" on page 14.

- 1 Press CHANNEL $-/+$ to turn the TV on from standby mode.
- 2 Press CHANNEL $-/+$ to select a channel.
- 3 Press VOLUME $-/+$ to adjust the volume.
- 4 To turn your TV off, press the Main power button to turn off the TV's main power.

To change the TV mode to the VIDEO mode:

- Press the TV/VIDEO button if the TV has one. See page 7.
- If the TV has no TV/VIDEO button, select the VIDEO mode with the INPUT function in "MENU 1".


Operating menus

You can operate function in menus using the front control buttons on the TV.

- 1 Press MENU \blacktriangledown to display a menu.
- 2 Press MENU \blacktriangledown repeatedly to display the menu you want to use.
- 3 Press MENU \blacktriangledown to select the desired function or item.
- 4 Press CHANNEL $-/+$ or VOLUME $-/+$ to carry out the desired operation.
For details, see the description for each function.
- 5 Press VOLUME $-/+$ to turn the menu display off.

To turn the sub-menu display off:

- 1 Press MENU \blacktriangledown to select "EXIT".

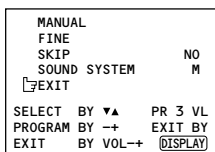

- 2 Press VOLUME $-/+$ to turn the display off.

Troubleshooting

If there is no picture or the TV does not operate normally, make sure the problem isn't due to the reasons indicated below.

If the problem persists even after taking the measures indicated, please contact a service technician.

Cannot turn the TV on

- Press the Main power button on the TV.
- Connect the power cord to the AC outlet.

The screen turns blue

- Is the BLUE BACK function on? (see page 14).

Remote control inoperable

- Replace the batteries. (see page 3).

Buttons on front of the TV do not work

- Switch the CHILD LOCK function off. (see page 14).

TV does not respond immediately

- Press the main power button on the TV to turn off the main power. Press the main power button again to turn on the TV. If the TV returns to a normal state, operation is normal.

The TV turns off suddenly

- Is the OFF TIMER function set to operate? (see page 10).
- Is the AUTO SHUTOFF function on? (see page 14).

Poor sound

- Press the SOUND SYSTEM button to select another sound system. (see page 8).
- Adjust the sound settings. (see page 17).

Poor picture

- Press the COLOUR SYSTEM button to select another colour system. (see page 8).
- Adjust the picture settings. (see page 17).
- Is a component signal output device, such as a DVD player, connected correctly? (see page 5).
- Is the VIDEO-2 SET function setting correct? (see page 14).
- If noise (snow) totally blocks out the picture, check the following.
 - Have the TV and aerial been connected properly?
 - Has the aerial cable been damaged?
 - Is the aerial pointing in the right direction?
 - Is the aerial itself faulty?
- If the TV or aerial suffer interference from other equipment, stripes or noise may appear in the picture. Move any equipment which can cause interference away from the TV.
- If the TV or aerial suffer interference from signals reflecting from mountains or buildings, double-pictures (ghosting) will occur. Change the aerial's direction or replace it with an aerial with better directionality.
- When a white and bright still image (such as a white dress) is displayed on the screen, the white part may look as if it is coloured. When the image disappears from the screen, the unnatural colours will also disappear.

The picture is tilted

< AV-29V311/AV-29V331 only >

- A picture may be tilted due to the influence of the earth's magnetism. In this case, use the PICTURE TILT function to adjust the tilt. (see page 13).

Specifications

Model	AV-16N311	AV-21Y311	AV-21W311
TV RF systems	B/G, D/K, M		
Colour systems	PAL, SECAM, NTSC3.58 / 4.43		
Channel and frequencies	VHF low channel (VL) = 46.25 to 168.25 MHz VHF high channel (VH) = 175.25 to 463.25 MHz UHF channel (U) = 471.25 to 863.25 MHz • Receives cable channels in mid band (X to Z, S1 to S10), super band (S11 to S20) and hyper band (S21 to S41).		
Power input	AC 110 to 240 V, 50 / 60 Hz (operating AC 90 to 260 V, 50 / 60 Hz)		
Power consumption	Maximum 82 W Average 56 W	Maximum 95 W Average 65 W	Maximum 126 W Average 81 W
Screen size (measured diagonally)	Picture tube 423 mm Visible area 380 mm	Picture tube 548 mm Visible area 508 mm	Picture tube 546.9 mm Visible area 508 mm
Audio output (Rated power output)	5 W + 5 W	5 W + 5 W	7 W + 7 W
Speakers	(5 cm x 9 cm) x 2	(6 cm x 12 cm) x 2	(6.5 cm x 13 cm) x 2
External input/output	VIDEO-1: VIDEO input AUDIO L/R input	S-VIDEO input, VIDEO input, AUDIO L/R input VIDEO-2: VIDEO input, AUDIO L/R input, COMPONENT VIDEO (Y/ C _B / C _R) input VIDEO-3: VIDEO input, AUDIO L/R input OUTPUT: VIDEO output, AUDIO L/R output Headphone jack: stereo mini jack (3.5 mm diameter)	
Dimension (W x H x D) (mm)	518 x 391.5 x 403	649 x 470.5 x 477.5	649 x 465.5 x 471.5
Weight	13 kg	21 kg	24.6 kg
Accessories	<ul style="list-style-type: none"> • Remote control unit: RM-C1313 x 1 • AA / R6 /UM - 3 dry cell battery x 2 • Matching aerial adapter x 1 • Rod aerial x 1 	<ul style="list-style-type: none"> • Remote control unit: RM-C1313 x 1 • AA / R6 /UM - 3 dry cell battery x 2 • Matching aerial adapter x 1 • Rod aerial x 1 	<ul style="list-style-type: none"> • Remote control unit: RM-C1306 x 1 • AA / R6 /UM - 3 dry cell battery x 2 • Matching aerial adapter x 1

Specifications

Model	AV-21V311	AV-21V331	AV-25V311
TV RF systems	B/G, D/K, M		
Colour systems	PAL, SECAM, NTSC3.58 / 4.43		
Channel and frequencies	VHF low channel (VL) = 46.25 to 168.25 MHz VHF high channel (VH) = 175.25 to 463.25 MHz UHF channel (U) = 471.25 to 863.25 MHz • Receives cable channels in mid band (X to Z, S1 to S10), super band (S11 to S20) and hyper band (S21 to S41).		
Power input	AC 110 to 240 V, 50 / 60 Hz (operating AC 90 to 260 V, 50 / 60 Hz)		
Power consumption	Maximum 126 W Average 81 W	Maximum 150 W Average 93 W	Maximum 164 W Average 102 W
Screen size (measured diagonally)	Picture tube 546.9 mm Visible area 508 mm	Picture tube 546.9 mm Visible area 508 mm	Picture tube 634 mm Visible area 590 mm
Audio output (Rated power output)	7 W + 7 W	7 W + 7 W + 13 W	7 W + 7 W
Speakers	(6.5 cm x 13 cm) x 2	(6.5 cm x 13 cm) x 2 13 cm round x 1	(6.5 cm x 13 cm) x 2
External input/output	VIDEO-1: S-VIDEO input, VIDEO input, AUDIO L/R input VIDEO-2: VIDEO input, AUDIO L/R input, COMPONENT VIDEO (Y/ C _B / C _R) input VIDEO-3: VIDEO input, AUDIO L/R input OUTPUT: VIDEO output, AUDIO L/R output Headphone jack: stereo mini jack (3.5 mm diameter)		
Dimension (W x H x D) (mm)	649 x 465.5 x 473.5	649 x 478 x 473.5	728 x 536 x 481.5
Weight	24.5 kg	26.9 kg	32.5 kg
Accessories	<ul style="list-style-type: none"> • Remote control unit: RM-C1306 x 1 • AA / R6 / UM - 3 dry cell battery x 2 • Matching aerial adapter x 1 	<ul style="list-style-type: none"> • Remote control unit: RM-C1308 x 1 • AA / R6 / UM - 3 dry cell battery x 2 • Matching aerial adapter x 1 	<ul style="list-style-type: none"> • Remote control unit: RM-C1306 x 1 • AA / R6 / UM - 3 dry cell battery x 2 • Matching aerial adapter x 1

Specifications

Model	AV-25V331	AV-29V311	AV-29V331
TV RF systems	B/G, D/K, M		
Colour systems	PAL, SECAM, NTSC3.58 / 4.43		
Channel and frequencies	VHF low channel (VL) = 46.25 to 168.25 MHz VHF high channel (VH) = 175.25 to 463.25 MHz UHF channel (U) = 471.25 to 863.25 MHz • Receives cable channels in mid band (X to Z, S1 to S10), super band (S11 to S20) and hyper band (S21 to S41).		
Power input	AC 110 to 240 V, 50 / 60 Hz (operating AC 90 to 260 V, 50 / 60 Hz)		
Power consumption	Maximum 184 W Average 112 W	Maximum 190 W Average 145 W	Maximum 212 W Average 145 W
Screen size (measured diagonally)	Picture tube 649 mm Visible area 597 mm	Picture tube 728 mm Visible area 676 mm	Picture tube 728 mm Visible area 676 mm
Audio output (Rated power output)	7 W + 7 W + 13 W	10 W + 10 W	7 W + 7 W + 13 W
Speakers	(6.5 cm x 13 cm) x 2 13 cm round x 1	(6.5 cm x 13 cm) x 2	(6.5 cm x 13 cm) x 2 13 cm round x 1
External input/output	VIDEO-1: S-VIDEO input, VIDEO input, AUDIO L/R input VIDEO-2: VIDEO input, AUDIO L/R input, COMPONENT VIDEO (Y/ C _B / C _R) input VIDEO-3: VIDEO input, AUDIO L/R input OUTPUT: VIDEO output, AUDIO L/R output Headphone jack: stereo mini jack (3.5 mm diameter)		
Dimension (W x H x D) (mm)	728 x 549 x 481.5	812 x 584.2 x 520.5	812 x 584.2 x 520.5
Weight	34.9 kg	43.5 kg	45.9 kg
Accessories	<ul style="list-style-type: none"> • Remote control unit: RM-C1308 x 1 • AA / R6 /UM - 3 dry cell battery x 2 • Matching aerial adapter x 1 	<ul style="list-style-type: none"> • Remote control unit: RM-C1306 x 1 • AA / R6 /UM - 3 dry cell battery x 2 • Matching aerial adapter x 1 	<ul style="list-style-type: none"> • Remote control unit: RM-C1308 x 1 • AA / R6 /UM - 3 dry cell battery x 2 • Matching aerial adapter x 1

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>