

JVC




ENGLISH

INDONESIA

CD/CASSETTE RECEIVER

KW-XC88

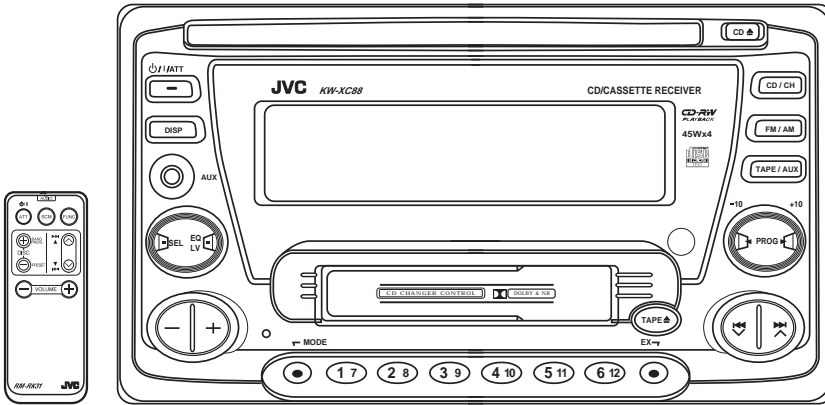

INSTRUCTIONS INSTRUKSI

LVT1250-001A
(UN)

IMPORTANT FOR LASER PRODUCTS

Precautions:

1. **CLASS 1 LASER PRODUCT**
2. **CAUTION:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user-serviceable parts inside. Leave all servicing to qualified service personnel.
4. **CAUTION:** This CD player uses invisible laser radiation, however, is equipped with safety switches to prevent radiation emission when unloading CDs. It is dangerous to defeat the safety switches.
5. **CAUTION:** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION : Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM.	ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling.	WARNING : Synlig och osynlig laserstrålning när den öppnas och spårren är urkopplad. Beträkta strålen.	VARO : Avalttaessa ja suojalukitus ohjeltuna tai viallisena olet alittuna näkyvälle ja näkymättömälle lasersträlylle. Vältä silmien kohdistumista suoraan itseesi. (1)
--	--	---	---

About the demonstration mode (DEMO MODE)...

When shipped from the factory, "DEMO" is set to "DEMO ON" in this unit. The demonstration will start automatically if no sound comes in for 3 minutes. (See page 25.)

To deactivate the demonstration mode


- 1 Press and hold SEL for more than 2 seconds so that one of the PSM items appears on the display.
- 2 Press ►►▲ or ◄◄▼ to select "DEMO."
- 3 Press - to select "DEMO OFF".
- 4 Press SEL (Select) to finish the setting.

CAUTION on Volume Setting

CDs produce very little noise compared with other sources. If the volume level is adjusted for the tuner, for example, the speakers may be damaged by the sudden increase in the output level. Therefore, lower the volume before playing a CD and adjust it as required during playback.

How to reset your unit

Press the reset button on the front panel using a ball-point pen or similar tool.

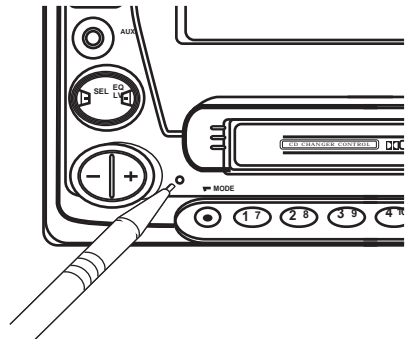

Note:

Your preset adjustments — such as preset channels or sound adjustments — will be erased.

Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

CONTENTS

About the demonstration mode (DEMO MODE)	2	SOUND ADJUSTMENTS	18
How to reset your unit	2	Adjusting the sound	18
LOCATION OF THE BUTTONS	4	Reinforcing the bass sound	18
Control panel	4	Selecting preset sound modes	19
Remote controller	5	Storing your own sound adjustments	20
Preparing the remote controller	6	LEVEL METER SETTING	21
BASIC OPERATIONS	7	Selecting level meter patterns	21
RADIO OPERATIONS	8	Level meter patterns	21
Listening to the radio	8	OTHER MAIN FUNCTIONS	22
Storing stations in memory	9	Setting the clock	22
Automatic preset: SSM	9	Changing general settings (PSM)	22
Manual preset	9	Assigning names to the sources	25
Storing your favorite station into the EX (extra) button	10	EXTERNAL COMPONENT OPERATIONS ...	27
Tuning in to a preset station	10	CD CHANGER OPERATIONS	28
Other convenient tuner functions	11	Playing CDs	28
Scanning broadcast stations	11	Selecting CD playback modes	30
Showing a station name	11	MAINTENANCE	31
Selecting FM reception mode	11	Handling cassettes	31
CD OPERATIONS	12	Handling CDs	32
Playing a CD	12	TROUBLESHOOTING	33
Playing a CD Text	13	SPECIFICATIONS	35
Locating a track or a particular portion on a CD	13		
Selecting CD playback modes	14		
Prohibiting CD ejection	14		
TAPE OPERATIONS	15		
Listening to a tape	15		
Finding the beginning of a tune	16		
Other convenient tape operations	17		
Skipping blank portions on the tape	17		
Playing the current tune repeatedly	17		
Prohibiting tape ejection	17		

BEFORE USE

*For safety...

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.


* Temperature inside the car...

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.




LOCATION OF THE BUTTONS

Control panel

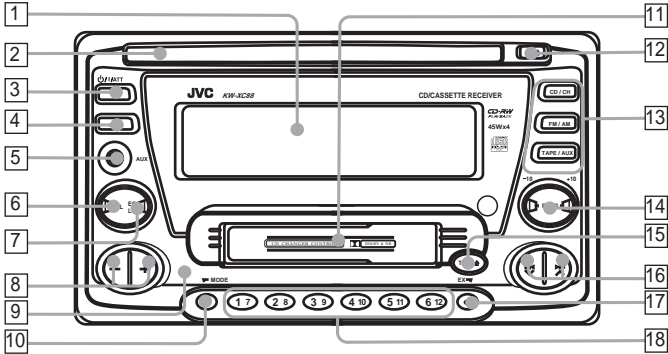

Display window

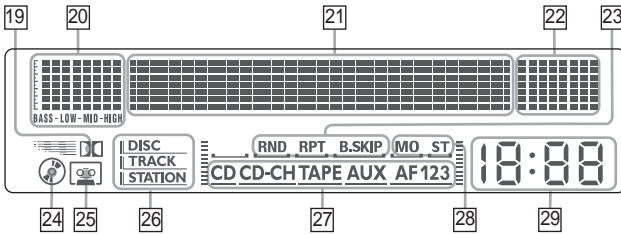

Control panel


- 1 Display window
- 2 CD loading slot
- 3 Φ /I / ATT (standby/on / attenuator) button
- 4 DISP (display) button
- 5 Auxiliary input jack
- 6 SEL (select) button
- 7 EQ LV (Equalizer/Level) button
- 8 + / - buttons
- 9 Reset button
- 10 MODE button
- 11 Cassette compartment
- 12 CD \blacktriangle (eject) button
- 13 Source buttons
 - CD/CH button
 - FM/AM button
 - TAPE/AUX button
- 14 \blacktriangleleft PROG \blacktriangleright button
 - +10 / - 10 button
- 15 TAPE \blacktriangle (eject) button
- 16 \blacktriangleleft \blacktriangledown / \blacktriangleright \blacktriangle buttons
- 17 EX (extra) button
- 18 Number buttons

Display window

- 19 Dolby NR indicator
- 20 EQ level indicator/S.BASS (Super Bass) level/level meter
- 21 Main display
- 22 Level meter
- 23 Play mode indicators
RND (random), RPT (repeat), B.SKIP (blank skip)
- 24 CD indicator
- 25 TAPE indicator
- 26 Text name indicators
DISC, TRACK, STATION
- 27 Source indicators
CD, CD-CH (CD-changer), TAPE, AUX, F1, F2, F3, AM
- 28 Tuner reception indicators
MO (monaural), ST (stereo)
- 29 Clock display



Remote controller

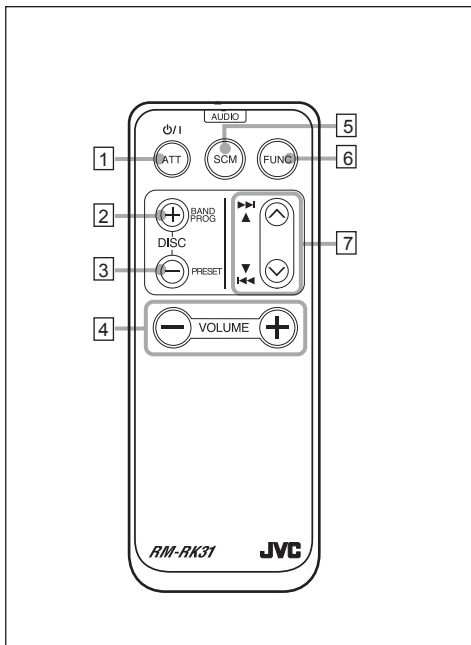

- 1 Functions the same as the ϕ/I /ATT button on the main unit.
- 2
 - Changes the band while listening to the radio.
 - Changes the tape direction while listening to a tape.
 - Selects disc numbers in the increasing order, and starts playing while listening to the CD changer.
- 3
 - Selects preset numbers in the increasing order while listening to the radio.
 - Selects disc numbers in the decreasing order, and starts playing while listening to the CD changer.
- 4 Functions the same as the +/- buttons on the main unit.

Note:


This button does not function for the preferred setting mode (PSM) adjustment.

- 5 Selects the sound mode.
Each time you press button, the EQ (equalizer) mode changes.
- 6 Selects the source.
Each time you press FUNC (function), the source changes.
- 7
 - Searches stations while listening to the radio.
 - Fast-forwards or reverses the track if pressed and held while listening to a CD.
 - Skips to the beginning of the next tracks or goes back to the beginning of the current (or previous) tracks if pressed briefly while listening to a CD.
 - Fast-forwards or rewinds a tape and find a beginning of a tune (MMS) while listening to a tape.
 - Does not function as \blacktriangle / \blacktriangledown buttons.

Preparing the remote controller

Before using the remote controller:

- Aim the remote controller directly at the remote sensor on the main unit. Make sure there is no obstacle in between.
- Do not expose the remote sensor to strong light (direct sunlight or artificial lighting).

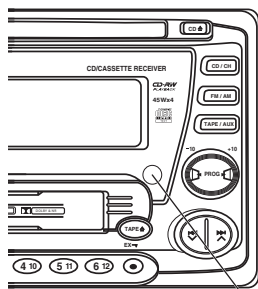


Remote sensor

Installing the battery

When the controllable range or effectiveness of the remote controller decreases, replace the battery.


1. Remove the battery holder.

- 1) Push out the battery holder in the direction indicated by the arrow using a ball-point pen or a similar tool.
- 2) Remove the battery holder.

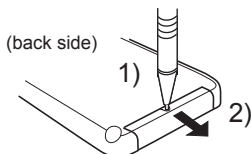

2. Place the battery.


Slide the battery into the holder with the + side facing upwards so that the battery is fixed in the holder.

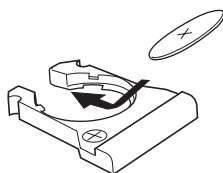

Lithium coin battery
(product number:
CR2025)

3. Return the battery holder.

Insert again the battery holder pushing it until you hear a clicking sound.

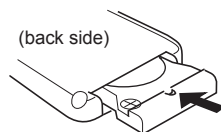


WARNING:

- Store the battery in a place where children cannot reach.
If a child accidentally swallows the battery, consult a doctor immediately.
- Do not recharge, short, disassemble or heat the battery or dispose it in a fire.
Doing any of these things may cause the battery to give off heat, crack or start a fire.
- Do not leave the battery with other metallic materials.
Doing this may cause the battery to give off heat, crack or start a fire.
- When throwing away or saving the battery, wrap it in tape and insulate; otherwise, the battery may start to give off heat, crack or start a fire.
- Do not poke the battery with tweezers or similar tools.
Doing this may cause the battery to give off heat, crack or start a fire.

CAUTION:


DO NOT leave the remote controller in a place (such as dashboards) exposed to direct sunlight for a long time.

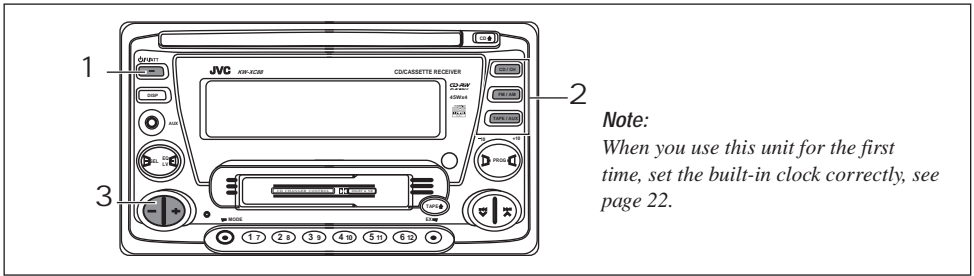

Note:

When you use this unit for the first time, set the built-in clock correctly, see page 22.

1 Turn on the power.

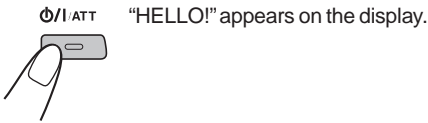

"HELLO!" appears on the display.

Note on One-Touch Operation:

When you select a source in step 2 below, the power automatically comes on. You do not have to press this button to turn on the power.

2 Select the source.



• Each time you press CD/CH, the source changes to CD* and CD-changer (or external component)** alternately.



• Each time you press FM/AM, the band changes to FM (FM1, FM2, FM3) and AM.




• Each time you press TAPE/AUX, the source changes to TAPE*** and external component (AUX INPUT) alternately.

* If a CD is not in the loading slot, you cannot select CD as the source to play. ("NO DISC" will appear on the display.)

** Without connecting the CD changer or the external component, you cannot select it as the source to play.


*** If a cassette is not in the cassette compartment, you cannot select TAPE as the source to play. ("NO TAPE" will appear on the display.)

3 Adjust the volume.

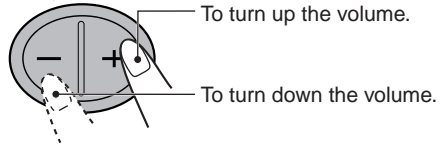

4 Adjust the sound as you want (see pages 18 - 20).

- If you need to change the level meter pattern, see page 21.

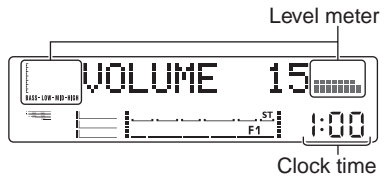

To drop the volume in a moment

Press **⏻ / ATT** briefly while listening to any source. "ATT" starts flashing on the display, and the volume level will drop in a moment. To resume the previous volume level, press the button briefly again.

To turn off the power


Press **⏻ / ATT** for more than 1 second. "SEE YOU" appears, then the unit turns off.

- If you turn off the ignition key without turning off this unit, the unit will automatically turn on when you turn on the ignition key next time. If the last selected source is ready for playback (ex. a CD or a tape is in the unit), playback starts automatically.

- To operate the tuner, see pages 8 - 11.
- To operate the CD player, see pages 12 - 14.
- To operate the tape deck, see pages 15 - 17.
- To operate the external components, see page 27.
- To operate the CD changer, see pages 28 - 30.



RADIO OPERATIONS

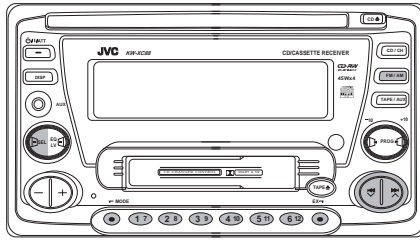


Listening to the radio

You can use either automatic searching or manual searching to tune in to a particular station.

Searching a station automatically: Auto search

 - 1 Select the band (FM1, FM2, FM3 or AM).




Note:

This receiver has three FM bands (FM1, FM2, and FM3). You can use any one of them to listen to an FM broadcast.



Selected band appears.

- 2 Start searching a station.

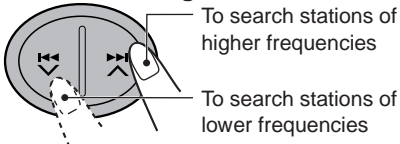

When a station is received, searching stops.


To stop searching before a station is received, press the same button you have pressed for searching.

Searching a station manually: Manual search


- 1 Select the band (FM1, FM2, FM3, or AM).



- 2 Press and hold **▶▶ ▲** or **◀◀ ▼** until "M (manual)" starts flashing on the display.

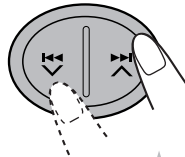

- 3 Tune in to a station you want while "M" is flashing.

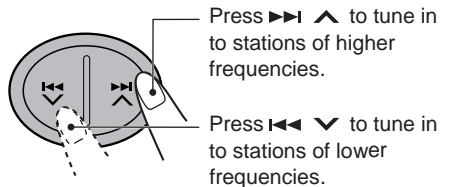

- If you release your finger from the button, the manual mode will automatically turn off after 5 seconds.
- If you hold down the button, the frequency keeps changing (in 50 kHz intervals for FM and 9 kHz for AM) until you release the button.

Storing stations in memory

 
You can use one of the following methods to store broadcasting stations in memory.

- Automatic preset: SSM (Strong-station Sequential Memory)
- Manual preset
- Storing your favorite station into the EX button

Automatic preset: SSM

You can preset 6 local stations in each FM band (FM1, FM2, and FM3).


- 1 Select the band (FM1, FM2, or FM3).



- 2 Press MODE repeatedly until "SSM" appears.



 - 3 Press SEL.



"--SSM--" appears, then disappears when automatic preset is over.

Local stations with the strongest signals are searched and stored automatically in the band you have selected (FM1, FM2, and FM3). These stations are preset in the number buttons - No. 1 (lowest frequency) to No. 6 (highest frequency). When automatic preset is over, the station stored in number button 1 will be automatically tuned in.

Manual preset

 

You can preset up to 6 stations in each band (FM1, FM2, FM3, and AM) manually.

EXAMPLE: Storing an FM station of 88.3 MHz into the preset channel number 1 of the FM1 band



- 1 Select the FM1 band.



- 2 Tune in to a station (in this example, of 88.3 MHz).

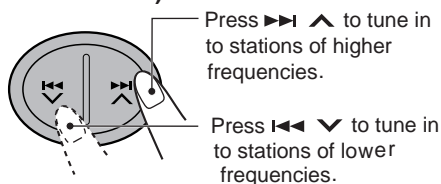

  - 3 Press and hold the number button (in this example, 1) for more than 2 seconds.



"P1" flashes for a few seconds.

- 4 Repeat the above procedure to store other stations into other preset numbers.



Storing your favorite station into the EX (extra) button

You can preset an FM or AM station (such as your favorite station or traffic announcement station); and recall it by one touch operation even if the unit is turned off.


EXAMPLE: Storing an FM station of 88.3 MHz into the EX button

1 Select the FM1 band.

FM / AM




2 Tune in to a station (in this example, of 88.3 MHz.)

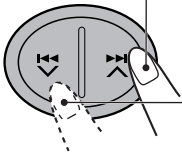

Press ►► ▲ to tune in to stations of higher frequencies.

 Press ◄◄ ▼ to tune in to stations of lower frequencies.



3 Press and hold the EX button until "EX" flashes.

EX



"EX" flashes on the display.

Notes:

 
- A previously preset station is erased when a new station is stored.
- Preset stations are erased when the power supply to the memory circuit is interrupted (for example, during battery replacement). If this occurs, preset the stations again.

Tuning in to a preset station

You can easily tune in to a preset station. Remember that you must store stations first. If you have not stored them yet, see page 9.

1 Select the band (FM1, FM2, FM3, or AM) you want.

FM / AM



2 Select the number (1 - 6) for the preset station you want.

1 7 2 8 3 9 4 10 5 11 6 12



To tune in the favorite station (EX)

EX



Press EX so that the unit automatically turns on (if it has been off).

 
Your favorite station is tuned in.

- If you press the button again, the previous source will be played back again.

Other convenient tuner functions


Scanning broadcast stations

1 Select "SCAN".



* When receiving an FM stereo broadcast.

 2 Start scanning.




Each time a broadcast is tuned in, scanning stops for about 5 seconds (tuned frequency number flashes on the display), and you can check what program is now being broadcasted.

If you want to listen to that program, press MODE button again to stop scanning.

Showing a station name

 If you have assigned a name to a station frequency, the display shows its assigned name after the station frequency is displayed. When the station name is displayed, the STATION indicator lights up on the display (see page 25).



Lights up.

To confirm the station frequency while the assigned name is shown, press DISP (display). Each time you press the button, the assigned name and the station frequency alternate on the display.

 
Note:

If no name is assigned, "NO NAME" will appear when you press DISP.


Selecting FM reception mode

When an FM stereo broadcast is hard to receive, follow the procedure below:

1 Select "MONO".



2 Select FM reception mode.

 

FM reception mode turns on ("MONO ON") and off ("MONO OFF") alternately.

When the monaural mode is turned on, the sound you hear becomes monaural but reception will be improved.




Lights up when receiving an FM broadcast in stereo.






CD OPERATIONS

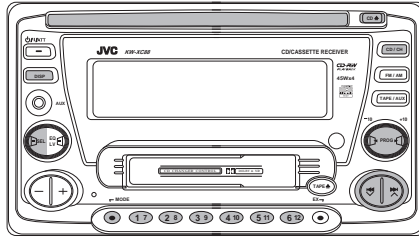

Playing a CD

1 Insert a disc into the loading slot.

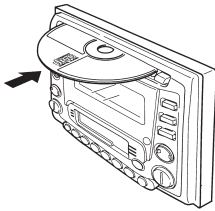

The unit turns on, draws a CD and starts playback automatically.

Notes:

- When a CD is inserted upside down, the CD automatically ejects.
- When you play a CD Text, the disc title and performer appear on the display. Then the current track title appears on the display, followed by the track number and elapsed playing time. See also "Playing a CD Text" (page 13) and "Selecting the scroll mode - SCROLL" (page 24). If a CD Text includes much text information, some may not appear on the display.



CD indicator lights up.

Total track number of the inserted disc Total playing time of the inserted disc



Current track Elapsed playing time



To stop play and eject the CD

Press CD ▲.

CD play stops and the CD automatically ejects from the loading slot ("EJECT" appears on the display). The source changes to the last selected source.

If you change the source, the CD play also stops (without ejecting the CD this time).

Notes:

- If the ejected disc is not removed for about 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (CD play will not start this time.)
- You can eject the CD even when the unit is turned off.

Note on One-Touch Operation:

When a CD is already in the loading slot, pressing CD/CH turns on the unit and starts playback automatically.



Playing a CD Text

In a CD Text, some information about the disc (its disc title, performer and track title) is recorded. You can show these disc information on the display.

 
1 Select text display mode while playing a CD Text.




Each time you press the button, the display changes as follows:



When disc information appears on the display, the corresponding name indicator lights up.



 When a disc title/performer is displayed.




When a track title is displayed.

Notes:

- You can use the scroll mode to show the disc information on the display. See also "Selecting the scroll mode - SCROLL" on page 24.
- When you press DISP (display) while playing a conventional CD, "NO NAME" appears for the disc title/performer and the track title.

Locating a track or a particular portion on a CD


To fast-forward or reverse the track

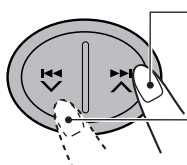

Press and hold **▶▶ ▲** while playing a CD, to fast-forward the track.

Press and hold **◀◀ ▼** while playing a CD, to


To go to the next tracks or the previous tracks

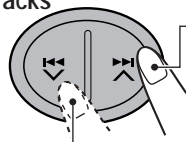

Press **▶▶ ▲** briefly while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next tracks is located and played back.

Press **◀◀ ▼** briefly while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous tracks is located and played back.


To skip 10 tracks

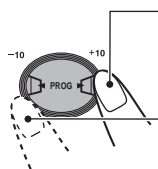

Press **+10** while playing a CD, to skip 10 tracks at a time.

Press **-10** while playing a CD, to skip back 10 tracks at a time.

 To go to a particular track directly



Press the number button corresponding to the track number to start its playback.

- To select a track number from 1 - 6: Press 1 (7) - 6 (12) briefly.
- To select a track number from 7 - 12: Press and hold 1 (7) - 6 (12) for more than 1 second.



 
Selecting CD playback modes

To play back tracks repeatedly (Repeat Play)

You can play back the current track repeatedly.



- 1 Press MODE repeatedly until "REPEAT" appears.




- 2 Press SEL.
Each time you press the button, CD repeat play mode turns on ("REPEAT ON") and off ("REPEAT OFF") alternately.




When the repeat mode is turned on, the RPT indicator lights up on the display.

To play back tracks at random (Random Play)

 You can play back all tracks on the CD at random.



 - 1 Press MODE repeatedly until "RANDOM" appears.




- 2 Press SEL.
Each time you press button, CD random play mode turns on ("RANDOM ON") and off ("RANDOM OFF") alternately.




When the random mode is turned on, the RND indicator lights up on the display and a track randomly selected starts playing.

To play back only intro (Intro scan)

 You can play back the first 15 seconds of each track sequentially.



 - 1 Press MODE repeatedly until "INTRO" appears.



- 2 Press SEL.
Each time you press button, CD Intro scan mode turns on ("INTRO ON") and off ("INTRO OFF") alternately.



 
When the Intro scan mode is turned on, the current track number flashes.

Prohibiting CD ejection


You can prohibit the CD ejection and can "lock" a CD in the loading slot.



While pressing CD/CH, press and hold CD ▲ for more than 2 seconds. "CD flashes on the display for a while, and the CD is locked and cannot be ejected.




To cancel the prohibition and "unlock" the CD, press and hold CD ▲ for more than 2 seconds again, while pressing CD/CH. "EJECT OK" flashes on the display for a while, and the CD is "unlocked."

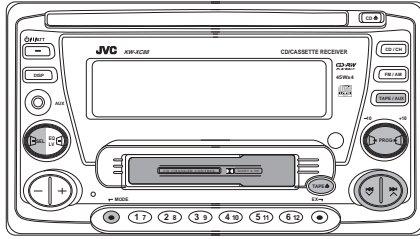

Listening to a tape

You can play back type 1 (normal) tapes.

1 Insert a cassette into the cassette compartment.

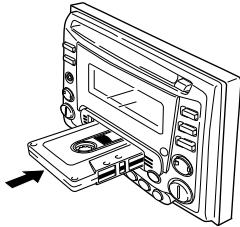

The unit turns on and tape play starts automatically. When one side of the tape reaches its end during play, the other side of the tape automatically starts playing. (Auto Reverse)



Tape indicator flashes.

 
Note on One-Touch Operation:

When a cassette is already in the cassette compartment, pressing TAPE/AUX turns on the unit and starts tape play automatically.

2 Turn on or off the Dolby B NR* as needed.



1 Press MODE repeatedly until "DOLBY B" appears.



2 Press SEL.




Each time you press the button, the Dolby B NR turns on ("DOLBY ON") and off ("DOLBY OFF").



This indicator lights up when the Dolby B NR is turned on.

3 Select the tape direction.

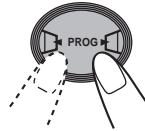

Each time you press the button, the tape direction changes alternately.



* Manufactured under license from Dolby Laboratories.
 "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.




To stop play and eject the cassette

Press **TAPE** ▲.

Tape play stops and the cassette automatically ejects from the cassette compartment. If you change the source, the tape play also stops (without ejecting the cassette this time).

- You can also eject the cassette by pressing **TAPE** ▲ with the unit turned off.

To fast-forward and rewind a tape

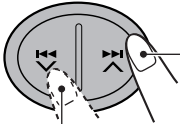

Press **▶▶** ▲ for more than 1 second to fast-forward the tape. When the tape reaches its end, the tape is reversed and playback starts from the beginning of the other side.

Press **◀◀** ▼ for more than 1 second to rewind the tape. When the tape reaches its end, playback of the same side starts.

To stop fast-forward and rewind at any position on the tape, press ◀ PROG ▶.

Tape play starts from that position on the tape.

Note:

 

When the tape reaches its end while fast-forwarding, the tape direction will be changed automatically.

Finding the beginning of a tune

Multi Music Scan allows you to automatically start playback from the beginning of a specified tune. You can specify up to 9 tunes ahead or before the current tune.

During playback

- 1 Specify where (how many tunes ahead of or before the current tune) the tune you want is located.

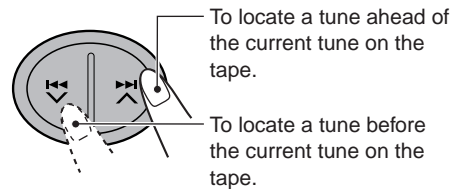

Each time you press the button, the number changes up to ± 9 .

When the beginning of the specified tune is located, playback starts automatically.

Notes:

- While locating a specified tune:
 - If the tape is rewound to its beginning, playback starts from the beginning of that side.
 - If the tape is fast-forwarded to the end, it is reversed and played from the beginning of the other side.
- In the following cases, Multi Music Scan may not operate correctly.
 - Tapes with tunes having long pianissimo passages (very quiet parts) or non-recorded portions during tunes.
 - Tapes with short non-recorded sections.
 - Tapes with high level noise or humming between tunes.
 - The Dolby NR setting does not match. For example, if the tape is recorded with the Dolby C NR.



Other convenient tape operations

Skipping blank portions on the tape

You can skip blank portions between the tunes (Blank Skip).

MODE

1 Press MODE repeatedly until "B.SKIP" appears.

DOLBY B → B.SKIP
Canceled ← REPEAT ←

SEL

2 Press SEL. Each time you press the button, skip function mode turns on ("B.SKIP ON") and off ("B.SKIP OFF") alternately.



When this function is on, the B.SKIP indicator lights up on the display and the unit skips blank portions of 15 seconds or more, fast-forwards to the next tune, then starts playing it.

Playing the current tune repeatedly

You can play the current tune repeatedly (Repeat Play).

MODE

1 Press MODE repeatedly until "REPEAT" appears.

DOLBY B → B.SKIP
Canceled ← REPEAT ←

SEL

2 Press SEL. Each time you press the button, repeat play mode turns on ("REPEAT ON") and off ("REPEAT OFF") alternately.



 
Notes:

In the following cases, Blank Skip and Repeat Play may not operate correctly.

- Tapes with tunes having long pianissimo passages (very quiet parts) or non-recorded portions during tunes.
- Tapes with short non-recorded sections.
- Tapes with high level noise or humming between tunes.
- The Dolby NR setting does not match. For example, if the tape is recorded with the Dolby C NR.

Prohibiting tape ejection

You can prohibit the tape ejection and can "lock" a tape in the cassette compartment.



While pressing TAPE/AUX, press and hold TAPE ▲ for more than 2 seconds. "TAPE " flashes on the display for a while, and the tape is locked and cannot be ejected.

To cancel the prohibition and "unlock" the tape, press and hold TAPE ▲ for more than 2 seconds again, while pressing TAPE/AUX.

"EJECT OK" flashes on the display for a while, and the tape is "unlocked."



SOUND ADJUSTMENTS

Adjusting the sound

You can adjust the sound characteristics to your preference.

1 Select the item you want to adjust.




Each time you press the button, the adjustable items change as follows:



Indication	To do:	Range
FADER*	Adjust the front and rear speaker	R06 (rear only) F06 (front only)
BAL (Balance)	Adjust the left and right speakers	L06 (left only) R06 (right only)
VOLUME	Adjust the volume	00 (min.) 50 (max.)

* If you are using a two-speaker system, set the fader level to "00."

2 Adjust the level.

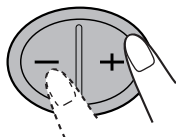


Note:

Normally +/- buttons work for volume adjustment. So you do not have to select "VOLUME" to adjust the volume level.

Reinforcing the bass sound

You can also adjust the level of Super Bass.

 1 Select "S.BASS."




While adjusting Super Bass, the BASS indicator flashes.



As the number increases, Super Bass level also increases.


2 Adjust the level within the range of "00" to "08."

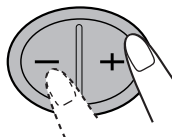


Selecting preset sound modes

You can select a preset sound adjustment suitable to the music genre.

1 Select “EQ”.

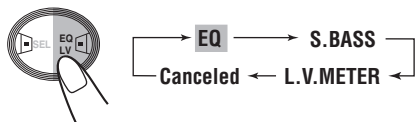

2 Select the sound mode.

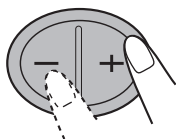


The sound mode changes as follows:

FLAT ↔ Hard Rock ↔ R & B* ↔
 POP ↔ JAZZ ↔ DanceMusic ↔
 Country ↔ Raggae ↔ Classic ↔
 USER** ↔ (back to the beginning)

* Rhythm and Blues

** If you want to adjust and store your original sound mode (USER), see “Storing your own sound adjustments” on page 20.

 EQ level changes as you select the sound mode.



Ex.: When you select “R & B”

To cancel the sound mode, select “FLAT” in step 2.

Note:

You can adjust the sound mode to your preference, and store it in memory.

To store a sound mode separately for each playback source (EQ Link)

Once you select a sound mode, it is stored in memory. It will be recalled every time you select the same source. A sound mode can be stored for each of the following sources — FM1, FM2, FM3, AM, CD, tape, external components and the EX (extra) button (see page 10).

- See also “Changing general settings (PSM)” on page 22.

- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display.
- 2 Press ►► ▲ or ◀◀ ▼ to select “EQ LINK (Equalization Link).”
- 3 Press + to select “LINK ON.”
- 4 Press SEL (select) to finish the setting.

To cancel EQ Link, repeat the same procedure and select “LINK OFF” by pressing - in step 3.

• When “EQ LINK” is set to “LINK ON”

The selected sound mode and Super Bass level can be stored in memory for the current source.

Each time you select the same source, the same sound mode is also recalled, and shown after the source name.

• When “EQ LINK” is set to “LINK OFF”

The selected sound mode effect applies to all the sources selected.

 


Storing your own sound adjustments

You can adjust the sound modes to your preference and store your own adjustments in memory (USER sound mode).

- There is a time limit in doing the following procedure. If the setting is cancelled before you finish, start from step 1 again.

1 Select "EQ."



2 Select sound elements to adjust.



Each time you press the button, the sound elements to adjust change as follows:

LOW FREQ.* → LOW LEVEL →
MID FREQ.* → MID LEVEL →
HIGH FREQ.* → HIGH LEVEL →
(back to the beginning)

FREQ. (LOW, MID, HIGH):

Select the center frequency to adjust.


LEVEL (LOW, MID, HIGH):

Adjust the enhancement level.

* By pressing **▶▶ ▲** or **◀◀ ▼**, you can directly move as follows:




3 Adjust the selected sound element.

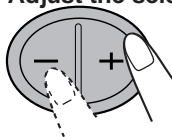

- Refer to the table below for adjusting the selected sound element.

Indication	Range
LOW FREQ.	50 Hz , 80 Hz , 120 Hz
LOW LEVEL	- 06 (min.) — +06 (max.)
MID FREQ.	700 Hz , 1 kHz , 2 kHz
MID LEVEL	- 06 (min.) — +06 (max.)
HIGH FREQ.	8 kHz , 12 kHz
HIGH LEVEL	- 06 (min.) — +06 (max.)

 EQ level adjusted flashes.



EX.: When you adjust "LOW FREQ."

4 Repeat step 2 and 3 to adjust the other sound elements.

5 Store the adjustments.



Your setting is stored in USER sound mode.


LEVEL METER SETTING




Selecting level meter patterns

You can select any one from 7 different level meter patterns or a demonstration of all the patterns.

1 Select "L.V. METER."

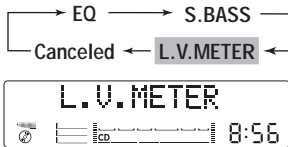

2 Press +/- to select the level meter pattern.

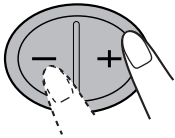

Each time you press the button, the level meter changes as follows:

ALL DEMO ↔ Standard ↔ SideWinder ↔
 Full Size ↔ Spin ↔ Double ↔ HIGH WAY ↔
 Dolphin ↔ OFF ↔ (back to the beginning)

 
Level meter patterns

1. ALL DEMO (default setting)

Demonstrates all the level meter patterns, each for 20 seconds.

2. Standard

Standard level meter.




3. SideWinder

Level meter is displayed horizontally.



4. Full Size

 Level meter is displayed on the main display.



5. Spin

Spin in the right meter.



6. Double

Waves is displayed on both level meters.



7. HIGH WAY

As if you were driving along a highway.



8. Dolphin

A dolphin is swimming in the main display.



9. OFF

No level meter is displayed.


Setting the clock

After installation, set the built-in clock correctly.


- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display. (See page 23.)




- 2 If "CLOCK HOUR" does not appear, press >>> ^ or <<< v repeatedly until it appears.

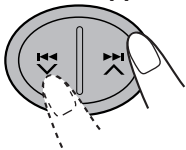


- 3 Adjust the hour.

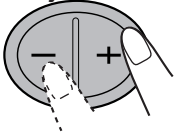

- 4 Press >>> ^ or <<< v until "CLOCK MIN (minute)" appears on the display.

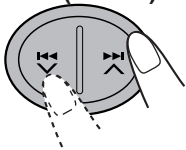

- 5 Adjust the minute.

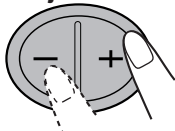

- 6 Finish the setting.



To check the current clock time while the unit is turned off, press DISP (display).

The power turns on, the clock time is shown for 5 seconds, then the power turns off.

Changing general settings (PSM)

You can change the following settings for this unit by using the PSM (Preferred Setting Mode) control.


Basic Procedure

- There is a time limit in doing the following procedure. If the setting is canceled before you finish, start from step 1 again.


- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display. (See page 23.)



- 2 Select a PSM item you want to adjust. (See page 23.)

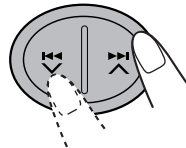

- 3 Adjust the PSM item selected.

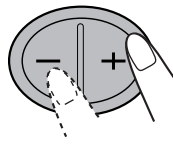

- 4 Repeat steps 2 and 3 to adjust the other PSM items if necessary.

- 5 Finish the setting.



Preferred Setting Mode (PSM) items

1		2		3		Factory-preset Settings	See page
Hold.		Select.		Set.			
		-	+				
CLOCK HOUR	Hour adjustment	Back	Advance	1:00	22		
CLOCK MIN	Minute adjustment	Back	Advance				
CLOCK DISP	Clock display	CLOCK OFF	CLOCK ON	CLOCK OFF	24		
EQ LINK	Sound control memory linkage	LINK ON	LINK OFF	LINK OFF	19		
DIMMER	Dimmer mode	DIM OFF ←→ DIM ON ↑→ DIM AUTO ←↑		DIM AUTO	24		
CONTRAST	Display contrast	CONTRAST 1 - CONTRAST 10		CONTRAST 5	24		
SCROLL	Scroll mode	SCRL ONCE ←→ SCRL AUTO ↑→ SCRL OFF ←↑		SCRL ONCE	24		
EXT INPUT	External input selection	CD CHANGER	LINE INPUT	CD CHANGER	24		
AUX ADJ	Auxiliary input level adjustment	A.ADJ 00 - A.ADJ 05		A.ADJ 00	24		
DEMO	Demonstration mode	DEMO OFF	DEMO ON	DEMO ON	25		



Setting the clock display - CLOCK DISP

You can set the clock to be shown on the display when the unit is turned off.

When shipped from the factory, the clock is set not to be shown on the display.

- CLOCK OFF: Clock display is turned off.
- CLOCK ON : Clock display is turned on.

Note:

If the power supply is not interrupted by turning off the ignition key of your car, it is recommended to select "CLOCK OFF" to save the car's battery.

Selecting the dimmer mode - DIMMER

When you turn on the car headlights, the display automatically dims (Auto Dimmer).

When shipped from the factory, Auto Dimmer mode is activated.

- DIM OFF: Cancels Auto Dimmer.
- DIM ON: Always dims the display.
- DIM AUTO: Activates Auto Dimmer.

Note:

Auto Dimmer equipped for this unit may not work correctly on some vehicles, particularly on those having a control dial for dimming.

In this case, set the dimmer mode to "DIM ON" or "DIM OFF."

Adjusting the display contrast level - CONTRAST

You can adjust the display contrast level among 1 (dark) to 10 (bright). When shipped from the factory, the display contrast level is set at level 5.

Selecting the scroll mode - SCROLL

You can select the scroll mode for the disc information.

When shipped from the factory, Auto Scroll mode is set to "SCRL ONCE."

- SCRL ONCE: Scrolls only once.
- SCRL AUTO: Repeats the scroll (5-second intervals in between).
- SCRL OFF: Cancels Auto Scroll.

Selecting the external component to use - EXT INPUT

You can connect the external component to the CD changer jack on the rear using the Line Input Adaptor KS-U57 (not supplied).

To use the external component as the playback source through this unit, you need to select which component - CD changer or external component - to use.

When shipped from the factory, CD changer is selected as the external component.

- CD CHANGER: To use the CD changer.
- LINE INPUT: To use the external component other than CD changer.

Notes:

- *If the current source is CD changer or external component, this item does not appear.*
- *For connecting the Line Input Adaptor KS-U57 and the external component, refer to the Installation/Connection Manual (separate volume).*

Adjusting the auxiliary input level - AUX ADJ

Adjust the auxiliary input level properly when an external component is connected to the auxiliary input jack.

When shipped from the factory, the auxiliary (AUX) input level is set at level 00.

If the input level of the connected component is not high enough, increase the input level properly. Without adjusting the line input level, you may be surprised at a loud sound when you change the source from the external component to another source.

Turning the demo mode on or off

- DEMO MODE

You can turn the demo mode on or off. When shipped from the factory, "DEMO ON" is selected.

- **DEMO OFF:** Turns the demo mode off.
- **DEMO ON:** Turns the demo mode on. The demonstration will start automatically if no sound comes in for 3 minutes.

Note:

If the unit has been reset (and the power is on), demonstration will start if no sound comes in for about 15 seconds.

Assigning names to the sources


You can assign names to station frequencies and the external component connected to the AUX input jack.

After assigning a name, it will appear on the display when you select the source.

Sources	Maximum number of the characters
Station frequencies*	Up to 10 characters (up to 32 station frequencies including both FM and AM)
External components ("AUX INPUT" only)	Up to 10 characters

* You cannot assign name to a station frequency stored in the EX (extra) button.


1 Select a source you want to assign a name to.

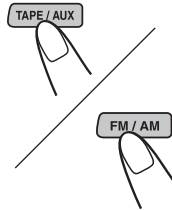

When you select a source, the power automatically comes on.


Each time you press the button, the source changes as described on page 7.

2 Press and hold SEL (select) for more than 2 seconds while pressing DISP (display).

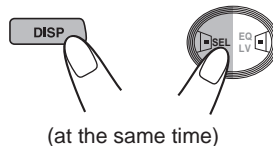


CONTINUED TO THE NEXT PAGE

 
3 Select the character set you want while “ ” is flashing.



Each time you press the button, the character set changes as follows:

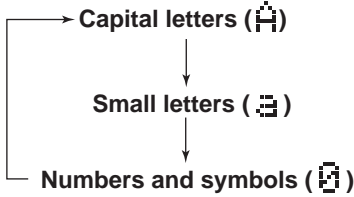


4 Select a character.

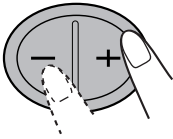

About the available characters, see the right column.

5 Move the cursor to the next (or previous) character position.

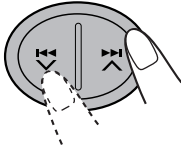

6 Repeat steps 3 to 5 until you finish inputting the name.

7 Finish the procedure while the last selected character is flashing.



To erase the input characters

Press and hold DISP (display) for more than 1 seconds to erase all the characters at a time.

Note:

When you try to assign a name to the 33rd station frequency, “NAME FULL” appears on the display. (In this case, delete unwanted names before assignment.)

Available characters

Capital letters

A	B	C	D	E
F	G	H	I	J
K	L	M	N	O
P	Q	R	S	T
U	V	W	X	Y
Z	space			


Small letters

a	b	c	d	e
f	g	h	i	j
k	l	m	n	o
p	q	r	s	t
u	v	w	x	y
z	space			

Number and symbols

0	1	2	3	4
5	6	7	8	9
!	”	#	\$	%
&	'	()	*
+	,	-	.	/
:	;	<	=	>
?	@	_	`	space

EXTERNAL COMPONENT OPERATIONS

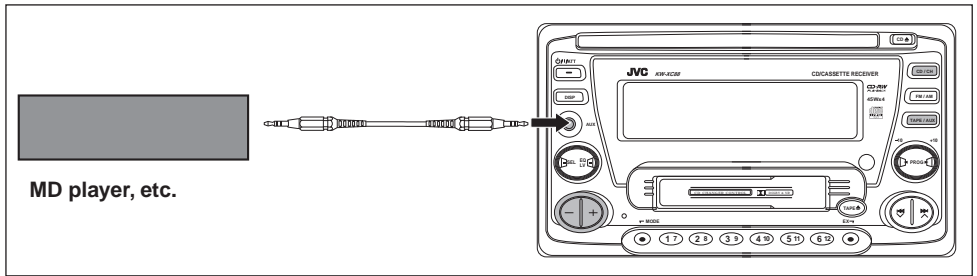

You can connect two external components to this unit.
Connect one to the auxiliary (AUX) input jack on the control panel, and the other to the CD changer jack on the rear.

Preparations:

- For connecting the Line Input Adaptor KS-U57 and the external component, refer to the Installation/Connection Manual (separate volume).
- Before operating the external component connected to the CD changer jack, select the external input correctly. (See "Selecting the external component to use - EXT INPUT" on page 24.)

1 Select the external component.

AUX INPUT: Press TAPE/AUX repeatedly to select the component connected to the AUX jack on the control panel.




LINE INPUT: Press CD/CH repeatedly to select the component connected to the CD changer jack.



- If "LINE INPUT" does not appear on the display, see page 24 and select the external input ("Selecting the external component to use - EXT INPUT").

2 Turn on the connected component and start playing the source.

3 Adjust the volume.

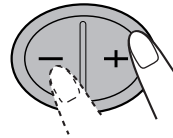


If the input level of the external component connected to the auxiliary (AUX) input jack is not high enough, increase the input level properly.

Without adjusting the input level, you may be surprised at a loud sound when you change the source from the external components to another. (See "Adjusting the auxiliary input level - AUX ADJ" on page 24.)



CD CHANGER OPERATIONS

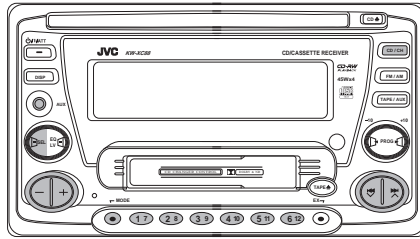

We recommend that you use one of the CH-X series with your unit.

If you have another CD automatic changer, consult your JVC car audio dealer for connections.

- For example, if your CD automatic changer is one of the KD-MK series, you need a cord (KS-U15K) for connecting it to this unit.

Before operating your CD automatic changer:


- Refer also to the Instructions supplied with your CD changer.
- If no discs are in the magazine of the CD changer or the discs are inserted upside down, "NO DISC" will appear on the display. If this happens, remove the magazine and set the discs correctly.
- If "RESET 1 - RESET 8" appears on the display, something is wrong with the connection between this unit and the CD changer. If this happens, check the connection, connect the connecting cord(s) firmly if necessary, then press the reset button of the CD changer.

Playing CDs

Select the CD automatic changer (CD-CH).



Playback starts from the first track of the first disc. All tracks of all discs are played back.

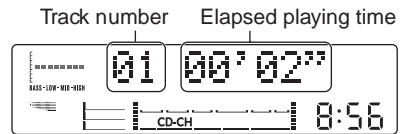


Note on One-Touch Operation:

When you press CD/CH, the power automatically comes on. You do not have to press **⏻ / ATT** to turn on the power.



To fast-forward or reverse the track

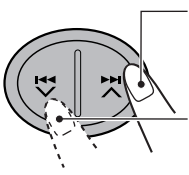


Press and hold **▶▶** **▲** while playing a CD, to fast-forward the track.

Press and hold **◀◀** **▼** while playing a CD, to reverse the track.


To go to a particular disc directly

 Press the number button corresponding to the disc number to start its playback (while CD changer is playing).



- To select a disc number from 1 - 6: Press 1 (7) - 6 (12) briefly.
- To select a disc number from 7 - 12: Press and hold 1 (7) - 6 (12) for more than 1 second.



To go to the next tracks or the previous tracks

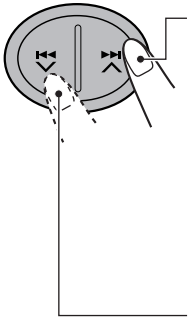

Press **▶▶** **▲** briefly while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next tracks is located and played back.

Press **◀◀** **▼** briefly while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous tracks is located and played back.

Ex.: When disc number 3 is selected.

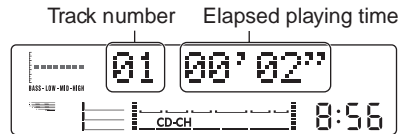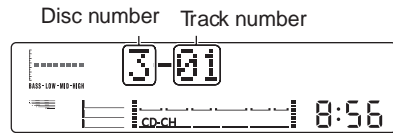




Selecting CD playback modes

To play back tracks repeatedly (Repeat Play)



 - 1 Press MODE repeatedly until "REPEAT" appears.




- 2 Press SEL.
Each time you press the button, CD repeat play mode changes as follows:




Mode	RPT Indicator	Plays repeatedly
REPEAT1 ON	Lights	The current track (or specified track).
REPEAT2 ON	Flashes	All tracks of the current disc (or specified disc).
REPEAT OFF	Goes off	Canceled.

 To play back tracks at random (Random Play)



 - 1 Press MODE repeatedly until "RANDOM" appears.



- 2 Press SEL.
Each time you press the button, CD random play mode changes as follows:




Mode	RND Indicator	Plays at random
RANDOM1 ON	Lights	All tracks of the current disc, then the tracks of the next disc, and so on.
RANDOM2 ON	Flashes	All tracks of all discs inserted in the magazine.
RANDOM OFF	Goes off	Canceled.


To play back only intro (Intro scan)



- 1 Press MODE repeatedly until "INTRO" appears.

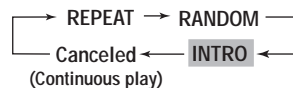


 - 2 Press SEL.
Each time you press the button, CD intro scan mode changes as follows:




Mode	Indicator	Plays the beginnings (15 seconds)
INTRO1 ON	Track number flashes	Of all tracks on all inserted discs.
INTRO2 ON	Disc number flashes	Of the first track on each inserted disc.
INTRO OFF	None	Canceled.

 Track number



EX.:When "INTRO1 ON" is selected.

 Disc number




EX.:When "INTRO2 ON" is selected.



Handling cassettes


The cassette deck built in this unit requires very little attention, but you will be able to extend the life of the cassette deck if you follow the instructions below.

To clean the heads

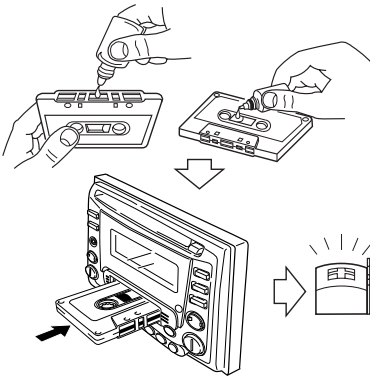

- Clean the heads after every 10 hours of use using a wet-type head cleaning tape (available at an audio store).
When the head becomes dirty, you may realize the following symptoms:
 - Sound quality is reduced.
 - Sound level decreases.
 - Sound drops out.
- Do not play dirty or dusty tapes.
- Do not touch the highly-polished head with any metallic or magnetic tools.

To keep the tape clean

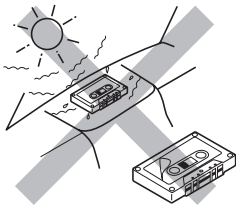

- Always store the tapes in their storage cases after use.
- Do not store tapes in the following places:
 - Subject to direct sunlight
 - With high humidity
 - At extremely hot temperatures

CAUTIONS:

- Do not play the tapes with peeling labels; otherwise, they can damage the unit.
- Tighten tapes to remove slack since loose tape may become entangled with the mechanism.
- Do not leave a cassette in the cassette compartment after use, as the tape may become slack.

The function below is also provided to ensure the longer life of the cassette deck.

Ignition key-off release

When you turn off the ignition key with a cassette in the compartment, the unit automatically releases the tape from its head.



Handling CDs

The CD player built in this unit has been designed to play back the CDs bearing the following marks.



You can also play back your original CD-Rs (Recordable) and CD-RWs (Rewritable) on this receiver.

This unit is not compatible with MP3.

How to handle CDs

When removing a CD from its case, press down the center holder of the case and lift the CD out, holding it by the edges.

Center holder



- Always hold the CD by the edges. Do not touch its recording surface.

When storing a CD into its case, gently insert the CD around the center holder (with the printed surface facing up).

- Make sure to store CDs into the cases after use.

To keep CDs clean

A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line from center to edge.




To play new CDs

New CDs may have some rough spots around the inner and outer edges.

If such a CD is used, this unit may reject the CD.

To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.

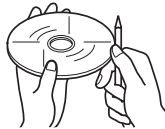

Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the CD player may malfunction. In this case, eject the CD and leave the unit turned on for a few hours until the moisture evaporates.

CAUTIONS:

- Do not insert 8 cm CDs (single CDs) into the loading slot. (Such CDs cannot be ejected.)
- Do not insert any CD of unusual shape - like a heart or flower; otherwise, it will malfunction.
- Do not expose CDs to direct sunlight or any heat source or place them in a place subject to high temperature and humidity. Do not leave them in a car.
- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean CDs.

When playing a CD-R or CD-RW

You can play back your original CD-Rs or CD-RWs recorded in audio CD format.

- User-edited CD-Rs (Recordable) and CD-RWs (Rewritable) can be played back only if they are already "finalized."
- Before playing back CD-Rs or CD-RWs, read their instructions or cautions carefully.
- Some CD-Rs or CD-RWs may not be played back on this unit because of their disc characteristics, damage or stain on them, or if the player's lens is dirty.
- CD-Rs or CD-RWs are susceptible to high temperatures or high humidity; so do not leave them inside your car.
- CD-RWs may require a longer readout time. (This is caused by the fact that the reflectance of CD-RWs is lower than for regular CDs.)

TROUBLESHOOTING



What appears to be trouble is not always serious. Check the following points before calling a service center.

Symptoms	Causes	Remedies
• CD cannot be played back.	CD is inserted upside down.	Insert the CD correctly.
• CD sound is sometimes interrupted.	You are driving on rough roads.	Stop CD play while driving on rough roads.
	CD is scratched.	Change the CD.
	Connections are incorrect.	Check the cords and connections.
• “NO DISC” appears on the display.	No CD is in the loading slot (or in the magazine.)	Insert CD.
	CD is inserted incorrectly.	Insert it correctly.
• CD can neither be played back nor ejected.	The CD player may function incorrectly.	Press and hold both the O/I / ATT and $\text{CD } \blacktriangle$ buttons at the same time for several seconds.
• “EJECT ERR” appears on the display.	The CD was interrupted ejection or insertion.	Press $\text{CD } \blacktriangle$, or press both the O/I / ATT and $\text{CD } \blacktriangle$ buttons together to clear the message.
• A cassette tape cannot be inserted.	You have tried to insert a cassette in the wrong way.	Insert the cassette with the exposed tape facing right.
• Cassette tapes become hot.	This is not a malfunction.	—————
• Tape sound is at very low level and sound quality is degraded.	The tape head is dirty.	Clean it with a head cleaning tape.
• Sound is sometimes interrupted.	Connections are not good.	Check the cords and connections.
• Sound cannot be heard from the speakers.	The volume control is turned to the minimum level.	Adjust it to the optimum level.
	Connections are incorrect.	Check the cords and connections.

CONTINUED TO THE NEXT PAGE



Symptoms	Causes	Remedies
<ul style="list-style-type: none"> SSM automatic preset does not work. 	Signals are too weak.	Store stations manually.
<ul style="list-style-type: none"> Static noise while listening to the radio. 	The antenna is not connected firmly.	Connect the antenna firmly.
<ul style="list-style-type: none"> "NO MAGAZINE" appears on the display. 	No magazine is in the CD changer.	Insert the magazine.
<ul style="list-style-type: none"> "RESET 8" appears on the display. 	This unit is not connected to a CD changer correctly.	Connect this unit and the CD changer correctly and press the reset button of the CD changer.
<ul style="list-style-type: none"> "RESET 1–RESET 7" appears on the display. 	_____	Press the reset button of the CD changer.
<ul style="list-style-type: none"> This unit does not work at all. The CD changer does not work at all. 	The built-in microcomputer may function incorrectly due to noise, etc.	Press the reset button on the front panel (see page 2.)
<ul style="list-style-type: none"> CD-R/CD-RW cannot be played back. Tracks cannot be skipped on CD-R/CD-RW. 	CD-R/CD-RW is not finalized.	<ul style="list-style-type: none"> Change a finalized CD-R/CD-RW. Finalize the CD-R/CD-RW with the component which you used for recording.

About mistracking:

Mistracking may result from driving on extremely rough roads. This does not damage the unit and the CD, but will be annoying. We recommend that you stop CD play while driving on such rough roads.

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 45 W per channel

Rear: 45 W per channel

Continuous Power Output (RMS):

Front: 17 W per channel into 4 Ω ,
40 Hz to 20 000 Hz at no more
than 0.8% total harmonic
distortion.

Rear: 17 W per channel into 4 Ω ,
40 Hz to 20 000 Hz at no more
than 0.8% total harmonic
distortion.

Load Impedance: 4 Ω (4 to 8 Ω allowance)

Equalizer Control Range:

LOW: ± 12 dB (50 Hz, 80 Hz, 120 Hz)

MID: ± 12 dB (700 Hz, 1 kHz, 2 kHz)

HIGH: ± 12 dB (8 kHz, 12 kHz)

Frequency Response: 40 Hz to 20 000 Hz

Signal-to-Noise Ratio: 70 dB

Line-In level/Impedance:

Auxiliary input jack:

(3.5 mm dia. stereo mini jack)

Line-Out Level/Impedance:

2.0 V/20 k Ω load (full scale)

Output Impedance: 1 k Ω

TUNER SECTION

Frequency Range:

FM: 87.5 MHz to 108.0 MHz

AM: 531 kHz to 1 602 kHz

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μ V/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 μ V/75 Ω)

Alternate Channel Selectivity (400 kHz):

65 dB

Frequency Response: 40 Hz to 15 000 Hz

Stereo Separation: 35 dB

Capture Ratio: 1.5 dB

[AM Tuner]

Sensitivity: 20 μ V

Selectivity: 35 dB

CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical
pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response: 5 Hz to 20 000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

CASSETTE DECK SECTION

Wow and Flutter: 0.1 % (WRMS)

Fast-Wind Time: 100 sec. (C-60)

Frequency Response: 30 Hz to 16 000 Hz

(Normal tape)

Signal-to-Noise Ratio: (Normal tape)

Dolby B NR ON: 65 dB

Dolby B NR OFF: 56 dB

Stereo Separation: 40 dB

GENERAL

Power Requirement:

Operating Voltage: DC 14.4 V (11 V to 16 V
allowance)

Grounding System: Negative ground

Allowable Working Temperature:

0°C to +40°C

Dimensions (W x H x D):

Installation Size:

178 mm x 100 mm x 150 mm

Front Panel Size:

170 mm x 96 mm x 20 mm

Mass: 2.2 kg (excluding accessories)

*Design and specifications subject to change without
notice.*

**Having TROUBLE with operation?
Please reset your unit**

Refer to page of How to reset your unit

**Punya MASALAH pengoprasian?
Tolong reset unit anda**

Lihat pada halaman tentang mereset unit



EN, IN

© 2004 VICTOR COMPANY OF JAPAN, LIMITED

0704MNMMDWJEIN

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>