




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KWXC410J-KW-XC410. You'll find the answers to all your questions on the JVC KWXC410J-KW-XC410 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KWXC410J-KW-XC410
User guide JVC KWXC410J-KW-XC410
Operating instructions JVC KWXC410J-KW-XC410
Instructions for use JVC KWXC410J-KW-XC410
Instruction manual JVC KWXC410J-KW-XC410

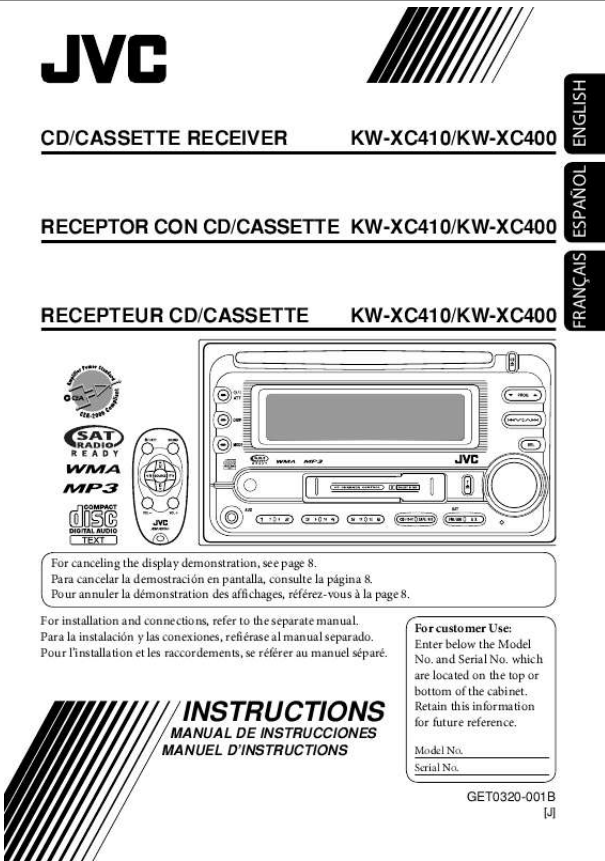

JVC

CD/CASSETTE RECEIVER KW-XC410/KW-XC400

RECEPTOR CON CD/CASSETTE KW-XC410/KW-XC400

RECEPTEUR CD/CASSETTE KW-XC410/KW-XC400

ENGLISH
ESPAÑOL
FRANÇAIS

USA
SAT RADIO READY
WMA
MP3
COMPACT disc
TEXT

For canceling the display demonstration, see page 8.
Para cancelar la demostración en pantalla, consulte la página 8.
Pour annuler la démonstration des affichages, référez-vous à la page 8.

For installation and connections, refer to the separate manual.
Para la instalación y las conexiones, refiérase al manual separado.
Pour l'installation et les raccordements, se référer au manuel séparé.

INSTRUCTIONS
MANUAL DE INSTRUCCIONES
MANUEL D'INSTRUCTIONS

For customer Use:
Enter below the Model No. and Serial No. which are located on the top or bottom of the cabinet. Retain this information for future reference.

Model No. _____
Serial No. _____

GET0320-001B
[J]



[Your user manual](#)
[JVC KWXC410J-KW-XC410](#)

Manual abstract:

25 25 26 26 Radio operations . 9 Listening to the radio. 9 Storing stations in memory 9 Listening to a preset station . 10 Scanning broadcast stations . 10 Assigning titles to the stations . 11 Disc operations 12 Playing a disc in the unit . 12 Playing discs in the CD changer . 13 Other main functions . 15 Changing the display information . 15 Selecting the playback modes 16 Maintenance 27 Handling discs . 27 Handling cassettes . 27 More about this unit . 28 Troubleshooting . 31 Specifications . 33 For safety · Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.

· Stop the car before performing any complicated operations. Temperature inside the car If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit. ENGLISH How to read this manual The following methods are used to make the explanations simple and easy-to-understand: · Some related tips and notes are explained in "More about this unit" (see pages 28 30). · Button operations are mainly explained with the illustrations as follows: How to use the MODE button Press MODE repeatedly to select the different functions available during play. Time countdown indicator Press briefly.

Press repeatedly. Ex.: When "SSM" is selected Press either one. While listening to the radio: · You cannot select "SSM" or "SCAN" if you are listening to the station stored in the EX (extra) button, see page 10 for details. SSM SCAN MONO Canceled (Station frequency)* While listening to a disc: 10 +10 Press and hold until your desired response begins. Press and hold both buttons at the same time. The following marks are used to indicate. : Built-in CD player operations. : External CD changer operations. This unit is equipped with the steering wheel remote control function.

· See the Installation/Connection Manual (separate volume) for connection. REPEAT RANDOM INTRO Canceled (Track no. and Elapsed playing time)* While listening to a tape: DOLBY B B.SKIP REPEAT Canceled (Playback direction)* While adjusting the sound mode: · Pressing MODE allows you to store the adjusted sound mode into memory. (See page 19 for details.) * Depending on the level meter setting. (See page 20 for details.) 4 Control panel -- KW-XC410/KW-XC400 Parts identification Display window 1 2 3 4 5 6 7 8 9 p q w e r t y u Loading slot (standby/on attenuator) button DISP (display) button

MODE button Cassette compartment Remote sensor · DO NOT expose the remote sensor to strong light (direct sunlight or artificial lighting). AUX (auxiliary) input jack Number buttons CD 0 (CD eject) button Display window 5 (up) / (down) buttons PROG (program) 5 / buttons 4 / € buttons SEL (select) button T 0 (tape eject) button Control dial Reset button Source buttons--CD/CD-CH, TAPE/AUX, FM/AM SAT (satellite), EX (extra) Display window i Tuner reception indicators--ST (stereo), MO (monaural) o Disc information indicators-- (track/file), TAG (ID3 Tag), (folder) ; Text name indicators--DISC, STATION a Main display, level meter s Clock indicator d EQ (equalizer) indicator f LOUD (loudness) indicator g (Dolby B NR) indicator h Playback disc indicators--MP3, WMA j B.SKIP (blank skip) indicator k Source display l Level meter, volume meter, time countdown indicator / Playback mode indicators--DISC, (folder), RND (random), RPT (repeat), INT (intro), (track/file), MAG (magazine) z Loaded source indicators-- (disc), (tape) 5 ENGLISH Remote controller -- ENGLISH Installing the lithium coin battery (CR2025) RM-RK50 Main elements and features 1 · When operating, aim the remote controller directly at the remote sensor on the unit.

Make sure there is no obstacle in between. 2 Warning: · Do not install any battery other than CR2025 or its equivalent; otherwise, it may explode. · Store the battery in a place where children cannot reach to avoid risk of accident. · To prevent the battery from over-heating, cracking, or starting a fire: Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire. Do not leave the battery with other metallic materials.

Do not poke the battery with tweezers or similar tools..



[Your user manual](#)
[JVC KWXC410J-KW-XC410](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>