

JVC®









 




 



Let's Get Started Using Your Video Capable iPod® with Your JVC TeleDock TV...



Dock It

1) Choose the Adaptor suited to your iPod model


iPod					iPod nano			iPod mini
4G	Photo/Color	5G (Video)	Classic	Touch*	1G	2G	3G	1G 2G
								
20GB 40GB	20GB 30GB 40GB 60GB	30GB 60GB 80GB	80GB 160GB	8GB 16GB 32GB	1GB 2GB 4GB	2GB 4GB 8GB	4GB 8GB	4GB 6GB
20GB - A	20GB - A 30GB - A	30GB - A	80GB - A	E	B	C	D	A
 A				 E	 B	 C	 D	 A

 
* Due to the nature of it's build, features such as lock/unlock, menu, and selection of music/ video, selection of TV Output, and Photo Viewer On/Off must be performed on the iPod itself.

2) Gently pull down the TeleDock, place the adaptor in the dock and Insert your iPod (Make sure TV Out is turned on in the iPod's Video Menu)

3) Press the button and wait for communication to be established

The TeleDock lights will flash to indicate the TV is establishing communication with your iPod. When the JVC logo appears on your iPod and the lights stop flashing, you are ready to begin.

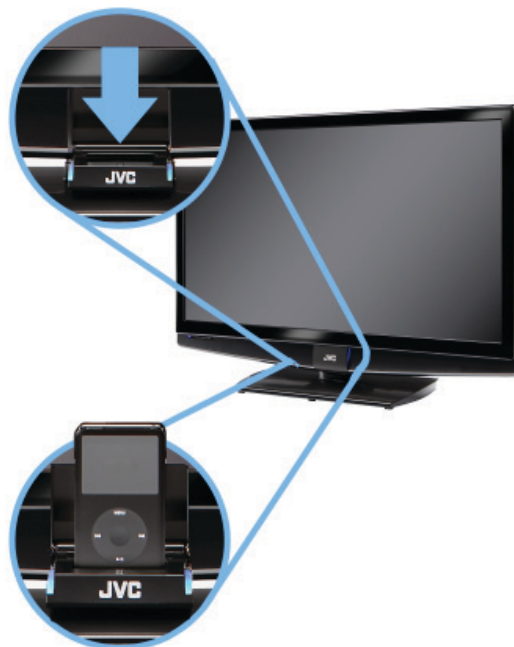


NOTE: Once communication is established, please press the  button on the remote before removing the iPod from TeleDock.

4) The main iPod menu appears

From the main menu, you can select "Music Play", "Music Shuffle Play" or "Video Play".



NOTES:

- Press the  button to enter or exit the menu.
- Disconnecting without doing so can interfere with the iPod/TV communications and you may have to start over.



Detaching your iPod abruptly from the TeleDock will forcibly exit the menu. ("iPod not found") will appear on the TV screen.

Getting to Know what your TeleDock can do:

TCON Mode: TCON stands for Television Mode. In TCON mode your TV Remote is in CONTROL of your iPod. (Page 5 – 7)

iTV Mode: Allows you to watch TV while listen to music on your iPod. (Page 7)

PCON Mode: PCON stands for iPod Mode. In PCON mode your iPod regains control and you can navigate through the main interface of the iPod instead of through the TV control. PCON is especially handy to choose from music playlists and large video libraries. (Page 8 – 9)

Caring for your TeleDock: Always open and close the TeleDock gently. Close the TeleDock when you are not using it.

Play It

Use your TV Remote to navigate through the TV's iPod Menu and control some basic iPod functions.

iPod Button:

Enter iPod Menu
Exit iPod Menu and go to last channel

Left Arrow Button:

Play Previous

Down Arrow Button:

Move cursor down one position
In Music play, skip - 50
In Video play, move down category

Sound Button:

Change your sound status settings

Video Button:

Change your video status settings

Play Arrow Button:

Playback

Rewind Arrow Button:

Rewind playback

iTV Button:

Watch your RF video source while listening to your iPod's music

Stop Button:

In TCON, brings up Initial iPod Menu
In PCON, stops playback

Up Arrow Button:

Move cursor up one position
In Music play, skip +50
In Video play, move up category

OK Button:

Playback (Pause), Set

Right Arrow Button:

Play Next

Back Button:

In TCON, brings up Initial iPod Menu
In PCON, goes back to the previous menu

Aspect Button:

Change the video's aspect ratio

PCON Button:

Change between TCON and PCON

Display Button:


Turn display messages on or off

Forward Arrow Button:

Fast-forward playback


Pause Button:

Pause (Playback)

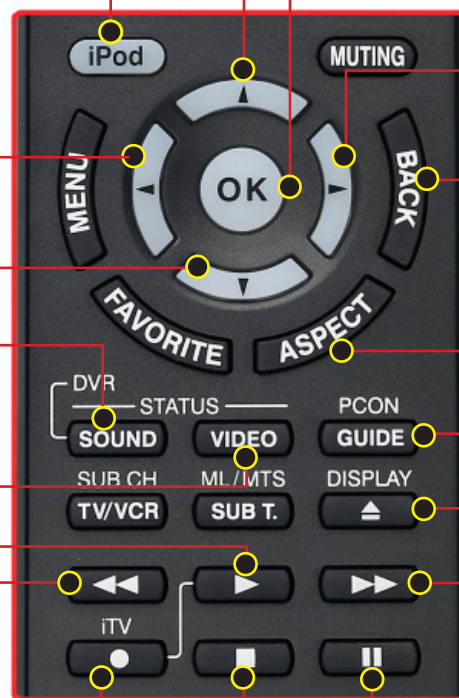

Listen To It – TCON Mode

TeleDock lets you listen to music content stored on your iPod.

1)  Scroll to and select Music Play or Music Shuffle Play from the TV's main iPod menu

2) Press 

The track title, artist name and playing time will be displayed.



TCON (TV control) Playback Functions

In TCON Mode you can control most iPod playback functions with the TV remote control.

To move back and forth between TCON and PCON, press  .

To play, pause, or re-start, press    .

To Rewind  and Fast-Forward  . Then  to re-start.

To return to the Main iPod Menu, press   .

To go back to previous  or forward to the next track  .

Skip to the next 50 tracks  or previous 50 tracks  .

To adjust the sound  status.

 Allows you to watch TV while listening to your iPod.

Watch It - TCON Mode

TeleDock lets you watch movies, music videos, TV shows, video podcasts and rentals stored on your video iPod.

1)  Scroll to and select Video Play from the TV's main iPod menu

2) Press 

The first video in your library will begin to play.



TCON (TV control) Playback Functions

In TCON Mode you can control most iPod playback functions with the TV remote control.

To move back and forth between TCON and PCON, press  ^{PCON} **GUIDE**.

To move to previous  and next  video category.

→ **Movies** ↔ **Music Videos** ↔ **TV shows** ↔ **Video Podcasts** ↔ **Rentals** ←



- A category not supported by your iPod will be skipped over.
- Playback of a video file in "Rentals" will start when "Rentals" is selected.
- Rental is available if you have rented a program. When you choose Rentals, your rental will begin playing. Once you open, you have 24 hours to view your rental before your rented file expires.

To play, pause, or re-start, press   .

To Rewind  and Fast-Forward . Then  to re-start.

To return to the Main iPod Menu, press  .

To go back to previous  or forward to the next video .

To adjust the aspect ratio of the video .

To adjust the sound  or video  status.

Enjoy It - TCON Mode

iTV allows you to watch TV and at the same time listen to the music content on your iPod.

1)  **Scroll to and select Music Play or Music Shuffle Play**

2) Press 

The TV picture will change to what is being received by the TV.



iTV Mode

Basic operations are the same as the operations when playing back tracks in TCON mode. (Page 5)



- External audio input is unavailable.
- The TV's sound does not come out from the speaker.
- You can not change the aspect ratio.
- You can not choose the sound mode or the video status settings.
- You can not operate the TV menus.

Press  **to turn ON or OFF the track title on the TV.**

Press  **will go back to the previous screen.**

Play It - PCON Mode

You can perform basic iPod operations using the remote as well as the iPod itself.

While in TCON Mode, press 

“Please navigate using iPod Display
Press Display button to exit this message”
will appear.



PCON (Pod control) Playback Functions

To move back and forth between TCON and PCON, press .

To play, pause, or re-start, press  .

To Rewind  and Fast-Forward . Then  to re-start.

To stop playback and go back to the start menu of the iPod .

Move to the menu of the selected item .

Skip to previous or go back to beginning . Skips to next .

Press  to move back to the previous menu.

Move the cursor up  or down .

To adjust the sound  or video status .

Adjust the Aspect mode .

Turn On/Off the TV message screen .

Setup Your iPod to Play Videos and Photos – PCON Mode

To watch videos with PCON Mode, please follow the steps below.

To display videos

- 1) Scroll to and select Videos.
- 2) Scroll to and select Settings.
- 3) Scroll to TV Out and select it to be On.

Your iPod is now set to be able to display videos on your TV.

NOTE: Setting up your iPod to play videos on your TV.



Depending on your iPod type, the above directions may differ slightly.

To display photos

- 1) Scroll and select Photos.
- 2) Scroll and select Settings.
- 3) Scroll to TV Out and select it to be On.

Your iPod is now set to be able to display videos on your TV.

NOTE: Setting up your iPod to play videos on your TV.



- Depending on your iPod type, the above directions may differ slightly.
- If you playback both photos and music, adjust Music setting.


Error Message:	Solution:
"iPod not found"	Insert your iPod again. Also, this appears when you press the iPod button without inserting an iPod.
"Communication failed Check Connection"	Insert your iPod again. This is a connection error.
"File not found"	This appears when your iPod has no files to play.

Work It

There are many ways you can enjoy your iPod videos on this TV with TeleDock. Here are just a few:

Change the Aspect Ratio

While you are watching videos, there are four different aspect modes from which to choose. Because the quality of each video on your iPod can vary drastically, we suggest checking each aspect ratio with each video to choose the best one for it.

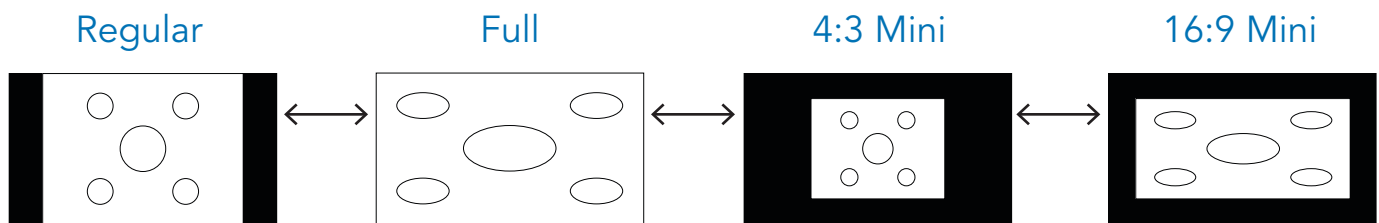


About the Aspect Modes:

Regular: Perfect for 4:3 high resolution content on your iPod.

Full: Perfect for 16:9 (a.k.a. widescreen) content on your iPod.



 

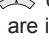 
4:3 Mini Mode: Ideal for lower resolution 4:3 content because this mode compresses the video about 75%.

16:9 Mini Mode: Ideal for lower resolution 16:9 content.

 



NOTE: While the Aspect Mode menu is on screen, the remote will not respond to commands. If you want the menu to go away, press the  button once, or you can wait a few seconds, then normal operations resume.

Common Questions and Answers

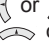as of June 30, 2008

Action	Question	Answer/Solution	
Connection	What if the TV is turned on while the iPod is attached to the TeleDock?	The channel or video input selected last time appears.	
	Is it possible to change the background on the TV?	No, it is not.	
	What if the TV is turned off while playing back the iPod?	Playback stops and iPod is also turned off.	
TCON Mode	Music play	From where does playback start?	<ol style="list-style-type: none"> 1. When you select "Music Play" from the menu: Playback starts from the first track in "Songs" in alphabetical order. 2. When the TV is operated in PCON mode, if the mode is changed to TCON: Playback resumes from the position where playback has been interrupted. 3. When pressing  button to pause playback: Playback resumes from the first track in "Songs".
		What track is played back next? *1	<ol style="list-style-type: none"> 1. Next track in "Songs" is played back except when in Music Shuffle Play. 2. When playing back a list selected in PCON Mode, then entering TCON Mode, the next track in the list is played back.
		How is the playing order?	<ol style="list-style-type: none"> 1. Tracks are played back according to the order in "Songs" (alphabetical order) except when in Music Shuffle Play. 2. When playing back a list selected in PCON Mode, then entering TCON Mode, tracks are played back according to the order in the list.
		How can I select a track?	<ol style="list-style-type: none"> 1. Press  (or ) to select one by one. 2. Press  or  to select 50 tracks at a time, except when you are in Music Shuffle Play.
		Is it possible to play tracks at random?	Yes. Select Music Shuffle Play.
		Is it possible to play tracks repeatedly (all tracks/one track)?	Only repeating all tracks is available.
		What track is played back next after selecting a list other than "Songs" in PCON Mode, then entering TCON Mode?	Tracks are played back according to the order in the list ("Albums", "Artists", etc.) selected in PCON Mode.
		How can I select an album to play?	Perform necessary operations in PCON Mode.
		How can I select tracks of an artist?	Perform necessary operations in PCON Mode.
		How can I play back tracks according to a playlist?	Perform necessary operations in PCON Mode.
		How can I search tracks in a favorite genre?	Perform necessary operations in PCON Mode.
		How can I enjoy a podcast content?	Select a content in PCON Mode. (Podcast contents are played back as items in "Songs".)
		How can I play back an audio book with the TV?	Select a content in PCON Mode. (Audio books are played back as items in "Songs".)
		Is it possible to display the album jacket on the TV?	No, it is not.
		Is it possible to display the lyrics of the tracks on the TV?	No, it is not.
		What if the playback reaches the end?	Playback continues from the first track. (All songs will repeat again from the first track).
		Part of the track title/artist name is not displayed on the TV.	If the information can not be displayed entirely, "..." is displayed at the end.
The track title/artist name is displayed as "-----" on the TV.	"----" is displayed on the TV unless the track title/artist name is entered in iTunes.		
Music / Artist name is displayed as □□□.	Unrecognizable characters will be displayed as □□□.		

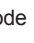Common Questions and Answers

Action		Question	Answer/Solution
TCON Mode	Movie play	Is it possible to select a video to play? *2	Press  or  to select a video. Press  or  to select the category.
		Is it possible to change the aspect ratio?	Yes. Shrinking the screen is also available.
		What if the playback reaches the end?	The next video in the selected category will be played back. When playback of the last video in a category reaches the end, playback of the first video in the category will start.
		How is the picture quality?	It depends on the original picture quality of a video in the iPod. The resolution is equal to or less than VGA. The resolution of videos purchased from the iTunes Store are VGA. Video signals are transmitted to the TV as S-Video signals.
		Is Video Podcast available on the TV?	Yes, it is available.
		What category does the playback start from?	It starts from Movie. (When no videos are available in Movie, the playback starts from the next category.)
PCON Mode	Music play	What operation cannot be performed in PCON Mode?	1. You cannot perform operations of Game from the remote control. 2. You cannot register "On-The-Go" from the remote control.
		How can I turn off the message on the TV?	Press the DISPLAY button to turn off the message. Press the button again to display the message again.
		Is it possible to turn off the backlight of the TV?	No, it is not.
		The backlight of the iPod is turned off.	The setting can be changed on the iPod.
	Movie play	Is it possible to change the aspect ratio?	Yes. Shrinking the screen is also available.
		How is the picture quality?	It depends on the original picture quality of a video in the iPod. The resolution is equal to or less than VGA. The resolution of videos purchased from the iTunes Store are VGA.
		"Please navigate through iPod" appears on the TV when playing a video in PCON Mode.	Press the DISPLAY button to turn off the message.
Music play (iTV Mode)	Does the TV sound come from speakers?	No. Exit iTV mode to enjoy the TV sound.	
	Is external audio input available?	No, it is not.	
	Is it possible to change the TV channel?	No, it is not. Before changing the channel, exit the iPod mode.	
	Is it possible to turn off information of a track on the TV?	Yes. Press the DISPLAY button to turn it off.	
	Is it possible to change the aspect ratio?	No, it is not.	
	Is it possible to choose the sound mode or video status setting?	No, it is not.	

Common Questions and Answers

Action	Question	Answer/Solution
Others	Is it possible to charge the iPod while the TV is on standby?	Yes, it is.
	Is the iPhone compatible with the TV?	No, it is not.
	Is it possible to update the TV's firmware?	No, it is not.
	Is it possible to turn off the illumination around the TeleDock?	Yes. Select High/Low/Off on the TV menu.
	Is it possible to turn off the background of the TV?	Yes. Enter PCON Mode, then turn off the message to darken the background.
	Is it possible to change the sound mode?	Yes. Press the SOUND button to change the sound mode.
	Is the iPod Touch compatible with the TV?	iPod Touch is basically compatible with the TV. Some operations are needed to be performed on the iPod Touch even in PCON Mode. The JVC logo does not appear on the iPod Touch. Video tracks cannot be played back in TCON Mode.
	Is the iPod later than iPod Classic compatible with the TV?	No, it is not.
	Is it possible to display the language other than English, French and Spanish on the TV?	No. Other languages than English, French and Spanish are displayed as "□□□□".
	Is it possible to play back with the surround effect?	Set the surround effect in advance before entering iPod mode.
	Is it possible to use Sleep Timer in iPod mode?	Yes, it is available.
	Is it possible to play back tracks while enjoying photos in a USB Mass Storage Class device connected to the Photo Viewer terminal on the TV?	No, it is not. You can enjoy photos in the iPod with playing back tracks in the iPod in PCON Mode.
	Is it possible to turn off the backlight of the iPod?	1. In TCON Mode: It turns off after a while. (It is necessary to change settings for some model of the iPod.) 2. In PCON Mode: You can turn it off by changing settings on the iPod. (Not available for some model of the iPod.)
In these cases. . .	Is it possible to operate the TV menu while playing the iPod?	No, it is not. Exit the iPod mode, then operate the TV menu.
	The TV turns black after the following operations: - Adjusting the volume - Changing the sound mode - Changing the video status setting - Changing the aspect ratio	The TV turns back to normal after a while.
	A video's sound starts playing back while playing back music.	Some of video contents (Music Videos, Video Podcasts) are played back as items in "Songs".
	When you can not select Video Play on the TV while playing the iPod Touch.	Enter PCON Mode to enjoy videos. No video is displayed in TCON Mode.
	The Click Wheel of the iPod nano 3rd generation is difficult to use when it is attached to the TeleDock.	It is recommended to perform operations from the remote control.
	Video time progress bar is not displayed on the TV.	It is or is not displayed depending on the model of the iPod.
	When an error is displayed or operation is strange.	① Press the iPod button one more time. ② Please reconnect the iPod. ③ Turn off the TV, then turn it back on. ④ Please reset the iPod. ⑤ Update your iPod's firmware to the latest version.

***1 Type of songs that can be played:**

- Music file
- Audio book
- Podcast
- Music Video (Sound Only)
- Video Podcast (Sound Only)

***2 Caution:**

- Rental is available if you have rented a program. When you choose Rentals, your rental will begin playing. Once you open, you have 24 hours to view your rental before your rented file expires.



JVC Loves the Earth

JVC COMPANY OF AMERICA
Division of JVC Americas Corp.
1700 Valley Road
Wayne, New Jersey, 07470

JVC[®]

JVC CANADA, INC.
21 Finchdene Square
Scarborough, Ontario
Canada, M1X 1A7

LCT2473-001A-A
0508TSH-II-IM

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>