




# JVC



## DVD DIGITAL CINEMA SYSTEM

# TH-V70R

Consists of XV-THV70R, SP-PWV70, SP-XSV70, and SP-XCV70

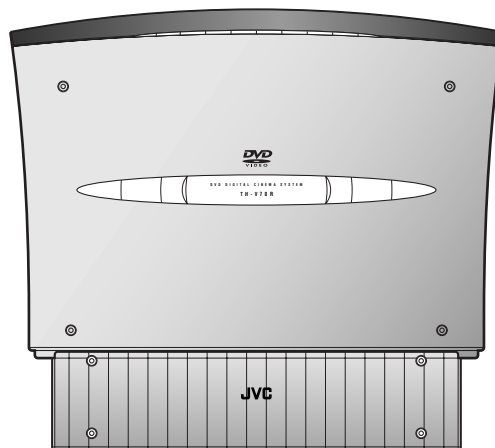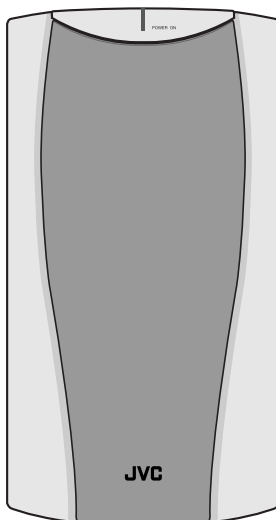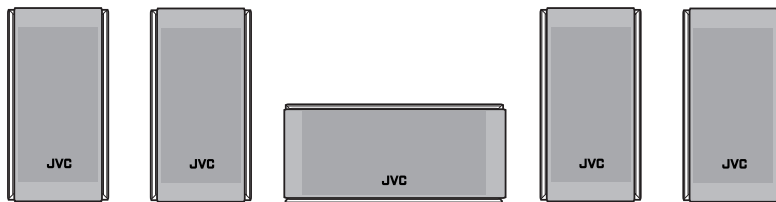

## INSTRUCTIONS

### For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

LVT0865-004A

[B]

# Warnings, Cautions and Others

---

**IMPORTANT** for the U.K.

**DO NOT** cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

**BE SURE** to replace the fuse only with an identical approved type, as originally fitted.

If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied fitted with a mains plug then follow the instructions given below:

**IMPORTANT.**

**DO NOT** make any connection to the terminal which is marked with the letter E or by the safety earth symbol or coloured green or green-and-yellow.

The wires in the mains lead on this product are coloured in accordance with the following code:

Blue : Neutral  
Brown : Live

As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.


**IF IN DOUBT - CONSULT A COMPETENT ELECTRICIAN.**

## CAUTION


To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

## Caution — button! (XV-THV70R)

Disconnect the mains plug to shut the power off completely (the  goes off).

The  button in any position does not disconnect the mains line.

- When the system is on standby, the  lights red.
- When the system is turned on, the operation lamps light red.

The power can be remote controlled.


## CAUTION

- Do not block the ventilation openings or holes.  
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

## IMPORTANT FOR LASER PRODUCTS

### REPRODUCTION OF LABELS

- ① CLASSIFICATION LABEL, PLACED ON EXTERIOR SURFACE

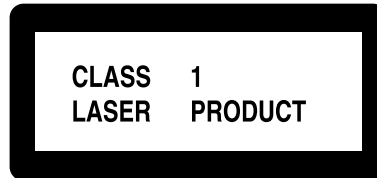

- ② WARNING LABEL, PLACED INSIDE THE UNIT




1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

#### Caution: Proper Ventilation


To avoid risk of electric shock and fire and to protect from damage, locate the apparatus as follows:

- Top: No obstructions and open spacing.
- Sides/Front/Back: No obstructions should be placed in the areas shown by the dimensions below.
- Bottom: Place on the level surface. Maintain adequate air path for ventilation by placing on a stand with a height of 10 cm more.

Front view

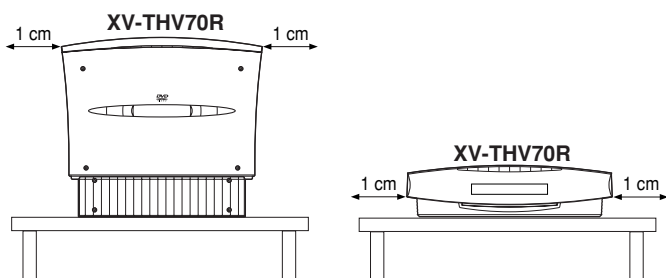

Side view

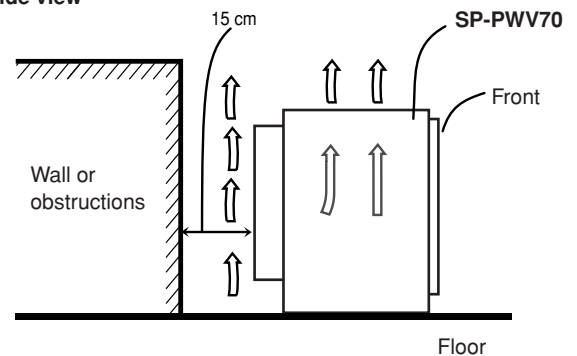

## SAFETY INSTRUCTIONS

### “SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT”

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

\*\*\*\*\*

Do read the operating instructions before you attempt to use the equipment.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

Do be careful with glass panels or doors on equipment.

\*\*\*\*\*

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way—switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Switch off using the switch on the equipment and make sure that your family know how to do this.

Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs with wood screws — to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL

— NEVER let anyone, especially children, push anything into holes, slots or any other opening in the case -this could result in a fatal electrical shock.;

— NEVER guess or take chances with electrical equipment of any kind — it is better to be safe than sorry!



# Table of Contents

<b>Introduction .....</b>	<b>2</b>	<b>Advanced operations .....</b>	<b>41</b>
Notes on handling .....	2	<b>Using the on-screen bar .....</b>	<b>41</b>
Checking the supplied accessories .....	2	Showing the on-screen bar .....	41
<b>Names of parts and controls .....</b>	<b>3</b>	Basic operation through the on-screen bar .....	42
<b>About discs .....</b>	<b>6</b>	Changing the time information .....	42
Playable disc types .....	6	<b>Locating a desired scene from the disc menu .....</b>	<b>43</b>
Disc structure .....	7	Locating a desired scene from the DVD menu .....	43
Playback Control function (PBC) .....	7	Locating a desired scene from the Video CD/SVCD menu with PBC .....	43
<b>Getting started .....</b>	<b>8</b>	<b>Selecting a view angle of DVD .....</b>	<b>44</b>
Setting the DISP.SET selector .....	8	Selecting a view angle .....	44
When placing the center unit vertically .....	9	Showing all view angles on the TV .....	45
<b>Connections .....</b>	<b>10</b>	<b>Changing the subtitle languages and audio languages .....</b>	<b>45</b>
Connecting a TV .....	10	Selecting the subtitle language .....	45
Connecting the FM and AM (MW) antennas .....	11	Selecting the audio language .....	46
Connecting the powered subwoofer .....	12	Selecting the audio channel .....	47
Connecting the satellite speakers .....	12	<b>Playing from a specified position on a disc .....</b>	<b>48</b>
Connecting to an analog component .....	14	Locating a desired chapter from the on-screen bar .....	48
Connecting to a digital component .....	14	Locating a desired position by specifying the time .....	49
Connecting the power cord .....	15	Locating a desired scene from the digest display .....	49
<b>Installing the equipment on the wall .....</b>	<b>16</b>	<b>Special picture playback .....</b>	<b>50</b>
When attaching the rear speakers to a wall .....	16	Frame-by-frame playback .....	50
When attaching the AM (MW) loop antenna to a wall .....	16	Showing continuous still pictures .....	50
When attaching the center unit to a wall .....	17	Playing back in slow-motion .....	51
<b>Using the remote control .....</b>	<b>19</b>	Zooming in/out .....	51
Putting batteries in the remote control .....	19	Changing the VFP setting .....	52
Operating the system from the remote control .....	19	<b>Changing the track order .....</b>	<b>53</b>
Using the remote control for TV operations .....	20	Playing back in the desired order .....	53
<b>Basic operations .....</b>	<b>21</b>	Playing back tracks in random order .....	53
Turning on/off the system .....	21	<b>Repeat playback .....</b>	<b>54</b>
Selecting the source to play .....	22	Repeating a current title, chapter, or all tracks .....	54
Adjusting volume .....	22	Repeating a desired part .....	54
Turning off the sound temporarily .....	23	<b>MP3 disc playback .....</b>	<b>55</b>
Adjusting the brightness .....	24	<b>JPEG disc playback .....</b>	<b>57</b>
Turning off the power with the timer .....	24	<b>Setting DVD preferences .....</b>	<b>59</b>
Changing the decode mode .....	25	<b>Using the choice menus .....</b>	<b>59</b>
Setting the subwoofer .....	26	Choice menus .....	59
<b>Basic playback .....</b>	<b>27</b>	Basic procedure through the choice menus .....	60
Inserting and removing a disc .....	27	<b>LANGUAGE menu .....</b>	<b>61</b>
Stopping playback temporarily .....	28	<b>PICTURE menu .....</b>	<b>62</b>
Stopping playback completely .....	29	<b>AUDIO menu .....</b>	<b>63</b>
Moving back the playback position during DVD playback .....	29	<b>SPK. SETTING menu .....</b>	<b>64</b>
Searching for a particular point .....	30	<b>OTHERS menu .....</b>	<b>66</b>
Locating the beginning of a desired chapter or track ..	30	<b>Restricting playback by Parental Lock .....</b>	<b>67</b>
Locating a desired selection using Number buttons ...	30	Setting Parental Lock .....	67
<b>Tuner operations .....</b>	<b>31</b>	Changing the setting of Parental Lock .....	68
Tuning in to stations manually .....	31	Releasing Parental Lock temporarily .....	68
Using preset tuning .....	31	<b>Setting the system through the display     window .....</b>	<b>70</b>
Selecting the FM reception mode .....	32	<b>Operating other manufacturers' VCR ...</b>	<b>71</b>
Reducing the noise of AM (MW) broadcast .....	32	<b>Maintenance .....</b>	<b>72</b>
Using the RDS (Radio Data System) to receive FM stations .....	33	<b>Troubleshooting .....</b>	<b>73</b>
Searching for a program by PTY codes .....	34	<b>Glossary .....</b>	<b>76</b>
Switching to broadcast program of your choice temporarily .....	35	<b>Specifications .....</b>	<b>77</b>
<b>Creating the realistic sound fields .....</b>	<b>37</b>		
Dolby Surround .....	37		
DTS Digital Surround .....	37		
DAP modes .....	38		
All Channel Stereo .....	38		
<b>Selecting the surround mode .....</b>	<b>39</b>		
Using Dolby Pro Logic II, Dolby Digital and DTS Digital Surround .....	39		
Using DAP Modes and All Channel Stereo .....	40		

# Introduction

## Notes on handling

### Important cautions

#### Installation of the system


- Select a place which is level, dry and neither too hot nor too cold between 5°C and 35°C (41°F and 95°F).
- Leave sufficient distance between the system and the TV.
- Do not use the system in a place subject to vibrations.

#### Power cord

- Do not handle the power cord with wet hands!
- A small amount of power (1.7 watts) is always consumed while the power cord is connected to the wall outlet (the center unit only).
- When unplugging the power cord from the wall outlet, always pull the plug, not the power cord.

#### To prevent malfunction of the system

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the system.
- Do not apply any shock to the moving panel when it is open.
- An 8 cm disc cannot be played back in this system. (Do not attempt to insert an 8 cm disc using an adaptor. Doing so will damage the system.)
- Do not use any non-standard shape disc (like a heart, flower, or credit card, etc.) available on the market, because it may damage the system.
- Do not use a disc with tape, stickers, or paste on it, because damage to the system may result.

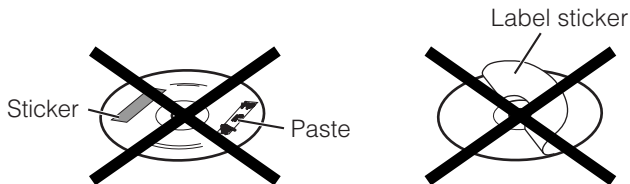

#### Note about copyright laws

Check the copyright laws in your country before recording from DVD Video, Super Video CD (SVCD), Video CD, and Audio CD discs. Recording of copyrighted material may infringe copyright laws.

#### Note about the copyguard system

The DVD Video discs are protected by the copyguard system. When you connect the system to your VCR directly, the copyguard system activates and the picture may not be played back correctly.

## Safety precautions

#### Avoid moisture, water and dust

Do not place the system in moist or dusty places.

#### Avoid high temperatures

Do not expose the system to direct sunlight or do not place it near a heating device.

#### When you are away

When away on travel or otherwise for an extended period of time, remove the plug from the wall outlet.

#### Do not block the vents

Blocking the vents may damage the system.

#### Care of the cabinet

When cleaning the system, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents including disinfectants. These may cause deformation or discoloring.

- Do not clean the moving panel when it is open.

#### If water gets inside the system

Turn the system off and remove the plug from the wall outlet, then call the store where you made your purchase. Using the system in this state may cause a fire or electrical shock.

## Checking the supplied accessories

Check to be sure you have all of the supplied accessories. The number in the parentheses is the quantity of the pieces supplied.

If anything is missing, contact your dealer immediately.

- Remote control (1)
- Batteries (2)
- Stand (1) (for the center unit)
- Legs (2) (for the stand)
- FM antenna (1)
- AM (MW) loop antenna (1)
- Power cord (1)
- System cord (1)
- Video cord (1)
- Speaker cords
  - 5 m (3): For the left front speaker, right front speaker, and center speaker
  - 10 m (2): For the left rear speaker and right rear speaker (The length of the above speaker cords are approximate.)
- Speaker wall brackets (2)
- Screws
  - For the stand (1)
  - For the speaker wall brackets (2)
- Paper pattern (1) (for attaching the center unit to a wall)


# Names of parts and controls

See pages in the parentheses for details.

## Center unit

### Front panel


Placed vertically (with DISP.SET set to "V")

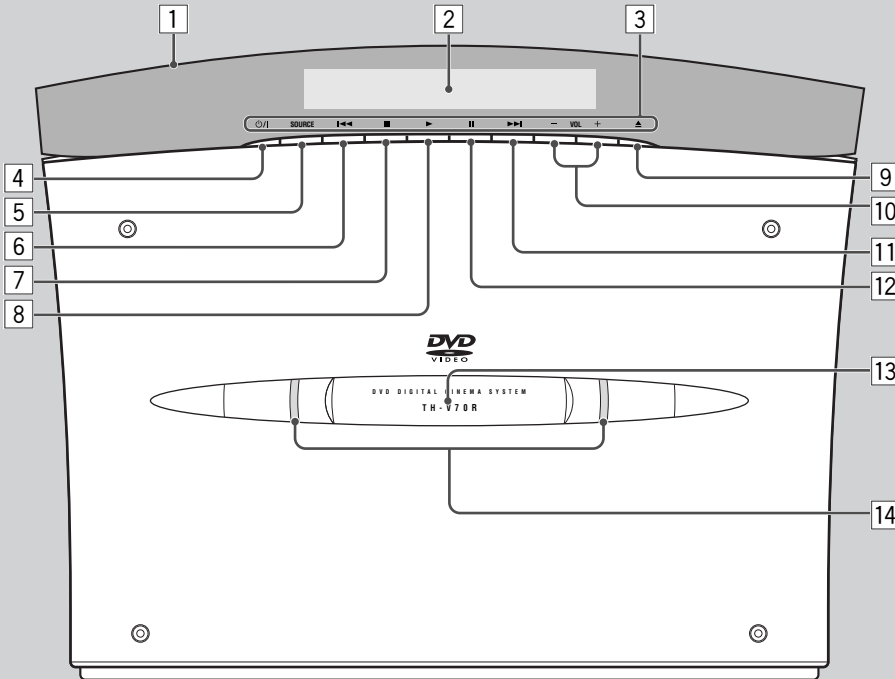


### Front panel

- 1 Moving panel (21)
- 2 Display window
- 3 Button name indicators (21)
- 4  $\odot/|$  button (21)
- 5 SOURCE button (22)
- 6  $\lll$  (reverse skip) button (30)
- 7  $\blacksquare$  (stop) button (29)
- 8  $\triangleright$  (play) button (29)
- 9  $\blacktriangle$  (open/close) button (27)
- 10 VOLUME +/- buttons (22)
- 11  $\ggg$  (forward skip) button (30)
- 12  $\|\$  (pause) button (28, 50)
- 13 Remote sensor (19)
- 14 Illumination lamps (21)

Placed horizontally (with DISP.SET set to "H")

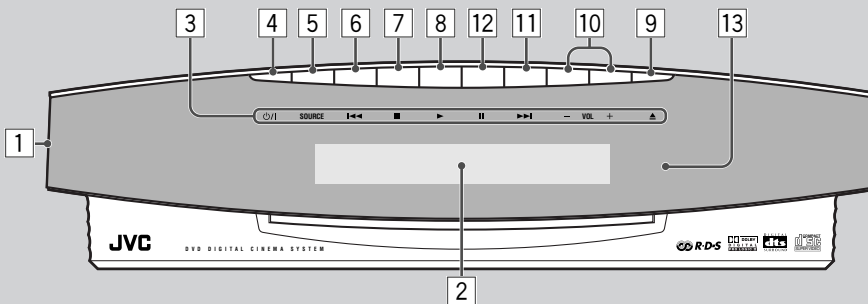

### Rear panel

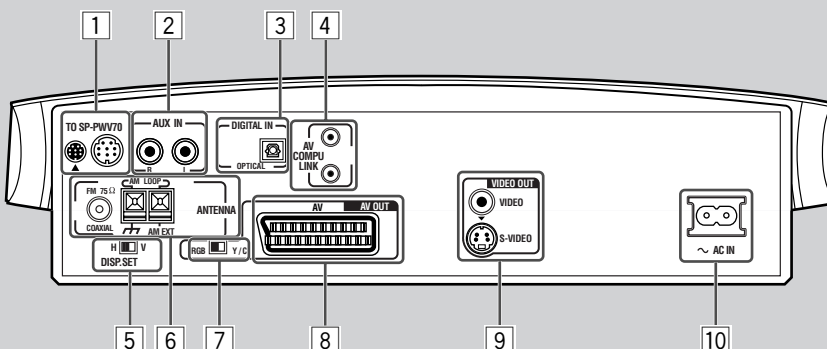


### Rear panel

- 1 System cord CONNECTOR (12)
- 2 AUX IN jacks (14)
- 3 DIGITAL IN jack (14)
- 4 AV COMPU LINK jacks  
(These jacks are provided for use in the future. They are currently not used.)
- 5 DISP.SET (Display set) selector (8)
- 6 ANTENNA terminals (11)
- 7 RGB-Y/C selector (10)
- 8 AV OUT (SCART) connector (10)
- 9 VIDEO OUT jacks (10)  
VIDEO, S-VIDEO
- 10  $\sim$  AC IN socket (15)




## Display window

Placed vertically (with DISP.SET set to "V")\*

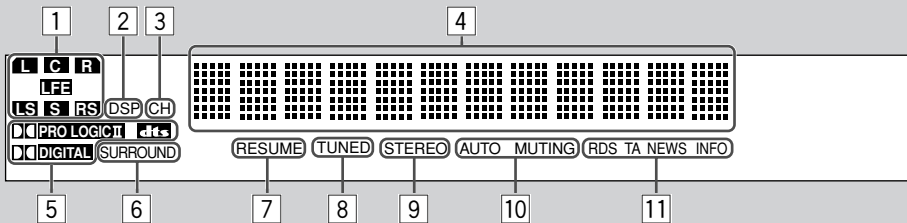

Placed horizontally (with DISP.SET set to "H")

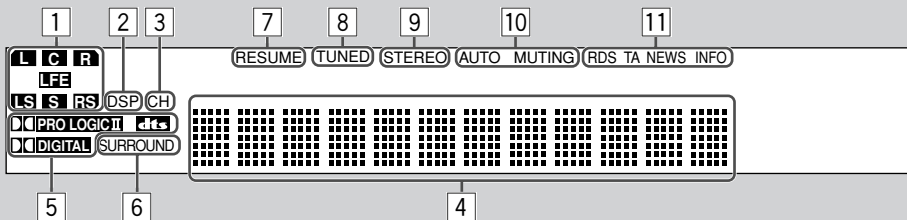


### Display window

- 1 Signal indicators (38)
- 2 DSP indicator (38)
- 3 CH indicator (32)
- 4 Main display
- 5
  - PRO LOGIC II indicator (37)
  - Digital signal format indicators (37)
  - DOLBY DIGITAL and DTS
- 6 SURROUND indicator (40)
- 7 RESUME indicator (29)
- 8 TUNED indicator (31)
- 9 STEREO indicator (31, 32)
- 10 AUTO MUTING indicator (32)
- 11 RDS reception mode indicators  
RDS (33)  
TA, NEWS, INFO (35)


\* This manual explains operations using the illustrations of the display window that are shown when the center unit is placed vertically (the DISP.SET selector is set to "V").

## Powered subwoofer

Rear

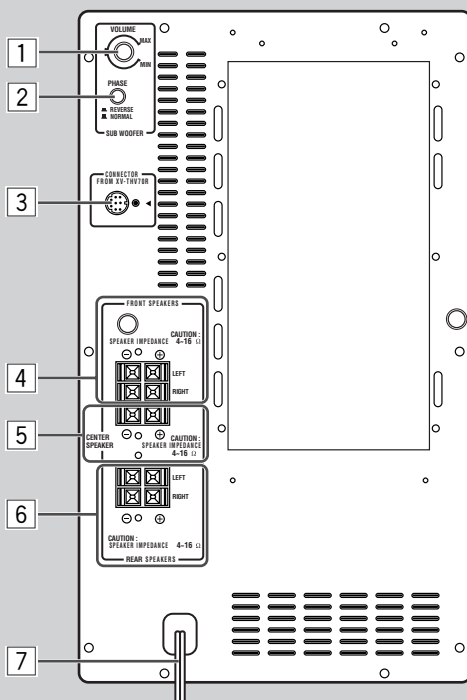

Front

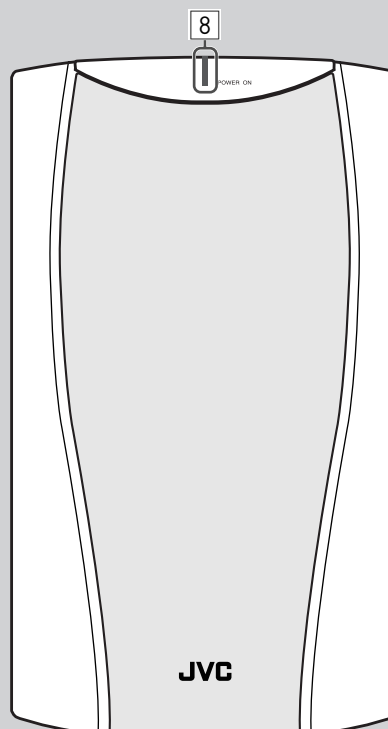


### Powered subwoofer

- 1 VOLUME knob (26)
- 2 PHASE button (26)
- 3 System cord CONNECTOR (12)
- 4 FRONT SPEAKERS terminals (13)
- 5 CENTER SPEAKER terminal (13)
- 6 REAR SPEAKERS terminals (13)
- 7 Power cord (15)
- 8 POWER ON lamp (22)

# Names of parts and controls

## Remote control

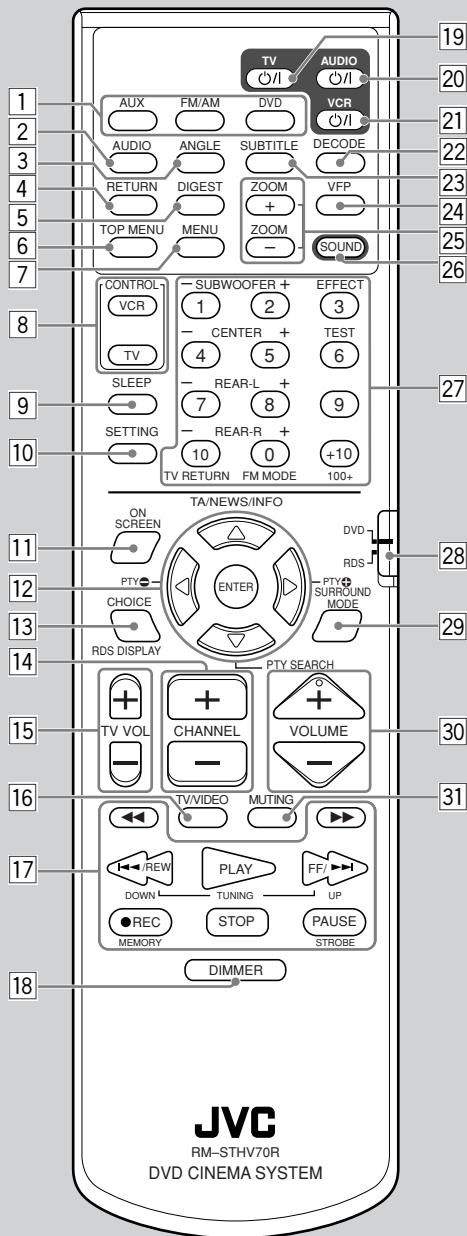

### Remote control

- 1 Source selecting buttons (22)  
AUX, FM/AM, DVD
- 2 AUDIO button (46, 47)
- 3 ANGLE button (44, 45)
- 4 RETURN button (43)
- 5 DIGEST button (49)
- 6 TOP MENU button (43)
- 7 MENU button (43, 58)
- 8 CONTROL buttons  
VCR (71), TV (20)
- 9 SLEEP button (24)
- 10 SETTING button (70)
- 11 ON SCREEN button (41)
- 12 ENTER button  
Cursor ◀/▶/▲/▼ buttons  
Operating buttons for RDS  
PTY + (34), PTY - (34), TA/NEWS/INFO (35),  
PTY SEARCH (34)
- 13 CHOICE button (60, 67)  
RDS DISPLAY button (33)
- 14 CHANNEL +/- buttons (20, 71)
- 15 TV VOL +/- buttons (20)
- 16 TV/VIDEO button (20)
- 17 Operating buttons  
◀◀, ▶▶ (30, 51)  
◀◀/REW (TUNING DOWN) (30, 31, 55, 57)  
PLAY (29, 50, 55, 57)  
FF/▶▶ (TUNING UP) (30, 31, 55, 57)  
● REC (MEMORY) (31, 71)  
STOP (29, 55, 57)  
PAUSE (STROBE) (28, 50, 55, 57)
- 18 DIMMER button (24)
- 19 TV ⏻ button (20)
- 20 AUDIO ⏻ button (21)
- 21 VCR ⏻ button (71)
- 22 DECODE button (25)
- 23 SUBTITLE button (45)
- 24 VFP button (52)
- 25 ZOOM +/- buttons (51, 57)
- 26 SOUND button (39, 40)
- 27 • Number buttons  
• Sound setting buttons (26, 39, 40)  
SUBWOOFER +/-, CENTER +/-, REAR-L +/-,  
REAR-R +/-  
• EFFECT button (40)  
• TEST button (39)  
• FM MODE button (32)
- 28 Remote control mode selector
- 29 SURROUND MODE button (39)
- 30 VOLUME +/- buttons (22)
- 31 MUTING button (23)

# About discs






 


## Playable disc types

This system has been designed to play back the following discs:

DVD Video, Video CD, Super Video CD (SVCD), Audio CD, CD-R, and CD-RW.

- This system can also play back MP3 and JPEG files recorded on CD-Rs and CD-RWs. For in-depth information about MP3, see “MP3 disc playback” on page 55, and about JPEG, see “JPEG disc playback” on page 57.
- We refer to DVD Video as DVD in this manual.

### Discs you can play:

Disc Type	DVD	Video CD	SVCD	Audio CD	CD-R	CD-RW
Mark (Logo)	 	 <b>Video CD</b>	 			
Video Format	PAL			_____	_____	_____
Region Code Number*	2 ALL	_____	_____	_____	_____	_____

- The following discs cannot be played back:
  - DVD Audio, DVD-ROM, DVD-RAM, DVD-R, DVD-RW, CD-ROM, CD-I (CD-I Ready), Photo CD, etc. Playing back these discs will generate noise and damage the speakers.
  - 8 cm disc  
An 8 cm disc cannot be played back in this system. (Do not attempt to insert an 8 cm disc using an adaptor. Doing so will damage the system.)
- **On some DVD, Video CD, or SVCD discs, their actual operations may be different from what is explained in this manual. This is due to the disc programming and disc structure, but not a malfunction of this system.**
- **Notes on CD-R and CD-RW**
  - User-edited CD-Rs (Recordable) and CD-RWs (Rewritable) can be played back only if they are already “**finalized**.”
  - The system can play back CD-Rs or CD-RWs recorded on a personal computer if they have been recorded in the audio CD format.  
The system can also play back CD-Rs or CD-RWs if MP3 files or JPEG files are recorded on them.  
However, they may not be played back because of their disc characteristics, recording conditions, or damage or stain on them.  
Especially, the configuration and characteristics of an MP3 disc or a JPEG disc is determined by the writing (encoding) software and hardware used for recording. Therefore, due to the software and hardware used, the following symptoms may occur:
    - Some discs may not be played back.
    - Some tracks on an MP3 disc are skipped and may not be played back normally.
    - Some files on a JPEG disc may be played back distortedly.
  - Before playing back CD-Rs or CD-RWs, read their instructions or cautions carefully.
  - CD-RWs may require a longer readout time. This is caused by the fact that the reflectance of CD-RWs is lower than for regular CDs.

### \* Note on Region Code


DVD players and DVDs have their own Region Code numbers. This system can play back only DVDs recorded with the color system of PAL whose Region Code numbers include “2.”




If a DVD with the improper Region Code numbers is loaded, “REGION CODE ERROR” appears on the display and playback cannot start.

### IMPORTANT: Before playing a disc, make sure of the following....

- Check the connection with the TV.
- Turn on the TV and select the correct input mode on the TV to view the pictures or on-screen indications on the TV screen.
- For DVD playback, you can change the initial setting to your preference. (See pages 59 to 69.)

If  appears on the TV screen when pressing a button, the disc cannot accept an operation you have tried to do, or information required for that operation is not recorded on the disc.



**NOTICE:** In some cases, without showing , operations will not be accepted.

## Disc structure

A DVD Video disc consists of "titles," and each title may be divided into some "chapters." (See Example 1.) For example, if a DVD disc contains some movies, each movie may have its own title number, and it may be further divided into some chapters.

On the other hand, a Video CD, SVCD, and Audio CD consist of "tracks." (See Example 2.)

In general, each track has its own track number. (On some discs, each track may also be divided by Indexes.)

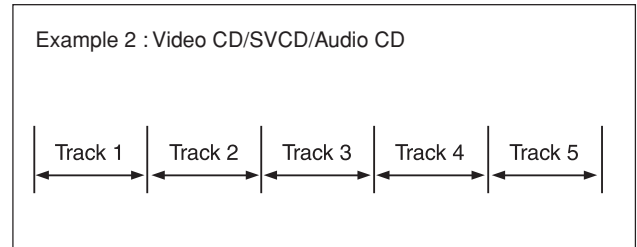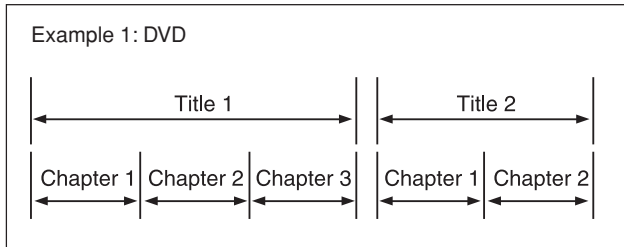

## Playback Control function (PBC)

The Playback Control function allows you to enjoy menu-driven operation and high-resolution still images which have a resolution four times greater than moving pictures.

- **High-resolution still image display**


You can display high-quality images four times clearer than moving pictures.

- **Menu-driven playback**

A selection menu is displayed when you start playing a Video CD and SVCD disc with the Playback Control feature. The selection menu shows a list of numbers for selection. Some discs may show moving pictures or a divided screen.

You can interact with the screen using a menu display to select and play an entry.

See example illustration below about basic feature of menu-driven playback (for details about the operation through the menu, see also page 43).

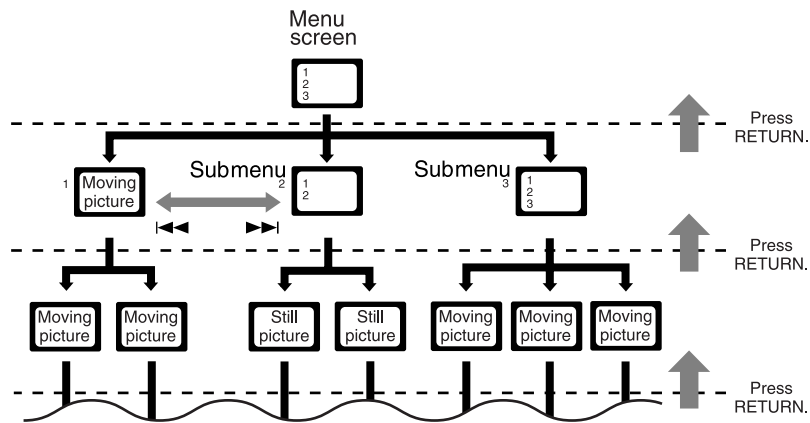

**NOTE:**


While operating a Video CD or SVCD using the menu, some of the functions such as repeat play may not work.

# Getting started

## Setting the DISP.SET selector


You can place the center unit either vertically (on the supplied stand) or horizontally (without the stand) as illustrated below. Before installing the center unit, set the DISP.SET selector according to your selection.

- The position of the remote control sensor also changes according to this setting. See page 19.

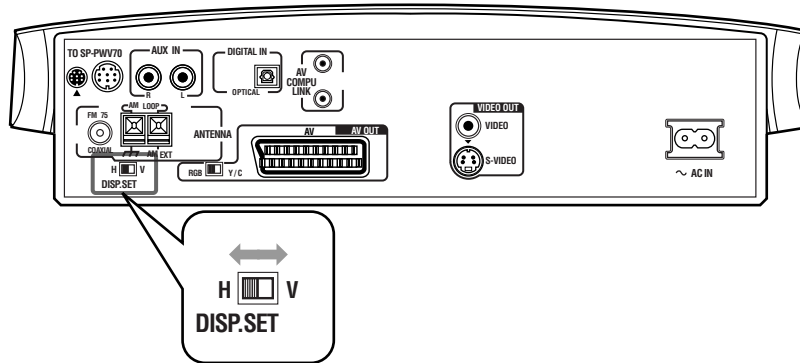

### ■ When placing the center unit vertically:

Slide the DISP.SET selector to "V" (vertically).

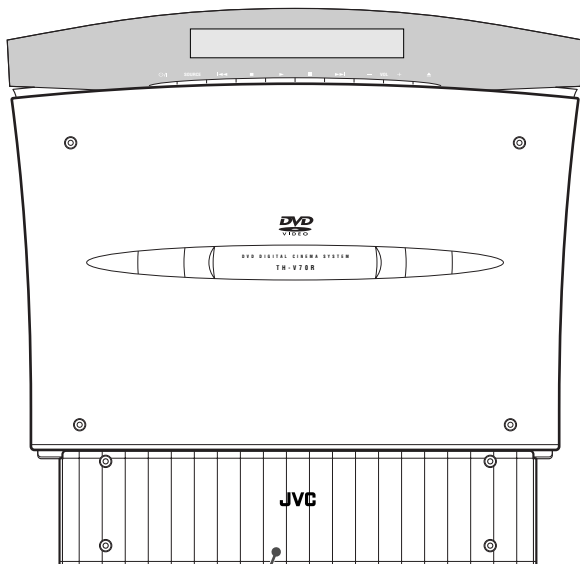


Stand (supplied)\*

\*To attach the stand, see page 9.

### ■ When placing the center unit horizontally:

Slide the DISP.SET selector to "H" (horizontally).

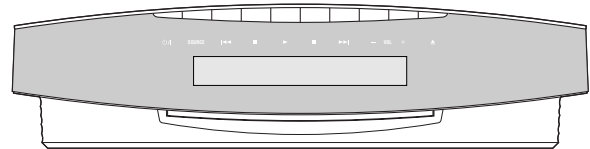


This manual explains operations using the illustrations of the display window that are shown when the center unit is placed vertically (the DISP.SET selector is set to "V").

## When placing the center unit vertically

When placing the center unit vertically, attach the supplied stand.

- 1 Connect the cords by passing them through the holes of the stand as illustrated below.


For connections, see pages 10 to 15.

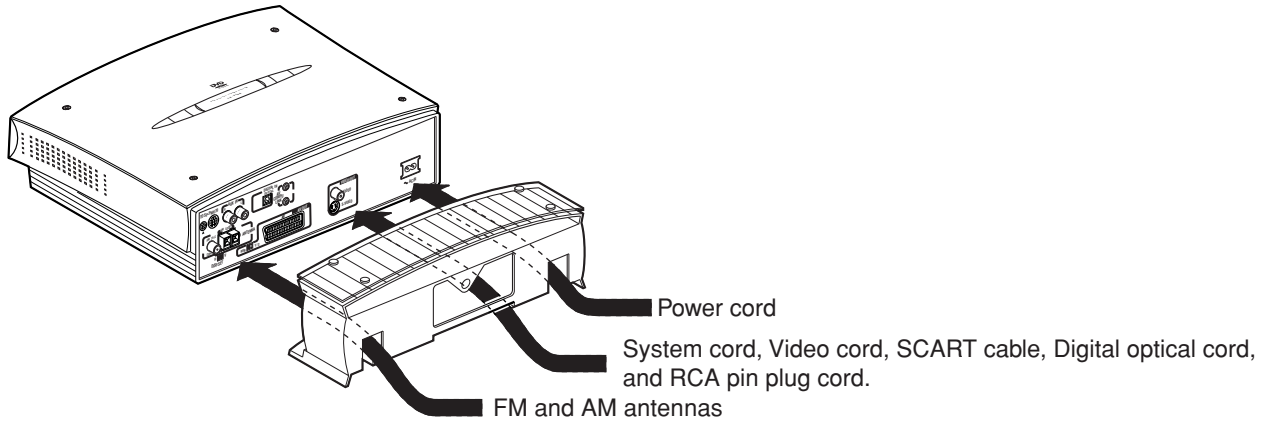


**NOTE:**

To avoid the interference from other cords, you had better separate three bundles of cords respectively.

- 2 Attach the stand to the center unit firmly using the supplied screw.

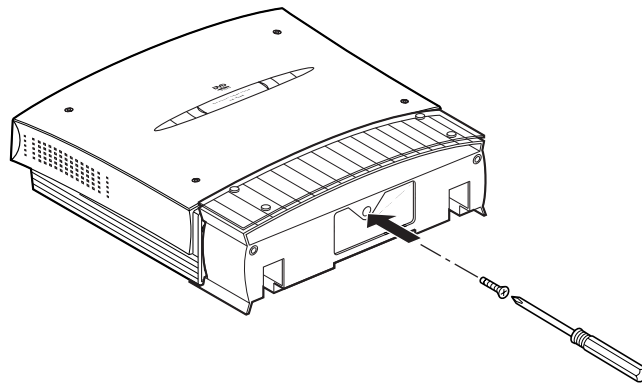

- 3 Attach the legs to the stand.

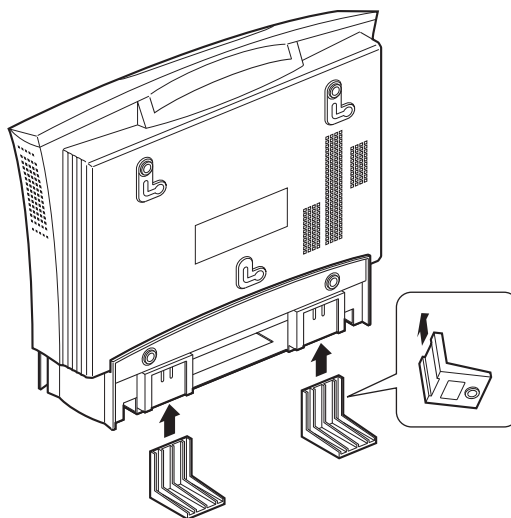

**NOTE:**

Avoid an unstable place when placing the center unit vertically. Make sure to place it on the level surface.

## Connections


- Do not connect the AC power cord until all other connections have been made.
- Since different components often have different terminal names, carefully read the instructions supplied with the component you are going to connect.

### Connecting a TV

To view pictures and on-screen displays, connect a TV to the center unit.

- Connecting to a TV through a VCR, or to a TV with a built-in VCR, may cause distortion of picture.
- You need to set "MONITOR TYPE" in the PICTURE menu correctly according to the aspect ratio of your TV. See page 62.

#### ■ To connect a TV without the SCART connector

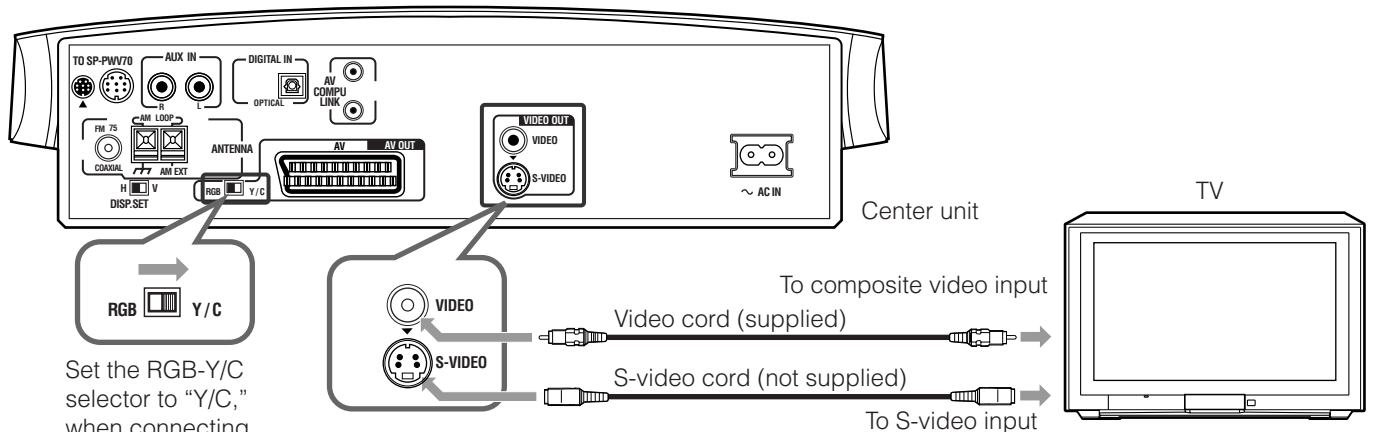

If your TV has S-video (Y/C-separation) jack, connect it using an S-video cord.


By using this jack, you can get a better picture quality than using composite video connection.

- Connect S-video cord by matching the ▼ mark on the plug to the one on the system.

#### ■ To connect a TV with the SCART connector

Connect the center unit's AV OUT (SCART) connector with your TV's SCART connector using a SCART cable (not supplied).

- Set the RGB-Y/C selector correctly according to your TV.
  - If the TV accommodates the RGB video signal, set the RGB-Y/C selector to "RGB" so that you can enjoy better-quality pictures.
  - If the TV accommodates the S-video signal, set the RGB-Y/C selector to "Y/C."
  - If the TV accommodates the composite video signal only, set the RGB-Y/C selector to "RGB."

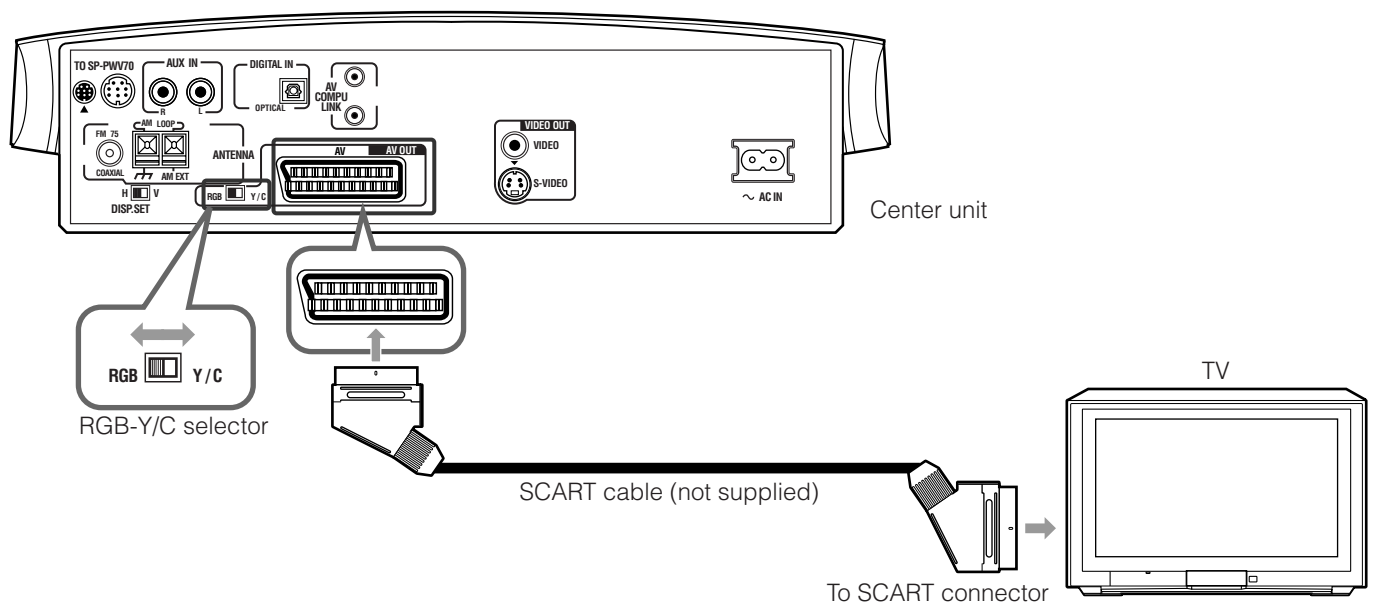

#### NOTES:

- When the RGB-Y/C selector is set to "RGB," correct video signal is not output from the S-VIDEO jack on the rear panel.
- On the rear panel SCART connector is indicated as "AV OUT." However, this terminal is designed as video output. So, no sound comes out.
- Whether the RGB-Y/C selector is set to "RGB" or "Y/C," the composite video signal is always output from the VIDEO jack of the VIDEO OUT.

# Getting Started


## Connecting the FM and AM (MW) antennas

- Make sure the antenna conductors do not touch any other terminals, connecting cords, and power cords. This could cause poor reception.

### ■ AM (MW) loop antenna

#### Setting up AM (MW) loop antenna

Attach the AM (MW) loop to its base by snapping the tabs on the loop into the slot in the base.

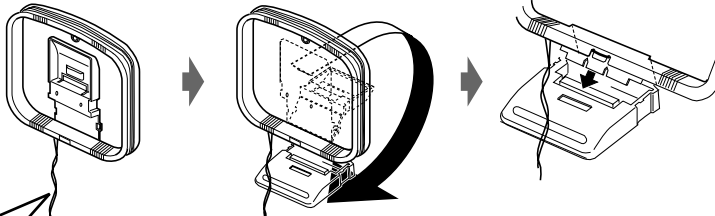


If the antenna cord is covered with vinyl, remove the vinyl by twisting it as shown.


Outdoor single vinyl-covered wire (not supplied)

#### If reception is poor:

Connect an outdoor single vinyl-covered wire to the AM EXT terminal with keeping the AM (MW) loop antenna connected.

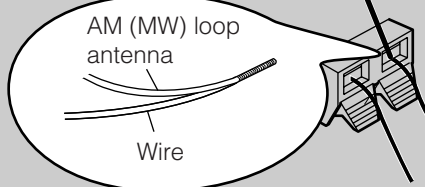


#### Connecting AM (MW) loop antenna

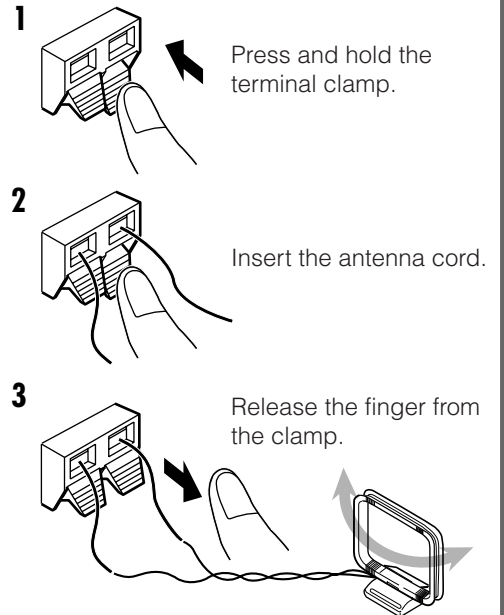


- Turn the loop until you have the best reception.

Center unit

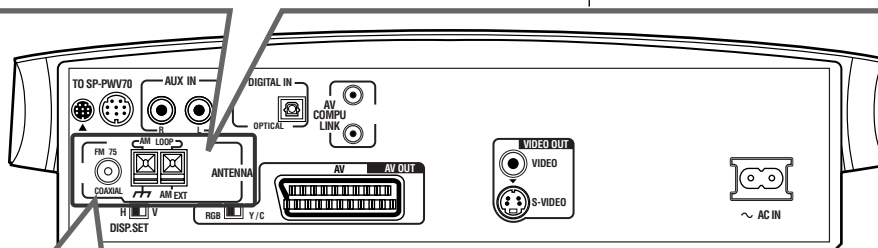

### ■ FM antenna

#### Connecting the supplied FM antenna

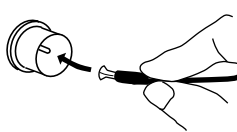

Extend the supplied FM antenna horizontally.

#### If reception is poor:

Connect an outdoor FM antenna with the standard type (coaxial) connector.



Outdoor FM antenna (not supplied)

Outdoor FM antenna cord (not supplied)

#### NOTES:


- Disconnect the supplied FM Antenna before attaching a 75  $\Omega$  coaxial connector (the kind with a round wire going to an outdoor antenna).
- We recommend that you use a coaxial cable to the FM antenna, since it is well-shielded against interference.



## Connecting the powered subwoofer


Connect the supplied powered subwoofer (SP-PWV70) using the supplied system cord.

- Connect the system cord by matching the ▲ marks on the plugs to the ones on the system and powered subwoofer.

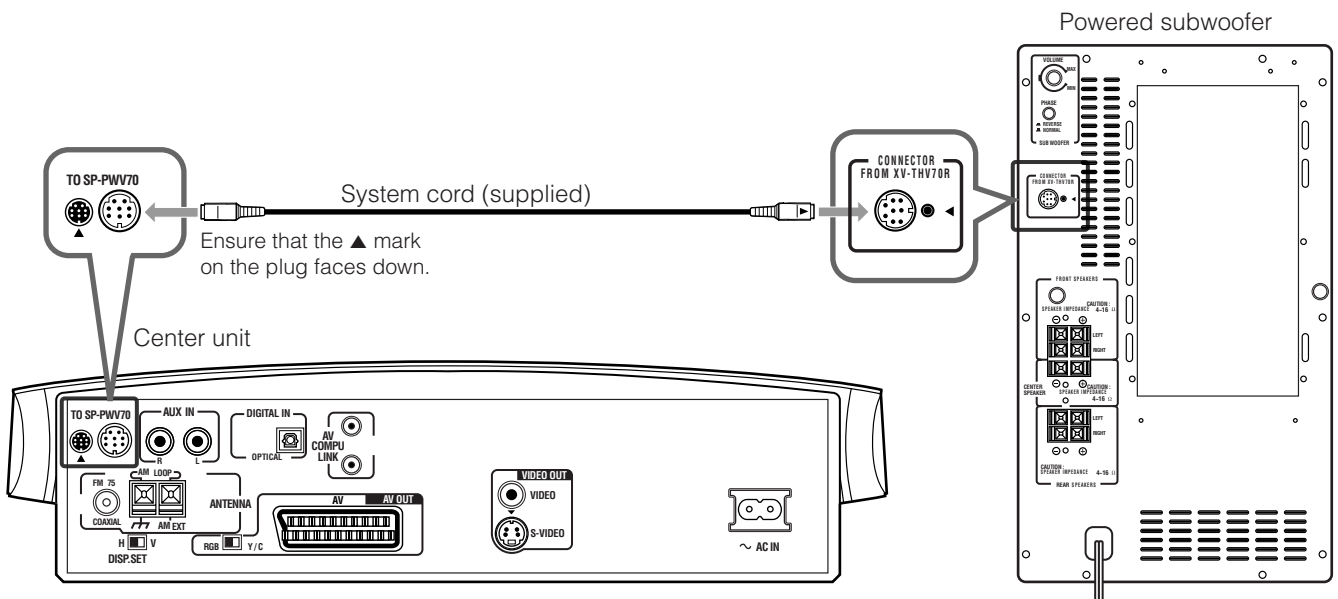

## Connecting the satellite speakers

### ■ Speaker layout

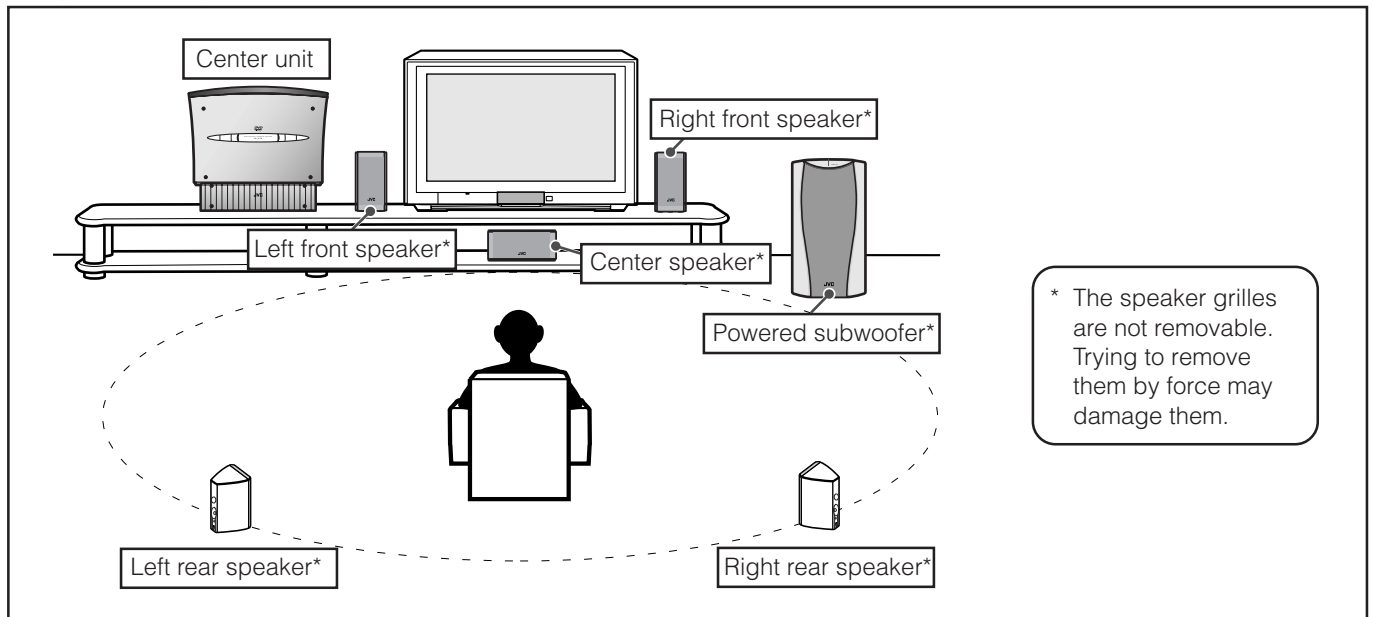

When placing the speakers, to obtain the best possible sound from this system, you need to place all satellite speakers at the same distance from the listening position with the front of each speaker faced toward the listener.

**When you cannot place them at the same distance from the listening position, you can make adjustment as if those speakers are placed at the best position. See page 65.**

- Normally, place the powered subwoofer in front of you. (Since bass sound is non-directional, you do not need to place it at the same distance as the satellite speakers.)

### NOTES:

- Although the satellite speakers and the powered subwoofer are magnetically shielded, the TV screen may be mottled. In this case, keep the distance from them to the TV by over 10 cm.
- For safety reasons, always ensure that there is a sufficient space behind the subwoofer.
- When you place the satellite speakers on the relatively high position, such as the top of your bookshelf, place them on a flat and level surface.

# Getting Started

## ■ Connecting the satellite (front, center, rear) speakers

Connect the satellite speakers to the powered subwoofer using the supplied speaker cords.

- Connect the white cord to the red (+) terminal and the black cord to the black (-) terminal.

### CAUTION:

- When you do not connect the supplied speakers but connect other (larger) speakers, use the speakers with the SPEAKER IMPEDANCE indicated by the speaker terminals on the rear panel of the subwoofer.
- DO NOT connect more than one speaker to one speaker terminal.

### Before connecting the speaker cord

1



If the speaker cord is covered with vinyl, remove the vinyl by twisting it as shown above.


2




Fold the end of each speaker cord to avoid short-circuit.

### Connecting the speaker cord to the satellite speakers

\* The terminal of SP-XSV70

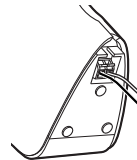


1

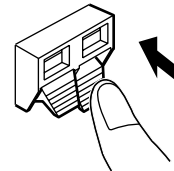


Press and hold the terminal clamp.

2


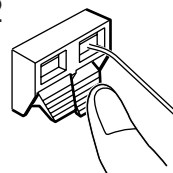


Insert the speaker cord.


3

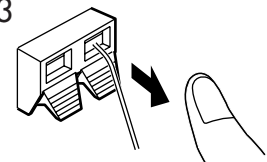

Release the finger from the terminal clamp.

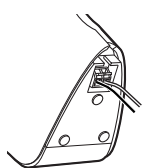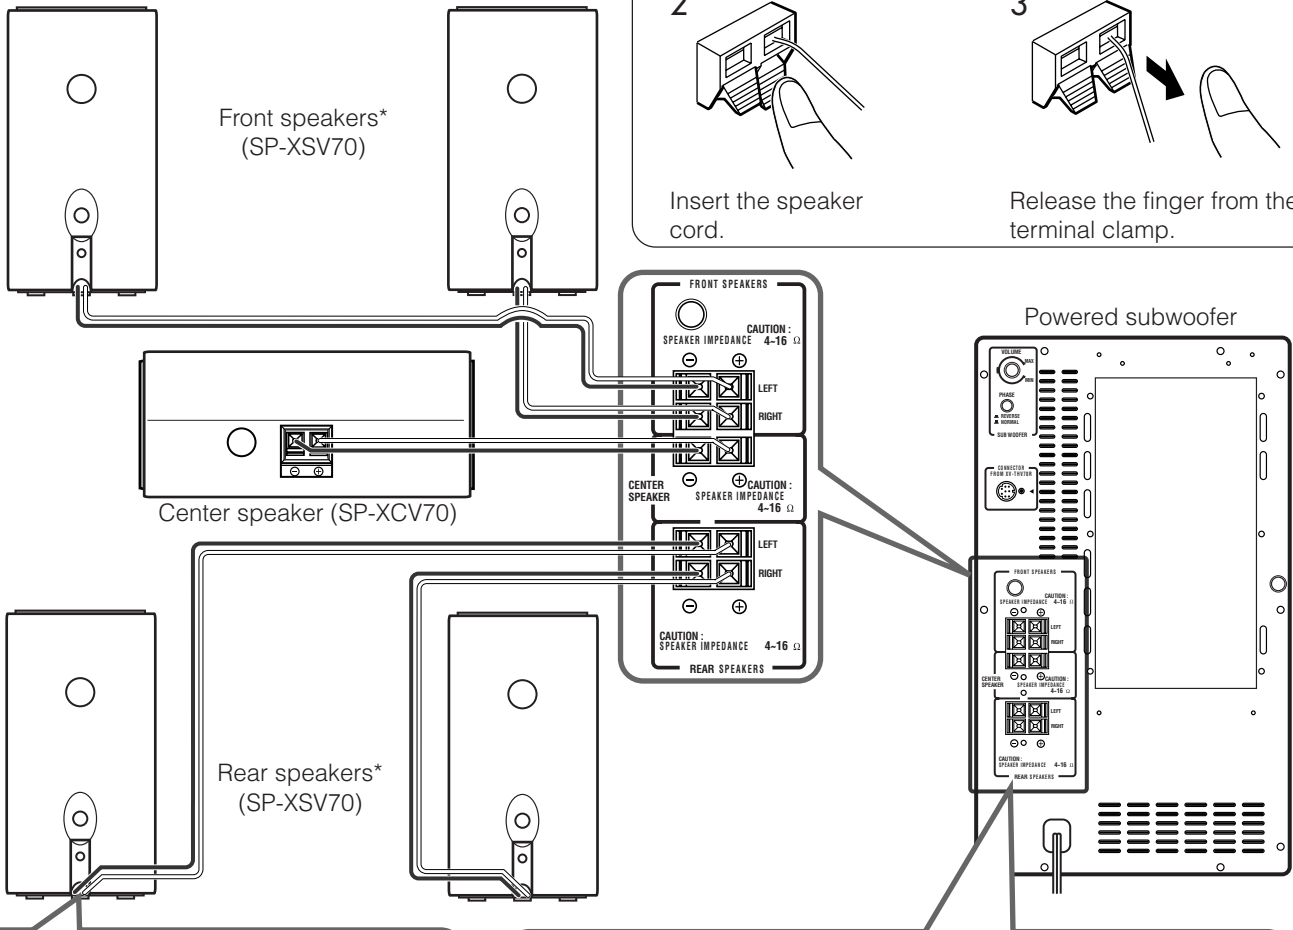


Connect the speaker cords.

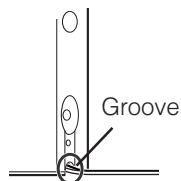

Let the cables pass through the groove.


### Connecting the speaker cord to the powered subwoofer

 1




Open the terminal clamp.

2

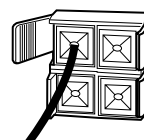

Insert the speaker cord.

3

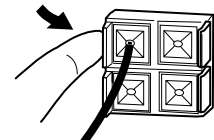


Close the terminal clamp.

## Connecting to an analog component

You can enjoy the sound of an analog component such as a VCR, TV, or Cassette recorder through this system. Connect an analog component using the cord with RCA pin plugs (not supplied).

- Connect the white plug to "AUX IN L" (the left audio jack), the red to "AUX IN R" (the right audio jack).

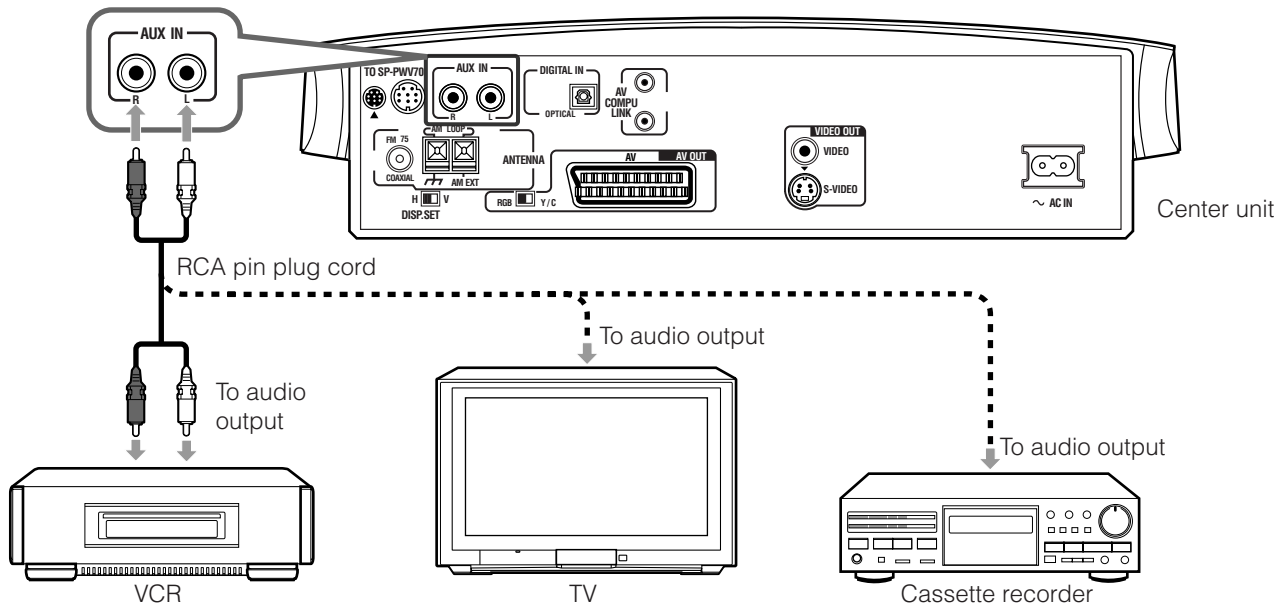


### NOTES:

- If you connect a sound-enhancing device such as a graphic equalizer between the source components and this system, the sound output through this system may be distorted.
- When playing a video component such as a VCR:
  - To listen to the sound, operate this system. (Select "AUX" as the source to play. See page 22.)
  - To see the picture, connect the video output jack of the component to the video input jack of the TV, and select the correct input mode on the TV.

## Connecting to a digital component

You can enjoy the sound of a digital component such as a DBS tuner or MD recorder through this system. Connect a digital component using the digital optical cord (not supplied).

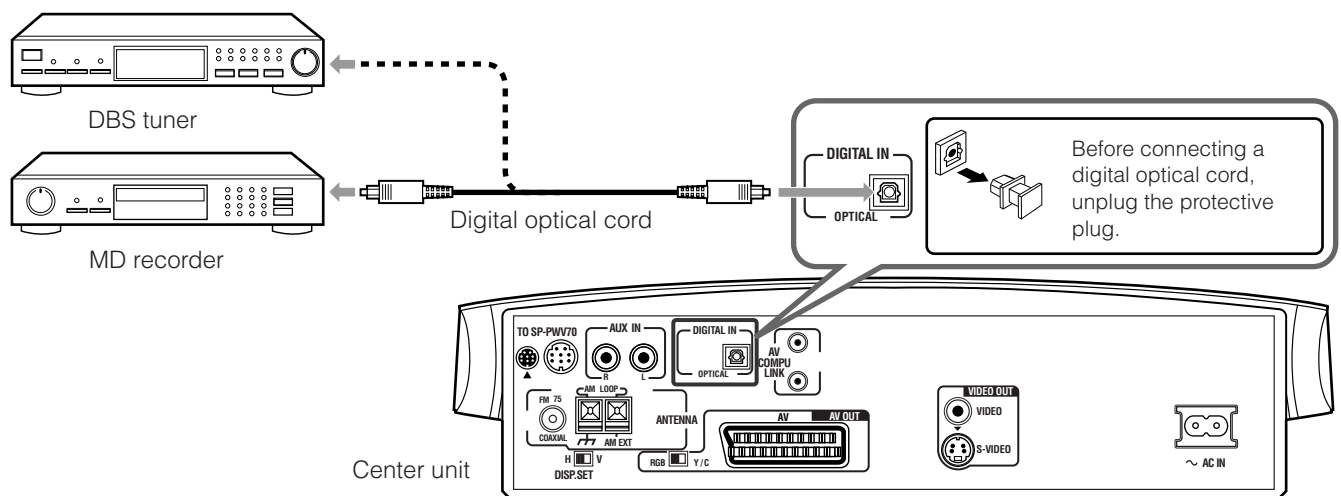


### NOTES:

- When playing a video component such as a DBS tuner:
  - To listen to the sound, operate this system. (Select "AUX DIGITAL" as the source to play. See page 22.)
  - To see the picture, connect the video output jack of the component to the video input jack of the TV directly, and select the correct input mode on the TV.

# Getting started

## Connecting the power cord

Make sure that all connections have been made, before plugging the power cords of the center unit and powered subwoofer.

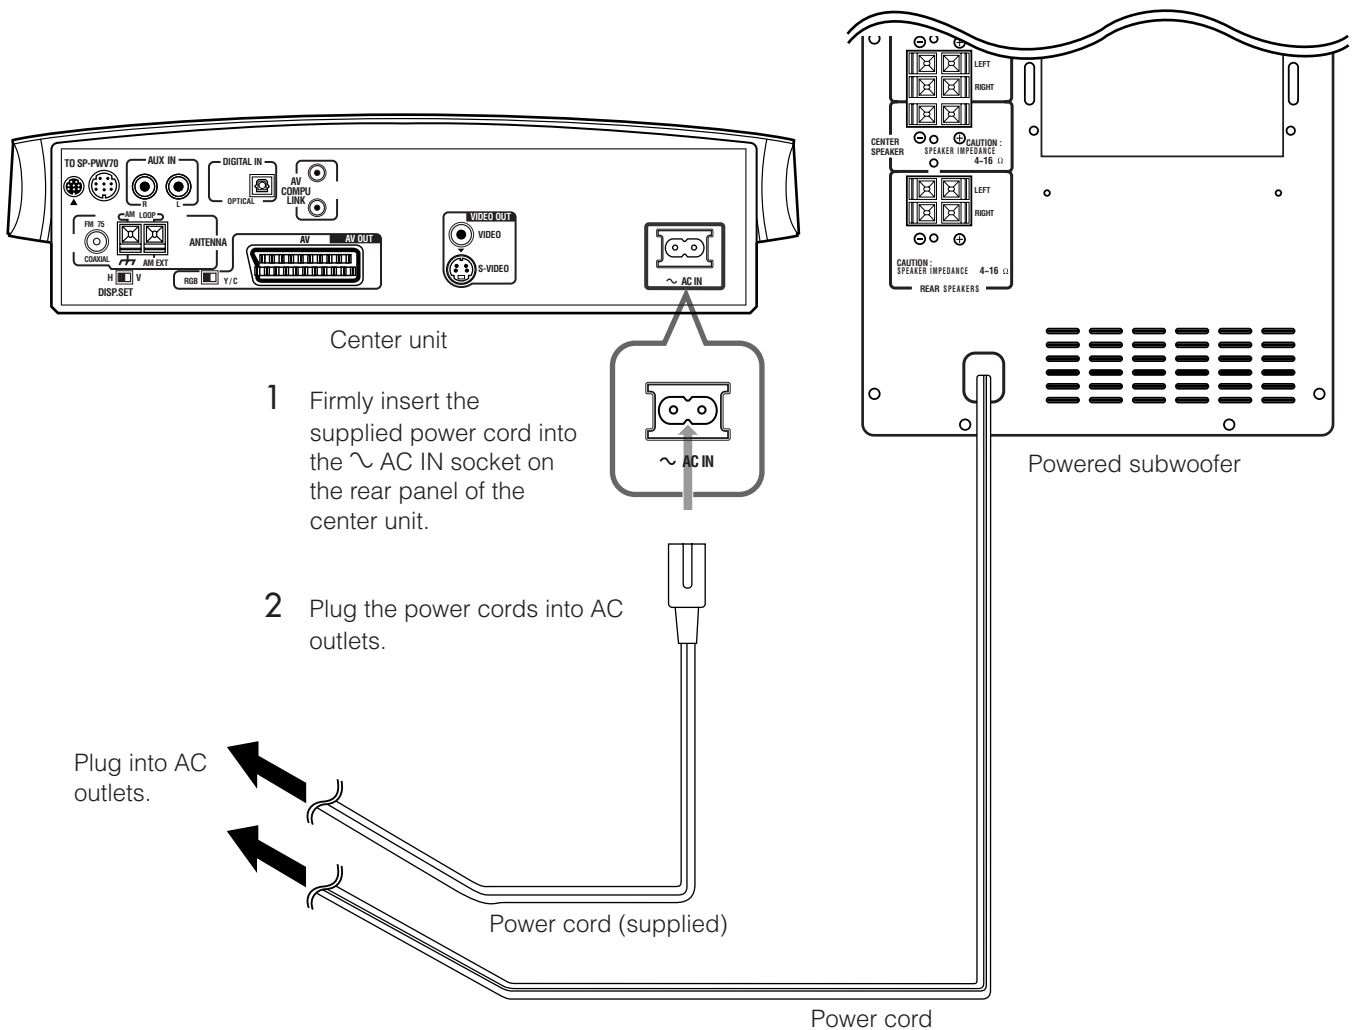

### CAUTIONS:

- Disconnect the power cord before cleaning or moving the system.
- Do not touch the power cord with wet hands.
- Do not pull on the power cord to unplug the cord.  
When unplugging the cord, always grasp the plug so as not to damage the cord.

### NOTES:

- Keep the power cords away from the connecting cords. The power cords may cause noise or screen interference.
- The preset settings such as preset stations, and sound adjustment may be erased in a few days in the following cases:
  - When you unplug the power cord of the center unit.
  - When a power failure occurs.
- The speakers will not produce any sound if the power cord of the powered subwoofer is removed from the AC outlet while the center unit is turned on.  
In this case, press AUDIO  $\odot/|$  on the remote control or  $\odot/|$  on the center unit to turn off the power, plug in the powered subwoofer, then press AUDIO  $\odot/|$  or  $\odot/|$  again.

## Installing the equipment on the wall

### When attaching the rear speakers to a wall

Using the supplied speaker wall brackets, you can fix the rear speakers to the wall.

#### **CAUTION: Attaching the brackets to the wall**


When attaching the brackets to the wall, have them attached to the wall by a qualified person. DO NOT attach the brackets to the wall by yourself to avoid an unexpected damage due to their falling from the wall, caused by incorrect attachment or weakness in the wall.

#### **Location of attachment to wall:**

Take care when selecting a location for attaching rear speakers to the wall. Injury to personnel, or damage to equipment, may result if the speakers are attached in a location which interferes with daily activities.


### Attaching speakers to the brackets

- 1 Use the supplied screws to attach the brackets to the rear speakers.

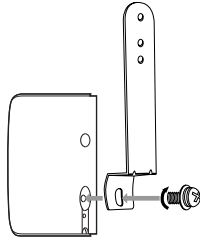

- 2 Adjust the angle of the rear speakers.

Loosen the screw slightly, make an adjustment, and then tighten the screw firmly.

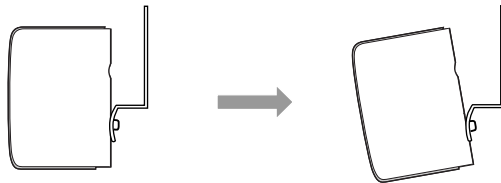


#### **CAUTION:**

If the screws are not tightened firmly, this may cause injury to personnel or damage to equipment.

### When attaching the AM (MW) loop antenna to a wall

You can attach the AM (MW) loop antenna to the wall.


Mount the AM (MW) loop antenna to a wall using the screw (not supplied) as illustrated below.

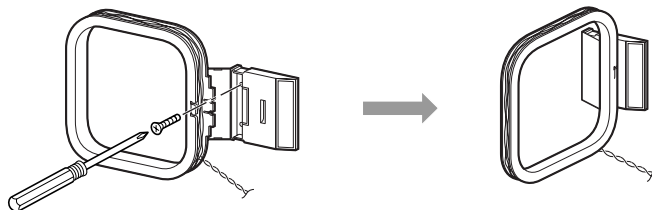

# Getting started

## When attaching the center unit to a wall

You can attach the center unit to a wall.

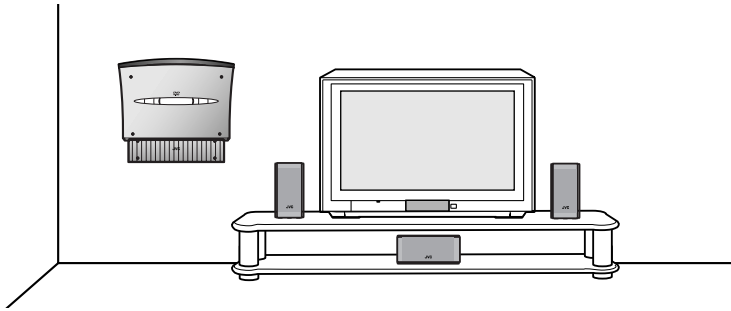

### CAUTIONS: location of attachment to a wall

- Take care when selecting a location for attaching the center unit to the wall. Injury to personnel, or damage to the center unit, may result if the center unit is attached in a location which interferes with daily activities, or a location that the users are liable to knock their bodies or heads against the center unit.
- Avoid a location above a bed, sofa, water tank, sink, etc. or in a passage.

### CAUTIONS: attachment to a wall

- The center unit weighs approximately 2.95 kg. When you operate the buttons on the center unit, an additional force will be applied to the center unit in downward direction. Therefore, sufficient care must be required when attaching the center unit to a wall to prevent any accidents caused by the unit's falling off.
- Before attaching the center unit to a wall, check the wall (or other related aspects) you want to attach it to, and verify whether the strength of the wall will be sufficient not only to support the weight of the center unit itself but also to withstand the additional downward force which will be applied to it during operations. (Do not attach the center unit to a plywood or plasterboard wall. The center unit will fall and sustain damage as a result.) If you cannot judge the strength of the wall or other aspects, consult a qualified person (such as a qualified constructor).
- The screws needed for attachment are not supplied. Use screws which are compatible with the strength and material of the pillar or wall.
- When attaching the center unit, the screws must be secured tightly in all three locations. Failure in attaching the center unit to the wall using all three holes on the back of the center unit makes for an unstable attachment, and it constitutes a safety hazard as the center unit may fall down.

## Example of attachment

The procedure below is an example of how to attach the center unit to a wall:

It does not make any guarantee for safety while using the center unit on the wall. Take into account such factors as the material, strength, and the status of the wall as well as the reinforcing material, and the possible changes that will take place over time.


### NOTES:

- You need to connect the cords to the center unit (and attach the supplied stand) before attaching it to the wall.
- DO NOT plug the power cord into an AC outlet before attaching the center unit to the wall.
- When attaching the supplied stand to the center unit, connect the system cord, video cord, and so on by passing them through the holes at the bottom of the stand, and do not attach the legs to the stand. See page 9.

- 1 Select the place where the center unit is to be attached.
- 2 Mount three screws (not supplied) to the wall.

Use the screws as illustrated below.


You can use the supplied paper pattern to mark the positions where the screws are mounted.

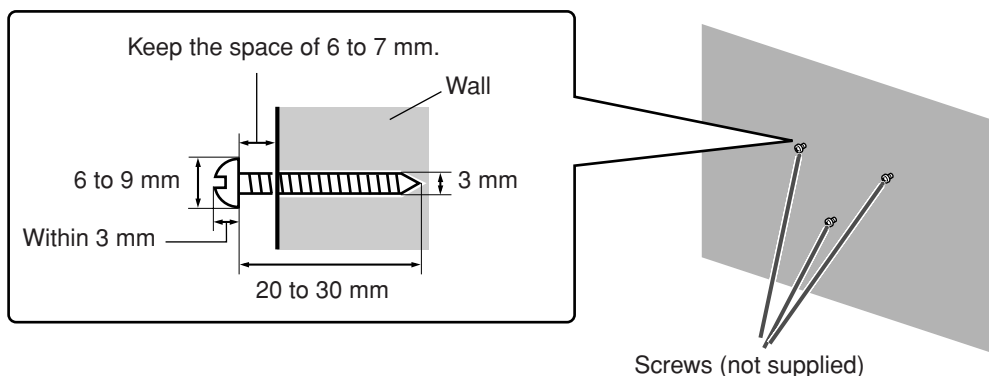

### 3 Hook the center unit onto the mounted screws, and slide it to left, then down.

Make sure that the center unit is attached securely.

- Adjust the screws if the center unit is not attached securely.

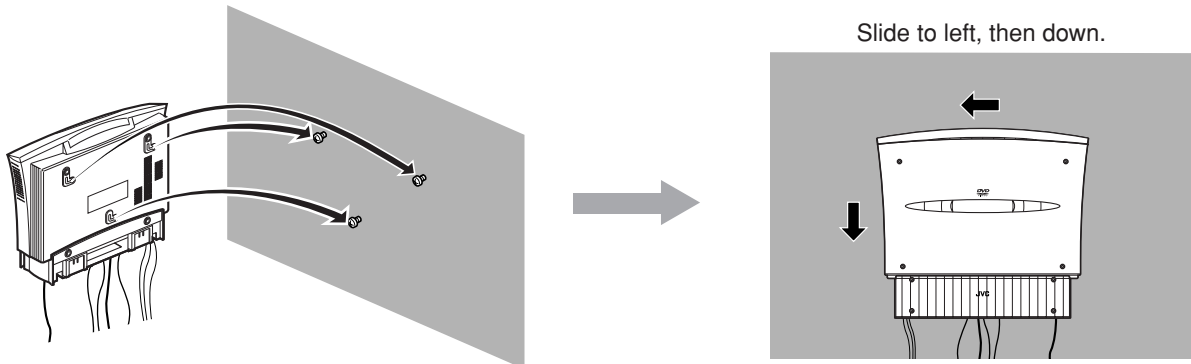

#### **NOTES:**

- Do not place anything on top of the center unit. Doing so may cause the center unit to fall down, and cause injury to the persons around.
- Do not climb onto the center unit or hang from it. Doing so may damage the center unit and/or cause injury to the person. Take care specially when there are small children at the home.
- Avoid sandwiching the cords between the center unit and wall. This may upset the balance of the center unit, and cause the center unit to fall down.
- Make sure that the connected cords will not interfere with daily activities and that the users will not be caught in the cords.
- Do not pull the connected cords with excessive force.
- Check regularly that none of the screws are loose.
- In the event that the center unit has fallen, turn the power off, disconnect the power plug from the AC outlet, and contact your dealer for an inspection and repairs. Using it in this state may cause a fire or electrical shock.
- Do not place valuables (breakables) underneath the location where the center unit is attached. They will be damaged if the center unit should fall.
- The manufacturer accepts absolutely no liability for any accidents or damage resulting from inadequate assembly or mounting, insufficient strength of attachment, misuse or abuse, or natural disasters.

# Getting Started

## Using the remote control


The remote control makes it easy to use many of the functions of the system at a distance of up to 7 m away.

- You can also operate other components from the remote control supplied with this system.
  - To operate your TV, see page 20.
  - To operate your VCR, see page 71.

## Putting batteries in the remote control

Before using the remote control, put two supplied batteries first.

- 1 On the back of the remote control, remove the battery cover.
- 2 Insert batteries.
  - Make sure to match the polarity: (+) to (+) and (-) to (-).
- 3 Replace the cover.

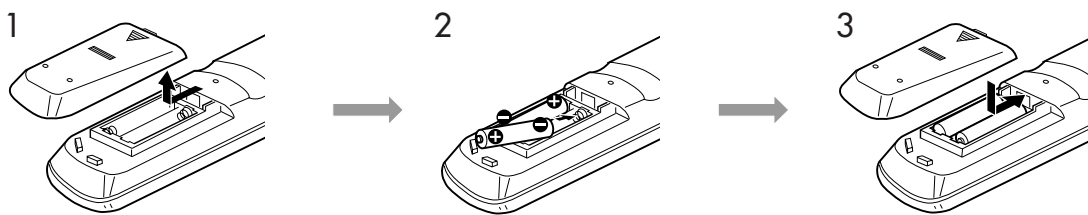

If the range or effectiveness of the remote control decreases, replace the batteries. Use two R6P (SUM-3)/AA (15F) type dry-cell batteries.

### CAUTION:


Follow these precautions to avoid leaking or cracking batteries:

- Place batteries in the remote control so they match the polarity: (+) to (+) and (-) to (-).
- Use the correct type of batteries. Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

## Operating the system from the remote control

Aim the remote control directly at the remote sensor on the center unit.

- To control other components, aim the remote control directly at the remote sensor on each component. Refer also to their instruction manuals .
- To operate the remote control properly, do not hide the remote sensor by placing any obstruction.

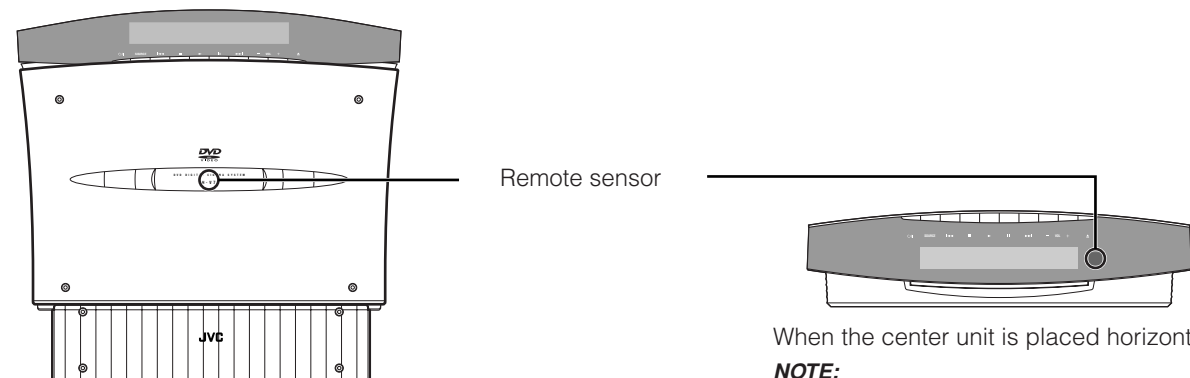

When the center unit is placed vertically

When the center unit is placed horizontally

### NOTE:


When the moving panel is open, the remote sensor looks up, so the remote control may not work.  
You can use the remote control while the moving panel is shut.



## Using the remote control for TV operations

You can operate your TV using the remote control supplied with this system.

- Refer also to the instruction manuals supplied with your TV.

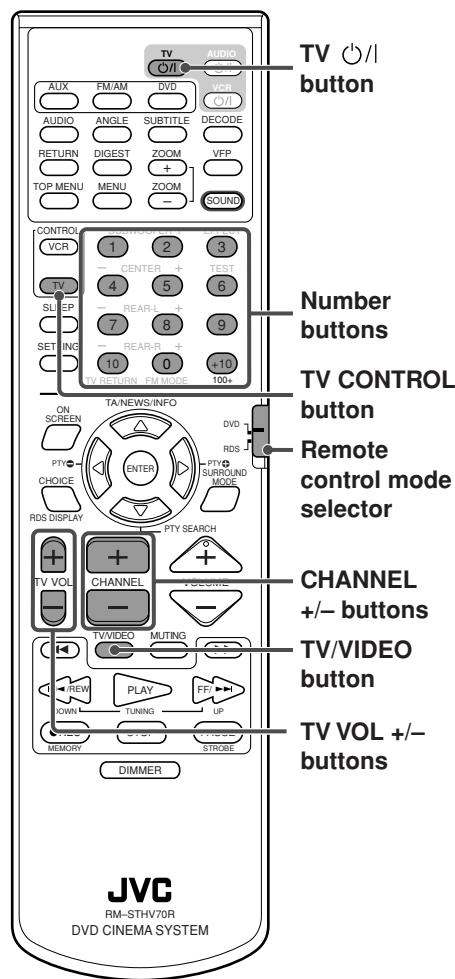

### ■ Setting the remote control signal for operating your TV.

- You can operate your TV without setting the remote control signal if your TV is a JVC TV.

- 1 Slide the remote control mode selector to "DVD."
- 2 Press and hold TV On/Off.
  - Keep it pressed until step 4 is finished.
- 3 Press TV CONTROL.
- 4 Press Number buttons (1-9, 0) to enter a manufacturer's code (2 digit).

See the list below to find the codes.

- For a Hitachi TV, press 0, then 7.
- For a Toshiba TV, press 2, then 9.

- 5 Release TV On/Off.
- 6 Try to operate your TV by pressing TV On/Off.

When your TV turns on or off, you have entered the correct code.

**If there are more than one code listed for your brand of TV, try each one until you enter the correct one.**

### ■ To operate your TV

You can use the following buttons for operating your TV:

- TV On/Off:** Turns on and off your TV.
- TV VOL +/-:** Adjust the volume.
- TV/VIDEO:** Select the input mode (either TV or VIDEO).

- After pressing TV CONTROL, you can perform the following operations on the TV.

- CHANNEL +/-:** Changes the channels.
- 1-10, 0, +10 (100+):** Selects the channel.

### Manufacturers' codes\* for TV

Manufacturer	Code	Manufacturer	Code
JVC	01	Nordmende	13, 14, 18, 26 – 28
Akai	02, 05	Okano	09
Blaupunkt	03	Orion	15
Daewoo	10, 31, 32	Panasonic	16, 17
Fenner	04, 31, 32	Philips	10
Fisher	05	Saba	13, 14, 18, 26 – 28
Grundig	06	Samsung	10, 19, 32
Hitachi	07, 08	Sanyo	05
Inno-Hit	09	Schneider	02, 05
Irradio	02, 05	Sharp	20
Magnavox	10	Sony	21 – 25
Mitsubishi	11, 33	Telefunken	13, 14, 18, 26 – 28
Miver	03	Thomson	13, 14, 18, 26 – 28, 30
Nokia	12, 34	Toshiba	29

\* Manufacturers' codes are subject to change without notice. If they are changed, this remote control cannot operate the equipment.

# Basic operations


 
This section mainly explains operations commonly used when you enjoy this system.

- This manual mainly explains operations when the center unit is placed vertically (the DISP.SET selector is set to "V") as an example.
- Turn also on your TV and select the correct input mode on the TV.

## IMPORTANT:

When using the remote control, check to see if its remote control mode selector is set to the correct position:

Set it to "DVD" to use other than RDS.

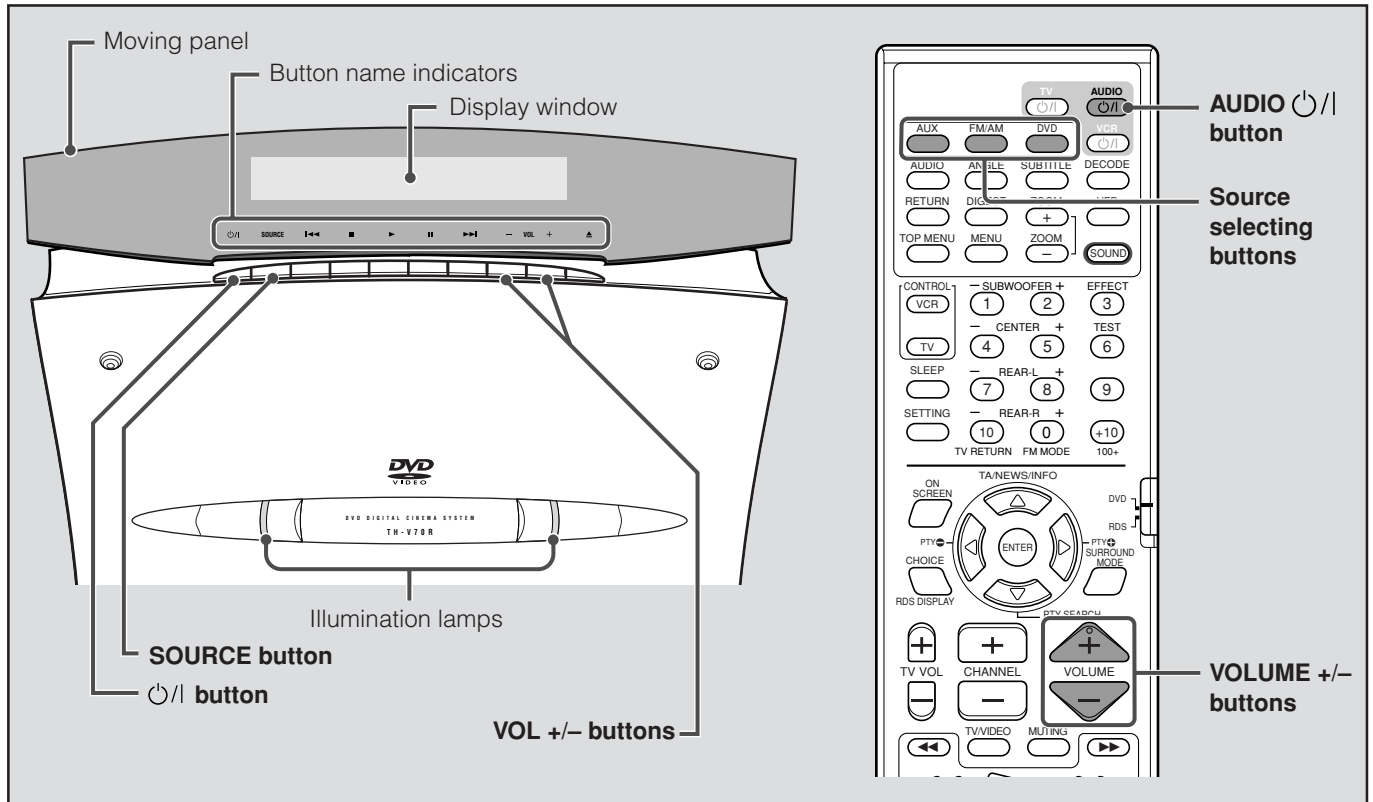

## Turning on/off the system

From the remote control: Press AUDIO to turn the power on.

On the center unit: Press to turn the power on.

### • When you place the center unit vertically:

The moving panel stands up.


The illumination lamps and the button name indicators light up, and the current source name appears on the display window.

### • When you place the center unit horizontally:

The illumination lamps and the button name indicators light up, and the current source name appears on the display window.

- When DVD, AUX, or AUX DIGITAL is selected as the source (see page 22), the opening screen\* appears on the TV screen.

\* Opening screen

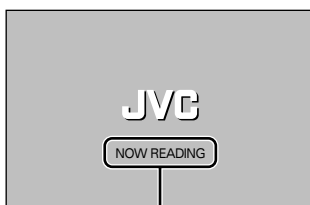


Message area

The following messages may appear in the message area depending on the status of this system.

- "LOADING"/"EJECT": Appears when inserting or removing a disc.
- "NOW READING": Appears when the system is reading the disc information.
- "REGION CODE ERROR!": Appears when the region code of the DVD does not match the system.  
The DVD cannot be played back.
- "NO DISC": Appears when no disc is inserted.

### To turn power off

From the remote control: Press AUDIO  again.

On the center unit: Press  again.

 
 
The illumination lamps and the button name indications (except the  indicator) go off.

- When placing the center unit vertically, the moving panel closes.


### ■ When the resume playback is set to “ON” (see page 66):

If you turn off the power while playing back a disc, playback stops and the position where playback has been stopped is stored.

To resume playback from the stored position, press DVD or PLAY on the remote control. (See below and page 29.)

If you press AUDIO  (or  on the center unit), the stored position is erased.

### NOTES:

 - The power supply to the subwoofer is linked to the center unit. The POWER ON lamp on the subwoofer lights in green when the power is turned on.
- A small amount of power is consumed even though the power is turned off (called standby mode). Remove the power cord from the AC outlet to turn off the power supply completely.
- You can also turn on the system by pressing  on the center unit or one of the source selecting buttons on the remote control. See below and page 28.
- The resume playback dose not work for Audio CDs.

## Selecting the source to play

From the remote control: Press one of the source selecting buttons (DVD, FM/AM, and AUX).

**DVD:** Select the DVD player, and the remote control can be used to operate the DVD player. (See pages 27 and 41.)

**FM/AM:** Select an FM or AM (MW) broadcast, and the remote control can be used to operate the tuner. (See page 31.)

- Each time you press the button, the band alternates between FM and AM (MW).

**AUX:** Select a component connected to the AUX IN jacks or DIGITAL IN jack. (See page 14.)

- Each time you press the button, the source alternates between “AUX” and “AUX DIGITAL.”

 
On the center unit: Press SOURCE repeatedly until the source name you want appears on the display.

Each time you press the button, the source changes as follows.

⇒ DVD ⇒ AM ⇒ FM ⇒ AUX ⇒ AUX DIGITAL ⇒ (back to the beginning)


The selected source name appears on the display window.

Example: When “AUX” is selected.



When AM, FM, AUX, or AUX DIGITAL is selected as the source to play, this indication appears if a disc is inserted. (See page 28.)

### NOTES:

 - When the system is in standby mode, pressing one of the source selecting buttons on the remote control also turns on the system.
- When the resume playback is set to “ON” (see page 66), if you change the source during playback, playback stops and the position where playback has been stopped is stored. Next time you select DVD as the source or if you press PLAY (or  on the center unit) to start playback, playback starts from the stored position (the resume playback).

## Adjusting volume

You can adjust the volume level within the range from “0” (minimum) to “70” (maximum).

From the remote controls: Press VOLUME + or –.

On the center unit: Press VOL + or –.

- Press + to increase volume.
- Press – to decrease volume.


The volume level appears on the display window.

### CAUTION:

Always set the volume to the minimum before starting any source.

If the volume is set at its high level, the sudden blast of sound energy can permanently damage your hearing and/or ruin your speakers.

# Basic operations

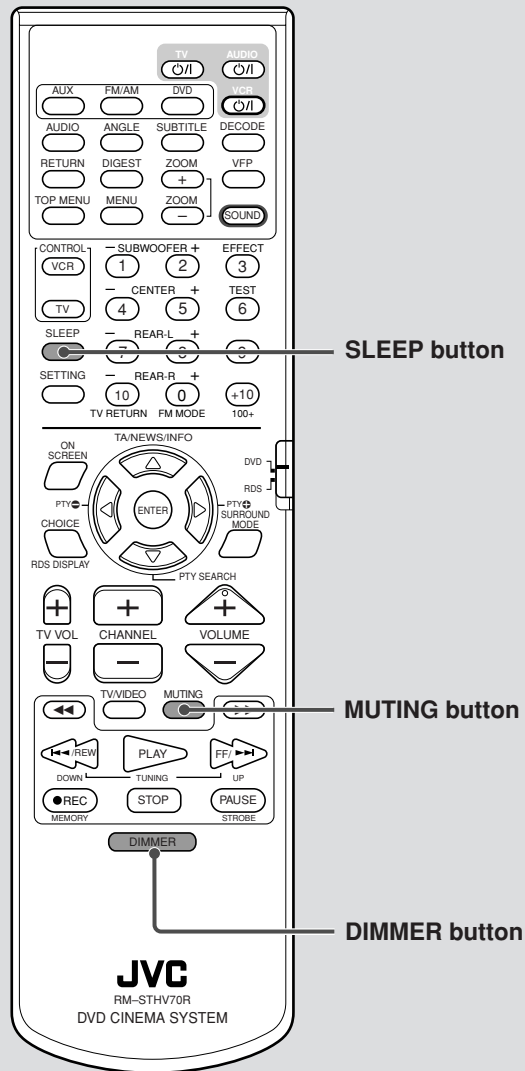

## Turning off the sound temporarily

From the remote control ONLY:

Press **MUTING**.

"MUTING" appears on the display window and the volume turns off.



### To restore the sound

Press **MUTING** again.

- Pressing **VOLUME +/-** (or **VOL +/-** on the center unit) also restores the sound.

---

## Adjusting the brightness

You can dim the indications on the moving panel and the illumination lamps on the center unit.

From the remote control ONLY:

Press DIMMER.

Each time you press the button, the brightness level of the indications and the illumination lamps changes as follows.

⇒ Dimmer ⇒ The illumination lamps go off ⇒ Normal level ⇒ (back to the beginning)

**NOTE:**

*The indications on the moving panel do not go off.*

---

## Turning off the power with the timer

Using the sleep timer, you can fall asleep while listening to music, and know the system will turn off by itself rather than play all night.

 
From the remote control ONLY:

Press SLEEP.

Each time you press the button, the shut-off time changes as follows:

⇒ 0min (cancelled) ⇒ 10min (minutes) ⇒ 20min ⇒ 30min ⇒ 60min ⇒ 90min ⇒ 120min ⇒ 150min  
⇒ (back to the beginning)

Example: When "150min" is selected.



### To check the remaining time until the shut-off time

Press SLEEP once.

The remaining time until the shut-off time appears on the display window for a while.

### To change the remaining time until the shut-off time

Press SLEEP repeatedly.

- Each time you press the button, the shut-off time changes.

### To cancel the sleep timer


Press SLEEP repeatedly until "0min" appears on the display window.

- Turning off the power also cancels the sleep timer.

**NOTES:**

- When DVD is selected as the source to play, this system can also turn off automatically if playback is not restarted within the length of time you have specified (the auto standby function). See page 66.
- When both of the sleep timer and auto standby function are activated, if the shut-off time set by the auto standby function comes earlier than the one set by the sleep timer, the auto standby function takes effect.

# Basic operations

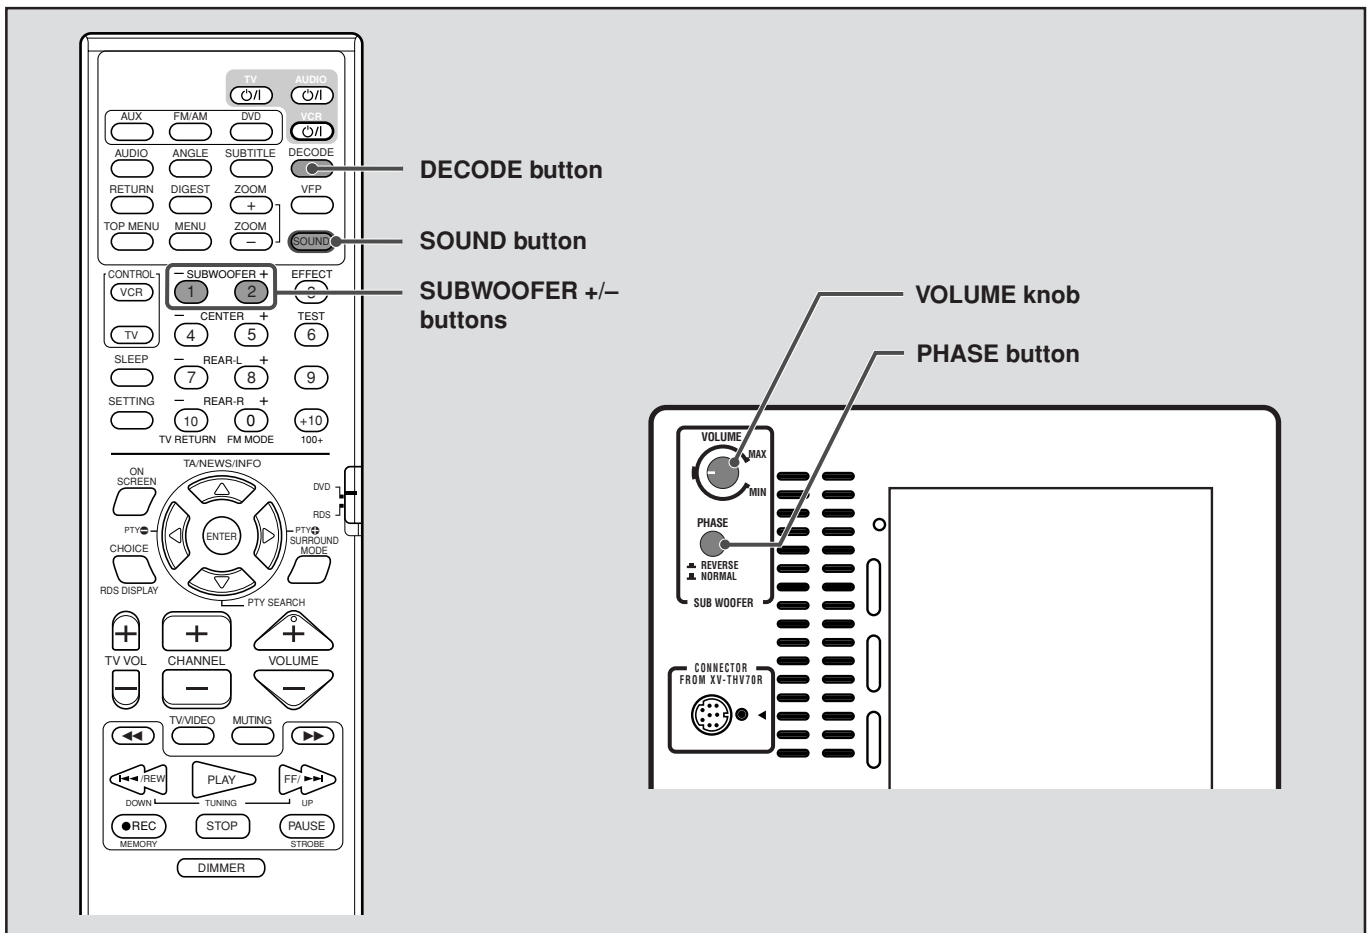

## Changing the decode mode

When you play a disc (or software) encoded with Dolby Digital or DTS Digital Surround, the following symptoms may occur:

- Sound does not come out at the beginning of playback.
- Noise comes out while searching for or skipping chapters or tracks.

In these cases, change the decode mode to "DOLBY D" (for Dolby Digital) or "DTS" (for DTS Digital Surround).

From the remote control ONLY:

Press **DECODE** to select the decode mode when DVD or AUX DIGITAL is selected as the source.

The current decode mode appears on the display window.

Example: When "AUTO/PCM" is selected.



Each time you press the button, the decode mode changes as follows.

⇒ **AUTO/PCM** ⇒ **DOLBY D** ⇒ **DTS** ⇒ (back to the beginning)

- **AUTO/PCM:** Normally, select this.  
This system automatically detects the incoming signals.
- **DOLBY D:** Select this if the cases above occur when playing a disc (or software) encoded with Dolby Digital.
- **DTS:** Select this if the cases above occur when playing a disc (or software) encoded with DTS Digital Surround.

### NOTES:

- When "DOLBY D" or "DTS" is selected, if the signal encoded with another digital format comes in, you cannot listen to the sound. (DIGITAL or **DTS** indicator flashes.)
- Changing the source returns the decode mode to "AUTO/PCM" automatically.

 
## Setting the subwoofer

### ■ Volume control

Adjust the volume of the subwoofer when you feel it is too high or low compared with that of the front speakers.

Turn **VOLUME** knob.

- The mark indicates the normal volume position.



### ■ Phase setting

Play sound through the subwoofer and adjust the **PHASE** button to the position (◀ **REVERSE** or ■ **NORMAL**) at which the lowest frequency is heard best.

#### **NOTE:**

*Phase is closely related to the distance from the listening position to the front speakers and subwoofer. While listening, adjust until the lowest frequency is heard best.*

### ■ Adjusting the output level of the subwoofer

You can adjust the output level of subwoofer.

1 Press **SOUND**.

2 Press **SUBWOOFER +/-** to adjust the output level of the subwoofer.

- You can adjust the output level within the range from -10 dB to 10 dB.

#### **NOTES:**

- You can also change the output level of the subwoofer through the choice menu shown on the TV screen. See page 65.
- Once you have adjusted the output level of the subwoofer, the adjustment is memorized for each source.

#### **Basic adjustment of auto memory**

This unit memorizes sound settings for each source:

- When you turn off the power
- When you change the source

When you change the source, the memorized settings for the newly selected source are automatically recalled.

The following can be stored for each source:


- The adjustment of front speakers—Balance, Bass, and Treble (see pages 63 and 70)
- Speaker output level (see pages 39 to 40, 65, and 70)
- Surround mode selection (see pages 39 to 40)
- Effect level (see page 40)

#### **Note:**

*If the source is FM or AM, you can assign a different setting for each band.*

# Basic playback

 
This section explains basic operations for playback of DVDs, VCDs, SVCDs, and Audio CDs. For MP3 playback, see page 55. For JPEG disc playback, see page 57.

-  shows the types of discs the operation is available for.
- Before operating the DVD player from the remote control, press DVD to use the remote control for the disc operations.
- Turn on your TV and select the correct input mode on the TV.

## IMPORTANT:

When using the remote control, check to see if its remote control mode selector is set to the correct position:

**Set it to "DVD" to use other than RDS.**








 




## Preventing screen burn-out with the screen saver

A TV screen may be burned out if a static picture is displayed for a long time. To prevent this, the system automatically dims the screen if a static picture is displayed for over 5 minutes (the screen saver function).

- Pressing any button will cancel the screen saver function.
- If you do not want to use the screen saver function, see page 62.


## On-screen guide icons

 During DVD playback, the following guide icons may appear for a while on the TV screen:

- : appears at the beginning of a scene containing multi-subtitle languages.
- : appears at the beginning of a scene containing multi-audio languages.
- : appears at the beginning of a scene containing multi-angle views.
-  (Play),  (Pause),  /  (Fast forward/backward),  /  (Slow-motion forward/backward): appears when you perform each operation.
- If "" appears on the TV screen when pressing a button, the disc cannot accept an operation you have tried to do, or information required for that operation is not recorded on the disc.

## NOTES:

- In some cases, without showing ", operations will not be accepted.
- If you do not want the on-screen guide icons to appear, see page 66.

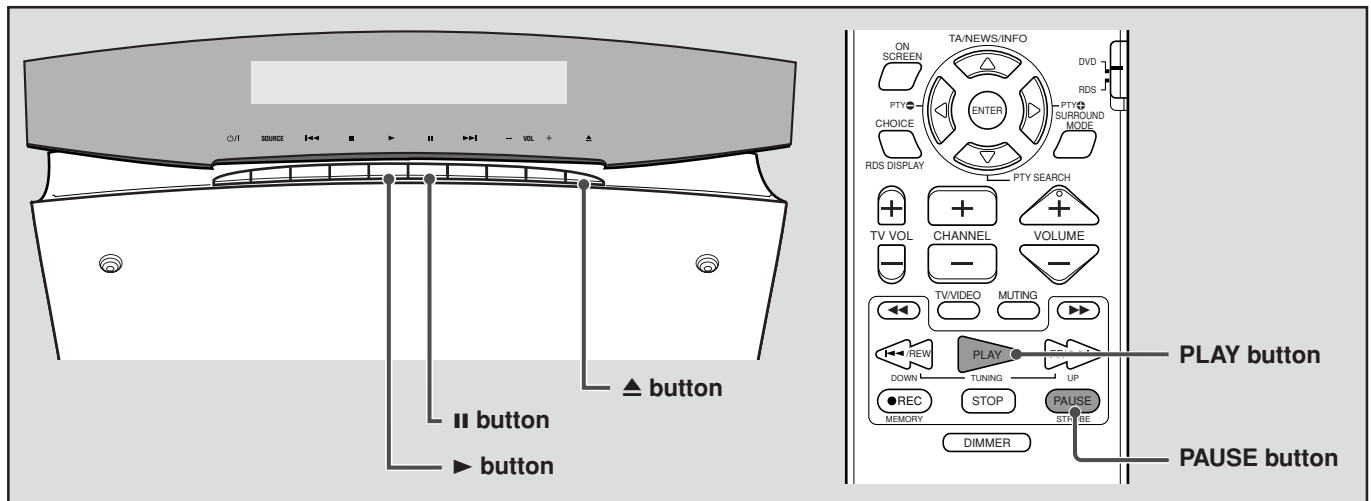

## Inserting and removing a disc



### IMPORTANT:

DO NOT insert a disc with your finger put in the hole of a disc.


- 1 When the center unit is placed horizontally, press .  
The moving panel opens and the disc slot appears.




## 2 Insert a disc into the disc slot with the label side facing the front or up as shown below.

Insert a disc halfway, then it is pulled into the center unit automatically.

- When the center unit is placed vertically

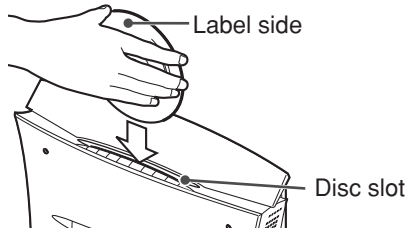

- When the center unit is placed horizontally

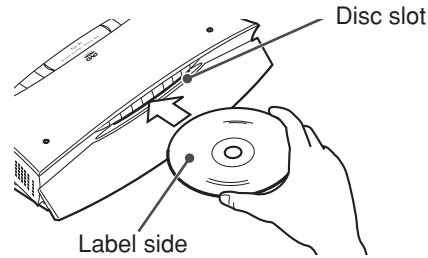

When the center unit is placed horizontally, the moving panel closes after inserting the disc.

After the system reads the disc information, playback starts.


### To remove a disc

 Press **▲** again. The disc comes out from the disc slot. "EJECT" appears on the display window and on the TV screen.

**NOTE:** When the center unit is placed vertically

When AM, FM, AUX, or AUX DIGITAL is selected as the source, if the indication as illustrated below appears on the display window, a disc is already inserted. Press **▲** to remove the disc before inserting another disc.

Example: When "AUX" is selected.



This indication shows that a disc is inserted.

### NOTES:


- With Video CDs/SVCDs with PBC function (see page 7), or some DVD Video discs, the menu display may appear on the TV screen after starting playback. In such a case, select an item to be played back from the menu. See page 43.
- When the system is in standby mode, pressing **▲** also turns on the system.
- The stored position for the resume playback is canceled when removing a disc.
- You can check the playback information on the display window and the TV screen (see page 41).

### Playback information on the display window

While loading and playing a disc, the current title/chapter/track numbers, time, and status information appear on the display window.


#### Playing back a DVD:

(EX. When a DVD encoded with Dolby Digital 5.1ch is played)

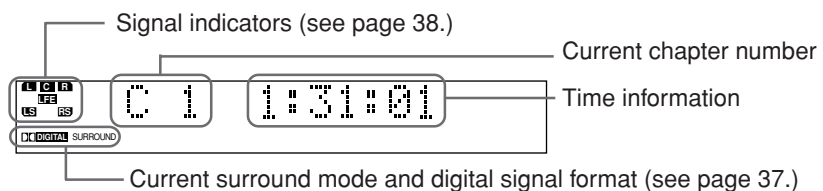

#### Playing back a VCD/SVCD/ Audio CD:

(EX. When a VCD is played)

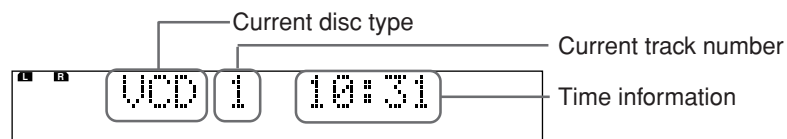

### NOTES:

- You can change the time information mode. See page 42.
- You can also check the playback information on the TV screen. See page 41.
- The current disc type information appears as follows:
  - "VCD": shows a VCD or SVCD is loaded.
  - "CD": shows an Audio CD is loaded.
- When a Video CD or SVCD with PBC function is played, the time information does not appear, but "PBC" appears.

## Stopping playback temporarily

From the remote control: Press **PAUSE**.


On the center unit: Press **II**.

### To return to normal playback,

Press **PLAY** (or **▶** on the center unit).



# Basic playback

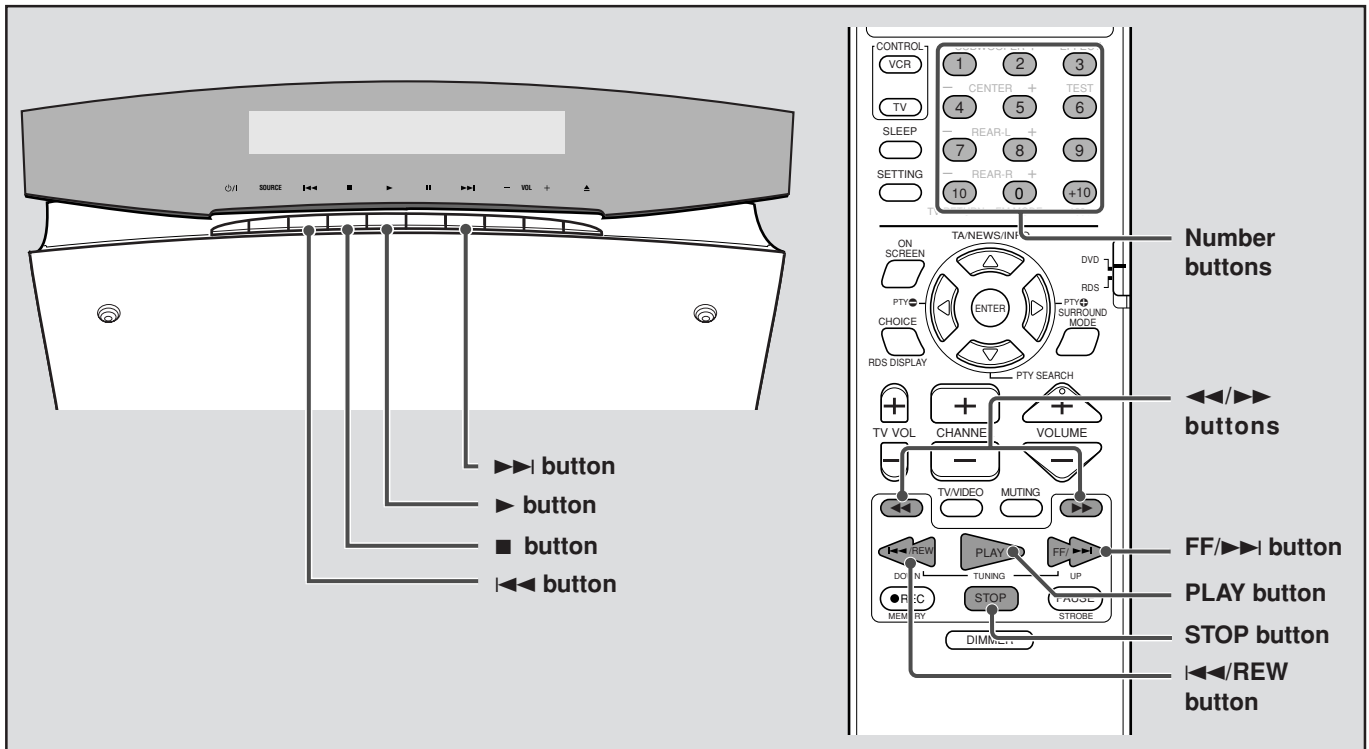

## Stopping playback completely



From the remote control: Press STOP.

On the center unit: Press ■.

### ■ When the resume playback is set to "ON" (see page 66):

Once you press the button, playback stops and the position where playback has been stopped is stored. (The RESUME indicator lights up.)

To clear the stored position, press STOP (or ■ on the center unit) again.

### ■ Starting playback again

From the remote control: Press PLAY.

On the center unit: Press ►.

### ■ When the resume playback is set to "ON" (see page 66):

When the system stored the position where playback has been stopped, playback starts from the stored position (the resume playback). (The RESUME indicator goes off.)

When the stored position has been cleared, playback starts from the beginning of the disc.

#### NOTE:

The resume playback dose not work for Audio CDs.

## Moving back the playback position during DVD playback



During playback of a DVD, you can move back the playback position by 10 seconds from the current position.

From the remote control: Press PLAY during playback of DVD.

On the center unit: Press ► during playback of DVD.

The playback position moves back by 10 seconds from the current position.

#### NOTES:

- This function works between chapters in the same title.
- This function may not work for some DVDs.

## Searching for a particular point



You can search for a particular point while playing a disc.

### ■ Method 1 (from the remote control ONLY):

To fast-forward playback, press **▶▶** during playback.

Each time you press the button, the search speed changes as follows.

⇒ **▶▶ x2** ⇒ **▶▶ x5** ⇒ **▶▶ x10** ⇒ **▶▶ x20** ⇒ **▶▶ x60** \*

To fast-reverse playback, press **◀◀** during playback.

Each time you press the button, the search speed changes as follows.

⇒ **◀◀ x2** ⇒ **◀◀ x5** ⇒ **◀◀ x10** ⇒ **◀◀ x20** ⇒ **◀◀ x60** \*

\* **▶▶ x60** and **◀◀ x60** are available to DVD only.

### To return to the normal speed playback

Press PLAY (or **▶** on the center unit).

### ■ Method 2:

Press and hold **FF/▶▶** or **REW/◀◀** (or **▶▶** or **◀◀** on the center unit).

Continuously pressing **▶▶** or **◀◀** increases the fast-forward/reverse playback speed as follows:

**x5** ⇒ **x20**

To return to the normal speed playback, release the button.

### NOTES:

- When a DVD, Video CD, or SVCD is played back, no sound comes out during fast-forward/reverse playback.
- This function may not work for some DVDs.

## Locating the beginning of a desired chapter or track



You can locate the beginning of a chapter (for DVD Video) or track (for Video CD/Audio CD) by pressing **▶▶** or **◀◀**.

- For DVD: During playback
- For Video CD/SVCD: During playback without PBC function
- For Audio CD: During playback or while stopped

Press **FF/▶▶** or **REW/◀◀** (or **▶▶** or **◀◀** on the center unit).

- To skip chapters or tracks forward, press **▶▶** as many times as required.
- To skip to the beginning of the current chapter or track, press **◀◀** once.
- To skip chapters or tracks backward, press **◀◀** as many times as required.

### NOTES:

- This function may not work for some DVDs.
- While playing a VCD or SVCD with the PBC function, **▶▶** and **◀◀** may be used for the operations of menu-driven playback (see pages 7 and 43).

## Locating a desired selection using Number buttons



You can locate the desired title, chapter (for DVD Video) or track (for Video CD/SVCD/Audio CD) by selecting its number.

- For DVD: While stopped (the title number is selected.)  
During playback (the chapter number is selected.)
- For Audio CD: During playback or while stopped
- For Video CD/SVCD: During playback without PBC function

### From the remote control ONLY:

Press **Number** buttons (1-10, +10) to select the desired title, chapter, or track number.

- To select 3, press 3.
- To select 14, press +10 then 4.
- To select 24, press +10, +10, then 4.
- To select 40, press +10, +10, +10 then 10.

The specified title, chapter, or track number appears on the display window, and playback begins from that location.

### NOTES:

- While playing a DVD, if a menu is shown on the TV screen, Number buttons may be used for selecting an item in the menu (see page 43).
- While playing a VCD or SVCD with the PBC function, if a menu is shown on the TV screen, Number buttons are used for selecting an item in the menu (see page 43).

# Tuner operations

 
You can browse through all the stations or use the preset function to go immediately to a particular station.

- Before operating the tuner from the remote control, press FM/AM to use the remote control for the tuner operations.

## IMPORTANT:

When using the remote control, check to see if its remote control mode selector is set to the correct position:

Set it to "DVD" to use other than RDS.




## NOTES:

- When a station of sufficient signal strength is tuned in, the TUNED indicator lights up on the display window.
- When an FM stereo program is received, the STEREO indicator lights up.

## Tuning in to stations manually

From the remote control ONLY:

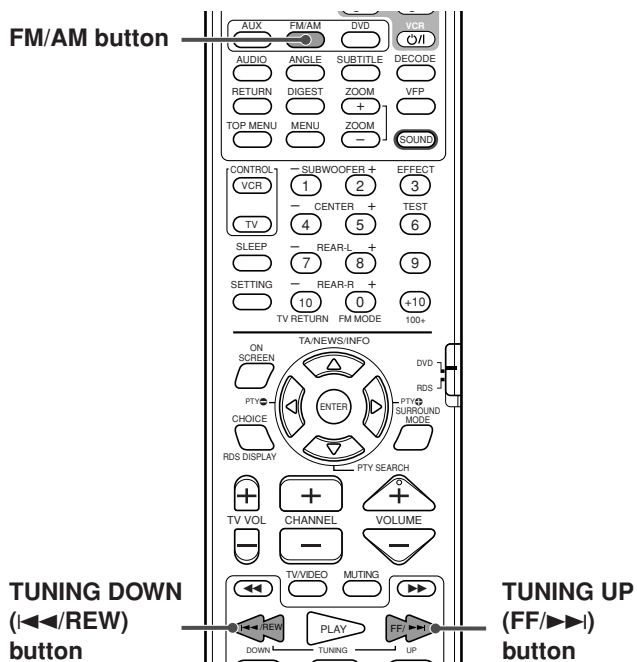


### 1 Press FM/AM repeatedly to select the band.

Each time you press the button, the band alternates between FM and AM (MW).

The selected band appears on the display window, then the last received station appears.

Example: When AM is selected

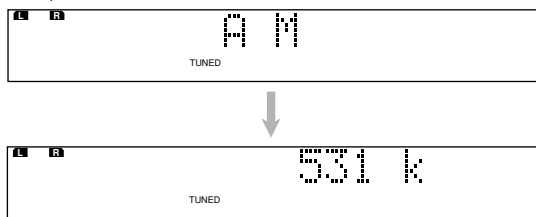

### 2 Press TUNING UP (FF/▶▶) or DOWN (◀◀/REW) repeatedly until you find the frequency you want.

- **TUNING UP (FF/▶▶):** Increases the frequency.
- **TUNING DOWN (◀◀/REW):** Decreases the frequency.

When you hold down the button and then release it, the system starts searching for stations and stops when a station of sufficient signal strength is tuned in to.

## Using preset tuning


Once a station is assigned to a channel number, the station can be quickly tuned in. You can preset 30 FM and 15 AM (MW) stations.

### ■ To store the preset stations

**Before you start, remember...**

There is a time limit in doing the following steps. If the setting is cancelled before you finish, start from step 2 again.

From the remote control ONLY:

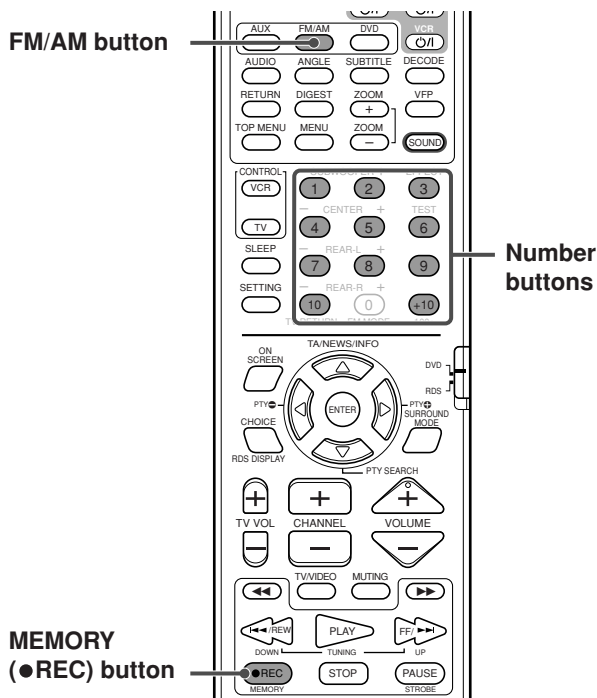

### 1 Tune in the station you want to preset (see "Tuning in to stations manually").

- If you want to store the FM reception mode for an FM station, select the reception mode you want. See "Selecting the FM reception mode" on page 32.



## 2 Press MEMORY (●REC).

The channel number position starts flashing on the display window for about 5 seconds.



## 3 Press Number button(s) (1-10, +10) to select a channel number while the channel number position is flashing.

The channel number and the CH indicator start flashing.

Examples:

- For channel number 3, press 3.
- For channel number 14, press +10 then 4.

(For FM stations only)

- For channel number 24, press +10, +10, then 4.
- For channel number 30, press +10, +10, then 10.



## 4 Press MEMORY (●REC) again while the selected number is flashing on the display window.

The selected number stops flashing.

The station is assigned to the selected preset number.

## 5 Repeat steps 1 to 4 until you store all the stations you want.

### To erase a stored preset station

Storing a new station on a used number erases the previously stored one.

### ■ To tune in to a preset station

From the remote control ONLY:

#### 1 Press FM/AM repeatedly to select the band.

Each time you press the button, the band alternates between FM and AM (MW).

#### 2 Press Number button(s) (1-10, +10) to select a preset channel number.

Examples:

- For channel number 3, press 3.
- For channel number 14, press +10 then 4.

(For FM stations only)


- For channel number 24, press +10, +10, then 4.
- For channel number 30, press +10, +10, then 10.

## Selecting the FM reception mode

When a stereo FM program tuned in currently is noisy, you can change the FM reception mode to improve the reception.

- You can store the FM reception mode for each preset station. See "Using preset tuning" on page 31.

From the remote control ONLY:

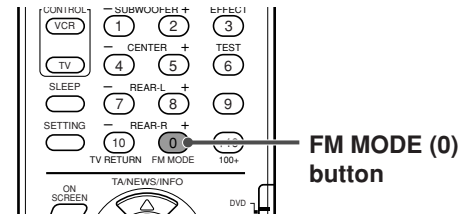

Press FM MODE (0) while listening to an FM station.

The FM reception mode appears on the display window. Each time you press the button, the FM reception mode alternates between "AUTO MUTING" and "MONO."

#### • AUTO MUTING:

When a program is broadcasted in stereo, you will hear stereo sounds. (The STEREO indicator lights up on the display window.) When in monaural, you will hear monaural sounds. This mode is also useful to suppress static noise between stations. The AUTO MUTING indicator lights up on the display window.


#### • MONO:

Reception will be improved although you will lose the stereo effect. (The STEREO indicator goes off.) In this mode, you will hear noise until you are tuned in to a station. (The AUTO MUTING indicator also goes off.)

## Reducing the noise of AM (MW) broadcast

When listening to an AM (MW) broadcast with a lot of noise interference, you can change the Beat Cut mode to reduce the noise.

From the remote control ONLY:

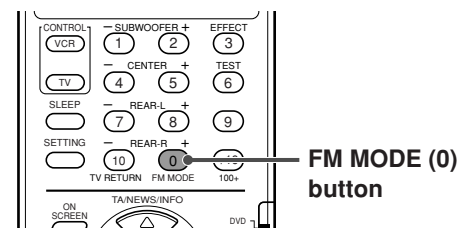

Press FM MODE (0) while listening to an AM (MW) station.

The current BEAT CUT mode appears on the display window. Each time you press the button, the Beat Cut mode alternates between "BEAT CUT 1" and "BEAT CUT 2."

- Choose "BEAT CUT 1" or "BEAT CUT 2" that will give clearer sound.

## Using the RDS (Radio Data System) to receive FM stations

RDS allows FM stations to send an additional signal along with their regular program signals. For example, the stations send their station names, as well as information about what type of program they broadcast, such as sports or music, etc.

When tuned to an FM station which provides the RDS service, the RDS indicator lights up on the display window.



With the system, you can receive the following types of RDS signals:

- **PS (Program Service):** Shows commonly known station names.
- **PTY (Program Type):** Shows types of broadcast programs.
- **RT (Radio Text):** Shows text messages the station sends.
- **Enhanced Other Network:** See page 35.

 
### NOTES:

- RDS is not available for AM (MW) broadcasts.
- RDS may not operate correctly if the station tuned is not transmitting RDS signal properly or if the signal strength is weak.

### IMPORTANT:

When using the remote control, check to see if its remote control mode selector is set to the correct position:

To operate RDS, set it to "RDS."




## What information can RDS signals provide?

You can see the RDS signals the station sends on the display window.

## To show the RDS signals

From the remote control ONLY:

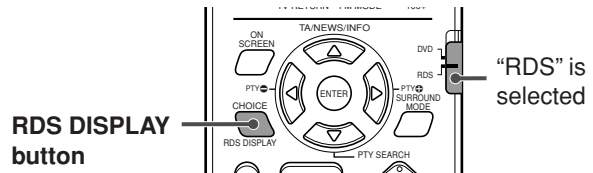

## Press RDS DISPLAY while listening to an FM station.

Each time you press the button, the indication on the display window changes to show you the following information:

⇒ PS ⇒ PTY ⇒ RT ⇒ Frequency (Normal indication)  
⇒ (back to the beginning)

- **PS (Program Service):** While searching, "PS" appears and then the station names will be displayed. "NO PS" appears if no signal is sent.
- **PTY (Program Type):** While searching, "PTY" appears and then the type of the broadcast program will be displayed. "NO PTY" appears if no signal is sent.
- **RT (Radio Text):** While searching, "RT" appears and then text messages the station sends will be displayed. "NO RT" appears if no signal is sent.
- **Frequency:** Station frequency (non-RDS service).

## About characters shown on the display window

When PS, PTY, or RT signals appear on the display window, some special characters and marks may not be displayed correctly.

### NOTE:

If searching finishes at once, "PS," "PTY," and "RT" will not appear on the display window.

## Searching for a program by PTY codes


One of the advantages of the RDS service is that you can locate a particular kind of program from the preset channels (see page 31) by specifying the PTY codes.

### To search for a program using the PTY codes

#### Before you start, remember...

- The PTY Search is only applicable to preset stations.
- To stop searching any time during the process, press PTY SEARCH while searching.
- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

From the remote control ONLY:

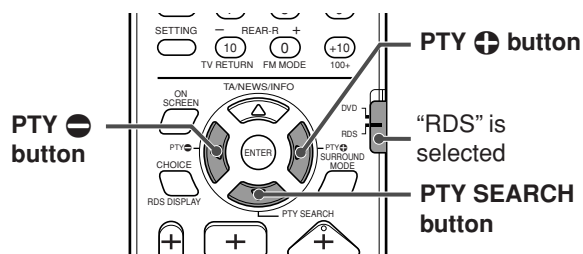

- 1 Press PTY SEARCH while listening to an FM station.

"PTY SELECT" flashes on the display window.

- 2 Press PTY + or PTY - until the PTY code you want appears on the display window, while "PTY SELECT" is flashing.

- For details, see "Description of the PTY codes" on page 35.

- 3 Press PTY SEARCH again, while the PTY code selected in the previous step is still on the display window.

While searching, "SEARCH" and the selected PTY code alternate on the display window.

The system searches 30 preset FM stations, stops when it finds the one you have selected, and tunes in that station.

#### To continue searching after the first stop

Press PTY SEARCH again while the indications on the display window are flashing.

If no program is found, "NOT FOUND" appears on the display window.

### PTY codes





# Tuner operations

## Description of the PTY codes:

<b>News:</b>	News.
<b>Affairs:</b>	Topical program expanding or enlarging upon the news—debate, or analysis.
<b>Info:</b>	Programs the purpose of which is to impart advice in the widest sense.
<b>Sport:</b>	Programs concerned with any aspect of sports.
<b>Educate:</b>	Educational programs.
<b>Drama:</b>	All radio plays and serials.
<b>Culture:</b>	Programs concerning any aspect of national or regional culture, including language, theater, etc.
<b>Science:</b>	Programs about natural sciences and technology.
<b>Varied:</b>	Used for mainly speech-based programs such as quizzes, panel games and personality interviews.
<b>Pop M:</b>	Commercial music of current popular appeal.
<b>Rock M:</b>	Rock music.
<b>Easy M:</b>	Current contemporary music considered to be “easy-listening.”
<b>Light M:</b>	Instrumental music, and vocal or choral works.
<b>Classics:</b>	Performances of major orchestral works, symphonies, chamber music, etc.
<b>Other M:</b>	Music not fitting into any of the other categories.
<b>Weather:</b>	Weather reports and forecasts.
<b>Finance:</b>	Stock Market reports, commerce, trading etc.
<b>Children:</b>	Programs targeted at a young audience.
<b>Social:</b>	Programs about sociology, history, geography, psychology and society.
<b>Religion:</b>	Religious programs.
<b>Phone In:</b>	Involving members of the public expressing their views either by phone or at a public forum.
<b>Travel:</b>	Travel information.
<b>Leisure:</b>	Programs about recreational activities.
<b>Jazz:</b>	Jazz music.
<b>Country:</b>	Songs which originate from, or continue the musical tradition of the American Southern States.
<b>Nation M:</b>	Current popular music of the nation or region in that country’s language.
<b>Oldies:</b>	Music from the so-called “golden age” of popular music.
<b>Folk M:</b>	Music which has its roots in the musical culture of a particular nation.
<b>Document:</b>	Programs concerning factual matters, presented in an investigative style.
<b>TEST:</b>	Broadcasts for testing emergency broadcast equipment or unit.
<b>Alarm !:</b>	Emergency announcement.

Classification of the PTY codes for some FM stations may be different from the above list.

## Switching to broadcast program of your choice temporarily


Another convenient RDS service is called “Enhanced Other Network.”

This allows the system to switch temporarily to a broadcast program of your choice (TA, NEWS, and/or INFO) from a different station except in the following cases:

- When you are listening to non-RDS stations (all AM—MW stations, some FM stations and other sources).
- When the system is in standby mode.

### Before you start, remember...

The Enhanced Other Network function is only applicable to preset stations.

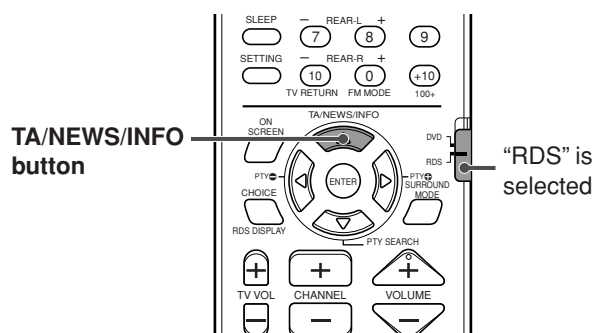

Press TA/NEWS/INFO repeatedly until the program type (TA/NEWS/INFO) indicator you want appears on the display window.

Each time you press the button, the indicator on the display window changes to show the following:



The program type indicator

- ⇒ TA ⇒ NEWS ⇒ INFO ⇒ TA/NEWS ⇒ TA/INFO
- ⇒ NEWS/INFO ⇒ TA/NEWS/INFO ⇒ None
- ⇒ (back to the beginning)

- **TA:** Traffic Announcement in your area.
- **NEWS:** News.
- **INFO:** Program the purpose of which is to impart advice in the widest sense.



## How the Enhanced Other Network function actually works:

### CASE 1

If there is no station broadcasting the program you have selected

The system continues tuning in to the current station.



When a station starts broadcasting the program you have selected, the system automatically switches to the station. The indicator of received PTY code starts flashing.



When the program is over, the system goes back to the previously tuned station, but the Enhanced Other Network function still remains activated.

### CASE 2

If the FM station you are listening to is broadcasting the program you have selected

The system continues to receive the station but the indicator of received PTY code starts flashing.



When the program is over, the indicator of received PTY code stops flashing and remains lit, but the Enhanced Other Network function still remains activated.

### NOTES:

- In Enhanced Other Network standby mode, if you change the source to play, Enhanced Other Network standby mode is canceled temporarily.  
If you change the source to FM again, the system returns to Enhanced Other Network standby mode.
- Enhanced Other Network data sent from some stations may not be compatible with this system.
- Enhanced Other Network does not function for some FM stations with RDS service.
- While listening to a program tuned in by the Enhanced Other Network function, the station does not change even if another network station starts broadcasting a program of the same Enhanced Other Network data.
- While listening to a program tuned in by the Enhanced Other Network function, you can only use TA/NEWS/INFO and RDS DISPLAY as the tuner operation buttons.

### To stop listening to the program selected by Enhanced Other Network.

Press TA/NEWS/INFO repeatedly again so that the program type (TA/NEWS/INFO) indicator goes off from the display window. The system exits from Enhanced Other Network standby mode and goes back to the previously selected station.

### When an emergency broadcast (Alarm signal) is sent from an FM station.

The system automatically tunes in to the station except in the following cases:

- When you are listening to non-RDS stations (all AM—MW stations, some FM stations and other sources).
- When the system is in standby mode.

While receiving an emergency broadcast, "Alarm !" appears on the display window.

### The TEST signal is used for equipment test—whether it can receive the Alarm signal correctly.

The TEST signal makes the system work in the same way as the Alarm signal does. If the TEST signal is received, the system automatically switches to the station broadcasting the TEST signal.

While receiving the TEST signal, "TEST" appears on the display window.

# Creating the realistic sound fields

You can use the following Surround modes to reproduce a realistic sound field.

- **Dolby Surround**
  - **Dolby Pro Logic II**
  - **Dolby Digital**
- **DTS Digital Surround**
- **DAP modes**
- **All Channel Stereo**

 
## ■ **Dolby Surround** **Dolby Pro Logic II\***

**Dolby Pro Logic II** has newly developed multichannel playback format to decode all 2 channel sources—stereo source and Dolby Surround encoded source—into 5.1 channel.


Matrix-based encoding/decoding method for Dolby Pro Logic II makes no limitation for the cutoff frequency of the rear treble and enables stereo rear sound compared to conventional Dolby Pro Logic.

Dolby Pro Logic II enables to reproduce spacious sound from original sound without adding any new sounds and tonal colorations.


Dolby Pro Logic II has two modes—**Movie mode** and **Music mode**:


**Pro Logic II Movie (PL II MOVIE)**—suitable for reproduction of Dolby Surround encoded sources bearing the mark . You can enjoy soundfield very close to the one created with discrete 5.1 channel sounds.

**Pro Logic II Music (PL II MUSIC)**—suitable for reproduction of any 2 channel stereo music sources. You can enjoy wide and deep sound by using this mode.

- When Dolby Pro Logic II is activated, the  PRO LOGIC II indicator lights up on the display window.

### ■ **Digital signal format indicators on the display window**

 **DIGITAL** : Lights up when Dolby Digital signals come in.

 : Lights up when DTS Digital (Surround) signals come in.

No indication: No digital signal indicator lights up when Linear PCM signals or analog signals come in.

### NOTE: MPEG Multichannel

MPEG Multichannel signals are converted into Linear PCM signals, then reproduced.

## Dolby Digital\*

Used to reproduce multichannel soundtracks of the software encoded with Dolby Digital ().

**Dolby Digital 5.1 ch (DOLBY D)** encoding method (so-called discrete multichannel digital audio format) records and digitally compresses the left front channel, right front channel, center channel, left rear channel, right rear channel, and LFE channel signals.

Since each channel is completely independent from the other channel signals to avoid interference, you can obtain much better sound quality with much stereo and surround effects.

### NOTE:

*Dolby Digital software can be roughly grouped into two categories—multichannel (up to “5.1” channel) and 2 channel software. To enjoy surround sounds while playing Dolby Digital 2 ch software, you can use Dolby Pro Logic II.*


## ■ **DTS Digital Surround\*\***

Used to reproduce multichannel soundtracks of the software encoded with DTS Digital Surround ().

**DTS Digital Surround (DTS SURR)** is another discrete multichannel digital audio format available on CD, LD, and DVD software.

Compared to Dolby Digital, audio compression ratio is relatively low. This fact allows DTS Digital Surround format to add breadth and depth to the reproduced sounds. As a result, DTS Digital Surround features natural, solid and clear sound.

### **Typical Multichannel (5.1 ch) reproduction**

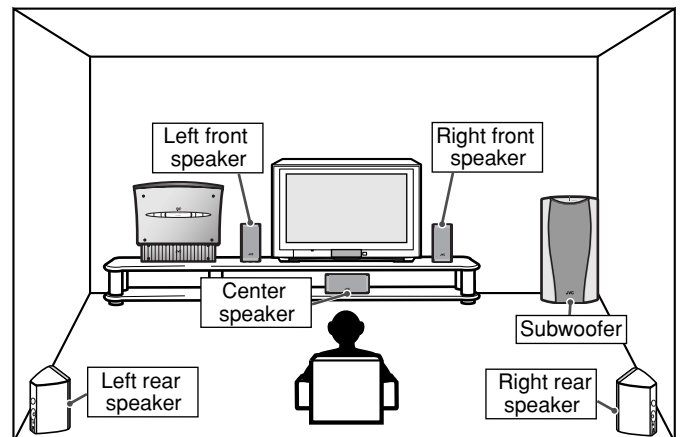

\* Manufactured under license from Dolby Laboratories. “Dolby,” “Pro Logic,” and the double-D symbol are trademarks of Dolby Laboratories.

\*\* Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other world-wide patents issued and pending. “DTS” and “DTS Digital Surround” are trademarks of Digital Theater Systems, Inc. Copyright 1996 Digital Theater Systems, Inc. All rights reserved.

## ■ DAP (Digital Acoustic Processor) modes

**DAP modes** have been designed to create important acoustic surround elements.

The sound heard in a live club, dance club, hall or pavilion consists of direct sound and indirect sound—early reflections and reflections from behind. Direct sounds reach the listener directly without any reflection. On the other hand, indirect sounds are delayed by the distances of the ceiling and walls (see the diagram below).


These indirect sounds are important elements of the acoustic surround effects. The DAP mode can reproduce a realistic sound field by adding these indirect sounds.

The following DAP modes are provided with this system.

<b>LIVE CLUB:</b>	Gives the feeling of a live music club with a low ceiling.
<b>DANCE CLUB:</b>	Gives a throbbing bass beat.
<b>HALL:</b>	Gives clear vocal and the feeling of a concert hall.
<b>PAVILION:</b>	Gives the spacious feeling of a pavilion with a high ceiling.

These DAP modes can be used to add the acoustic surround effects while reproducing 2 channel stereo software, either analog or Linear PCM, and can give you a real “being there” feeling.

- When one of the DAP modes is selected, the DSP indicator lights up on the display window.

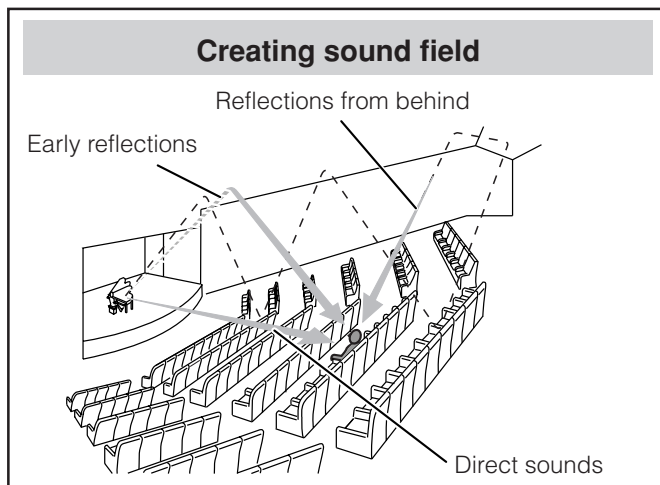


## ■ All Channel Stereo

**All Channel Stereo (ALL CH ST.)** mode can reproduce a larger stereo sound field using all the connected (and activated) speakers.

All Channel Stereo can be used while reproducing 2 channel stereo software, either analog or Linear PCM.


- When All Channel Stereo is selected, the DSP indicator lights up on the display.

### All Channel Stereo reproduction

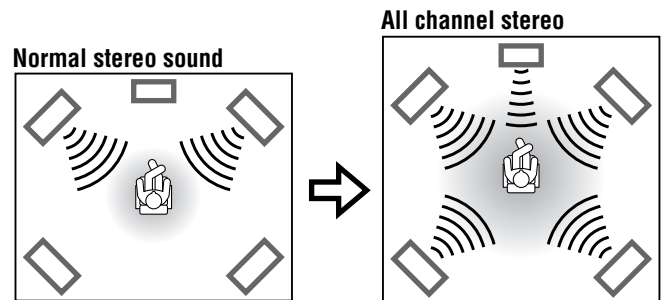

### ■ The signal indicators on the display window

 Light up to indicate the incoming signals.



- L:** Lights up when the left channel signal comes in.
- C:** Lights up when the center channel signal comes in.
- R:** Lights up when the right channel signal comes in.
- LFE:** Lights up when the LFE channel signal comes in.
- LS:** Lights up when the left surround channel signal comes in.
- RS:** Lights up when the right surround channel signal comes in.
- S:** Lights up when the monaural rear channel signal or 2 channel Dolby Surround signal comes in.

### Available Surround modes for each input signal

○: Possible / ×: Impossible

 
Mode Signals	SURROUND OFF (stereo)	DOLBY DIGITAL	DTS SURROUND	PLII MOVIE	PLII MUSIC	LIVE CLUB	DANCE CLUB	HALL	PAVILION	ALL CH ST.
Dolby Digital (Multichannel)	○	○	×	×	×	×	×	×	×	×
Dolby Digital (2 channel)	○	×	×	○	○	×	×	×	×	×
DTS Digital Surround (Multichannel)	○	×	○	×	×	×	×	×	×	×
DTS Digital Surround (2 channel)	○	×	×	○	○	×	×	×	×	×
Analog (AUX/FM/AM) or Linear PCM	○	×	×	○	○	○	○	○	○	○

# Creating the realistic sound fields

## IMPORTANT:

When using the remote control, check to see if its remote control mode selector is set to the correct position:

**Set it to "DVD" to use other than RDS.**




## Selecting the surround mode

The system is so set up in its initial state that it automatically selects the optimal surround mode for each input signal (AUTO SURROUND MODE).

Only when you want to change a surround mode selected automatically, perform the following procedure.

- After having changed the surround mode, turning off the power or changing sources resumes the auto surround mode.

### From the remote control ONLY

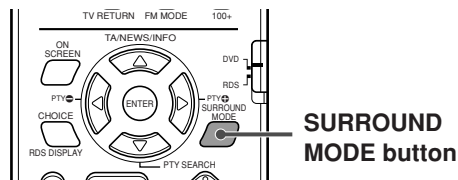

### Press SURROUND MODE.

The current surround mode is called up and appears on the display window. Each time you press the button, the surround mode changes as follows.

- ⇒ PL II MOVIE ⇒ PL II MUSIC ⇒ LIVE CLUB
- ⇒ DANCE CLUB ⇒ HALL ⇒ PAVILION
- ⇒ ALL CH ST. ⇒ STEREO (surround off)
- ⇒ (back to the beginning)


### NOTES:

- When you have set the rear speakers to "NONE," you cannot use the DAP modes and All Channel Stereo. (See pages 64 and 70.)
- When the digital multichannel software such as Dolby Digital or DTS Digital Surround is played back, the appropriate multichannel Surround mode is automatically activated ("DOLBY D" or "DTS SURR"), and you can only turn on or off ("STEREO") the surround mode.
- For Dolby Digital 2 channel software, you can select "PLII MUSIC," "PLII MOVIE," or off ("STEREO") by pressing SURROUND MODE.

## Using Dolby Pro Logic II, Dolby Digital and DTS Digital Surround

Once you have adjusted the sound, the adjustment is memorized for each source.

### From the remote control ONLY

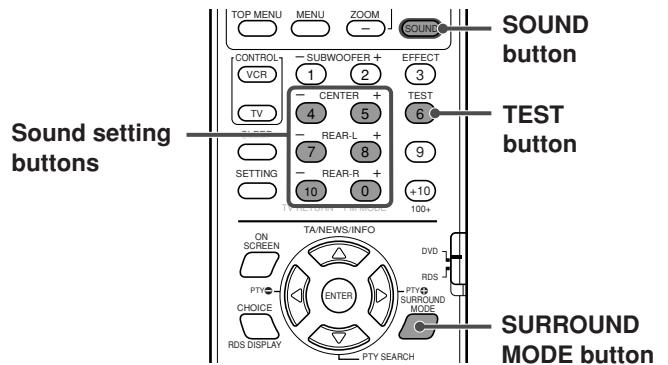

### 1 Start playing back software.

When playing a component connected to the AUX IN or the DIGITAL IN jack, change the source to AUX or AUX DIGITAL. (See page 22.)

### 2 Press SURROUND MODE to activate Surround mode.

Each time you press the button, Surround mode turns on and off (stereo) alternately.

- If you are playing back software encoded with Dolby Digital multichannel, "DOLBY D" is selected.
- If you are playing back software encoded with DTS Digital Surround, "DTS SURR" is selected.
- If you are playing back any software other than the above, you can select "PL II MUSIC" or "PL II MOVIE" according to the source by pressing SURROUND MODE.

 
### If you like to adjust sound, go to step 3.

### 3 Press SOUND.

The 10 keys are activated for sound adjustments.

### 4 Press TEST to check if you can hear the sounds through all the speakers at the equal level.

"TEST TONE L" and the corresponding signal indicator starts flashing on the display window, and the test tone comes out of the speakers in the following order:



- ⇒ Left front speaker ⇒ Center speaker ⇒ Right front speaker ⇒ Right rear speaker ⇒ Left rear speaker
- ⇒ (back to the beginning)

## 5 Adjust the speaker output levels (-10 dB to +10 dB).

Adjust the center speaker and rear speaker levels comparing to the sound from the front speakers.

- To adjust the center speaker level, press CENTER +/-.
- To adjust the left rear speaker level, press REAR-L +/-.
- To adjust the right rear speaker level, press REAR-R +/-.

## 6 Press TEST again to stop the test tone.

### NOTES:


- When selecting "PL II MUSIC," "PL II MOVIE," "DOLBY D," or "DTS SURR" as the surround mode, the SURROUND indicator lights up.
- You can adjust the speaker output levels without outputting the test tone.
- When selecting DVD, AUX, or AUX DIGITAL as the source, you can also adjust the speaker output levels using the choice menu. See pages 59 and 65.
- When you have set the center speaker and rear speakers to "NONE," the test tone does not come out from those speakers, and you cannot adjust the output level of those speakers. (See pages 64 and 70.)
- You can output the test tone in any surround mode, or even when surround mode is not activated.

## Using DAP Modes and All Channel Stereo

Once you have adjusted the sound, the adjustment is memorized for each source.

- You cannot use the DAP modes and All Channel Stereo if the rear speakers are deactivated.
- You cannot adjust the effect level for "ALL CH ST."

### From the remote control ONLY

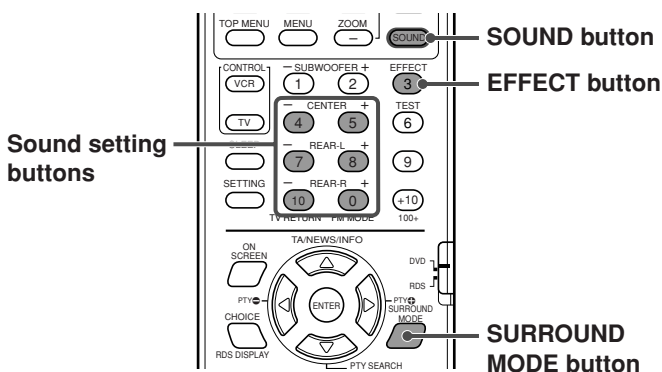

## 1 Start playing 2 channel software—either analog or Linear PCM.

When playing a component connected to the AUX IN or the DIGITAL IN jack, change the source to AUX or AUX DIGITAL.

## 2 Press SURROUND MODE repeatedly until one of the DAP modes—"LIVE CLUB," "DANCE CLUB," "HALL," "PAVILION"—or "ALL CH ST." appears on the display.

The DSP indicator also lights up on the display window.

### If you like to adjust sound, go to step 3.

## 3 Press SOUND.

The 10 keys are activated for sound adjustments.

## 4 Adjust the speakers output levels (-10 dB to +10 dB).

- To adjust the left rear speaker level, press REAR•L +/-.
- To adjust the right rear speaker level, press REAR•R +/-.

For "ALL CH ST." only:

- To adjust the center speaker level, press CENTER +/-.

## 5 For DAP modes only: Press EFFECT to select the effect level (1 to 5) you want.

Each time you press the button, the effect level changes as follows:

⇒ DSP EFFECT 1 ⇒ DSP EFFECT 2 ⇒ DSP EFFECT 3  
⇒ DSP EFFECT 4 ⇒ DSP EFFECT 5 ⇒ (back to the beginning)



As the number increases, the selected mode becomes stronger (normally, set it to "EFFECT 3").

### NOTES:

- When selecting DVD, AUX, or AUX DIGITAL as the source, you can also adjust the speaker output level using the choice menu. See pages 59 and 65.
- You cannot select any DAP mode and All Channel Stereo when software encoded with Dolby Digital or DTS Digital Surround is played back.

 
# Advanced operations

This section explains advanced operations of DVD, Video CD, SVCD, and Audio CD playback using the remote control. For MP3 playback, see page 55, and for JPEG playback, see page 57.

-  shows the types of discs the operation is available for.
- Before operating the DVD player from the remote control, press DVD to use the remote control for the disc operations.
- Turn on your TV, and select the correct input mode on the TV.
- If “” appears on the TV screen when pressing a button, the disc cannot accept an operation you have tried to do, or information required for that operation is not recorded on the disc.

## IMPORTANT:


When using the remote control, check to see if its remote control mode selector is set to the correct position:  
Set it to “DVD” to use other than RDS.



## Using the on-screen bar


You can check the information of a disc while the disc is loaded, and you can use some functions through the on-screen bar.

### Showing the on-screen bar

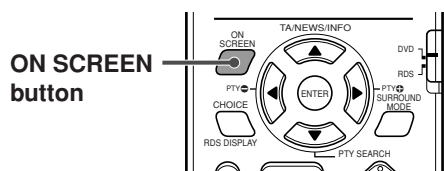


- Whenever a disc is loaded Press ON SCREEN.

Each time you press the button, the on-screen bar appears on the TV.

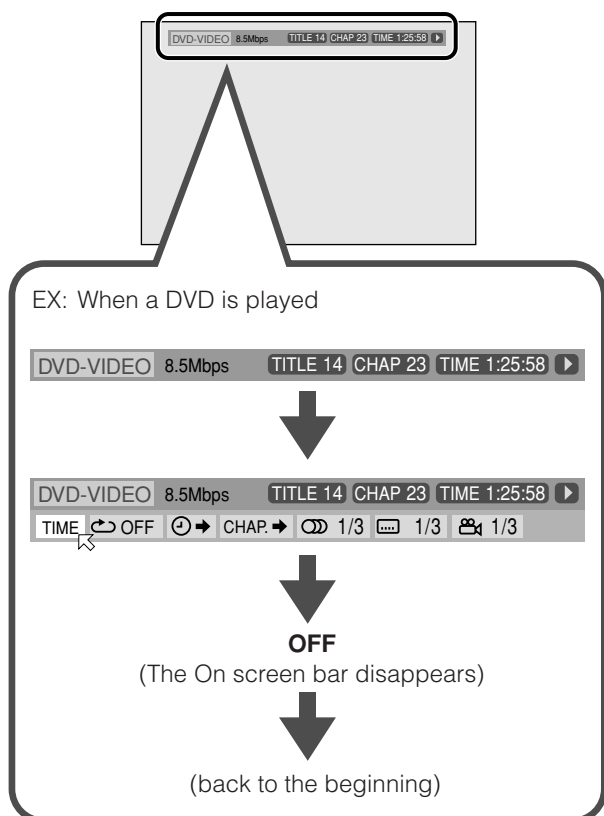


## Contents of the on-screen bar


- When a DVD is played

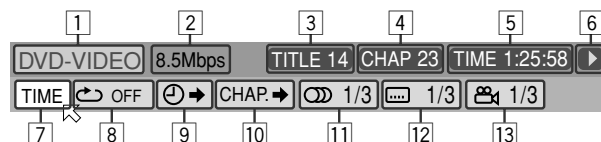


- When an SVCD is played

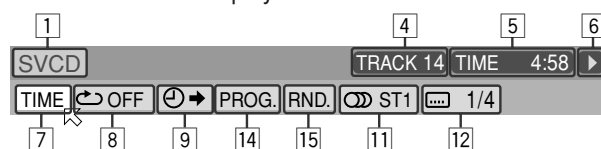

- When a VCD is played

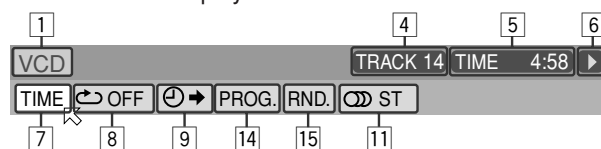

- When a CD is played

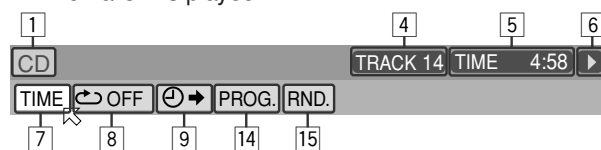


- 1: shows a disc type.
- 2: shows the current transfer rate (Megabits per second).
- 3: shows the current title number.
- 4: shows the current chapter number (for DVD) or track number (for Video/Audio CD and SVCD).
- 5: shows the time information. See page 42.
- 6: shows the playback condition.
  - ▶: appears during playback.
  - ▶/◀◀: appears during fast forward/reverse.
  - ▶/◀◀: appears during playback in forward slow-motion/reverse slow-motion.
  - ⏸: appears while paused.
  - ⏹: appears while stopped.
- 7: Select this to change the time information (5). See page 42.
- 8: Select this to repeat playback. See page 54.
- 9: Select this for the time search function. See page 49.
- 10: Select this for the chapter search function. See page 48.
- 11: Select this to change the audio language or channel. See pages 47 and 48.
- 12: Select this to change the subtitle language. See page 46.
- 13: Select this to change the view angle. See page 44.



- 14: Select this to play back tracks in your desired order. See page 53.
- 15: Select this to play back tracks in random order. See page 53.

## Basic operation through the on-screen bar

EX.: When selecting the repeat mode:

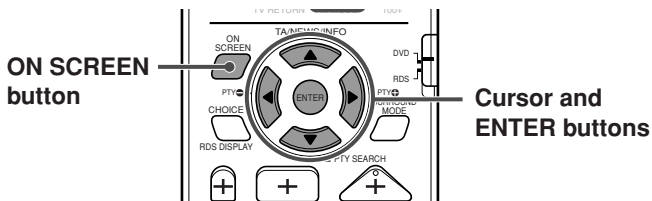

■ During playback or while stopped.

### 1 Press ON SCREEN twice.

The on-screen bar appears on the TV.



### 2 Press Cursor ►/◀ to move to the icon you want to use, then press ENTER.

The pop-up window appears under the on-screen bar.



- The current setting appears in the pop-up window.

### 3 Press Cursor ▼/▲ to select the desired option.

Each time you press the button, the options change.



### 4 Press ENTER.

The setting changes and the pop-up window goes off.



#### To turn off the on-screen bar

Press ON SCREEN.

#### NOTE:


See the corresponding pages for the detail of each function.

## Changing the time information



You can change the time information in the on-screen bar and the display window on the center unit.

■ During playback or while stopped.

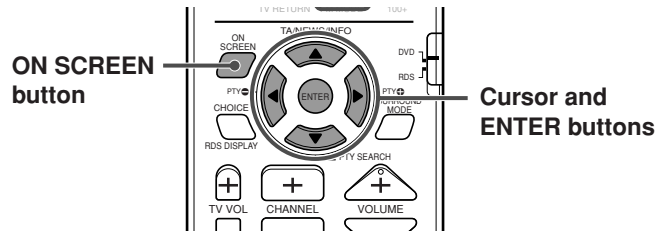

### 1 Press ON SCREEN twice.

The on-screen bar appears on the TV.

### 2 Press Cursor ►/◀ to move to TIME in the on-screen bar.

### 3 Press ENTER.

Each time you press the button, the time information changes as follows.

⇒ TIME ⇒ REM ⇒ TOTAL ⇒ T.REM  
⇒ (back to the beginning)

- **TIME:** Elapsed playing time of the current chapter/track
- **REM:** Remaining time of the current chapter/track
- **TOTAL:** Elapsed time of the disc
- **T.REM:** Remaining time of the disc

#### To turn off the on-screen bar

Press ON SCREEN.

#### NOTES:

- The time indication in the on-screen bar changes as follows.

EX.:

⇒ TIME 0:25:58 ⇒ REM 0:18:14 ⇒ TOTAL 1:25:58  
⇒ T.REM 0:45:41 ⇒ (back to the beginning)

- While playing a Video CD, SVCD, or Audio CD, the indication of the hour digit does not appear.

# Advanced operations


## Locating a desired scene from the disc menu

Using the disc menu, you can start playing a title, chapter, or track you specify.


### Locating a desired scene from the DVD menu

DVD

DVD discs generally have their own menus which show the disc contents. These menus contain various items such as titles of movies, names of songs, or artist information, and display them on the TV screen. You can locate a desired scene by using these menus.

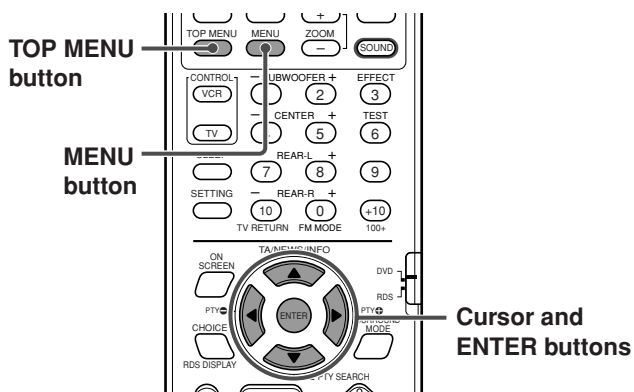

- Whenever a DVD disc is loaded
- 1 Press **TOP MENU** or **MENU**.  
The menu appears on the TV.

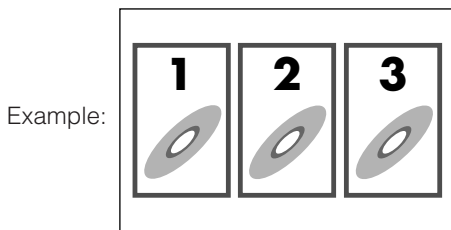

Normally, a DVD disc which contains more than one title may have a "title" menu which lists the titles. Press **TOP MENU** to show the title menu. Some DVD discs may also have a different menu which is shown by pressing the **MENU** button. See the instructions of each DVD disc for its particular menu.

- 2 Use **Cursor**  $\leftarrow/\rightarrow/\uparrow/\downarrow$  to select a desired item, then press **ENTER**.


The system starts playback of the selected item.

- With some discs, you can also select items by entering the corresponding number using **Number buttons**.

## Locating a desired scene from the Video CD/SVCD menu with PBC

VIDEO CD SUPER VCD


A Video CD or SVCD disc recorded with PBC has its own menus such as a list of the songs. You can locate the specific scene by using the menu. (See also page 7.)

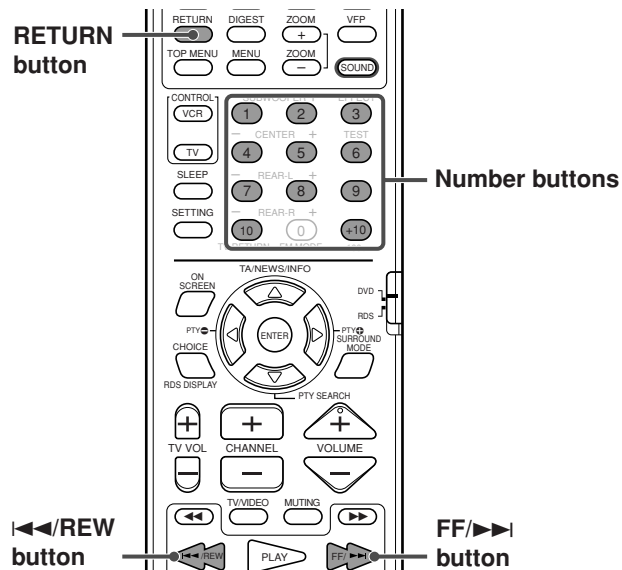

- When the menu appears on the TV during playback with PBC

Press **Number buttons** (1-10, +10) to select the number of the desired item.

The system starts playback from the selected item.

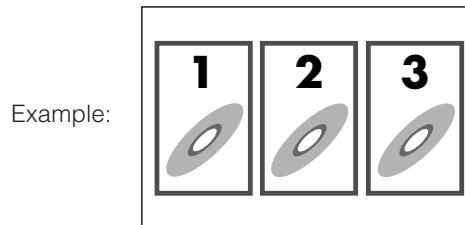

### To select the number

Example: To select 3, press 3.  
To select 11, press +10, then 1.

### To return to the menu

Press **RETURN**.

### When "NEXT" or "PREVIOUS" is shown on the TV screen:

- To go to the next page, press **FF/▶▶**.
- To return to the previous page, press **◀◀/REW**.

### NOTES:

- If you want to play a PBC-compatible Video CD/SVCD without using the PBC function, perform any of the following:
  - Start playback by pressing **Number buttons** when playback is stopped.
  - Start playback by pressing **PLAY** (or **▶** on the center unit) when playback is stopped and the track number appears on the display window instead of "PBC."
- To activate the PBC function when playing a PBC-compatible Video CD/SVCD without using the PBC function, perform any of the following:
  - Press **TOP MENU** or **MENU**.
  - Press **STOP** (or **■** on the center unit) to stop playback, then press **PLAY** (or **▶** on the center unit).




## Selecting a view angle of DVD

While playing back a DVD containing multi-view angles, you can enjoy the same scene at different angles.

### Selecting a view angle

DVD

Using the direct button:

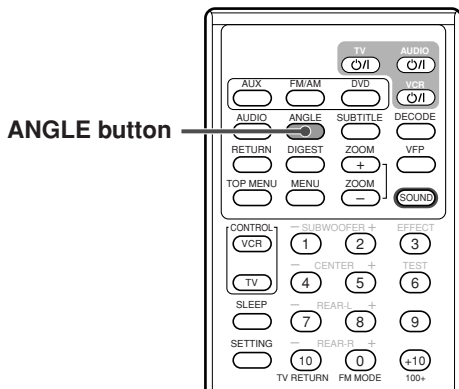


■ During playback

#### 1 Press ANGLE.

The following pop-up window appears on the TV.

Example: The first view angle is selected out of 3 view angles recorded.

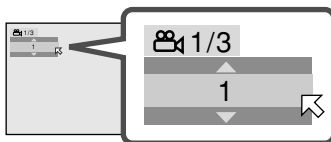


#### 2 Press ANGLE repeatedly to select the desired view angle.

Each time you press the button, the angle of the scene changes.


Example:

⇒ 1/3 ⇒ 2/3 ⇒ 3/3 ⇒ (back to the beginning)

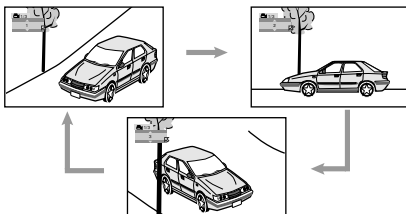

The pop-up window goes off if no operation is done for about 5 seconds.

Using the on-screen bar:

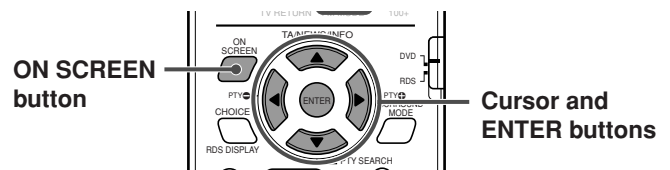

■ During playback

#### 1 Press ON SCREEN twice.

The on-screen bar appears on the TV.

#### 2 Press Cursor ►/◄ to move to in the on-screen bar, then press ENTER.

The following pop-up window appears under the on-screen bar.

Example: The first view angle is selected out of 3 view angles recorded.



#### 3 Press Cursor ▼/▲ repeatedly to select the desired view angle.

Each time you press the button, the angle of the scene changes.

#### 4 Press ENTER.

The pop-up window goes off.


**To turn off the on-screen bar**

Press ON SCREEN.

# Advanced operations

## Showing all view angles on the TV

DVD

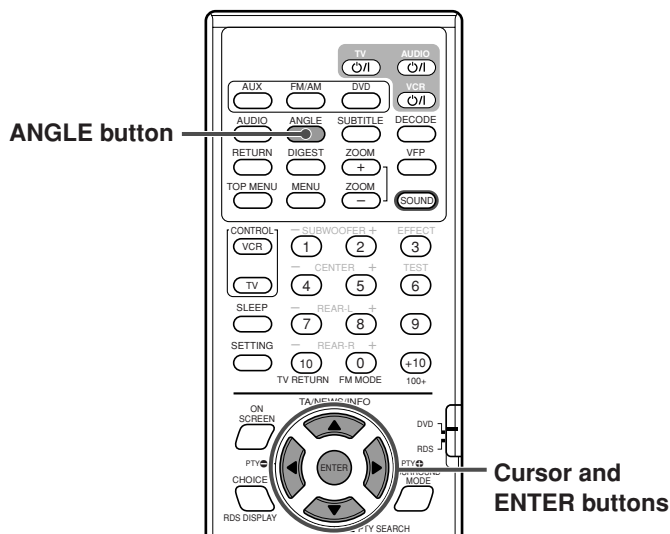


### ■ During playback

- 1 Press and hold **ANGLE** for more than 1 second.

Up to 9 pictures of the different camera angles recorded on a disc appear on the TV screen.

Example: when 3 view angles are recorded.

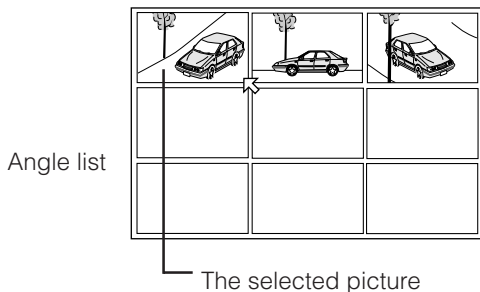

- 2 Press **Cursor**  $\leftarrow/\rightarrow/\uparrow/\downarrow$  repeatedly to move  $\leftarrow$  to the desired view.
- 3 Press **ENTER**.  
The angle list goes off, and playback starts at the selected view angle.

### **NOTE:**

While the angle list is shown on the TV, you cannot listen to the sound.

## Changing the subtitle languages and audio languages

While playing back a DVD (or SVCD) containing subtitles in different languages, you can select the subtitle language to be displayed on the TV.


When a DVD contains audio languages (soundtrack), you can select the language (sound track) to listen to.

- You can also select the audio channel of a Video CD/SVCD disc.

### Selecting the subtitle language

DVD SUPER VCD

Using the direct button:

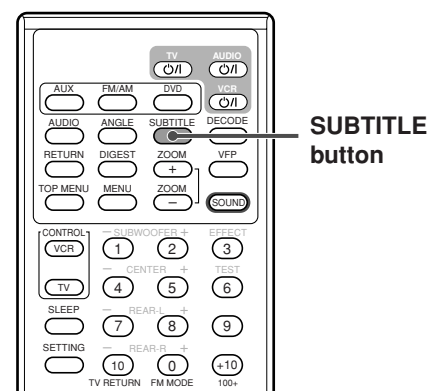


### ■ During playback

- 1 Press **SUBTITLE**.

The following pop-up window appears on the TV.

Example (DVD): "ENGLISH" is selected out of 3 subtitle languages recorded.

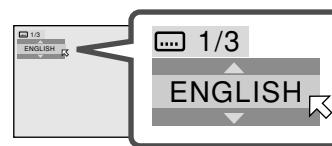

- 2 Press **SUBTITLE** repeatedly to select the desired subtitle language.

Each time you press the button, the subtitle languages change.

For SVCD


- An SVCD can contain up to four subtitles. Pressing **SUBTITLE** changes the subtitles regardless of whether the subtitles are recorded or not. (Subtitles will not change if no subtitle is recorded.)

The pop-up window goes off if no operation is done for about 5 seconds.

### **NOTE:**

Some subtitle languages are abbreviated in the pop-up window. See "The language codes list" on page 61.

## Using the on-screen bar:

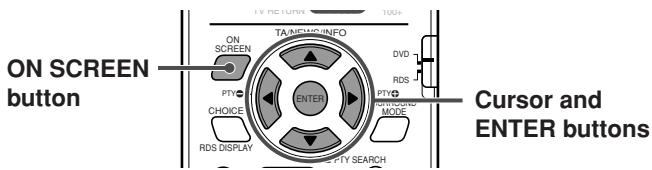

### ■ During playback

#### 1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

#### 2 Press Cursor ►/◄ to move to in the on-screen bar, then press ENTER.

The following pop-up window appears under the on-screen bar.

Example (DVD): "ENGLISH" is selected out of 3 subtitle languages recorded.



#### 3 Press Cursor ▼/▲ repeatedly to select the desired subtitle language.

Each time you press the button, the subtitle languages change.

#### 4 Press ENTER.

The pop-up window goes off.


### To turn off the on-screen bar

Press ON SCREEN.

## Selecting the audio language

DVD

### Using the direct button:

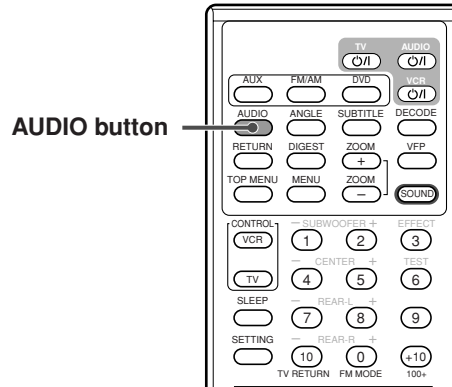


### ■ During playback

#### 1 Press AUDIO.

The following pop-up window appears on the TV.

Example: "ENGLISH" is selected out of 3 audio languages recorded.

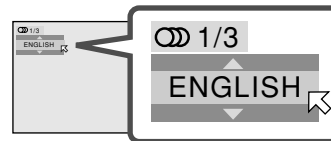

#### 2 Press AUDIO repeatedly to select the desired audio language.

Each time you press the button, the audio languages change.


The pop-up window goes off if no operation is done for about 5 seconds.

### NOTE:

Some audio languages are abbreviated in the pop-up window. See "The language codes list" on page 61.

# Advanced operations

## Using the on-screen bar:

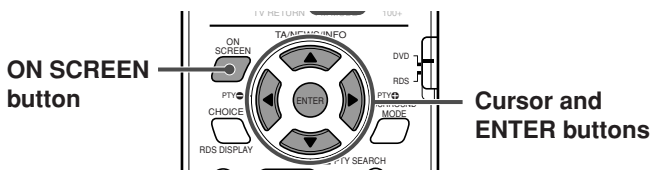

### ■ During playback

#### 1 Press ON SCREEN twice.

The on-screen bar appears on the TV.

#### 2 Press Cursor ►/◄ to move to in the on-screen bar, then press ENTER.

The following pop-up window appears under the on screen bar.

Example: "ENGLISH" is selected out of 3 audio languages recorded.



#### 3 Press Cursor ▼/▲ to select the desired audio language.

Each time you press the button, the audio languages change.

#### 4 Press ENTER.

The pop-up window goes off.

### To turn off the on-screen bar

Press ON SCREEN.

### NOTE:

Some audio languages are abbreviated in the pop-up window. See "The language codes list" on page 61.


## Selecting the audio channel



When you play some Karaoke Video CDs or SVCDs, you can enjoy karaoke by selecting the audio channel to play.

- The sounds of each audio channel depends on the contents of the disc.

### Using the direct button:

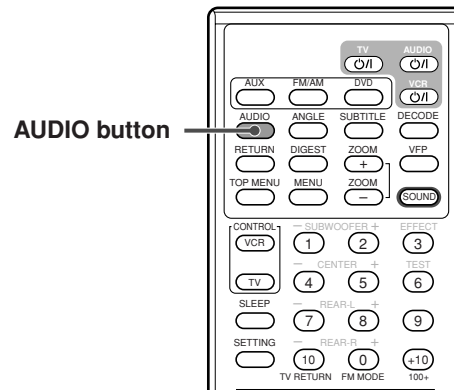


### ■ During playback

#### 1 Press AUDIO.

The following pop-up window appears on the TV.

Example: "ST" (stereo) is selected out of 3 audio channels recorded.

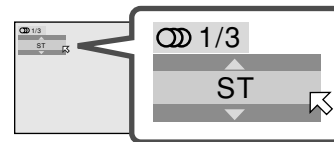

#### 2 Press AUDIO repeatedly to select the desired audio channel.

Each time you press the button, the audio channels change.

Example for VCD:

⇒ ST ⇒ L ⇒ R ⇒ (back to the beginning)

- **ST:** To listen to normal stereo playback.
- **L:** To listen to the L (left) audio channel.
- **R:** To listen to the R (right) audio channel.


Example for SVCD:

⇒ ST 1 ⇒ ST 2 ⇒ L 1 ⇒ R 1 ⇒ L 2 ⇒ R 2 ⇒ (back to the beginning)

- **ST 1/ST 2:** To listen to normal stereo playback of ST 1 or 2 channel.
- **L 1/L 2:** To listen to the L (left) 1 or 2 audio channel.
- **R 1/R 2:** To listen to the R (right) 1 or 2 audio channel.

The pop-up window goes off if no operation is done for about 5 seconds.

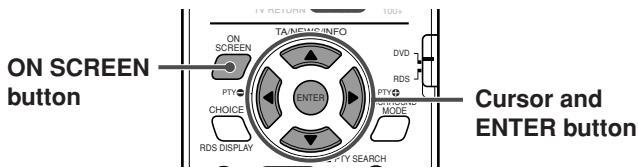

## Using the on-screen bar:



### ■ During playback

 
- 1 Press ON SCREEN twice.

The on-screen bar appears on the TV.

- 2 Press Cursor ►/◄ to move  to  in the on-screen bar, then press ENTER.

The following pop-up window appears under the on-screen bar.

Example: "ST" (stereo) is selected out of 3 audio channels recorded.



- 3 Press Cursor ▼/▲ to select the desired audio channel(s).

Each time you press the button, the audio channels change.

- 4 Press ENTER.

The pop-up window goes off.

### To turn off the on-screen bar

Press ON SCREEN.


## Playing from a specified position on a disc

You can start playing a title, chapter, or track you specify. You can also play a disc from the specified time.

### Locating a desired chapter from the on-screen bar

DVD

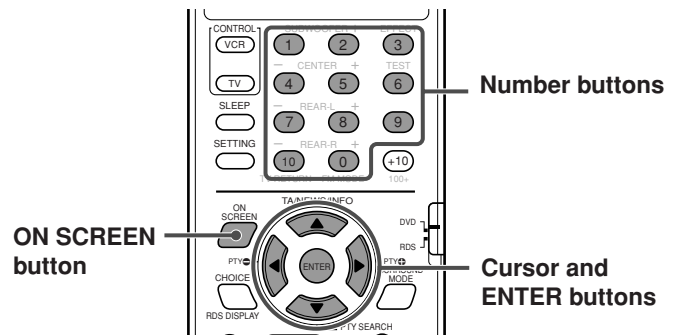

When playing back a DVD disc, you can locate the chapter number to be played from the on-screen bar.




### ■ During playback

 - 1 Press ON SCREEN twice.

The on-screen bar appears on the TV.

- 2 Press Cursor ►/◄ to move  to  in the on-screen bar, then press ENTER.

The following pop-up window appears under the on-screen bar.



- 3 Press Number buttons (0-10) to enter the desired chapter number.

Example:

To select chapter number 8: Press 8.

To select chapter number 10: Press 10.

To select chapter number 37: Press 3 then 7.

### To correct a mis-entry

Repeat step 3 until the correct number appears in the pop-up window.

- 4 Press ENTER.

The system starts playback from the selected chapter.

### To turn off the on-screen bar

Press ON SCREEN.

### NOTES:


- The +10 button is not used in this function.
- You can select up to the 99th chapter.

# Advanced operations

## Locating a desired position by specifying the time



You can start playing at your desired position by specifying the elapsed playing time from the beginning of the current title (for DVD Video), or from the beginning of the disc (for Video CD/SVCD/Audio CD).

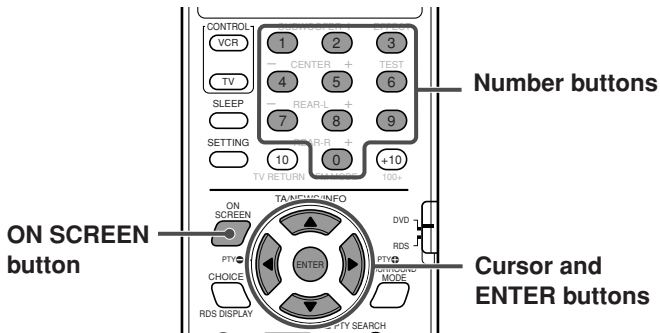

- For DVD: During playback
- For Video CD/SVCD: While stopped or during playback without PBC function.
- For Audio CD: During playback or while stopped

### 1 Press ON SCREEN twice.

The on-screen bar appears on the TV.

### 2 Press Cursor ►/◄ to move to in the on-screen bar, then press ENTER.

The following pop-up window appears under the on-screen bar.



### 3 Use Number buttons (0-9) to enter the time.

Example:

To play back from a point 2 (hours): 34 (minutes): 08 (seconds) elapsed



#### To correct a mis-entry

Press Cursor ◀ repeatedly until the wrong number is erased, then press Number buttons to enter the correct number.

### 4 Press ENTER.

The system starts playback from the specified time.

#### To turn off the on-screen bar

Press ON SCREEN.


#### NOTES:

- You can also use the 10 button to enter "0."
- The +10 button is not used in this function.
- You can specify the time in hours/minutes/seconds for DVD, and in minutes/seconds for Video CD/SVCD/Audio CD.

## Locating a desired scene from the digest display



The system can display the opening scene of each title or chapter on a DVD or each track of a Video CD/SVCD. You can select a desired title or track from the opening scenes shown on the TV screen.

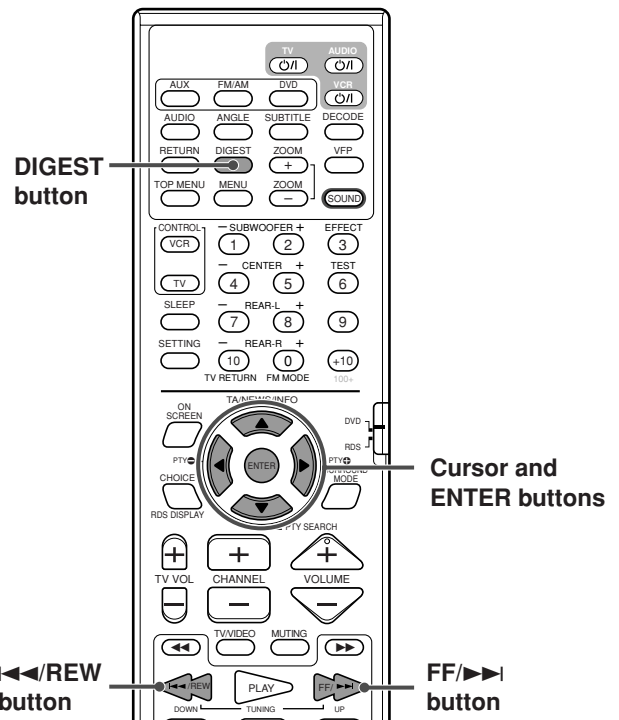

- For DVD: While stopped or during playback
- For Video CD/SVCD: While stopped or during playback without PBC function.

### 1 Press DIGEST.

Up to 9 opening scenes are displayed.

This scene is selected.



- **While a DVD is stopped:**

The opening scene of each title appears on the TV screen .

- **During DVD playback:**

The opening scene of each chapter in the current title appears on the TV screen.

- **When a Video CD or SVCD is loaded:**

The opening scene of each track appears on the TV screen.

## 2 Press Cursor ◀/▶/▲/▼ to move to the desired scene.

- If there are more than 9 scenes, the digest screen will have more than one page.


### To show other pages of the digest screen

Press ▶▶, to display the next page.

Press ◀◀, to display the previous page.

OR

To display the previous page, press Cursor ◀/▶/▲/▼ to select the left top scene, then press Cursor ◀.

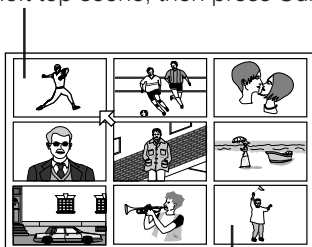

To display the next page, press Cursor ◀/▶/▲/▼ to select the right bottom scene, then press Cursor ▶.

## 3 Press ENTER.

The system starts playback from the selected scene.


### NOTE:

With some discs, depending on the contents, it may take some time before all the scenes appear on the TV screen.

## Special picture playback

This system provides special picture playback functions including frame-by-frame, strobe, slow-motion and zoom.

### Frame-by-frame playback

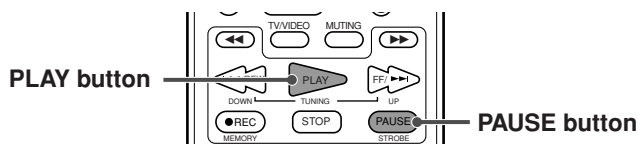

#### ■ During playback

Press PAUSE repeatedly.

Each time you press the button, the still picture advances to the next frame.

 
#### To return to normal playback

Press PLAY (or ▶ on the center unit).

### NOTE:

You can perform the above operation using  on the center unit.

### Showing continuous still pictures



#### ■ During playback

1 Press STROBE (PAUSE) at the point you want to view as continuous pictures.

Playback pauses.


2 Press and hold STROBE (PAUSE) for more than 1 second.

The same 9 frames (still pictures) appear on the TV screen.

You can advance the frames one by one in the following step.

3 Press STROBE (PAUSE) once.

The picture in the middle on the top row shows an advanced frame from the one on the left.

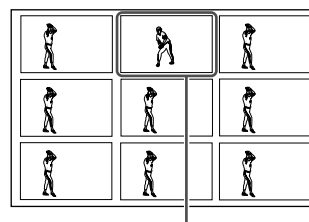

Advanced frame

Each press of STROBE (PAUSE) advances the frame one by one.

Pressing PLAY instead of STROBE (PAUSE) advances each frame in normal playback speed with a time delay over the whole 9 frames. (The sound is muted.)

**TO BE CONTINUED ON THE NEXT PAGE**



# Advanced operations


## To return to the normal screen

Press and hold STROBE (PAUSE) for more than 1 second.

### NOTES:

- If you press and hold STROBE (PAUSE) for more than 1 second during playback, 9 still pictures also appear but they advance in normal playback speed with a time delay. (The sound is muted.)
- You can perform the above operation using **II** on the center unit.

## Playing back in slow-motion

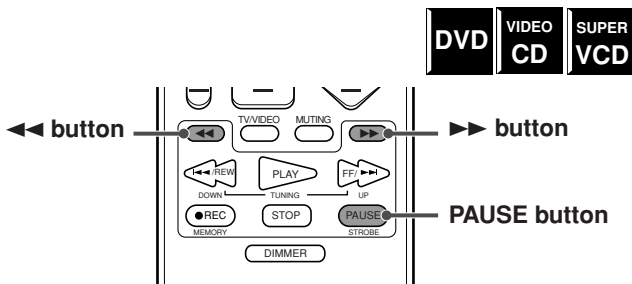

### ■ During playback

- 1 Press PAUSE at the point where you want to start playback in slow-motion.

The system pauses playback.

- 2 Press **▶▶** or **◀◀**.

- To play back in forward slow-motion, press **▶▶**.
- To play back in reverse slow-motion, press **◀◀**.

Each time you press the button, the playback speed changes as follows.

Forward:

**▶▶ 1/32** ⇒ **▶▶ 1/16** ⇒ **▶▶ 1/8** ⇒ **▶▶ 1/4**  
 ⇒ **▶▶ 1/2**

Reverse:

**◀◀ 1/32** ⇒ **◀◀ 1/16** ⇒ **◀◀ 1/8** ⇒ **◀◀ 1/4**  
 ⇒ **◀◀ 1/2**

### To pause slow-motion playback

Press PAUSE.


### To return to normal playback

Press PLAY.

### NOTES:

- You cannot listen to the sound during slow-motion playback.
- Reverse slow-motion playback is not possible for Video CDs and SVCDs.

## Zooming in/out

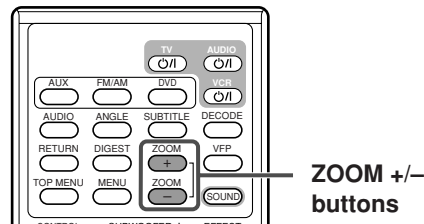

### ■ During playback or while paused

- 1 Press ZOOM + or -.


- To zooms in, press ZOOM +. Each time you press ZOOM +, the magnification changes as follows.

**x 2** ⇒ **x 4** ⇒ **x 8** ⇒ **x 16** ⇒ **x 32** ⇒ **x 64** ⇒ **x 128**  
 ⇒ **x 256** ⇒ **x 512** ⇒ **x 1024**

- To zooms out, press ZOOM -. Each time you press ZOOM -, the magnification changes as follows.


**x 1/2** ⇒ **x 1/4** ⇒ **x 1/8**

Example: when x4 zoom is selected.

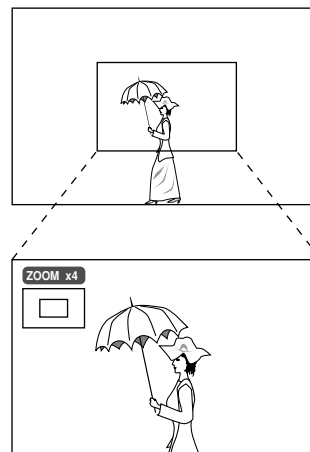

While zoomed in, the current magnification and the zoomed-in position of the scene appears at the left top of the screen. (While zoomed out, only the current magnification appears.)

- 2 While zoomed in, press Cursor **◀/▶/▲/▼** to move the zoomed-in position.

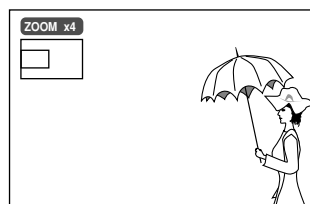

### To return to normal playback

Press ENTER.

### NOTES:

- While zoomed in, the picture may look coarse.
- While zoomed out, Cursor **◀/▶/▲/▼** do not work.




## Changing the VFP setting



The VFP (Video Fine Processor) function enables you to adjust the picture character according to the type of programming, picture tone or personal preferences.

### Before you start, remember...

There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

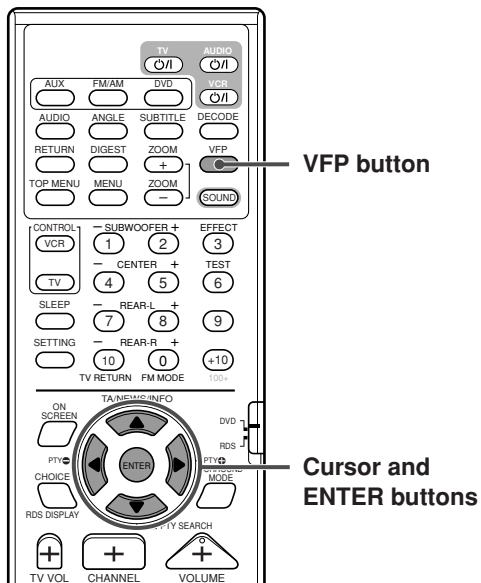


### During playback

#### 1 Press VFP.

The current VFP settings appear on the TV.

Example: When "NORMAL" is selected.

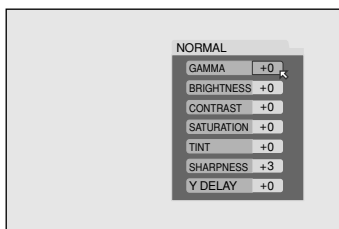

#### 2 Press Cursor ►/◀ repeatedly to select the VFP mode.

Each time you press the button, the VFP mode changes as follows.

⇄ **NORMAL** ⇄ **CINEMA** ⇄ **USER 1** ⇄ **USER 2**  
⇄ (back to the beginning)


- **NORMAL:** Normally, select this.
- **CINEMA:** Suitable for a movie source.
- **USER 1 and USER 2:** You can adjust parameters that affect the appearance of picture and store the settings.

### NOTE:

You cannot adjust "NORMAL" and "CINEMA."

## To adjust USER 1 or USER 2

- 1 Press VFP, then press Cursor ►/◀ repeatedly to select "USER 1" or "USER 2."

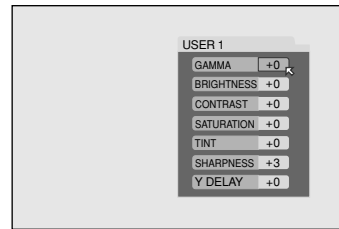


- 2 Press Cursor ▼/▲ repeatedly to select a parameter you want to adjust.

- Adjust gradually to show preferable appearance by confirming the picture.
- **GAMMA:** Controls the brightness of neutral tints while maintaining the brightness of dark and bright portions (-4 to +4).
- **BRIGHTNESS:** Controls the brightness of the screen (-16 to +16).
- **CONTRAST:** Controls the contrast of the screen (-16 to +16).
- **SATURATION:** Controls the color depth of the screen (-16 to +16).
- **TINT:** Controls the tint of the screen (-16 to +16).
- **SHARPNESS:** Controls the sharpness of the screen (+0 to +3).
- **Y DELAY:** Controls the color gap of the screen (-2 to +2).

- 3 Press ENTER.

VFP menu disappears, and the following pop-up window appears on the TV.

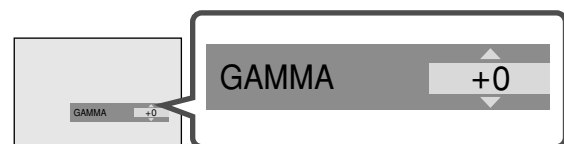

- 4 Press Cursor ▲/▼ repeatedly to change the setting.

- 5 Press ENTER.

The current VFP settings appear again.

- 6 Repeat steps 2-5 to adjust other parameters.

### To return to the normal screen

Press VFP.

### To activate your setting

Press VFP, then press Cursor ►/◀ repeatedly to select "USER 1" or "USER 2."

### NOTE:

The VFP settings disappear if no operations are done for more than about 10 seconds.

# Advanced operations

## Changing the track order


You can play tracks on a Video CD, SVCD or Audio CD in the desired order or in random order.

### Playing back in the desired order



You can play up to 99 tracks in desired order.

- You may program the same tracks more than once.

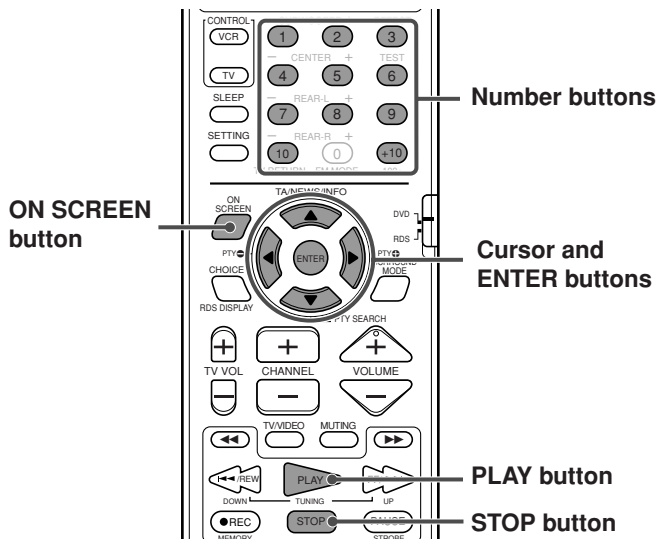

#### ■ While stopped


- 1 Press ON SCREEN twice.

The on-screen bar appears on the TV.

- 2 Press Cursor  $\blacktriangleright$ / $\blacktriangleleft$  to move  $\text{⏏}$  to **PROG.** in the on-screen bar, then press ENTER.

The program menu appears on the TV.

- 10 steps appear at a time.

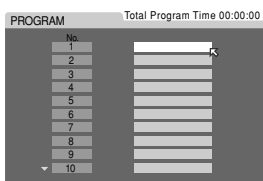

- 3 Press Number buttons (1-10, +10) to enter a track number you want to program.


Examples:

To select 3, press 3.

To select 14, press +10 then 4.

To select 40, press +10, +10, +10 then 10.

- The total program time is shown on the top of the program menu.

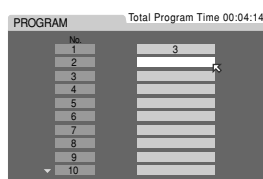

- 4 Repeat step 3 to program the next steps.

- Each time you enter a track number in the step at the bottom of the program menu, the next steps appear.

#### To erase a step

Press Cursor  $\blacktriangleup$ / $\blacktriangledown$  to move  $\text{⏏}$  to the desired step, then press STOP.

To program the next steps again, press Cursor  $\blacktriangledown$  repeatedly to move  $\text{⏏}$  to the blank step, then repeat step 3.

- 5 Press PLAY.

When playing a VCD or SVCD, the program menu goes off. Playback starts in the programmed order.

#### To stop the program playback

Press STOP.

When playing a VCD or SVCD, the program menu resumes.

- To edit your program, repeat steps 3 and 4.

#### To clear all steps and quit the program playback

When the program playback is stopped, press ON SCREEN to turn off the program menu (the on-screen bar appears), then press STOP.

All steps are cleared and the system quits the program playback.

The total program time indication on the display window returns to normal indication.


#### To turn off the on-screen bar

Press ON SCREEN.

#### NOTE:

When all of the programmed tracks have been played, the program playback stops.

### Playing back tracks in random order

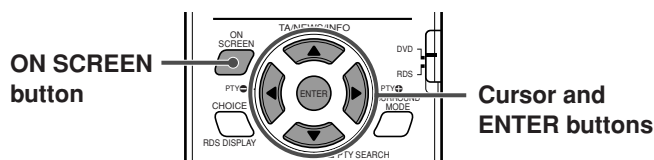

#### ■ While stopped

- 1 Press ON SCREEN twice.

The on-screen bar appears on the TV.

- 2 Press Cursor  $\blacktriangleright$ / $\blacktriangleleft$  to move  $\text{⏏}$  to **RND.** in the on-screen bar, then press ENTER.

Playback starts in random order.

#### To turn off the on-screen bar

Press ON SCREEN.

#### To quit random playback

Press STOP. Playback stops and random playback mode is canceled.


#### NOTES:

- When all tracks have been played once, random play ends.
- The same track will not be played more than once during random play.
- During the random playback, you can skip back to the beginning of the current track by pressing  $\blacktriangleleft$ /REW, but cannot skip back to the tracks that have been played.
- During the random playback, pressing ENTER when **RND.** in the on-screen bar is selected quits random playback mode and continues playback in the normal order.

## Repeat playback

You can repeat playback of the current title or chapter (for DVD Video) or track (for Video CD/SVCD/Audio CD). You can also repeat playback of a desired part.

### Repeating a current title, chapter, or all tracks

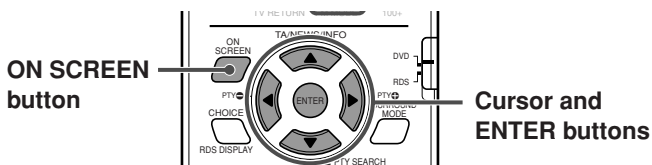

- For DVD/Audio CD: During playback or while stopped
- For Video CD/SVCD: During playback or while stopped without PBC function

- 1 Press ON SCREEN twice.  
The on-screen bar appears on the TV.
- 2 Press Cursor ▶/◀ to move to in the on-screen bar, then press ENTER.

The following pop-up window appears under the on-screen bar.



- 3 Press Cursor ▼/▲ repeatedly to select the repeat mode.

- You can select the repeat modes as follows.

#### ■ For DVD

⇄ CHAPTER ⇄ TITLE ⇄ A-B ⇄ OFF  
⇄ (back to the beginning)

#### ■ For Video CD/SVCD/Audio CD

⇄ TRACK ⇄ ALL ⇄ A-B ⇄ OFF  
⇄ (back to the beginning)

- **CHAPTER:** The current chapter is played repeatedly.
- **TITLE:** The current title is played repeatedly.
- **TRACK:** The current track is played repeatedly.
- **ALL:** The all tracks of the disc (or of the program) are played repeatedly.
- **A-B:** The selected portion is played repeatedly.
- **OFF:** Select this to cancel the repeat mode.

#### NOTES:

- If you select "ALL" during random playback, the all tracks of the disc are played repeatedly in random order.
- "A-B" cannot be selected during the program and random playback.
- "A-B" cannot be selected while stopped.

- 4 Press ENTER.

#### To turn off the on-screen bar

Press ON SCREEN.


#### To cancel the repeat playback

Repeat from step 1, select "OFF" in step 3, then press ENTER.

### Repeating a desired part



You can repeat playback of a desired part by specifying the beginning (point A) and the ending (point B).

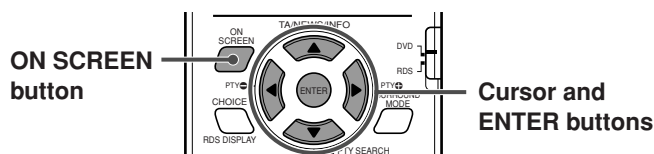

- During playback

- 1 Press ON SCREEN twice.  
The on-screen bar appears on the TV.
- 2 Press Cursor ▶/◀ to move to in the on-screen bar, then press ENTER.

The following pop-up window appears under the on-screen bar.



- 3 Press Cursor ▼/▲ repeatedly to select "A-B."
- 4 Press ENTER at the beginning of the part you want to repeat (point A).

The following display appears in the on-screen bar.



- 5 Press ENTER at the end of the part you want to repeat (point B).

A-B repeat playback starts. The selected part of the disc (between point A and B) is played repeatedly.



#### To turn off the on-screen bar

Press ON SCREEN.

#### To cancel the A-B repeat playback


Repeat from step 1, select "OFF" in step 3, then press ENTER.

#### NOTE:

While playing back a DVD disc, A-B repeat playback is possible only within the same title.

# MP3 disc playback

 
This system can play MP3 files recorded on a CD-R or CD-RW (MP3 disc).

- Before performing the operation in this section from the remote control, press DVD to use the remote control for the MP3 disc operations.
- Turn on your TV, and select the correct input mode on the TV.
- If “” appears on the TV screen when pressing a button, the disc cannot accept an operation you have tried to do.

## IMPORTANT:

When using the remote control, check to see if its remote control mode selector is set to the correct position:

Set it to “DVD” to use other than RDS.




## ■ What is MP3?

MP3 is an abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. MP3 is simply a file format with a data compression. By using MP3 format, one CD-R or CD-RW can contain 10 times as much data volume as a regular CD can.

## ■ Disc structure

On an MP3 disc, each song (material) is recorded as a file. Files are usually grouped into a folder. Folders can also include other folders, creating hierarchical folder layers.

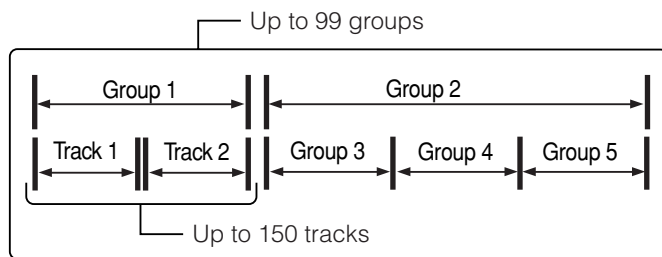

This system simplifies the hierarchical construction of a disc and manages files and folders by “tracks” and “groups.”

This system can recognize up to 150 tracks per group, and up to 99 groups per disc (up to 14,850 tracks). The system ignores those exceeding the maximum numbers and cannot play them.

- If there is any type of files other than MP3 files in a folder, those files are also counted in the total number of 150.

## ■ NOTES for MP3 disc

- MP3 discs (either CD-R or CD-RW) require a longer readout time. (It differs due to the complexity of the directory/file configuration.)
- When making an MP3 disc, select ISO 9660 Level 1 or Level 2 as the disc format.
- This system supports “multi-session” discs (up to 5 sessions).
- This system can not play “packet write” discs.
- The system can play MP3 files only with the following file extensions: “.MP3,” “.Mp3,” “.mP3,” and “.mp3.”
- ID3\* tags cannot be shown on the display.
  - \* An MP3 file can contain file information called “ID3 Tag” where its album name, performer, track title, etc. are recorded. There are two versions—ID3v1 (ID3 Tag version 1) and ID3v2 (ID3 Tag version 2).
- We recommended to record each song (material) at a samplerate of 44.1 kHz and at a data transfer rate of 128 kbps.
- If both MP3 files and JPEG files are recorded on a disc, set the MP3/JPEG setting in the PICTURE menu to “MP3.” (See page 62.)
- Some MP3 discs may not be played back because of their disc characteristics or recording conditions.

## Basic operations


### Insert an MP3 disc.

Playback starts.

The MP3 control display appears on the TV. (See page 56.)

When all tracks in a group have been played, the system plays tracks in the next group.

You can perform the following operations.

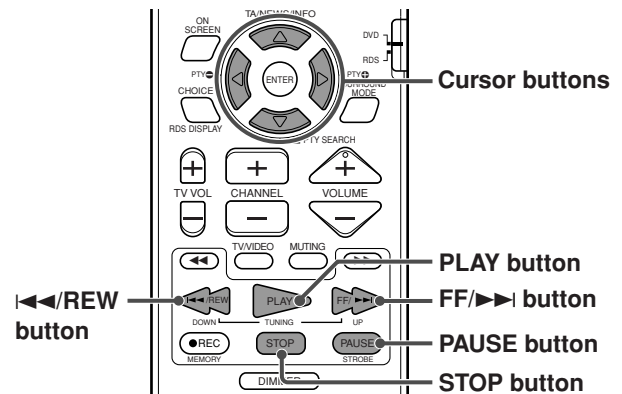

### ■ To stop playback temporarily

Press PAUSE (or  on the center unit).

### ■ To start playback again

Press PLAY (or  on the center unit).



### ■ To skip tracks forward

Press FF/▶▶ (or  on the center unit) as many times as required.

### ■ To skip to the beginning of the current track

Press /REW (or  on the center unit) ONCE.

### ■ To skip tracks backward

Press /REW or Cursor ▲ (or  on the center unit) as many times as required.

### ■ To skip groups

Press Cursor ▶/◀.

To skip groups forward: Press Cursor ▶ repeatedly.

To skip groups backward: Press Cursor ◀ repeatedly.

### ■ To stop playback completely

Press STOP (or  on the center unit).


## NOTES:

- The following functions are not available to MP3 disc playback: Program playback, random playback, repeat playback, fast-forward/reverse playback, on-screen bar, and choice menus
- Some tracks on an MP3 disc are skipped and may not be played back normally.

# Operations through the MP3 control display

You can search and play the desired groups and tracks through the MP3 control display.

## MP3 control display

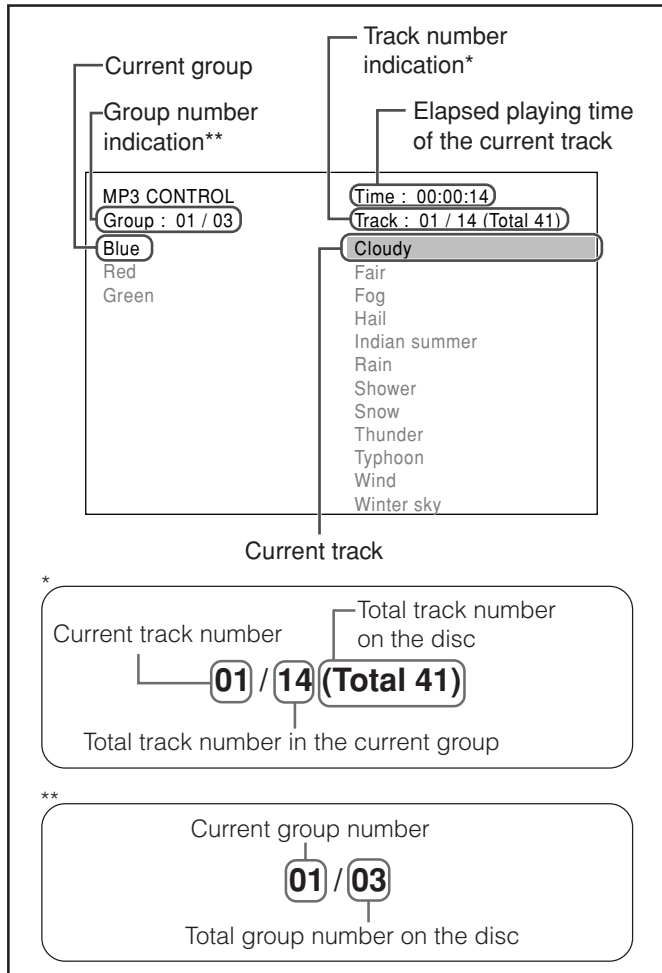


The elapsed playing time is shown only during playback.

### NOTES:


You can also check the playback information on the display window.

Ex.:

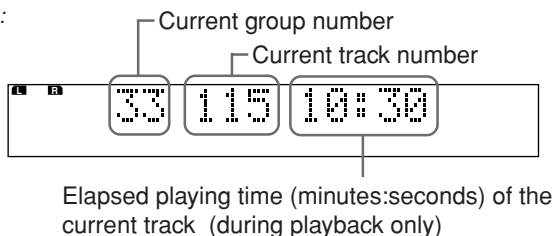

- Some group and track names may not be displayed correctly because of the recording condition.
- The order of groups and tracks on a MP3 disc may be displayed differently from the order displayed on your personal computer.

## Operations

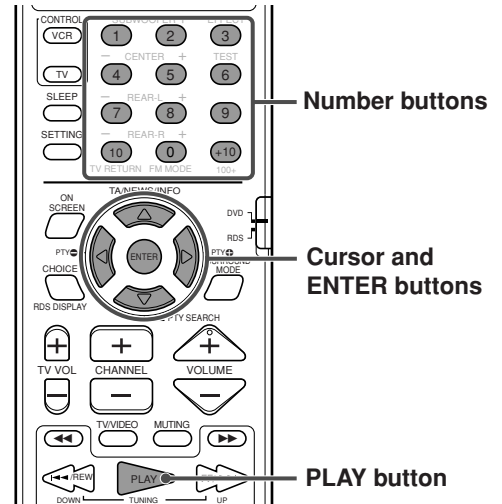

### To select groups (or skip groups during playback)

Press Cursor **▶/◀**.

To select the next groups (or skip groups forward):

Press Cursor **▶** repeatedly.

To select the previous groups (or skip groups backward):

Press Cursor **◀** repeatedly.

### To select tracks (or skip tracks during playback)

Press Cursor **▼/▲**.

To select the next tracks (or skip tracks forward):

Press Cursor **▼** repeatedly.

To select the previous tracks (or skip tracks backward):

Press Cursor **▲** repeatedly.

### NOTE:

Groups and tracks are displayed up to 12 each at once. Pressing Cursor **▶/◀/▼/▲** repeatedly shows the hidden groups and tracks one by one.

### To start playback of the selected track

Press ENTER or PLAY.

### To start playback by specifying the track number

Press Number buttons (0-10, +10) to enter the track number.

Example:


- To select 3, press 3.
- To select 14, press +10 then 4.
- To select 24, press +10, +10, then 4.
- To select 110, press +10 ten times, then 10.

The entered number appears in the track number indication, then playback starts from the track you have specified.



# JPEG disc playback

 
This system can play JPEG files such as the digital photographs recorded on a CD-R and CD-RW (JPEG disc).

- Before performing the operation in this section from the remote control, press DVD to use the remote control for the JPEG disc operations.
- Turn on your TV, and select the correct input mode on the TV.
- If “” appears on the TV screen when pressing a button, the disc cannot accept an operation you have tried to do.

## IMPORTANT:

When using the remote control, check to see if its remote control mode selector is set to the correct position:

Set it to “DVD” to use other than RDS.




## What is JPEG?

A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

## Disc structure

On a JPEG disc, each still picture (material) is recorded as a file. Files are usually grouped into a folder. Folders can also include another folders, creating hierarchical folder layers.

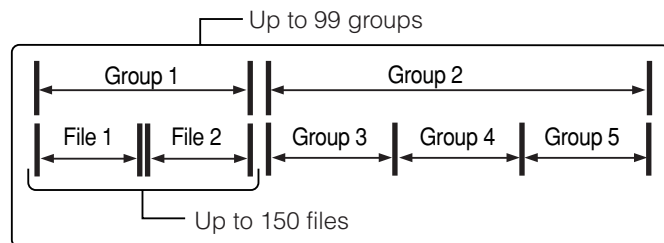

This system simplifies the hierarchical construction of a disc and manages folders by “groups.”

This system can recognize up to 150 files per group, and up to 99 groups per disc (up to 14,850 files). The system ignores those exceeding the maximum numbers and cannot play them.

- If there is any type of files other than JPEG files in a folder, those files are also counted in the total number of 150.

## NOTES for JPEG disc

- JPEG discs (either CD-R or CD-RW) require a longer readout time. (It differs due to the complexity of the directory/file configuration.)
- When making a JPEG disc, select ISO 9660 Level 1 or Level 2 as the disc format.
- This system supports “multi-session” discs (up to 5 sessions).
- This system cannot play “packet write” discs.
- The system can play JPEG files only with the following file extensions: “.jpg,” “.jpeg,” “.JPG,” “.JPEG” and any uppercase and lowercase combination (such as “.Jpg”).
- We recommend to record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a longer time to be shown.)
- If both JPEG files and MP3 files are recorded on a disc, set the MP3/JPEG setting in the PICTURE menu to “JPEG.” (See page 62.)
- This system can play only baseline JPEG files\*. Progressive JPEG files\* or lossless JPEG files\* cannot be played.
- Some JPEG discs may not be played back because of their disc characteristics or recording conditions.

\* • Baseline JPEG format: Used for digital cameras, web, etc.  
 • Progressive JPEG format: Used for web.  
 • Lossless JPEG format: An old type and rarely used now.

## Slide-show


You can see the still pictures one after another automatically in the slide-show playback.

### Insert a JPEG disc.

The slide-show starts.

Each file (still picture) is shown on the TV for about 3 seconds, then changed to the next file one after another. When all files in a group have been played, the system play files in the next group.

You can perform the following operations during the slide-show playback.

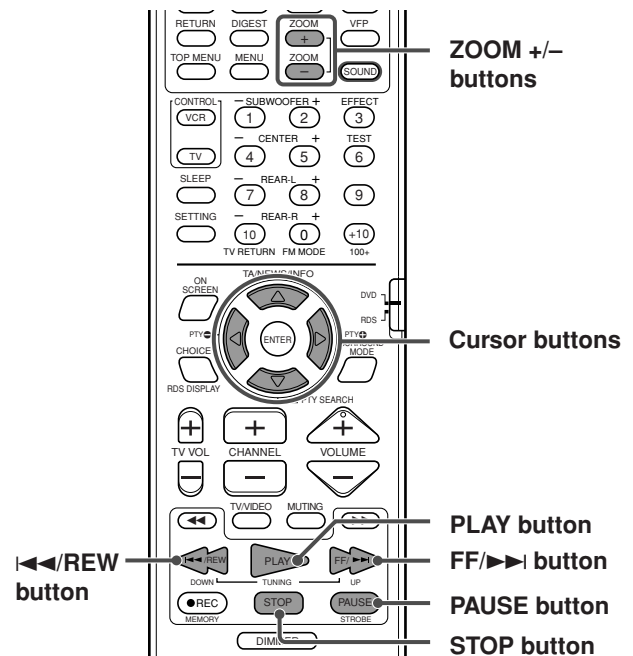

- You can perform the following operations after the still picture has been shown on the TV thoroughly.

### To stop the slide-show playback temporarily

Press PAUSE (or  on the center unit).

### To resume the slide-show playback

Press PLAY (or  on the center unit).




### To zoom in or out a still picture

Press ZOOM + or – while the slide-show is paused. (See also page 51.)

### To skip files forward

Press FF/FF or Cursor  (or  on the center unit) as many times as required.

### To skip files backward

Press /REW or Cursor  (or  on the center unit) as many times as required.

## ■ To stop the slide-show playback completely

Press **STOP** (or ■ on the center unit).

The JPEG control display appears on the TV screen.

- For how to operate through the JPEG control display, see "Operations through the JPEG control display."


### NOTES:

- The following functions are not available to JPEG disc playback:  
Program playback, random playback, repeat playback, fast-forward/reverse playback, on-screen bar, and choice menus
- If a black screen continuously appears in the slide-show playback:  
The file currently played may be non-baseline JPEG file. In this case, select a playable file (a baseline JPEG file) again. (e.g., pressing **STOP** or **MENU** to open the JPEG control display, etc.)  
Note that it may take a long time to select another file.
- Some files on a JPEG disc may be played back distortedly.

## Operations through the JPEG control display

You can search and show the desired groups and files through the JPEG control display.


### ■ JPEG control display

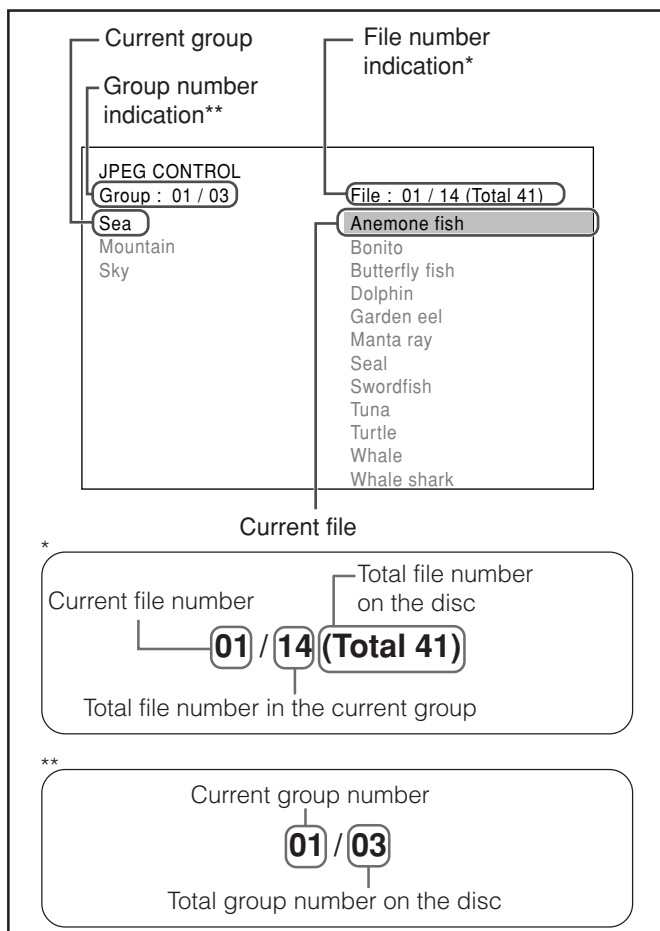

### NOTES:

- You can check only the current file number on the display window.
- Some group and file names may not be displayed correctly because of the recording condition.
- The order of groups and files on a JPEG disc may be displayed differently from the order displayed on your personal computer.

### ■ Operations

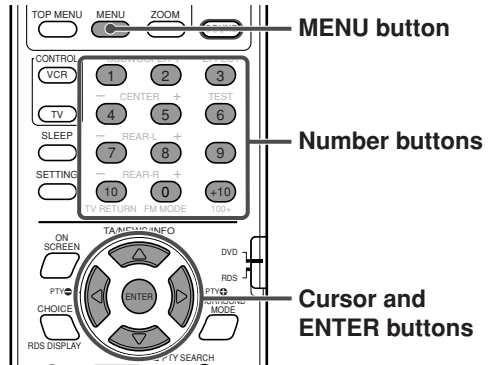

#### • To select groups (or skip groups during the slide-show playback)

Press **Cursor** ▶/◀.

To select the next groups (or skip groups forward):

Press **Cursor** ▶ repeatedly.

To select the previous groups (or skip groups backward):

Press **Cursor** ◀ repeatedly.

#### • To select files (or skip files during the slide-show playback)

Press **Cursor** ▼/▲.

To select the next files (or skip files forward):

Press **Cursor** ▼ repeatedly.

To select the previous files (or skip files backward):

Press **Cursor** ▲ repeatedly.

### NOTE:

Groups and files are displayed up to 12 each at once. Pressing **Cursor** ▶/◀/▼/▲ repeatedly shows the hidden groups and files one by one.

#### • To show the selected file only

Press **ENTER**.

- When the still picture has been shown on the TV screen thoroughly, you can zoom in or out the still picture. See page 57.
- If you press **PLAY** (or ▶ on the center unit), the slide-show playback starts from the selected file.

#### • To start the slide-show playback by specifying the file number

Press **Number buttons** (0-10, +10) to enter the file number.

Example:

- To select 3, press 3.
- To select 14, press +10 then 4.
- To select 24, press +10, +10, then 4.
- To select 110, press +10 ten times, then 10.

The selected file number appears in the file number indication, then the slide-show playback starts from the file you have specified.

#### • To return to the JPEG control display

Press **MENU**.

 
# Setting DVD preferences

You can adjust the initial setting of DVD player according to your preference or needs through the choice menus shown on the TV screen. Before performing the operations in this section, press DVD on the remote control to change the source to DVD.

- You can also adjust the initial setting through the choice menus when selecting AUX or AUX DIGITAL as the source (except when an MP3 disc or a JPEG disc is inserted). In this case, the adjustment of front speakers (L/R BALANCE, BASS, and TREBLE: see page 63) and the adjustment of speaker level (see page 65) take effect for AUX or AUX DIGITAL.

## IMPORTANT:

When using the remote control, check to see if its remote control mode selector is set to the correct position:  
**Set it to "DVD" to use other than RDS.**



## Using the choice menus

You can adjust the initial setting of DVD playback according to your preference or needs through five choice menus.


- You need to turn on your TV and select the correct input mode on the TV.
- You can only use the remote control for the choice menu operations.
- You can change the language used in the choice menus. See page 61.
- You cannot show the choice menus when an MP3 disc or a JPEG disc is inserted.

## Choice menus

### LANGUAGE menu (see page 61)


You can select the initial languages for the disc menu, audio, and subtitle.

You can also select the language used on the TV screen while operating this system.

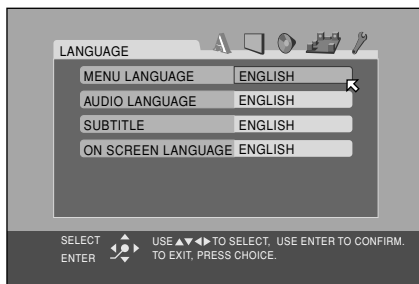


### PICTURE menu (see page 62)

You can select the desired options concerning a picture or monitor screen.

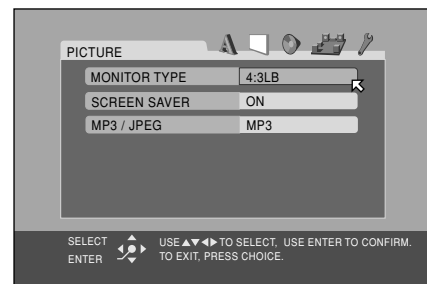

### AUDIO menu (see page 63)


You can adjust the sound settings of this system through this menu.

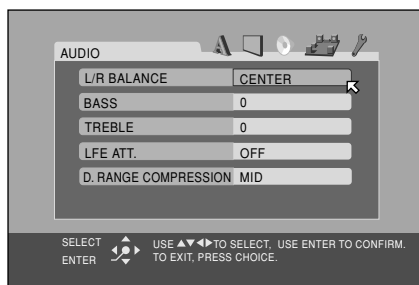

### SPK. SETTING menu (see page 64)


You can make the speaker settings according to the size and layout of your speakers.

You can also adjust the output level of the subwoofer, center speaker, and rear speakers.

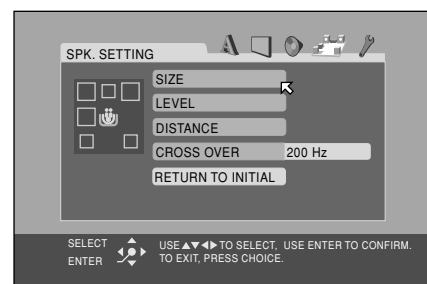


### OTHERS menu (see page 66)

You can change the settings for some of the functions. To set Parental Lock, also use this menu.

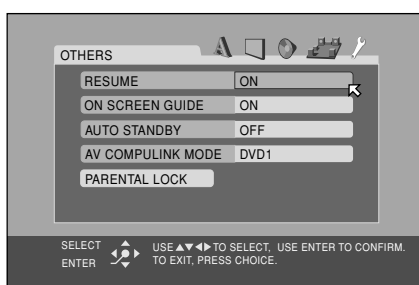




## Basic procedure through the choice menus

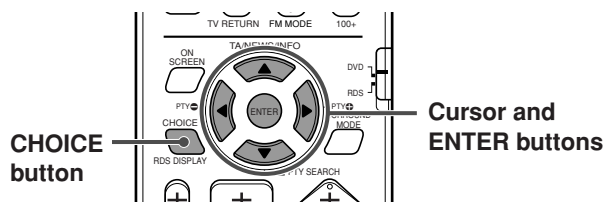

### 1 Press CHOICE.


The LANGUAGE menu appears on the TV.

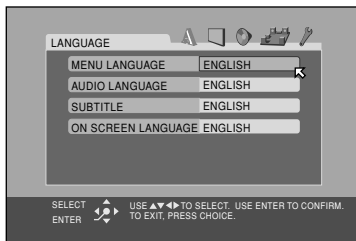

### 2 Press Cursor ▶/◀ repeatedly to display one of the choice menus—LANGUAGE, PICTURE, AUDIO, SPK. SETTING, or OTHERS.


Each time you press the button, the choice menus change.

Example: When the PICTURE menu is selected.

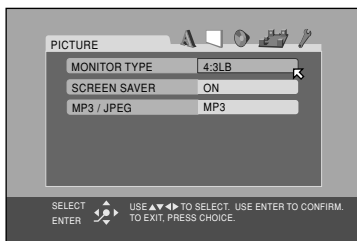


### 3 Press Cursor ▼/▲ repeatedly to move to the item you want to set up.

Example: When "MP3/JPEG" is selected.

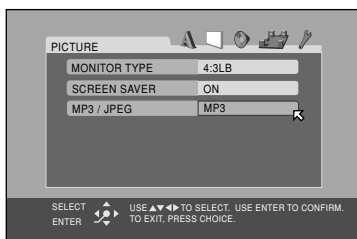


### 4 Press ENTER.

The pop-up window, listing the selectable options, appears on the choice menu.

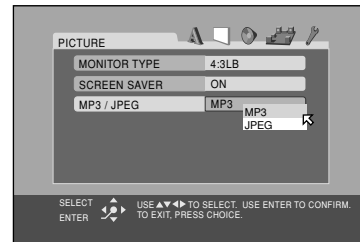


### 5 Press Cursor ▲/▼ repeatedly to select the desired option.

Example: When "JPEG" is selected.

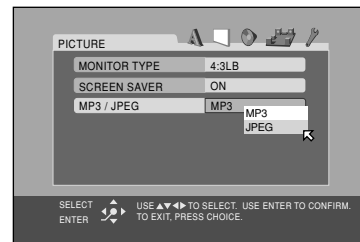

### 6 Press ENTER.

Your choice is stored.

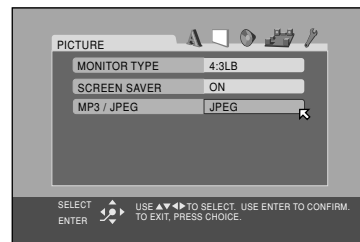

#### To set other items on the same choice menu

Repeat steps 3 to 6.

#### To move to another choice menu

Press Cursor ◀▶ repeatedly to select a choice menu you want to set up.

#### To return to the normal screen


Press CHOICE.

#### NOTE:

Some items in the choice menus consist of sub-menus to set up. Selecting them and pressing ENTER makes its sub-menu appear on the TV. You can set them using Cursor ◀▶/▲▼ and ENTER (as explained in this basic procedure).

# Setting DVD preferences

## LANGUAGE menu

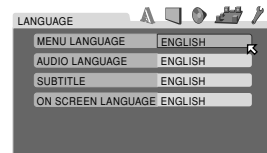

### NOTE:


You can select "MENU LANGUAGE," "AUDIO LANGUAGE," and "SUBTITLE" only while playback is stopped.




Items	Contents and guidelines
<p><b>MENU LANGUAGE</b> Some DVDs have their own menus in multiple languages.</p> <ul style="list-style-type: none"> <li>Select the initial language shown in the menus.</li> </ul> <p><b>AUDIO LANGUAGE</b> Some DVDs have multiple audio languages.</p> <ul style="list-style-type: none"> <li>Select the initial audio language.</li> </ul>	<p><b>ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, and language codes from AA to ZU</b> (see below)</p> <p>Note: when the language you have selected is not recorded on a disc, the original language is automatically used as the initial language.</p>
<p><b>SUBTITLE</b> Some DVDs have multiple subtitle languages.</p> <ul style="list-style-type: none"> <li>Select the initial subtitle language.</li> </ul>	<p><b>OFF</b> (no indication of subtitles), <b>ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, and language codes from AA to ZU</b> (see below)</p> <p>Note: when the language you have selected is not recorded on a disc, the original language is automatically used as the initial language.</p>
<p><b>ON SCREEN LANGUAGE</b> Select the language shown on the TV screen while operating this system.</p>	<p><b>ENGLISH, GERMAN, and FRENCH</b></p>

## The language codes list

AA	Afar	GL	Galician	ML	Malayalam	SO	Somali
AB	Abkhazian	GN	Guarani	MN	Mongolian	SQ	Albanian
AF	Afrikaans	GU	Gujarati	MO	Moldavian	SR	Serbian
AM	Ameharic	HA	Hausa	MR	Marathi	SS	Siswati
AR	Arabic	HI	Hindi	MS	Malay (MAY)	ST	Sesotho
AS	Assamese	HR	Croatian	MT	Maltese	SU	Sundanese
AY	Aymara	HU	Hungarian	MY	Burmese	SV	Swedish
AZ	Azerbaijani	HY	Armenian	NA	Nauru	SW	Swahili
BA	Bashkir	IA	Interlingua	NE	Nepali	TA	Tamil
BE	Byelorussian	IE	Interlingue	NL	Dutch	TE	Telugu
BG	Bulgarian	IK	Inupiak	NO	Norwegian	TG	Tajik
BH	Bihari	IN	Indonesian	OC	Occitan	TH	Thai
BI	Bislama	IS	Icelandic	OM	(Afan) Oromo	TI	Tigrinya
BN	Bengali, Bangla	IW	Hebrew	OR	Oriya	TK	Turkmen
BO	Tibetan	JI	Yiddish	PA	Panjabi	TL	Tagalog
BR	Breton	JW	Javanese	PL	Polish	TN	Setswana
CA	Catalan	KA	Georgian	PS	Pashto, Pushto	TO	Tonga
CO	Corsican	KK	Kazakh	PT	Portuguese	TR	Turkish
CS	Czech	KL	Greenlandic	QU	Quechua	TS	Tsonga
CY	Welsh	KM	Cambodian	RM	Rhaeto-Romance	TT	Tatar
DA	Danish	KN	Kannada	RN	Kirundi	TW	Twi
DZ	Bhutani	KO	Korean (KOR)	RO	Rumanian	UK	Ukrainian
EL	Greek	KS	Kashmiri	RU	Russian	UR	Urdu
EO	Esperanto	KU	Kurdish	RW	Kinyarwanda	UZ	Uzbek
ET	Estonian	KY	Kirghiz	SA	Sanskrit	VI	Vietnamese
EU	Basque	LA	Latin	SD	Sindhi	VO	Volapuk
FA	Persian	LN	Lingala	SG	Sangho	WO	Wolof
FI	Finnish	LO	Laothian	SH	Serbo-Croatian	XH	Xhosa
FJ	Fiji	LT	Lithuanian	SI	Singhalese	YO	Yoruba
FO	Faroese	LV	Latvian, Lettish	SK	Slovak	ZU	Zulu
FY	Frisian	MG	Malagasy	SL	Slovenian		
GA	Irish	MI	Maori	SM	Samoan		
GD	Scots Gaelic	MK	Macedonian	SN	Shona		
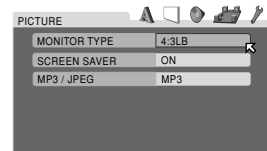
# PICTURE menu




Items	Contents and guidelines
<p><b>MONITOR TYPE</b> You can select the monitor type to match your TV when you play DVDs recorded in the picture's height/width ratio of 16:9.</p>	<ul style="list-style-type: none"> <li>• <b>16:9 NORMAL</b> (Wide television conversion) Select this when the aspect ratio of your TV is fixed to 16:9 (wide TV). The system automatically adjusts the screen width of the output signal correctly when playing back a picture whose aspect ratio is 4:3.</li> <li>• <b>16:9 AUTO</b> (Wide television conversion) Select this when the aspect ratio of your TV is 16:9 (wide TV).</li> <li>• <b>4:3 LB</b> (Letter Box conversion) Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.</li> <li>• <b>4:3 PS</b> (Pan Scan conversion) Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars do not appear, however, the left and right edges of the pictures will not be shown on the screen.</li> </ul> <div style="text-align: right;">  <p>Ex.: 16:9</p>  <p>Ex.: 4:3 LB</p>  <p>Ex.: 4:3 PS</p> </div>
<p><b>SCREEN SAVER</b> You can activate or deactivate the screen saver function. (See page 27.)</p>	<ul style="list-style-type: none"> <li>• <b>ON</b> The picture on the TV screen becomes dark.</li> <li>• <b>OFF</b> The screen saver function does not work.</li> </ul>
<p><b>MP3/JPEG</b> If both MP3 files and JPEG files are recorded on a disc, you can select which files to play.</p>	<ul style="list-style-type: none"> <li>• <b>MP3</b> The system plays MP3 files.</li> <li>• <b>JPEG</b> The system plays JPEG files.</li> </ul>

**NOTES:**

- Even if "4:3 PS" is selected, the screen size may become "4:3 LB" with some DVDs. This depends on how they are recorded.
- When you select "16:9 NORMAL" for a picture whose aspect ratio is 4:3, the picture slightly changes due to the process for converting the picture width.

# Setting DVD preferences

## AUDIO menu

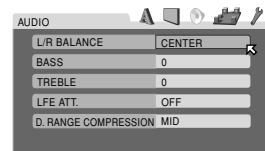

Items	Contents and guidelines
<p><b>L/R BALANCE</b> Adjust the balance between the left front speaker and right front speaker.</p>	<p><b>L -21 to L -1 ⇄ CENTER ⇄ R -1 to R -21</b> (by 1 step)</p> <ul style="list-style-type: none"> <li>• <b>CENTER</b> The outputs of the left and right front speakers are identical.</li> <li>• <b>L -21 to L -1 and R -1 to R -21</b> As the number increases, the output from one speaker becomes smaller than the other speaker's. (When you select "-21," you cannot output the sound from the speaker.)</li> </ul>
<p><b>BASS</b> Adjust the enhancement level for bass sound from the front speakers.</p>	<p>Within the range from -10 to +10 (by 2 step).</p>
<p><b>TREBLE</b> Adjust the enhancement level for treble sound from the front speakers.</p>	
<p><b>LFE ATT.</b> The Low Frequency Effect attenuator diminishes the distortion of the bass sound from the subwoofer while playing back a disc with Dolby Digital or DTS Digital Surround.</p>	<ul style="list-style-type: none"> <li>• <b>ON</b> Select this to diminish the distortion of the bass sound from the subwoofer.</li> <li>• <b>OFF</b> To cancel this function.</li> </ul>
<p><b>D. RANGE COMPRESSION</b> You can enjoy a powerful sound at night even at a low volume level when listening to the sound with Dolby Digital.</p>	<ul style="list-style-type: none"> <li>• <b>MAX</b> Select this when you want to apply the compression effect fully (useful at midnight).</li> <li>• <b>MID</b> Select this when you want to reduce the dynamic range a little.</li> <li>• <b>OFF</b> Select this when you want to enjoy surround with its full dynamic range (no effect applied).</li> </ul>


## SPK. SETTING menu



Items	Contents and guidelines
<b>SIZE</b>	Enters the SIZE sub-menu (the speaker size setting menu). (See below.)
<b>LEVEL</b>	Enters the LEVEL sub-menu (the speaker level setting menu). (See page 65.)
<b>DISTANCE</b>	Enters the DISTANCE sub-menu (the speaker distance setting menu). (See page 65.)
<b>CROSS OVER*</b> Small speakers cannot reproduce the bass sounds efficiently. If you use a small speaker in any position, this unit automatically reallocates the bass sound elements assigned to the small speaker to the large speakers. To use this function properly, set this crossover frequency level according to the size of the smallest speaker connected.	<ul style="list-style-type: none"> <li>• <b>200 Hz (Select this when using the supplied speakers.)</b> Select this when the cone speaker unit built in the smallest speaker connected is about 4 cm.</li> <li>• <b>150 Hz</b> Select this when the cone speaker unit built in the smallest speaker connected is about 6 cm.</li> <li>• <b>120 Hz</b> Select this when the cone speaker unit built in the smallest speaker connected is about 8 cm.</li> <li>• <b>100 Hz</b> Select this when the cone speaker unit built in the smallest speaker connected is about 10 cm.</li> <li>• <b>80 Hz</b> Select this when the cone speaker unit built in the smallest speaker connected is about 12 cm.</li> </ul>
<b>RETURN TO INITIAL</b>	Resets all speaker settings to the initial settings

\* If you have selected "LARGE" for all speakers in the SIZE menu, this function will not take effect.

## SIZE menu

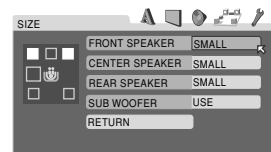

### CAUTION:

When using the supplied speakers, select "SMALL" for each. Selecting "LARGE" may damage the speakers.

### NOTE:

When "SMALL" is selected for the front speakers, you cannot select "LARGE" for the center speaker and rear speakers.

Items	Contents and guidelines
<b>FRONT SPEAKER</b> <b>CENTER SPEAKER</b> <b>REAR SPEAKER</b> Select the speaker size according to the size of your speakers. (You cannot select "NONE" for the front speakers.)	<ul style="list-style-type: none"> <li>• <b>LARGE</b> Select this when the cone speaker unit built in the speaker is larger than 12 cm.</li> <li>• <b>SMALL (Select this when using the supplied speakers.)</b> Select this when the cone speaker unit built in the speaker is smaller than 12 cm.</li> <li>• <b>NONE</b> Select this when the center speaker and/or rear speakers are not connected or not in use.</li> </ul>
<b>SUB WOOFER</b>	<b>USE</b> You cannot select this item.
<b>RETURN</b>	Returns to the SPK. SETTING menu.

# Setting DVD preferences

## LEVEL menu




**NOTE:**

When "NONE" is selected for the center speaker or rear speakers in the SIZE menu, you cannot enter the LEVEL menu. (See page 64.)

Items	Contents and guidelines
<b>CENTER SPEAKER*</b> <b>LEFT REAR SPEAKER*</b> <b>RIGHT REAR SPEAKER*</b> <b>SUB WOOFER</b> Adjust the output level of those speakers.	Within the range from -10 dB to +10 dB. (by 1 dB step)
<b>TEST TONE**</b>	Outputs the test tone.
<b>RETURN</b>	Returns to the SPK. SETTING menu.

- \* You cannot select "CENTER SPEAKER" when one of the DAP modes is selected as the surround mode. (See page 39.)
- \* You cannot select "CENTER SPEAKER," "LEFT REAR SPEAKER," and "RIGHT REAR SPEAKER" when the surround mode is off (stereo). (See page 39.)

## DISTANCE menu

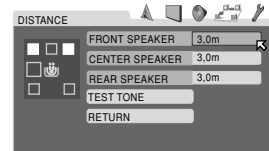


**NOTE:**

When "NONE" is selected for the center speaker and rear speakers in the SIZE menu, you cannot adjust the speaker distance of those speakers. (See page 64.)

Items	Contents and guidelines
<b>FRONT SPEAKER</b> <b>CENTER SPEAKER</b> <b>REAR SPEAKER</b> Select the distance from the listening position.	Within the range from 0.3 m to 9.0 m. (by 0.3 m step)
<b>TEST TONE**</b>	Outputs the test tone.
<b>RETURN</b>	Returns to the SPK. SETTING menu.

**Example:**

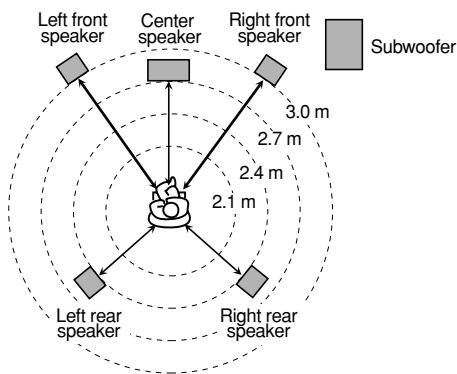

In this case, set the distance of each speaker as follows:

- The distance of the front speakers: 3.0 m
- The distance of the center speaker: 2.7 m
- The distance of the rear speakers: 2.4 m


\*\* The test tone comes out of all the activated speakers in the following sequence.

⇒ **Left front speaker** ⇒ **Center speaker** ⇒ **Right front speaker** ⇒ **Right rear speaker** ⇒ **Left rear speaker**  
 ⇒ (back to the beginning)

**NOTE:**

When "NONE" is selected for the center speaker and rear speakers in the SIZE menu, the test tone does not come out of those speakers. (See page 64.)

# OTHERS menu

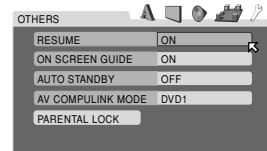

**NOTE:**

You can select "PARENTAL LOCK" only while playback is stopped.

Items	Contents and guidelines
<p><b>RESUME</b> You can activate or deactivate the resume playback function.</p>	<ul style="list-style-type: none"> <li>• <b>ON</b> Select this to activate this function.</li> <li>• <b>OFF</b> Select this to deactivate.</li> </ul>
<p><b>ON SCREEN GUIDE</b> You can activate or deactivate the on-screen guide icons. (See page 27.)</p>	<ul style="list-style-type: none"> <li>• <b>ON</b> Select this to activate this function.</li> <li>• <b>OFF</b> Select this to deactivate.</li> </ul>
<p><b>AUTO STANDBY*</b> When playback ends and does not restart for more than the time you specify, this system turns off by itself.</p>	<ul style="list-style-type: none"> <li>• <b>60</b> This system turns off by itself if playback does not restart within 60 minutes.</li> <li>• <b>30</b> This system turns off by itself if playback does not restart within 30 minutes.</li> <li>• <b>OFF</b> Select this to deactivate.</li> </ul>
<p><b>AV COMPULINK MODE</b></p>	<p>This item is provided for use in the future. It is currently not used.</p> <ul style="list-style-type: none"> <li>• <b>DVD 1</b></li> <li>• <b>DVD 2</b></li> <li>• <b>DVD 3</b></li> </ul>
<p><b>PARENTAL LOCK</b> You can restrict playback of a DVD containing violent scenes and those not suitable for your family members.</p>	<p>Enter the PARENTAL LOCK sub-menu. (See page 67.)</p>

\* When both of the auto standby function and the sleep timer are activated, if the shut-off time set by the sleep timer comes earlier than the one set by the auto standby function, the sleep timer takes effect.



# Setting DVD preferences


## Restricting playback by Parental Lock

Using this function, you can restrict playback of a DVD containing violent scenes and those not suitable for your family members. Nobody can play such a disc unless this function is canceled.


- This setting takes effect only for the DVDs containing the parental lock level information—Level 1 (most restrictive) to Level 8 (least restrictive).
- You can set the Parental Lock only while playback is stopped.

### Setting Parental Lock


From the remote control ONLY:

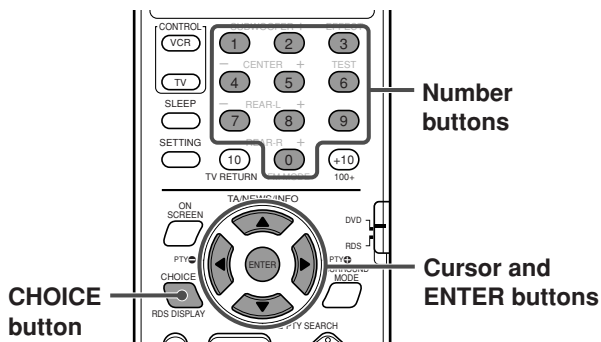


- 1 Press CHOICE, then press Cursor  $\blacktriangleright/\blacktriangleleft$  to display the OTHERS menu.
- 2 Press Cursor  $\blacktriangledown/\blacktriangleup$  repeatedly to move  $\boxtimes$  to "PARENTAL LOCK," then press ENTER.  
The PARENTAL LOCK sub-menu appears on the TV.

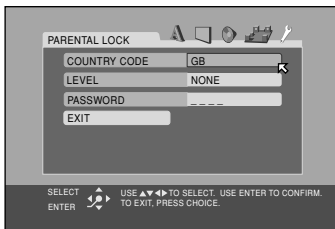

- 3 Press Cursor  $\blacktriangledown/\blacktriangleup$  repeatedly to move  $\boxtimes$  to "COUNTRY CODE," then press ENTER.

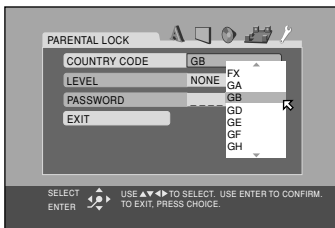


- 4 Press Cursor  $\blacktriangleup/\blacktriangledown$  repeatedly to select the country code, then press ENTER.  
See "Country/Area codes list for Parental Lock" on page 69.  
The  $\boxtimes$  moves to "LEVEL."
- 5 Press ENTER.

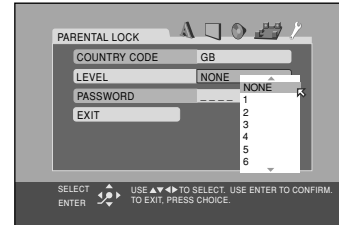

- 6 Press Cursor  $\blacktriangleup/\blacktriangledown$  repeatedly to select the level of restriction, then press ENTER.

- The  $\boxtimes$  moves to "PASSWORD."
- Select "NONE" to cancel this function.

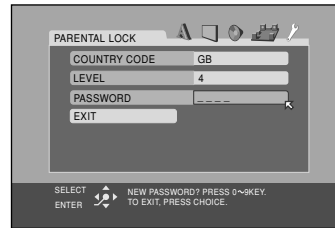

- 7 Press Number buttons (0-9) to enter a four digit number as your password, then press ENTER.  
The  $\boxtimes$  moves to "EXIT."
- 8 Press ENTER.  
The OTHERS menu resumes.


**To return to the normal screen**  
Press CHOICE.

#### **NOTE:**

Remember your password or make a note of it.  
You need to enter your password to change the setting or release the lock. To change the setting, see page 68.

## Changing the setting of Parental Lock


From the remote control ONLY:

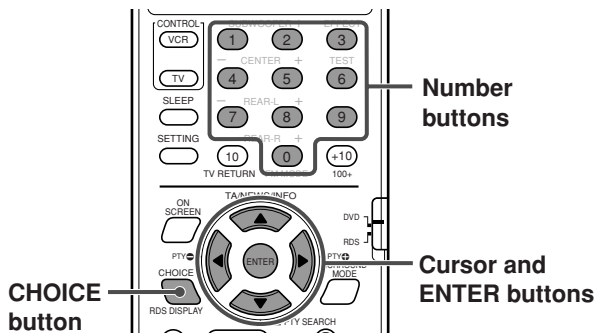

- 1 Press CHOICE, then press Cursor  $\blacktriangleright/\blacktriangleleft$  to display the OTHERS menu.
- 2 Press Cursor  $\blacktriangledown/\blacktriangleup$  repeatedly to move  $\boxtimes$  to "PARENTAL LOCK," then press ENTER.

The PARENTAL LOCK sub-menu appears on the TV.

- You can only move  $\boxtimes$  to "PASSWORD" or to "EXIT" before you enter your password.

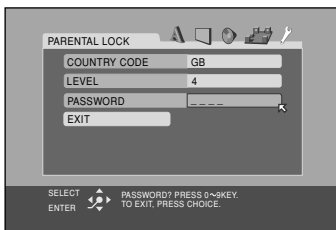

- 3 Press Number buttons (0-9) to enter your password, then press ENTER.
  - If you enter a wrong password, "WRONG! RETRY..." appears under the PARENTAL LOCK sub-menu. You cannot go to next steps before you enter the correct password.
- 4 Press Cursor  $\blacktriangleup/\blacktriangledown$  repeatedly to move  $\boxtimes$  to the item you want to change, then press ENTER.
- 5 Press Cursor  $\blacktriangleup/\blacktriangledown$  repeatedly to change the setting, then press ENTER.
- 6 Press Number buttons (0-9) to enter your password, then press ENTER.


The new setting is stored.

### NOTES:


- You cannot set the Parental Lock before you set your password. (See page 67.)
- If you go out of the PARENTAL LOCK sub-menu before setting your password in step 6, the new country code and parental level will not become effective, but the old country code and parental level remain effective.
- When you enter wrong passwords more than three times, the  $\boxtimes$  moves to "EXIT" automatically and Cursor  $\blacktriangleup/\blacktriangledown$  do not work. Press ENTER to exit from the PARENTAL LOCK sub-menu, then repeat from step 1.
- If you forget your password, enter "8888."

## Releasing Parental Lock temporarily

When you set a strict parental level, some discs may not be played back at all. When you load such a disc and try to play it, the following display appears on the TV screen. You can release Parental Lock temporarily.

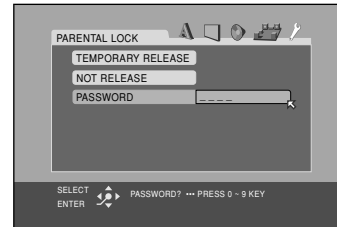

From the remote control ONLY:

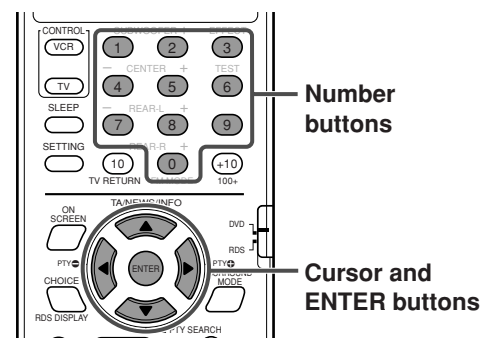

- 1 Press Cursor  $\blacktriangleup/\blacktriangledown$  repeatedly move  $\boxtimes$  to "TEMPORARY RELEASE", then press ENTER.

The  $\boxtimes$  moves to "PASSWORD."

- When selecting "NOT RELEASE," press  $\blacktriangleup$  to remove the disc.
- 2 Press Number buttons (0-9) to enter your password. Playback starts.
    - If you enter a wrong password, "WRONG! RETRY..." appears under the PARENTAL LOCK sub-menu. You cannot play the disc before you enter the correct password.

### NOTE:

When you enter wrong passwords more than three times, the  $\boxtimes$  moves to "NOT RELEASE" automatically and Cursor  $\blacktriangleup/\blacktriangledown$  do not work. Press  $\blacktriangleup$  to remove the disc.

# Setting DVD preferences

## Country/Area codes list for Parental Lock

AD	Andorra	ER	Eritrea	LA	Lao People's Democratic Republic	RW	Rwanda
AE	United Arab Emirates	ES	Spain			SA	Saudi Arabia
AF	Afghanistan	ET	Ethiopia	LB	Lebanon	SB	Solomon Islands
AG	Antigua and Barbuda	FI	Finland	LC	Saint Lucia	SC	Seychelles
AI	Anguilla	FJ	Fiji	LI	Liechtenstein	SD	Sudan
AL	Albania	FK	Falkland Islands (Malvinas)	LK	Sri Lanka	SE	Sweden
AM	Armenia	FM	Micronesia (Federated States of)	LR	Liberia	SG	Singapore
AN	Netherlands Antilles			LS	Lesotho	SH	Saint Helena
AO	Angola	FO	Faroe Islands	LT	Lithuania	SI	Slovenia
AQ	Antarctica	FR	France	LU	Luxembourg	SJ	Svalbard and Jan Mayen
AR	Argentina	FX	France, Metropolitan	LV	Latvia	SK	Slovakia
AS	American Samoa	GA	Gabon	LY	Libyan Arab Jamahiriya	SL	Sierra Leone
AT	Austria	GB	United Kingdom	MA	Morocco	SM	San Marino
AU	Australia	GD	Grenada	MC	Monaco	SN	Senegal
AW	Aruba	GE	Georgia	MD	Moldova, Republic of	SO	Somalia
AZ	Azerbaijan	GF	French Guiana	MG	Madagascar	SR	Suriname
BA	Bosnia and Herzegovina	GH	Ghana	MH	Marshall Islands	ST	Sao Tome and Principe
BB	Barbados	GI	Gibraltar	ML	Mali	SV	El Salvador
BD	Bangladesh	GL	Greenland	MM	Myanmar	SY	Syrian Arab Republic
BE	Belgium	GM	Gambia	MN	Mongolia	SZ	Swaziland
BF	Burkina Faso	GN	Guinea	MO	Macau	TC	Turks and Caicos Islands
BG	Bulgaria	GP	Guadeloupe	MP	Northern Mariana Islands	TD	Chad
BH	Bahrain	GQ	Equatorial Guinea	MQ	Martinique	TF	French Southern Territories
BI	Burundi	GR	Greece	MR	Mauritania	TG	Togo
BJ	Benin	GS	South Georgia and the South Sandwich Islands	MS	Montserrat	TH	Thailand Code Language
BM	Bermuda			MT	Malta	TJ	Tajikistan
BN	Brunei Darussalam	GT	Guatemala	MU	Mauritius	TK	Tokelau
BO	Bolivia	GU	Guam	MV	Maldives	TM	Turkmenistan
BR	Brazil	GW	Guinea-Bissau	MW	Malawi	TN	Tunisia
BS	Bahamas	GY	Guyana	MX	Mexico	TO	Tonga
BT	Bhutan	HK	Hong Kong	MY	Malaysia	TP	East Timor
BV	Bouvet Island	HM	Heard Island and McDonald Islands	MZ	Mozambique	TR	Turkey
BW	Botswana			NA	Namibia	TT	Trinidad and Tobago
BY	Belarus	HN	Honduras	NC	New Caledonia	TV	Tuvalu
BZ	Belize	HR	Croatia	NE	Niger	TW	Taiwan
CA	Canada	HT	Haiti	NF	Norfolk Island		
CC	Cocos (Keeling) Islands	HU	Hungary	NG	Nigeria	TZ	Tanzania, United Republic of
CF	Central African Republic	ID	Indonesia	NI	Nicaragua	UA	Ukraine
CG	Congo	IE	Ireland	NL	Netherlands	UG	Uganda
CH	Switzerland	IL	Israel	NO	Norway	UM	United States Minor Outlying Islands
CI	Côte d'Ivoire	IN	India	NP	Nepal		
CK	Cook Islands	IO	British Indian Ocean Territory	NR	Nauru	US	United States
CL	Chile			NU	Niue	UY	Uruguay
CM	Cameroon	IQ	Iraq	NZ	New Zealand	UZ	Uzbekistan
CN	China	IR	Iran (Islamic Republic of)	OM	Oman	VA	Vatican City State (Holy See)
CO	Colombia	IS	Iceland	PA	Panama		
CR	Costa Rica	IT	Italy	PE	Peru	VC	Saint Vincent and the Grenadines
CU	Cuba	JM	Jamaica	PF	French Polynesia		
CV	Cape Verde	JO	Jordan	PG	Papua New Guinea	VE	Venezuela
CX	Christmas Island	JP	Japan	PH	Philippines	VG	Virgin Islands (British)
CY	Cyprus	KE	Kenya	PK	Pakistan	VI	Virgin Islands (U.S.)
CZ	Czech Republic	KG	Kyrgyzstan	PL	Poland	VN	Viet Nam
DE	Germany	KH	Cambodia	PM	Saint Pierre and Miquelon	VU	Vanuatu
DJ	Djibouti	KI	Kiribati	PN	Pitcairn	WF	Wallis and Futuna Islands
DK	Denmark	KM	Comoros	PR	Puerto Rico	WS	Samoa
DM	Dominica	KN	Saint Kitts and Nevis	PT	Portugal	YE	Yemen
DO	Dominican Republic	KP	Korea, Democratic People's Republic of	PW	Palau	YT	Mayotte
DZ	Algeria			PY	Paraguay	YU	Yugoslavia
EC	Ecuador	KR	Korea, Republic of	QA	Qatar	ZA	South Africa
EE	Estonia	KW	Kuwait	RE	Réunion	ZM	Zambia
EG	Egypt	KY	Cayman Islands	RO	Romania	ZR	Zaire
EH	Western Sahara	KZ	Kazakhstan	RU	Russian Federation	ZW	Zimbabwe

# Setting the system through the display window

 
You can adjust the sound and speaker settings of this system through the display window.

- You can adjust the sound setting of front speakers ("BAL," "BASS," and "TREBLE") for each source.
- The adjustments of the speaker size, speaker distance, "LFE ATT," "CROSS," and "D. COMP" take effect for all sources.

## IMPORTANT:

When using the remote control, check to see if its remote control mode selector is set to the correct position:


**Set it to "DVD" to use other than RDS.**



## Before you start, remember...

- There is a time limit in doing the following steps. If the setting is cancelled before you finish, start from step 1 again.
- When selecting DVD, AUX, or AUX DIGITAL as the source, the settings of the corresponding items in the choice menus also change.

## From the remote control ONLY:

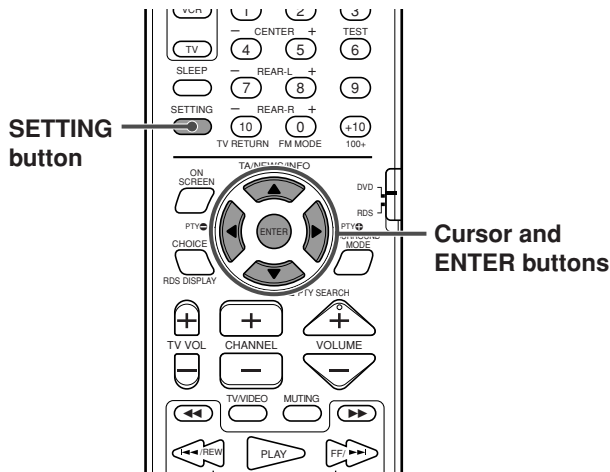

### 1 Press SETTING.

The item you last selected appears on the display window.

Example: "BAL" has been selected.



### 2 Press Cursor ▼/▲ repeatedly to select the item you want to set.

Each time you press the button, the items shown on the display window change as follows:

 
⇒ BAL ⇒ BASS ⇒ TREBLE ⇒ FRNT SP  
 ⇒ CNTR SP ⇒ REAR SP ⇒ FRNT D ⇒ CNTR D  
 ⇒ REAR D ⇒ CROSS ⇒ LFE ATT. ⇒ D.COMP  
 ⇒ (back to the beginning)

See the corresponding pages for the detail of adjustments.

- **BAL (Balance):**  
Adjust the balance between the left and right front speakers. (See page 63.)
- **BASS, TREBLE:**  
Adjust the enhancement level for bass or treble sound from the front speakers. (See page 63.)
- **FRNT SP (front speakers), CNTR SP (center speaker), REAR SP (rear speakers):**  
Select the size of each speaker. (See page 64.)
- **FRNT D (front speakers distance), CNTR D (center speaker distance), REAR D (rear speakers distance):**  
Set the distance from the listening position to the speakers. (See page 65.)
- **CROSS (CROSS OVER):**  
Select the cutoff frequency of the subwoofer according to the front speakers used with this system. (See page 64.)
- **LFE ATT.:**  
Diminish the distortion of the bass sound from the subwoofer while playing back a disc with Dolby Digital or DTS Digital Surround. (See page 63.)
- **D.COMP (D. RANGE COMPRESSION):**  
Enjoy a powerful sound at night even at a low volume level when listening to the sound with Dolby Digital. (See page 63.)

### 3 Press Cursor ◀/▶ to make an adjustment.

Example:



- **BAL:**  
"L-21" to "L-1" ⇒ "CENTER" ⇒ "R-1" to "R-21"
- **BASS, TREBLE:**  
Within the range between -10 to +10 (by 2 step)
- **FRNT SP, CNTR SP, REAR SP:**  
"SML" (small) ⇒ "LRG" (large) ⇒ "NO" (none)  
("NO" is not selectable for the front speakers.)
- **FRNT D, CNTR D, REAR D:**  
Within the range between 0.3 m and 9.0 m. (by 0.3 m step)
- **CROSS:**  
"200 Hz" ⇒ "150 Hz" ⇒ "120 Hz" ⇒ "100 Hz"  
⇒ "80 Hz"
- **LFE ATT.:**  
"ON" ⇒ "OFF"
- **D.COMP:**  
"MID" ⇒ "MAX" ⇒ "OFF"

### 4 Repeat steps 2 and 3 to set other items.


#### NOTES:

- If you have selected "SML" for the front speakers, you cannot select "LRG" for the center and rear speakers.
- You can confirm your adjustment of speaker settings by listening to the test tone. To output the test tone, press SOUND, then TEST. (See page 39.)

# Operating other manufacturers' VCR

By changing the remote control signals from preset ones to the other manufacturers', you can use the remote control supplied for this system to operate other manufacturers' VCRs.

- You can also operate other manufacturers' TVs using the remote control supplied with this system. (See page 20.)
- When operating other manufacturers' VCR, aim the remote control directly at the remote control sensor on your VCR. Refer also to the instruction manuals supplied with your VCR.

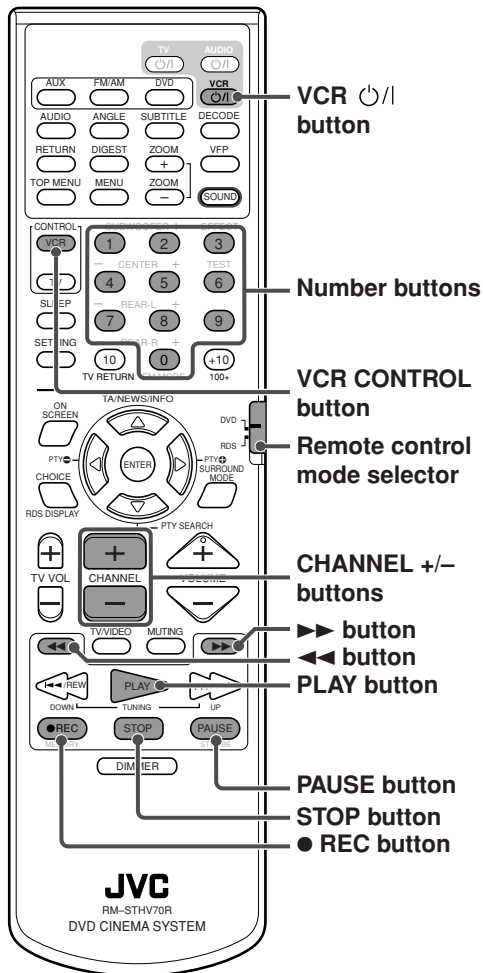

## ■ Setting the remote control signal for operating your VCR.

- You can operate your VCR without setting the remote control signal if your VCR is a JVC VCR.

- 1 Slide the remote control mode selector to "DVD."
- 2 Press and hold VCR On/Off. Keep it pressed until step 4 is finished.
- 3 Press VCR CONTROL.
- 4 Press Number buttons (1-9, 0) to enter a manufacturer's code (2 digit). See the list below to find the code. Examples: For a Philips VCR, press 0, then 5. For a Panasonic VCR, press 2, then 1.
- 5 Release VCR On/Off.
- 6 Try to operate your VCR by pressing VCR On/Off.

When your VCR turns on or off, you have entered the correct code. **If there are more than one code listed for your brand of VCR, try each one until you enter the correct one.**

## ■ To operate your VCR

You can use the following buttons for operating your VCR:

- VCR On/Off:** Turns on and off the VCR.
- After pressing VCR CONTROL, you can use the following buttons for operating your VCR:
    - PLAY:** Starts playback.
    - STOP:** Stops operation.
    - PAUSE:** Pauses playback.
    - ▶▶:** Fast forwards a video tape.
    - ◀◀:** Rewinds a video tape.
    - REC:** Press this button together with PLAY to start recording. Press this button together with PAUSE to pause recording.
    - CHANNEL +/-:** Changes the TV channels on the VCR.

## Manufacturers' codes for VCR

Manufacturer	Code	Manufacturer	Code
JVC	01	Nokia	16
Aiwa	02, 20	Nordmende	17 - 19, 31
Bell+Howell	03, 16	Orion	20
Blaupunkt	04	Panasonic	21
CGM	03, 05, 16	Philips	05, 22
Daewoo	34	Phonola	05
Digital	05	Saba	17 - 19, 23, 31
Fisher	03, 16	Samsung	24, 25
G.E.	06	Sanyo	03, 16
Grundig	07	Sharp	26, 27
Hitachi	08, 09	Siemens	07
Loewe	05, 10, 11	Sony	28 - 30, 35
Magnavox	04, 05	Telefunken	17 - 19, 31, 32
Mitsubishi	12 - 15	Toshiba	33

\* Manufacturers' codes are subject to change without notice. If they are changed, this remote control cannot operate the equipment.

# Maintenance

To get the best performance of the system, keep your discs and mechanism clean.

## General Notes


In general, you will have the best performance by keeping your discs, and the mechanism clean.

- Store discs in their cases, and keep them in cabinets or on shelves.

## Handling Discs



- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.

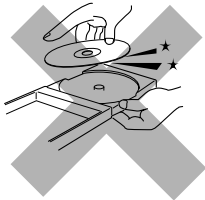

- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.



### To clean the disc

Wipe the disc with a soft cloth in a straight line from center to edge.

**DO NOT use any solvent—such as conventional record cleaner, spray, thinner, or benzine—to clean the disc.**

## Cleaning the system

### • Stains on the system

Should be wiped off with a soft cloth. If the unit is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.

### • Since the unit may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following.

- DO NOT wipe it with a hard cloth.
- DO NOT wipe it strong.
- DO NOT wipe it with thinner or benzine.
- DO NOT apply any volatile substance such as insecticides to it.
- DO NOT allow any rubber or plastic to remain in contact with it for a long time.
- DO NOT clean the moving panel when it is open.



# Troubleshooting

Use this chart to help you solve daily operational problems. If there is any problem you cannot solve, contact your JVC service center.

PROBLEM	POSSIBLE CAUSE	SOLUTION
<b>Power does not come on.</b>	The power cord is not connected to an AC outlet or the center unit.	Insert the plug into the socket.
	The power cord of the subwoofer is not connected to an AC outlet.	Press $\odot/ $ on the center unit or AUDIO $\odot/ $ on the remote control to turn off the system, insert the plug firmly into an AC outlet, and press $\odot/ $ on the center unit or AUDIO $\odot/ $ on the remote control again.
<b>Power is not supplied to the powered subwoofer.</b>	The system cable is not connected.	Connect the system cable.
<b>The remote control does not work.</b>	It is too far from the center unit, or is not facing the center unit.	Come closer to the center unit. (Operate the remote control within 7 m from the center unit.)
	There is something obstructing the remote sensor.	Avoid any obstacles. (See page 19.)
	The remote control is not aimed at the remote sensor on the center unit or components.	Aim the remote control at the remote sensor on each equipment you want to operate.
	The remote control mode selector is set at an incorrect position.	Set it to the correct position.
	The batteries are exhausted.	Replace the batteries.
	The batteries have been inserted the wrong way round (+/-).	Insert the batteries correctly.
	The remote control is not set to operate the DVD player, tuner (FM/AM—MW), or sound setting.	For the DVD player, press DVD before you perform the operations. For the tuner, press FM/AM before you perform the operations. For using the sound setting buttons to adjust the output level of the speakers, press SOUND before you perform the operations.
	Sunlight is falling directly on the remote sensor.	Cover the remote sensor from direct sunlight.
	The remote control signals are not set correctly.	Enter the correct manufacturer's code. (See pages 20, 71.)
<b>No sound.</b>	The system cord and/or speaker cord is not connected.	Check the connection.
	There is a short in the speaker cord.	Reconnect the speaker cord.
	The audio cord is not connected to AUX IN and/or DIGITAL IN correctly.	Connect the cord correctly. (See page 14.)
	An incorrect source has been selected.	Select the correct source. (See page 22.)
	Muting is on.	Press MUTING to cancel muting.
	The decode mode is not set correctly.	Select the proper decode mode. (See page 25.)

General



PROBLEM	POSSIBLE CAUSE	SOLUTION
<b>Sound from one front speaker only.</b>	The speaker cord is not connected correctly.	Connect the cord correctly. (See page 13.)
	Left-right balance is not set properly.	Adjust the balance properly. (See pages 63 and 70.)
<b>No sound from the center and/or rear speakers.</b>	The speaker setting is incorrect.	Set the speaker setting properly. (See pages 64 and 70.)
<b>The system does not work correctly.</b>	Lightning or electronic noise interferes with operation of the microcomputer.	Switch the power off, and remove and re-insert the power plug in the socket.
	Immediately after beginning to heat the room, the system was moved to a cold location causing condensation to form inside.	Switch the power off and leave the unit a few hours before switching the power on again.
<b>No picture is displayed on the TV screen.</b>	The video cord or SCART cable is not connected correctly.	Connect the cord correctly. (See page 10.)
	The RGB-Y/C selector is not set correctly.	Set it proper for the connection and your TV. (See page 10.)
	TV input selection is incorrect.	Select the correct input on the TV.
	The disc is not playable.	Use a playable disc. (See page 6.)
<b>A disc cannot be played.</b>	The system's and disc's Region Code numbers are incompatible.	Replace the disc. (See page 6.)
	Parental Lock is in use.	Enter password to change the parental level. (See page 68.)
<b>A disc cannot be played and "0:00" is displayed on the display window.</b>	The disc is inserted with its label and data sides inverted.	Insert the disc correctly. (See page 28.)
	The unplayable disc is inserted.	Replace the disc. (See page 6.)
<b>Video and audio are distorted.</b>	The disc is scratched or dirty.	Replace or clean the disc. (See page 72.)
	A VCR is connected between the center unit and the TV.	Connect the center unit and TV directly.
	With some discs, a picture may be blurred when setting "PROGRESSIVE MODE" to "FILM" or "AUTO."	Set "PROGRESSIVE MODE" to "VIDEO." (See page 62.)
<b>The picture does not fit the TV screen.</b>	"MONITOR TYPE" is not set correctly.	Set the monitor type correctly. (See page 62.)
	The TV is not set correctly.	Set the TV correctly.
<b>No subtitle appears on the TV screen though you have selected as your initial subtitle language.</b>	_____	Some DVDs are programmed to always display no subtitle initially. If this happens, press SUBTITLE on the remote control after starting play. (See page 45.)
<b>Audio language is different from the one you have selected as your initial audio language.</b>	_____	Some DVDs are programmed to always use the original language initially. If this happens, press AUDIO on the remote control after starting play. (See page 46.)

General

DVD Playback

# Troubleshooting

	PROBLEM	POSSIBLE CAUSE	SOLUTION
MP3 Playback	<b>A disc cannot be played.</b>	No MP3 files are recorded on the disc.	Replace the disc.
		MP3 files do not have the file extension—.mp3, .Mp3, .mP3, or .MP3 in their file names.	Add the file extension—.mp3, .Mp3, .mP3, or .MP3—to their file names. (See page 55.)
		MP3 files are not recorded in the format compliant with ISO 9660 Level 1 or 2.	Replace the disc. (Record MP3 files using a compliant application.)
	<b>Not MP3 files but JPEG files are played.</b>	The MP3/JPEG setting is set to "JPEG."	The disc which contains the different types of files may not be played because of its disc characteristics or recording conditions.
	<b>The MP3 control display appears on the TV screen, but any operation cannot be performed.</b>	Any MP3 files or JPEG files are not recorded on the disc, or the disc is the unplayable disc (such as CD-ROM).	When both MP3 files and JPEG files are recorded on a disc, to play MP3 files, set the setting to "MP3." (See page 62.)
JPEG Playback	<b>A disc cannot be played.</b>	No JPEG files are recorded on the disc.	Replace the disc.
		JPEG files do not have the correct file extension in their file names.	Add the file extension—.jpg, .jpeg, .JPG, .JPEG or any uppercase and lowercase combination (such as ".Jpg")—to their file names. (See page 57.)
		JPEG files are not recorded in the format compliant with ISO 9660 Level 1 or 2.	Replace the disc. (Record JPEG files using a compliant application.)
	<b>Not JPEG files but MP3 files are played.</b>	The MP3/JPEG setting is set to "MP3."	When both MP3 files and JPEG files are recorded on a disc, to play JPEG files, set the setting to "JPEG." (See page 62.)
FM/AM	<b>Hard to listen to broadcast because of noise.</b>	Antennas are disconnected.	Reconnect the antennas correctly and securely.
		The AM (MW) loop antenna is too close to the center unit.	Change the position and direction of the AM (MW) loop antenna.
		The supplied FM antenna is not properly extended and positioned.	Extend the FM antenna at the best position.
		Beat Cut mode is not set properly while listening to an AM (MW) broadcast.	Try to change the Beat Cut mode. (See page 32.)
	<b>Continuous static during FM broadcasts.</b>	The received signal is too weak.	Connect an external FM antenna (see page 11), or contact your dealer.
		The station is too far away.	Select another station.
Others	<b>Suddenly, the system turns off by itself.</b>	The sleep timer or auto standby function is activated.	Turn the functions off. (See pages 24 and 66.)
	<b>The indications on the moving panel is displayed upside-down.</b>	DISP.SET selector is not set correctly.	Set it correctly. (See page 8.)

## NOTE:

Problems may be caused by the components connected to the system. So read also the manuals for the components carefully.

## Aspect ratio

The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs is 4:3, and that of wide-screens is 16:9.

## Chapter

Refers to individual chapters included in a title.

## Composite video signal

Refers to video signal comprised of three kinds of signals combined: an image signal made up of luminance and chrominance signals using the frequency multiplication technique; burst signal providing the basis for color reproduction; and synchronization signal.

## Disc menu

A screen display prepared for allowing selection of images, sounds, subtitles, multiangles, etc. recorded on a DVD.

## JPEG

A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

## Linear PCM (PCM: Pulse Code Modulation)

A system for converting analog sound signal to digital signal for later processing, with no data compression used in conversion.

## Letter box

A method of displaying wide images like movies in the center of a 4:3 TV screen with no part of the image deleted, by placing black bands on the top and bottom of the screen. This name has resulted from the screen form looking literally like a letter box.

## MP3

A file format with a sound data compression system. "MP3" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. By using MP3 format, one CD-R or CD-RW can contain about 10 times as much data volume as a regular CD can.

## Multi-angle

By recording multiple scenes progressing at the same time in a single title, the user can select view angles. This feature is called the multiangle function.

## Multichannel

DVD is specified to have each sound track constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

## Multilanguage

When a title is created to cope with multiple languages, it is generally called a multilanguage title.

## Parental lock

A feature of this system to automatically determine whether or not to reproduce particular DVD software by comparing its parental level (a measure of undesirability of scenes, etc. from educational viewpoint) set for the software beforehand with that set on this system by the user; if the software's level is less restrictive than the user-set level, it will be reproduced.

## Playback control (PBC)

Refers to the signal recorded on video CDs or SVCDs for controlling reproduction. By using menu screens recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive-type software as well as software having a search function.

## Region code

A system for allowing discs to be played back only in the regions designated beforehand. All the countries in the world are divided into six regions, each region being identified by a specified region code (or region number). If the region code given to a disc includes a numeral which matches one in the region code of a player, the player can play back the disc.

## Surround

A system for creating three-dimensional sound fields full of realism by arranging multiple speakers around the listener.

## Sampling frequency

Frequency of sampling data when analog data is converted to digital data. Sampling frequency numerically represents how many times the original analog signal is sampled per second.

## Transfer rate

The rate of transferring digital data. Usually the measure is in baud per second. The DVD system applies a variable transfer rate system for high efficiency.

# Specifications

## ■ Center unit (XV-THV70R)

### Audio section

Total Harmonic Distortion 0.02 %  
 NOTE: This value is measured at System cord CONNECTOR for reference.

Audio input sensitivity/Impedance (at 1 kHz)

Analog input:  
 AUX IN : 290 mV/47 kΩ

Digital input\*:  
 DIGITAL IN (OPTICAL): -21 dBm to -15 dBm (660 nm ±30 nm)

\* Corresponding to Linear PCM, Dolby Digital, and DTS Digital Surround (with sampling frequency — 32 kHz, 44.1 kHz, 48 kHz)

### Video section

Color System: PAL  
 Horizontal Resolution: 500 lines  
 Signal-to-Noise Ratio: 66 dB  
 (Composite signal when "RGB" is selected)

Output Level

Composite: 1.0 V(p-p)/75 Ω  
 S-video-Y: 1.0 V(p-p)/75 Ω  
 S-video-C: 0.286 V(p-p)/75 Ω

### Tuner section

Tuning Range  
 FM: 87.50 MHz – 108.00 MHz  
 AM (MW): 522 kHz – 1 629 kHz


### General

Power Requirements: AC 230 V ~, 50 Hz  
 Power Consumption: 23 W (at operation)  
 1.7 W (in standby mode)  
 Dimensions\*\* (W × H × D): 325 mm × 86 mm × 237 mm  
 Mass\*\*: 2.95 kg


\*\* Without Stand and Legs

## Dimensions for installation


Placed vertically

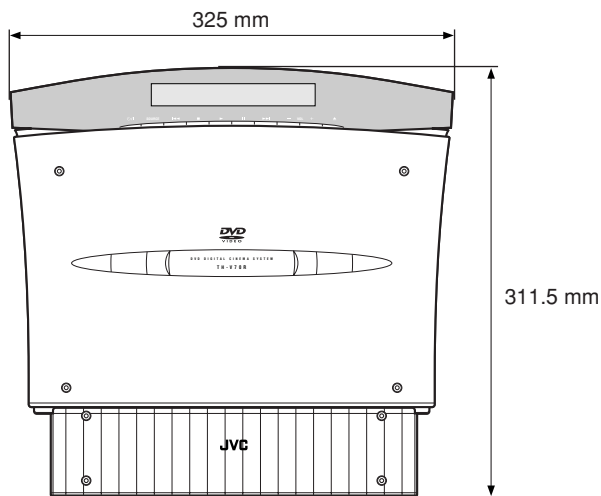



(On a wall)

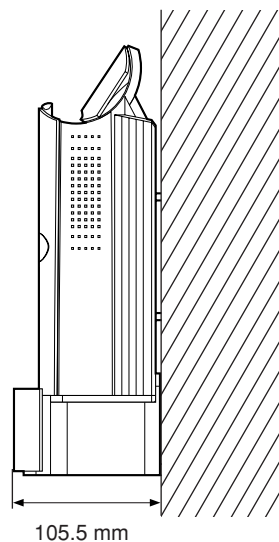

(With the legs)

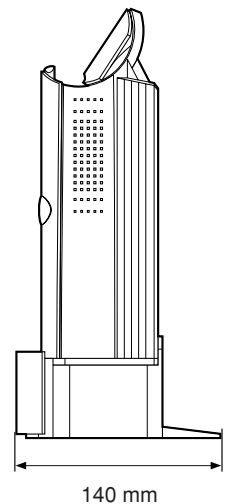

Placed horizontally

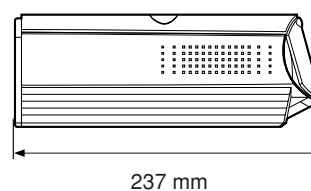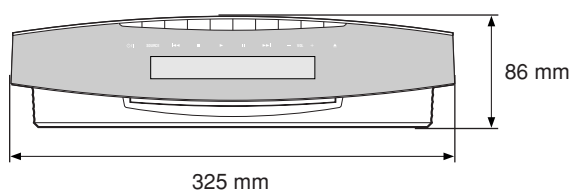

## ■ Subwoofer (SP-PWV70)

### Amplifier section

Front/Center/Rear:	30 W per channel, RMS at 4 $\Omega$ at 1 kHz, with 10 % total harmonic distortion.
Subwoofer:	140 W, RMS at 4 $\Omega$ at 100 Hz, with 10 % total harmonic distortion.
Speaker:	20 cm Bass-reflex, Magnetically Shielded
Power Requirements:	AC 230 V $\sim$ , 50 Hz
Power Consumption:	120 W (at operation) 0 W (in standby mode)
Frequency Range:	25 Hz to 200 Hz
Dimensions (W $\times$ H $\times$ D):	240 mm $\times$ 435 mm $\times$ 496 mm
Mass:	16.5 kg

## ■ Satellite Speakers (SP-XSV70)

Speakers:	7 cm $\times$ 4 cm Bass-reflex, Magnetically Shielded
Power Handling Capacity:	30 W
Impedance:	4 $\Omega$
Frequency Range:	95 Hz to 20 kHz
Dimensions (W $\times$ H $\times$ D):	68 mm $\times$ 134 mm $\times$ 109 mm
Mass:	410 g


## ■ Center Speaker (SP-XCV70)

Speakers:	7 cm $\times$ 4 cm Bass-reflex, Magnetically Shielded
Power Handling Capacity:	30 W
Impedance:	4 $\Omega$
Frequency Range:	90 Hz to 20 kHz
Dimensions (W $\times$ H $\times$ D):	153 mm $\times$ 70 mm $\times$ 109 mm
Mass:	430 g

## ■ Accessories

Remote control (1)
Batteries (2)
Stand (1) (for the center unit)
Legs (2) (for the stand)
FM antenna (1)
AM (MW) loop antenna (1)
Power cord (1)
System cord (1)
Video cord (1)
Speaker cords
5 m (3): For the left front speaker, right front speaker, and center speaker
10 m (2): For the left rear speaker and right rear speaker (The length of the speaker cords above are approximate.)
Speaker wall brackets (2)
Screws
For the stand (1)
For the speaker wall brackets (2)
Paper pattern (1)

Designs & specifications are subject to change without notice.

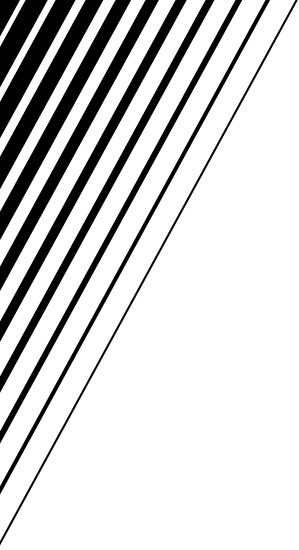

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>