 


JVC

CD PORTABLE SYSTEM

RC-EX16B/RC-EX16A

ENGLISH

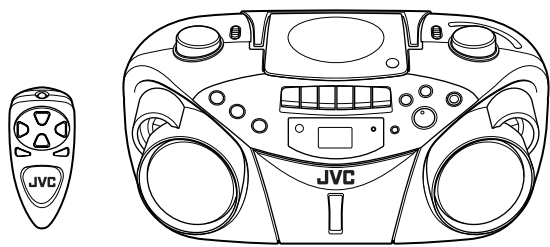

INSTRUCTIONS

LVT1374-003A [B]

Thank you for purchasing this JVC product.

Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit.

SAFETY PRECAUTIONS

IMPORTANT for the U.K.

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

BE SURE to replace the fuse only with an identical approved type, as originally fitted.

If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied fitted with a mains plug then follow the instructions given below:

IMPORTANT.

DO NOT make any connection to the terminal which is marked with the letter E or by the safety earth symbol or coloured green or green-and-yellow.

The wires in the mains lead on this product are coloured in accordance with the following code:

- Blue : Neutral
- Brown : Live

As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

 
IF IN DOUBT - CONSULT A COMPETENT ELECTRICIAN.

Caution — OFF switch!

Disconnect the mains plug to shut the power off completely. The switch in any position does not disconnect the mains line. The power cannot be remote controlled.

CAUTION

- 1. Do not remove screws, covers or cabinet.
- 2. Do not expose this appliance to rain or moisture.

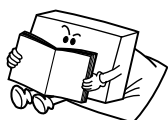

IMPORTANT FOR LASER PRODUCTS


1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

CAUTION -	INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.
VORSICHT !	UNSIHTBARE LASERSTRAHLUNG TRITTS AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITVERRIEGELUNG ÜBERBRÜCKT IST. NICHT DEM STRAHL AUSSETZEN!
WARNING -	OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAD STRÅLEN ÄR FARLIG.
ADVARSEL -	OSYNLIG LASERSTRÅLNING VED ÅBNING NÄR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.

Caution: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

 - 1 Front: No obstructions and open spacing.
- 2 Sides/ Top/ Back: No obstructions should be placed in the areas shown in the illustration on the right.
- 3 Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

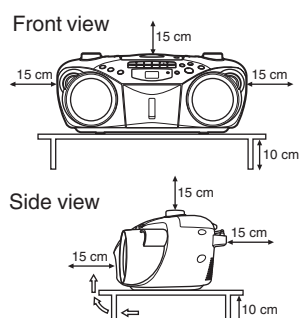

GETTING STARTED

POWERING UP

This CD portable system operates on battery or AC power.

BATTERY POWER

Insert six batteries R20 (SUM-1)/D (13D) (not supplied) and you can take your system just about anywhere. Open the battery compartment door on the back of the unit by pressing down the two tabs and pulling out the cover. Insert batteries as marked on the back.

Important Battery Information

- If you are not going to use your system for a month or more, be sure to remove batteries because they can leak and cause damage.
- Dispose of batteries in the proper manner, according to federal, state, and local regulations.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

AC POWER

Plug the power supply cord into the ~ AC IN jack on the back of the unit, and into an AC power outlet.

CAUTIONS:

 
1. ONLY USE JVC POWER CORD PROVIDED WITH THIS UNIT TO AVOID MALFUNCTION OR DAMAGE TO THE UNIT. REMOVE BATTERIES WHEN USING THE POWER CORD.
2. BE SURE TO UNPLUG THE POWER CORD FROM THE OUTLET WHEN GOING OUT OR WHEN THE UNIT IS NOT IN USE FOR AN EXTENDED PERIOD OF TIME.

USING HEADPHONES

Connect commercially available headphones to the PHONES jack on the rear of the main unit. While the headphones are connected, the speakers do not produce any sound. Before connecting the headphones, make sure to turn down the sound volume.

ANTENNAS

The AM antenna is built in, so adjusting the position of the unit may help AM reception. The FM telescopic antenna on the back of the unit can be extended and rotated for better FM reception.

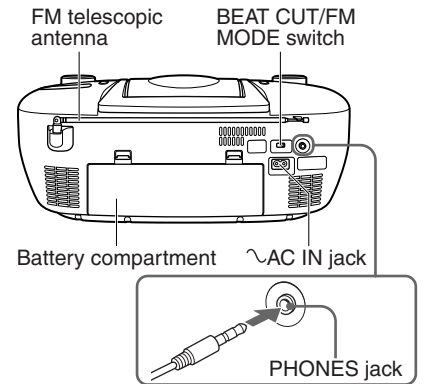

GENERAL CONTROLS

FUNCTION switch – Move the switch to select which part of this system you want to select – TUNER, TAPE or CD.

VOLUME – Turn the volume knob to increase or decrease the volume to desired level.

HBS – Press so that the HBS indicator lights. You can enjoy powerful bass sound with the Hyper-Bass Sound effect.

POWER OFF – Move FUNCTION to OFF/TAPE with no cassette button pressed, to turn the unit off.

USING THE RADIO

TUNING IN RADIO STATIONS

Move FUNCTION to TUNER to turn the radio on.

- Set BAND to AM or FM.
- Tune in desired station by turning the TUNING knob.
- To turn off the radio, move FUNCTION to OFF/TAPE.

 
BEAT CUT/FM MODE SWITCH

• When recording an AM broadcast


When recording an AM broadcast, beats may occur. If this happens, set the switch to "1" or "2."

• Changing the FM reception mode

When an FM stereo broadcast is hard to receive or noisy, set the switch to "MONO." Reception improves. To restore the stereo effect, switch to "STEREO."



USING THE TAPE

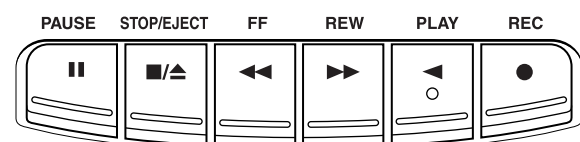 

PAUSE II – Press to interrupt tape play or record mode. Press a second time to resume tape play or tape record mode.

STOP/EJECT ■/▲ – Press to stop the current tape activity, or to open the cassette compartment door when no buttons are active.

FF ◀◀ – In stop mode, press to advance the tape toward the end. (When the tape reaches the end, press STOP/EJECT ■/▲ to release the depressed button.)

REW ▶▶ – In stop mode, press to rewind the tape toward the beginning. (When the tape reaches the end, press STOP/EJECT ■/▲ to release the depressed button.)

PLAY ◀ – Press to play cassettes.

REC ● – Press to record from the radio or CD player.

PLAYING A CASSETTE TAPE

 
1. Move FUNCTION to OFF/TAPE.
2. Press STOP/EJECT ■/▲ to open the cassette compartment door.
3. Insert a cassette tape into the compartment with the exposed part of the tape facing up and the side you want to play facing toward you.
4. Close the door securely.
5. Press REW ▶▶ or FF ◀◀ to move the tape to the desired starting point.
6. Press PLAY ◀ to begin playing the tape. The cassette tape plays until it reaches the end of the side, then it automatically stops.

RECORDING ON CASSETTE TAPES

You can record from the radio or the CD player. For best recording, use normal bias tape.

It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable program and in any literary, dramatic, musical, or artistic work embodied therein.


ERASE PROTECTION



When you record new material, the cassette deck records over whatever is on a tape. To protect a tape from accidental erasure, break off one or both plastic tabs (one for each tape side) on the top of the cassette tape. If you decide later to record on the tape, seal the hole with a piece of cellophane tape.

WARNING

 A little bit of slack in your tape can cause scratches on the tape, or worse yet, the tape could break. If you notice some slack in the tape, use a pencil to tighten it up before you insert it in the tape deck.



TIP

The use of tapes longer than 120 minutes is not recommended, since characteristic deterioration may occur and these tapes easily jam in the pinch-roller and the capstan.



© 2005 Victor Company of Japan, Limited

JVC

0205NSMBICORI

Download from Wwww.Somanuals.com. All Manuals Search And Download.

Turn Over

RECORDING FROM THE RADIO

1. Insert a cassette tape into the tape deck and close the door.
2. Move FUNCTION to TUNER and select a radio station.
3. Press REC ● to begin recording. REC ● and PLAY ◀ lock down.
4. Press STOP/EJECT ■/▲ to end recording.
5. To turn off the radio, slide FUNCTION to OFF/TAPE.

RADIO RECORDING TIPS

- To temporarily pause the recording, press PAUSE || on the cassette deck. Press PAUSE || again to resume recording.

SYNCHRONIZED RECORDING FROM A CD


1. Insert a cassette tape into the tape deck and close the door.
2. Move FUNCTION to CD.
3. Insert the CD you want to record into CD compartment.
4. Select the track you want to record by pressing ◀◀ (skip/search) or ▶▶ (skip/search).
5. Press REC ● to start recording.

Note that the tape continues to run when the CD finishes playing, or the CD continues to play when the tape reaches the end.

TIP

Using the PAUSE || button on the cassette deck instead of the STOP/EJECT ■/▲ button to momentarily interrupt recording gives you a much cleaner sound recording.

 USING THE CD

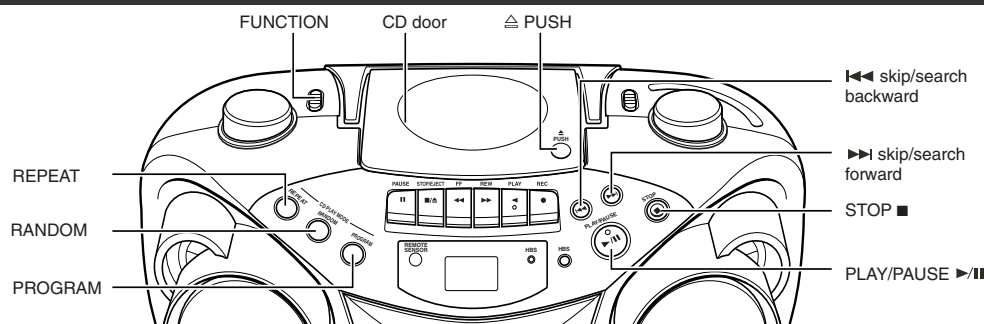

LOADING A CD

1. Move FUNCTION to CD; “-” flashes, then “no” appears in the display if no CD is loaded.
2. Press △ PUSH to open the CD door.
3. Place a CD into the tray with the label facing up.
4. Close the CD door. Then the total number of tracks appears.
5. To remove the CD, press △ PUSH, grasp the CD by its edges, and carefully pull it out.

PLAYING A CD

Press PLAY/PAUSE ▶|| to play all the tracks in order starting with track 1. The current track number appears in the display.

Note: Press PLAY/PAUSE ▶|| to temporarily stop the CD. The ▶ indicator and the track number flash in the display. Press PLAY/PAUSE ▶|| again to resume playing the CD.

- Adjust VOLUME to a comfortable level.
- Press STOP ■ to stop playing the CD. Wait a few seconds for the CD to stop turning, then press △ PUSH to open the CD compartment door and remove the CD.

AUTOMATIC SEARCH

Automatic search lets you quickly locate the beginning of any track on the CD, including the track currently playing. If the CD is playing:

- Press ◀◀ (skip/search) once to return to the beginning of the current track, press twice to return to the beginning of the previous track.
- Press ▶▶ (skip/search) to skip to the beginning of the next track.

If the CD is stopped, repeatedly press ▶▶ (skip/search) or ◀◀ (skip/search) until the display shows the number of the track you want to play, then press PLAY/PAUSE ▶||. The CD player starts playing the selected track.

TRACK SEARCH

- In play mode, press and hold ▶▶ (skip/search) to move forward through a track at high speed.
- In play mode, press and hold ◀◀ (skip/search) to move backward through a track at high speed.

REPEAT

The REPEAT button allows you to repeat one track (REP 1) or all tracks (REP ALL). To scroll through the choices, continuously press and release REPEAT and check the display to see which choice you have selected. The following chart illustrates how REPEAT works in various modes.



RANDOM

Press RANDOM so that “RAND” appears in the display. Start play by pressing PLAY/PAUSE ▶||, and the tracks are played in random order.

To quit random play, press RANDOM again.

PROGRAMMING

Press PROGRAM to enter program edit mode.

“00” and “PROG” will flash in the display. Press ▶▶ (skip/search) or ◀◀ (skip/search) to select the track number and press PROGRAM to store the number in program place. You can repeat these steps to program up to 20 tracks. Note that programming more than 20 tracks will overwrite the tracks already programmed.

During program play, “PROG” lights steadily. To confirm the program order, press PROGRAM in stop mode. Each time you press PROGRAM, the program number appears, then the corresponding track number flashes in order from the first programmed track.

To clear the entire program in the memory, turn the unit off, or open the CD door.

This unit has been designed only to play back the following CDs.

- Digital audio CD
- Recordable digital audio CD (CD-R)
- Rewritable digital audio CD (CD-RW)

When playing a CD-R or CD-RW

You can play back finalized CD-R or CD-RW recorded in music CD format. (If a CD-RW has been recorded in a different format, erase all the data on the CD-RW completely before recording on it.)

- You can play back CD-R or CD-RW like an audio CD.
- Some CD-R or CD-RW may not be played back on this unit because of their disc characteristics, damage or stain on them, or if the player lens is dirty.
- The reflection factor of CD-RW is lower than that of other CDs, possibly causing CD-RW to take longer time to read.
- CD-R and CD-RW of MP3 format cannot be played back.

Caution for DualDisc playback

The Non-DVD side of a “DualDisc” does not comply with the “Compact Disc Digital Audio” standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

CARE AND MAINTENANCE

CLEANING THE EXTERIOR

- Disconnect the system from AC power before cleaning the exterior of the unit with a soft dust cloth.

HANDLING CDS

- Do not touch the signal surfaces. Hold by the edges, or by one edge and the hole.
- Do not affix labels or adhesive tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speed inside the player. Do not use damaged (cracked or warped) discs.

CLEANING CDS

- Dirty discs can cause poor sound quality. Always keep discs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a disc becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or antistatic agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents which may cause damage to the disc surface.

TAPE CARE

- Do not expose tapes to sunlight or store in hot places. High temperatures may warp the shell or damage the tape itself.
- Keep cassettes in their boxes when not in use.
- Cassette tapes can be erased by magnetic fields produced by magnets, electric motors, electrical transformers, and other devices. Keep tapes away from magnets and magnetic fields.

CLEANING THE TAPE HEADS

Iron oxide particles from the magnetic tape can build up on the parts that come in contact with the tape. These deposits can cause incomplete erasure, muffled playback sound, and might prevent automatic stop.

 
To clean a cassette deck, open the compartment door, press PLAY ◀ and gently clean the heads, capstan, and pinch wheel with a head cleaner.

Always unplug the power cord before cleaning, and allow 30 minutes drying time after using a liquid cleaner.

Clean heads after every 25 hours of use.

- Demagnetize the head occasionally with a head demagnetizing cassette (available from many audio equipment stores).
- Never use any metal objects on or near the tape heads.
- Do not allow any cleaning material to fall into the tape assembly.

REMOTE FUNCTIONS (FOR CD OPERATION ONLY)

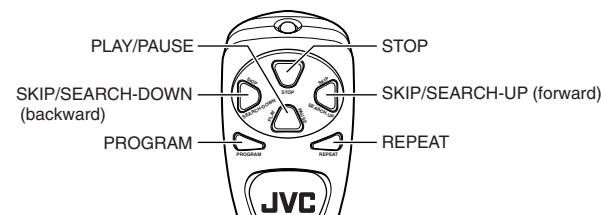

When inserting batteries R03 (UM-4) / AAA (24F)

Match the polarity (+ and -) on the batteries with the + and - markings in the battery compartment on the back of the unit.

TROUBLESHOOTING TIPS

Problem	Solution
System doesn't turn on.	
No sound	
Poor radio reception	
CD doesn't play.	
CD sound skips.	
Distorted or noisy recordings	

SPECIFICATION

CD player

CD capacity	: 1 CD
Dynamic range	: 60 dB
Signal-to-noise ratio	: 75 dB

Tuner

Frequency ranges	: FM 88 - 108 MHz
	: AM 540 - 1 600 kHz
Antenna	: Telescopic antenna for FM
	: Ferrite core antenna for AM

Cassette deck section

Frequency response	: 60 Hz - 10 000 Hz
Wow and flutter	: 0.15% (WRMS)


General

Speaker	: 9 cm cone × 2 (4 Ω)
Power output	: 4 W (2 W + 2 W) at 4 Ω (10% THD) (IEC268-3)
Output terminals	: PHONES × 1 (∅ 3.5 mm, stereo)
Power supply	: AC 230 V ~, 50 Hz
	: DC 9 V (“R20 (SUM-1)/D (13D)” × 6)
Power consumption	: 12 W (at operation), 3 W (on standby)
Dimensions	: 420 mm (W) × 178 mm (H) × 249 mm (D)
Mass	: Approx. 3.2 kg (without batteries)
Accessories provided	: AC power cord × 1
	: Remote control unit × 1
	: Batteries for the remote control unit R03 (UM-4)/AAA (24F) × 2

Design and specifications are subject to change without notice.

JVC**CD PORTABLE SYSTEM****RC-EX26B**

 ENGLISH

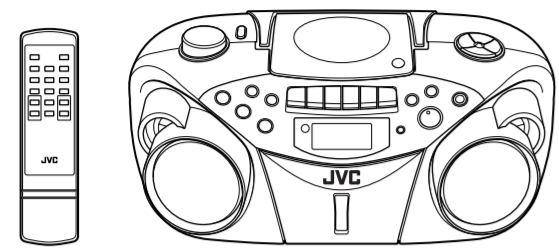**INSTRUCTIONS**

Thank you for purchasing this JVC product. Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit.

0205NSMBICORI
EN ©2005 Victor Company of Japan, Limited

LVT1382-010A (E/EN)

SAFETY PRECAUTIONS**Caution — STANDBY/ON switch!**

Disconnect the mains plug to shut the power off completely. The STANDBY/ON switch in any position does not disconnect the mains line. The power can be remote controlled.

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

- Do not remove screws, covers or cabinet.
- Do not expose this appliance to rain or moisture.

**IMPORTANT FOR LASER PRODUCTS**

 
- CLASS 1 LASER PRODUCT
- CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
- CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

CAUTION -	INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.
VORSICHT !	UNSICHTBARE LASERSTRAHLUNG TRITTS AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITSSVERRIGELUNG ÜBERBRÜCKT IST. NICHT DEM STRAHL AUSSETZEN!
WARNING -	OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAD STRÅLEN ÄR FARLIG.
ADVARSEL -	USYNLIG LASERSTRÅLING VED ÅBNING NÄR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNGDÅ UDSÆTTELSE FOR STRÅLING.


Caution: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

- Front: No obstructions and open spacing.
- Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
- Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

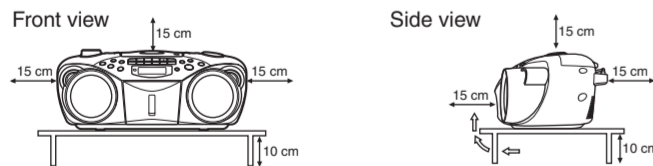
**FIRST THINGS**

 This portable system operates on battery or AC power.

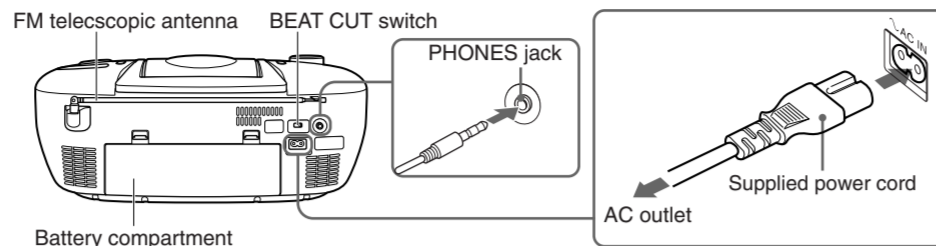**INSERTING BATTERIES**

- Open the battery compartment cover.**
Pull the battery compartment cover toward you while pressing the sections marked by the arrows.

 
- Insert six R20 (SUM-1)/D (13D)-size batteries. (not supplied)**
Be sure to insert the batteries with the (+) and (-) terminals positioned correctly.

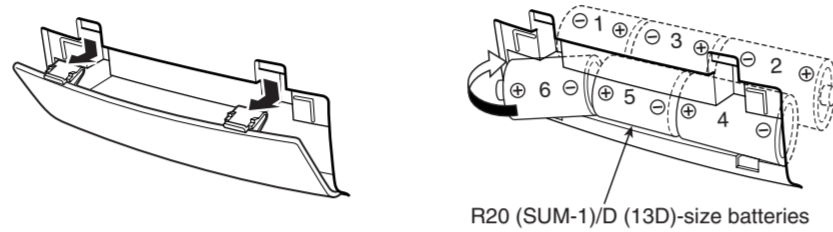

- Replace the battery compartment cover.**

Inserting Batteries into the Remote Control Unit:

 Match the polarity (+ and -) of the batteries. R03 (UM4)/AAA (24F) x2 (supplied)

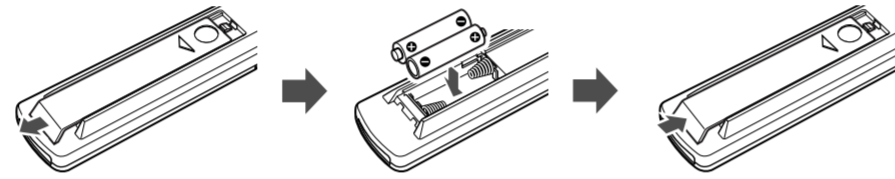

Note: The battery power will be switched off when you plug the power cord into the ~ AC IN jack on the unit.

CAUTION:

- To avoid battery leakage or explosion, handle batteries properly.
- If you are not going to use your system for a month or more, remove the batteries from the battery compartment.
 - Dispose of batteries in the proper manner, according to federal, state, and local regulations.
 - Do not mix with different battery types or with new and old ones, or do not attempt to charge a battery not intended to be recharged.
 - Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

SUPPLYING AC POWER

Plug the power cord into the ~ AC IN jack on the back of the unit, and into an AC power outlet.

Note: To switch off the system completely, unplug the power cord.

CAUTIONS:

 
- ONLY USE JVC POWER CORD PROVIDED WITH THIS UNIT TO AVOID MALFUNCTION OR DAMAGE TO THE UNIT. REMOVE BATTERIES WHEN USING THE POWER CORD.**
- BE SURE TO UNPLUG THE POWER CORD FROM THE OUTLET WHEN GOING OUT OR WHEN THE UNIT IS NOT IN USE FOR AN EXTENDED PERIOD OF TIME.**

USING HEADPHONES


Connect commercially available headphones to the PHONES jack on the rear of the main unit. While the headphones are connected, the speakers do not produce any sound. Before connecting the headphones, make sure to turn down the sound volume.

ANTENNAS

The AM antenna is built in, so adjusting the position of the unit may help AM reception. The FM telescopic antenna on the back of the unit can be extended and rotated for better FM reception.

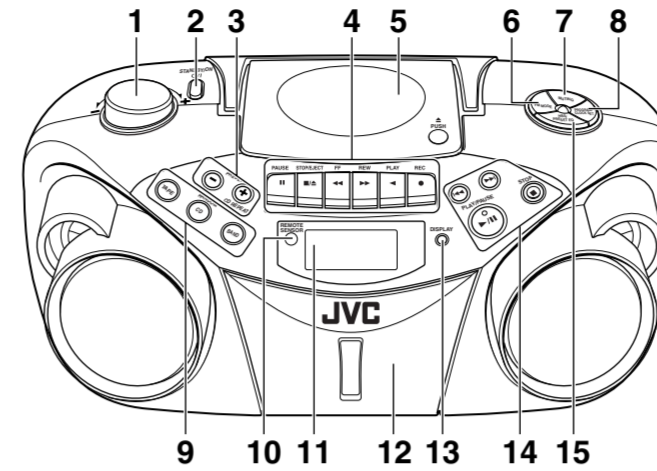NAMES OF PARTS AND CONTROLS**Top and front sides:****Main unit**

- | | |
|-------------------------------|----------------------|
| 1 VOLUME knob | 9 TAPE button |
| 2 STANDBY/ON button | 10 CD/RANDOM button |
| 3 PRESET - button | 11 TUNER/BAND button |
| 4 PRESET + / CD REPEAT button | 12 TUNER/BAND button |
| 5 Tape operation buttons | 13 DISPLAY window |
| 6 PAUSE button | 14 Cassette deck |
| 7 STOP/EJECT button | 15 DISPLAY button |
| 8 FF button | |
| 9 REV button | |
| 10 PLAY button | |
| 11 PAUSE button | |
| 12 REC button | |
| 13 CD door | |
| 14 FM MODE button | |
| 15 MUTING button | |
| 16 PROGRAM/CLOCK SET button | |

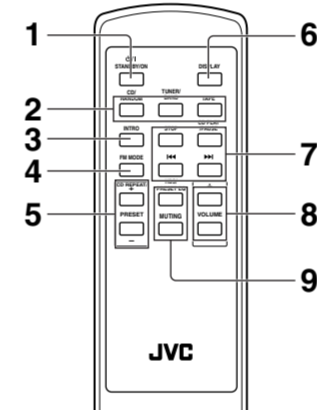 Names of buttons:**Remote control unit**

- | | |
|------------------------------|------------------------|
| 1 STANDBY/ON button | 6 DISPLAY button |
| 2 CD/RANDOM button | 7 STOP button |
| 3 TUNER/BAND button | 8 CD PLAY/PAUSE button |
| 4 TAPE button | 9 HBS/PRESET EQ button |
| 5 INTRO button | |
| 6 FM MODE button | |
| 7 PRESET + /CD REPEAT button | |
| 8 PRESET - button | |

GENERAL CONTROLS

STANDBY/ON - Press to turn on/off the unit.

The display window lights up when the unit is turned on. (Note, however, that the display window does not light even when the unit is turned on if the unit is operated on batteries.)

SETTING THE CLOCK

- Press DISPLAY.
The clock flashes on the display window.
 - Press and hold PROGRAM/CLOCK SET for more than 2 seconds.
The hour digits start flashing.
-
- Press or to adjust the hour, then press PROGRAM/CLOCK SET.
The minute digits start flashing.
-
- Press or adjust the minutes, then press PROGRAM/CLOCK SET.

Notes:

- If there is a power failure, the clock loses the setting and is reset to "0:00." The clock indication will keep flashing until you set the clock again.
- You can also set the clock when the unit is in STANDBY mode. In this case, follow the procedures from step 2.

To show the clock when CD or tuner is selected.

Press DISPLAY.

Each time you press the button, the display changes the clock indication and the normal indication alternately. (Operating the unit while clock indication is displayed changes the display to the normal indication.)

ADJUSTING THE SOUND

Turn the VOLUME knob (or press VOLUME + / - button on the remote control unit) to increase or decrease the volume to desired level. The volume level can be adjusted in 31 steps from "00" to "30".

- Turning off the sound temporarily**
During playback, press MUTING to turn the sound off. The MUTING indicator appears in the display window. Press it again to restore the sound.

- Reinforcing the bass sound**
Press and hold HBS/PRESET EQ so that the HBS indicator appears in the display window. You can enjoy powerful bass sound with the Hyper-Bass Sound effect.

- Selecting the sound mode**
You can select one of the 5 preset sound modes. Press HBS/PRESET EQ repeatedly until the indicator for the sound mode you want appears in the display window.
CLASSIC: Enriched sound with fine treble and ample bass.
ROCK: Powerful sound emphasizing treble and bass.
POP: More presence in the vocals and midrange.
JAZZ: Accented lower frequencies for jazz-type music.
FLAT: Equalizer effect is canceled.

USING THE RADIO**TUNING IN RADIO STATIONS**

- Press TUNER/BAND to enter the tuner mode.
- Press TUNER/BAND to select the band, FM or AM.
- Press and hold or for more than 1 second.
The unit starts searching and stops when a station of sufficient signal strength is tuned in. If you press or briefly and repeatedly, the frequency changes step by step.

Changing the FM reception mode

When an FM stereo broadcast is hard to receive or noisy, press FM MODE so that the MONO indicator appears in the display window.

 
To restore the stereo effect, press FM MODE again so that the MONO indicator goes off. The MONO will be cancelled also when changing the station.

PRESETTING STATIONS


You can preset 10 FM and 10 AM stations.

- Press TUNER/BAND to select the band, FM or AM.
- Press or to tune in the station you want to preset.
- Press PROGRAM/CLOCK SET.

The PROG indicator starts blinking in the display window.



 - Press PRESET + /CD REPEAT or PRESET - to select the preset number while the PROG indicator is blinking.



- Press PROGRAM/CLOCK SET while the PROG indicator is blinking.
The tuned station in step 2 is stored in the preset number selected in step 4. Storing a new station on a used number erases the previously stored one.
- Repeat steps 2 to 5 to preset other stations, using different preset numbers.

Tuning in a preset station

- Press TUNER/BAND to select the band, FM or AM.
- Press PRESET + /CD REPEAT or PRESET - repeatedly until the desired preset number appears.

Notes:

- In some cases, test frequencies have been already memorized for the tuner since the factory examined the tuner preset function before shipment. This is not a malfunction. You can preset the stations you want into memory by following the presetting method.
- If you unplug the AC power cord or if a power failure occurs, the preset stations will be erased in a few days. If this happens, preset the stations again.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>