

 
# Using the Wired Remote Control

**XL-PG5 ONLY**

The remote control can be operated regardless of the hold mode of the unit.

### Preparation:

Release the remote control from the hold mode.

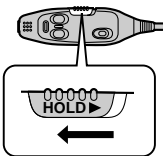

### Operation confirmation tones

When an operation button is pressed, a confirmation tone sounds. Refer to the parentheses in the illustration for the different types of confirmation tones.

## How to use the wired remote control

<b>To start play</b>	Press once during off or stop mode.  (Beep)	<b>Skip function</b> Press once during play.  <b>Forward</b> (Beep Beep)
<b>To stop play</b>	Press once during play.  (Beep . . . Beep)	<b>Reverse</b> (Beep Beep Beep)
<b>To turn off the unit</b>	Keep depressed during play or stop mode.  (Beep . . . Bee . . . p)	<b>Search function</b> Keep depressed during play.
<b>To adjust the volume</b>	When adjusting the volume using the remote control, position the volume control on the unit between 4 and 6.  (Beep . . . Bee . . . p)	<b>Fast forward/ reverse</b>

# Using the Unit with Optional Accessories

## Using the unit with an audio system

Using a stereo connection cable (not included), you can listen to CDs through your audio system.

- Connect the cable to the amplifier after turning off its power.
- Do not connect the cable to the PHONO jacks on the amplifier.
- Obtain the optional connecting cable if the amplifier comes with mini-phone jacks.
- Adjust the volume level on the amplifier.

## Using the unit with a car audio system

XL-PV300 comes with the car adaptor and car audio cassette adaptor.

- Car adaptor (CA-R455)
- Car audio cassette adaptor (CA-RC4/CA-RC5)

### For connection to the car audio system:

 
Connect the car audio cassette adaptor to the unit's headphone jack. (When doing this, keep the unit's VOLUME control at a setting between 4 and 6.)

If there is an Aux jack in the car audio system, connect the OUT jack of the CD player with the Aux jack using a 3.5 mm diameter stereo mini-plug signal cord (optional). Depending on the automobile used, noise may occur, and in that case, it is recommended that a KS-U32 noise filter (optional) be used.

### Note:

It may not be possible to use the unit with some types of car stereo owing to restrictions imposed by the construction of the car audio cassette adaptor.

For further details, refer to the instructions of the part concerned.

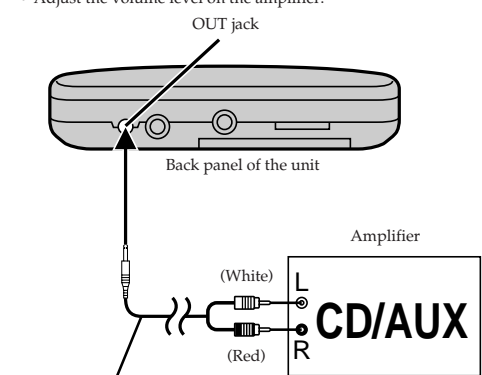

Stereo connection cable (not included)

### Note:

Sound quality changes when HBS is selected, but volume is reduced by approximately fifty percent.

# Specifications

## Portable CD player

Type : Compact disc player  
Signal detection system : Non-contact optical pickup (semiconductor laser)  
Pickup system : 3 beam laser  
Number of channels : 2 channels (stereo)  
Frequency response : 20 Hz to 20,000 Hz  
Wow & flutter : Unmeasurable  
Output : Headphone (3.5 mm dia, stereo × 1)  
9 mW/ch at 10 % THD/16 ohms matching impedance (16 ohms to 1 kohm)  
Out (3.5 mm dia, stereo × 1) 0.6 V/50 kohms

Duration of battery (with T.S.P. ON) : Approx. 6 hours  
when using two rechargeable batteries (BN-R122 or equivalent) charged for 3 hours,  
Approx. 21 hours (XL-PG5), approx. 20 hours (XL-PG3/PV-300) when using two alkaline batteries (LR6-Panasonic)

Power requirements : DC 3 V ("R6" size battery × 2)  
DC 2.4 V (rechargeable battery × 2)  
DC IN 4.5 V

Dimensions (W×H×D) : 128.5×28.9×144 mm (5-1/16"×1-3/8"×5-21/32")  
(Excluding buttons and controls)

Mass : Approx. 220 g (0.48 lbs)  
(without batteries)

## AC adaptor

Input power source : AC 230 V, 50 Hz  
Output voltage : DC 4.5 V, 0.8 A

\* Design and specifications are subject to change without notice.

# Troubleshooting Guide

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

Problem	Check this
Cannot close cover.	Is the disc properly secured in place?
Cannot play discs.	<ul style="list-style-type: none"><li>Is the unit in HOLD status?</li><li>Is the disc properly secured in place?</li><li>Is there moisture condensation on the lens? (Wait for about an hour and then try again.)</li></ul>
Cannot remove disc.	Did you press the PUSH button to release the disc?
Tracks on disc do not play in order, starting with the first track.	Is the RESUME, NORMAL, RANDOM (play mode) selector in the NORMAL position?
Cannot hear music—too noisy.	<ul style="list-style-type: none"><li>Is the headphones plug inserted all the way?</li><li>Is the plug dirty? (Wipe away dirt on the plug.)</li></ul>
TV picture is distorted. Radio reception is noisy.	Are you using the unit body too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)

# Cautions

 
## Rechargeable batteries

- Only the BN-R122 battery can be recharged.
- If the power delivered by the batteries lasts for a very short time after recharging, it means that the batteries' service life is over. Do not use them any more.
- Recharging already charged batteries will shorten their service life.
- When recharging batteries for the first time or when they have not been used for a long period of time, the play time may be shorter than usual. In a case like this, repeatedly recharge and discharge the batteries. This will restore them to their regular state.
- Do not allow any metal objects to touch the terminals of rechargeable batteries since this may cause short-circuiting which is dangerous.
- Do not peel off the plastic covering on the rechargeable batteries. Short-circuiting may occur which is dangerous.

## Dry cell batteries / rechargeable batteries

To prevent damage to the batteries and electrolyte leakage, heed the following points.

- Align the ⊕ and ⊖ polarities properly when inserting the batteries.
- Do not mix different types or makes of batteries or old and new batteries.
- Remove the batteries if you do not plan to use the unit for a long period of time.
- Do not throw batteries into a fire, and do not short-circuit, disassemble or subject them to excessive heat.
- Do not attempt to recharge dry cell batteries.

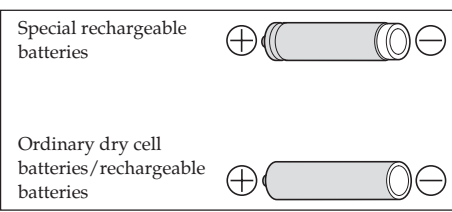

**Notice about the rechargeable battery**  
The battery is designated recyclable.  
Please follow your local recycling regulations.

## When driving a car

 
In the interest of traffic safety, do not operate the unit while driving.

# Concerning Compact Discs


Only compact discs bearing this mark can be used with this unit.



However, continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit.




## How to remove a disc from its case

 

## How to store the disc in its case



 
## How to hold a disc



## If the surface is dirty

 Wipe it with a damp cloth and then wipe dry. Wipe from the center toward the outer circumference.



## If moisture has formed on a disc

When moisture has formed because the disc was brought suddenly into a warm room from a cold environment, wipe it off using a soft dry cloth.

## When storing discs

- Avoid locations which are
  - Exposed to direct sunlight.
  - Susceptible to high levels of humidity or dust.
- Directly exposed to heat from a heating appliance.
- On top of a car dashboard or near the rear window.

## Handling precautions

- On the label side (the side with writing) Do not write anything using a pencil, ball-point pen, etc. Do not stick on paper or labels.
- On the disc (shiny) side Handle this side carefully to keep it free from fingerprints or scratches. Do not use record cleaners, solvents, etc.
- Do not attach labels or stickers to CDs. Do not use CDs with exposed adhesive from tape or left over peeled off stickers.
- Do not use scratch-proof protectors or covers other than those specified for use with this unit.

**CAUTION!**  
THIS PRODUCT UTILIZES A LASER.  
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.  
DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

**WARNING:**  
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Marking sign is located on bottom of the unit.

 
DANGER	INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. AVOID DIRECT EXPOSURE TO BEAM.	(Bottom of product)
ADVARSEL	USYNLIG LASERSTRÅLING VED ÅBNING. VÆR SIKKERHEDSFRYDBYREDE ER UDE AF FUNKTION. UNDGÅ UDSETTELSE FOR STRÅLING.	(Påsat under apparatet)
VARO!	AVATTAESSA JA SUOJALUKUTUS OHTETTAESSA OLET ALTTIINA NÄKYMÄTÖNTÄ LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.	(Tuotteen pohjassa)
WARNING	ÖSYNLIG LASERSTRÅLING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN.	(Apparatens undersida)
ADVARSEL	USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNDGÅ UDSETELSING FOR STRÅLEN.	(Produktets underside)
VORSICHT	UNGSICHTBARE LASERSTRAHLUNG. WENN ABRÜCKUNG GEÖFFNET UND SICHERHEITSVERriegELUNG ÜBERBRÜCKT, NICHT DEM STRAH. AUSSETZEN.	(Unterseite des Gerätes)

## Precautions for Listening with the Headphones

- Do not play your headphones at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- Do not use while operating a motorized vehicle. It may create traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headphones is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

# JVC

## PORTABLE CD PLAYER XL-PG3/XL-PG5/XL-PV300

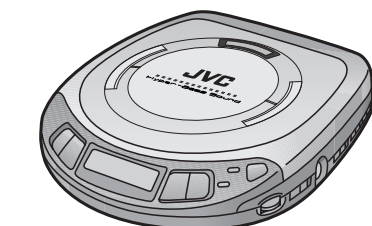

## INSTRUCTIONS

### Supplied Accessories

 
Check the packing carton for these accessories.

AC adaptor (RFEA 417B) .....	1 pc.
Headphones .....	1 pc.
Car adaptor (CA-R455) (XL-PV300) .....	1 pc.
Car audio cassette adaptor (CA-RC4/CA-RC5) (XL-PV300) .....	1 pc.
Wired remote control (XL-PG5) .....	1 pc.
Rechargeable Ni-Cd batteries (BN-R122) (XL-PG5) .....	2 pcs.

Remove the rechargeable batteries from their case before use. Use numbers indicated in parentheses when asking for replacement parts.

Thank you for purchasing this JVC product. Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit.

Bottom of the unit

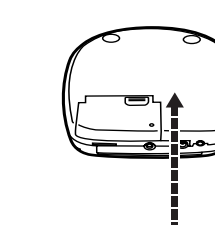

**CLASS 1 LASER PRODUCT**



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>