

JVC




DIGITAL VIDEO PRINTER

GV-DT1

ENGLISH

Please visit our CyberCam Homepage on the World Wide Web and answer our Consumer Survey (in English only):

<http://www.jvc-victor.co.jp/index-e.html>

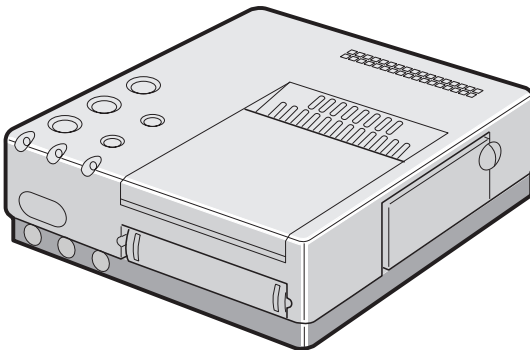

INSTRUCTIONS





SAFETY PRECAUTIONS

WARNING:
TO PREVENT FIRE OR SHOCK
HAZARD, DO NOT EXPOSE
THIS UNIT TO RAIN OR
MOISTURE.

CAUTION

- When you are not using the unit for a long period of time, it is recommended that you disconnect the power cord from the mains outlet.
- Dangerous voltage inside. Refer internal servicing to qualified service personnel. To prevent electric shock or fire hazard, remove the power cord from the mains outlet prior to connecting or disconnecting any signal lead or aerial.

The STANDBY/ON /I button does not completely shut off mains power to the unit, but switches operating current on and off. "  " shows electrical power standby and " I " shows ON.
The mains outlet shall be installed near the unit and shall be easily accessible.

NOTE:

The rating plate (serial number plate) and safety caution are on the bottom and/or the back of the main unit.

IMPORTANT (for U. K. owners)

Connection to the mains supply in the United Kingdom.

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain a proper safety approved extension lead/adaptor or consult your dealer.

 
BE SURE to replace the fuse only with an identical approved type, as originally fitted, and to replace the fuse cover.

If nonetheless the mains plug is cut off remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied fitted with a mains plug then follow the instructions given below:

DO NOT make any connection to the Larger Terminal coded E or Green.

The wires in the mains lead are coloured in accordance with the following code:



If these colours do not correspond with the terminal identifications of your plug, connect as follows:

Blue wire to terminal coded N (Neutral) or coloured Black.

Brown wire to terminal coded L (Live) or coloured Red.

If in doubt — consult a competent electrician.

Some Do's And Don'ts On The Safe Use Of Equipment


This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

- DO** read the operating instructions before you attempt to use the equipment.
- DO** ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.
- DO** consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.
- DO** be careful with glass panels or doors on equipment.
- DON'T** continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way — switch off, withdraw the mains plug and consult your dealer.
- DON'T** remove any fixed cover as this may expose dangerous voltages.
- DON'T** leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.
- DON'T** use equipment such as personal stereos or radios so that you are distracted from the requirements of road safety. It is illegal to watch television whilst driving.
- DON'T** listen to headphones at high volume, as such use can permanently damage your hearing.
- DON'T** obstruct the ventilation of the equipment, for example with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.
- DON'T** use makeshift stands and NEVER fix legs with wood screws — to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.
- DON'T** allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL...

- **NEVER** let anyone especially children push anything into holes, slots or any other opening in the case — this could result in a fatal electrical shock;
- **NEVER** guess or take chances with electrical equipment of any kind — it is better to be safe than sorry!

Exercise caution when moving the printer. If you drop the unit, do not attempt to use it. If during use you notice that the cabinet is damaged, shut the printer down, unplug it and contact your JVC dealer. Use of the printer under these conditions can lead to fire or electric shock.

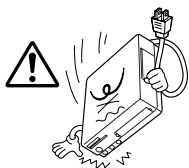

DO NOT place heavy objects on the printer's power cord, or leave the cord near any heat-generating appliance, as this can damage the cord. Avoid excessive pulling or twisting of the power cord. If the power cord becomes cut or otherwise damaged, contact your JVC dealer. When unplugging the printer, DO NOT pull on the cord. Hold the plug itself and remove it from the AC outlet. Use of the printer with a damaged power cord can lead to fire, electric shock and unit malfunctions.



DO NOT remove the cover and attempt to repair or modify the printer. There are high-voltage components within the unit, and the risk of electric shock and unit malfunctions exists. If a problem occurs, contact your JVC dealer.



Illustrations of this video printer may differ slightly from production models.

ABOUT THERMAL HEADS

- The thermal heads, necessary for printing, are located within the unit. The heads can become extremely warm. To prevent possible burns and injuries, do not touch the thermal heads.
- When the printer is used for extended periods, the thermal heads experience wear and tear just like VCR heads. As the thermal heads become worn, print quality will gradually decrease. When you notice a decline in quality, it is possible that the heads may need to be replaced. Consult your JVC dealer.

MOISTURE CONDENSATION

If condensation occurs inside the printer, it may adhere to print paper during printing, causing poor quality prints and paper jams. If you think condensation may exist within the unit, let the unit sit for at least 2 hours (with the power on) to dry sufficiently. If paper is stuck within the unit, remove it before turning the power on. Unused print paper subjected to moisture should not be used for printing.

- Condensation may occur in the following situations:
 - 1) In a room when the heater suddenly comes on;
 - 2) In the direct path of cool air from an air conditioner;
 - 3) When the unit is moved from a cool place to a warm place.

DUST

Due to dust or lint adhering to print paper, or to extreme variations in temperature, a small degree of colour smearing or lines may be visible in prints.

Failure to heed the following precautions may result in damage to the printer.


1. **DO NOT** place the printer . . .
 - ... in an environment prone to extreme temperatures or humidity.
 - ... in direct sunlight.
 - ... in a dusty environment.
 - ... in an environment where strong magnetic fields are generated.
 - ... on a surface that is unstable or subject to vibration.
2. **DO NOT** block the printer's ventilation openings.
3. **DO NOT** place heavy objects on the printer.
4. **DO NOT** place anything which might spill on top of the printer.
5. **AVOID** violent shocks to the printer during transport.

CAUTION:

Changes or modifications not approved by JVC could void user's authority to operate the equipment.


Printing Directly from Your Digital Camcorder

- A desired scene may be printed directly from your digital camcorder by connecting this unit to it with a DV connector.

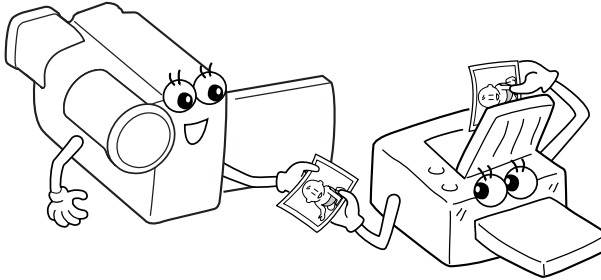


Cordless Printing with IrTran-P

- This printer conforms to the IrTran-P standard which ensures a greater compatibility in the field of video communications. It therefore offers a superior system extensibility for the future providing system compatibility with the products of different manufacturers.
- With this unit you can print from any digital still camera compatible with IrTran-P without using a cable connection.

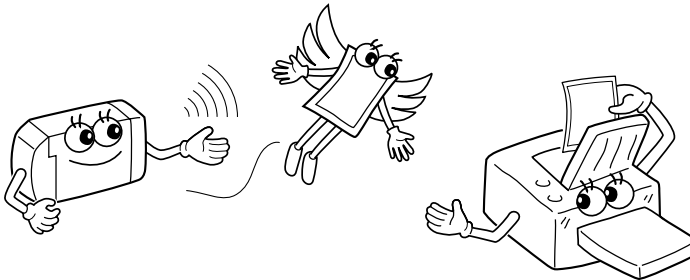

Sending a Picture Stored in the Printer to your PC


- You can store a picture from a digital camcorder or a digital still camera in the printer and transfer it to your PC.
- More creative printing work may be achieved by processing your picture data with the provided MGI PhotoSuite or other commercially available painting software.

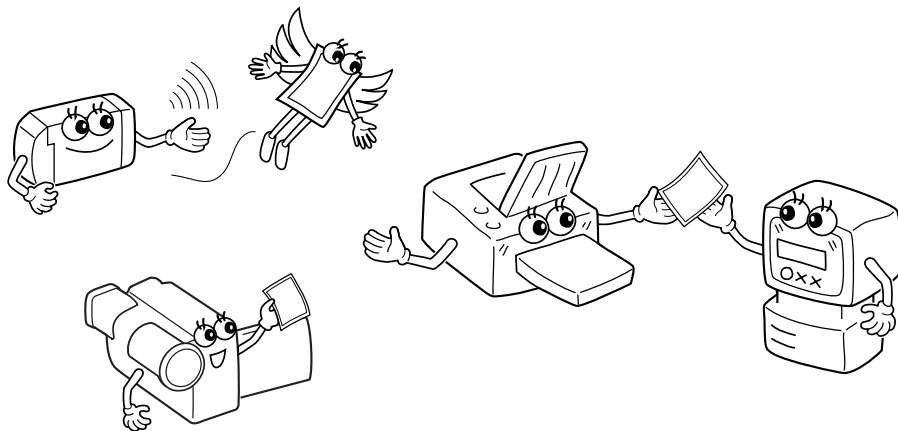


CAUTIONS	3
MAJOR FEATURES	4
CONTROLS, INDICATORS AND CONNECTORS	8
Front View	8
Rear View	9
HOW TO MAKE CONNECTIONS (DV CONNECTION)	10
HOW TO MAKE CONNECTIONS (IrDA RECEPTION)	11
INSTALLATION OF INK CASSETTE	12
LOADING THE PAPER TRAY	14
PREPARATION	15
PRINTING FROM A DIGITAL CAMCORDER (DV CONNECTION)	16
PRINTING FROM A DIGITAL STILL CAMERA (IrDA RECEPTION)	18
PERSONAL COMPUTER PRINTER SECTION	21
INTRODUCTION	22
PERIPHERAL UNIT CONNECTIONS	24
HOW TO INSTALL THE SOFTWARE	25
OPEN & CLOSE (Basic Operation Procedure)	26
CONTROLS AND OPERATIONS	28
PRINTING PROCEDURE	31
CAPTURING A PICTURE INTO the PC	32

PRINTING FROM the PC	33
How the Setup Dialog Works	34
How the Spooler Window Works	35
INDICATIONS AND MESSAGES	36
Lamp Indications	36
Printer Section	39
PC Printer Section	40
Other Problems:	42
When Paper Jams	43
SPECIFICATIONS	44

PROVIDED ACCESSORIES

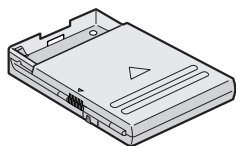


Paper Tray

 

Blank Paper Sheet Set

 - Standard Print Paper (10 sheets)
- Ink Cassette (10 prints)



CD-ROM

- MGI PhotoSuite




Floppy Disk



DV cable


- It should be noted that it may be unlawful to print from pre-recorded tapes or discs without the consent of the owner of copyright in the video recording, broadcast or cable programme and in any literary, dramatic, musical, or artistic work embodied therein.
- The copyright for the program which provides IrDA infrared communications for this software is owned by Okaya Systemware Co., Ltd.
IrDA Protocol Stack "Deep Core™" Okaya Systemware Co., LTD.

Front View

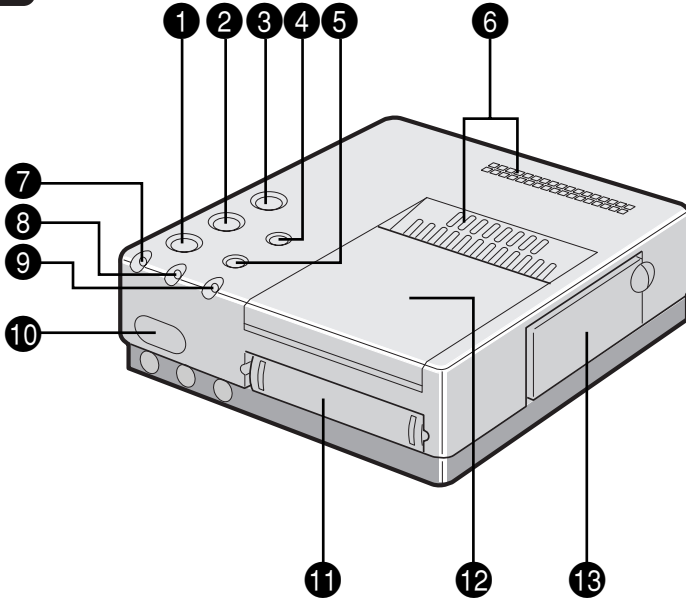

- 1 PRINT button**
- 2 IrDA/DV button**
 - Switches the video input between IrDA and DV.
- 3 STANDBY/ON ϕ /I button**
 - Turns the printer on and off.
- 4 MEMORY button**
 - Used to store a video picture delivered through the DV connector.
- 5 ON LINE button**
 - Press this for video communications with your PC.
- 6 Vent holes**
 - Periodically clean these holes with a vacuum cleaner. Make sure the printer's power cord is unplugged.
- 7 IrDA lamp**
- 8 DV lamp**
- 9 ON LINE lamp**
 - Lights when the PC mode is on.
- 10 IrDA sensor**
 - Receives a video data through the IrDA communication system.
- 11 Paper Tray Insertion Slot**
 - Insert the paper tray into this slot.
- 12 Output Tray**
 - Printed sheets are stacked here.
 - * Be sure to open the tray when using the printer.
- 13 Ink Cassette Insertion Slot**
 - Open this to load or unload the ink cassette.

Rear View

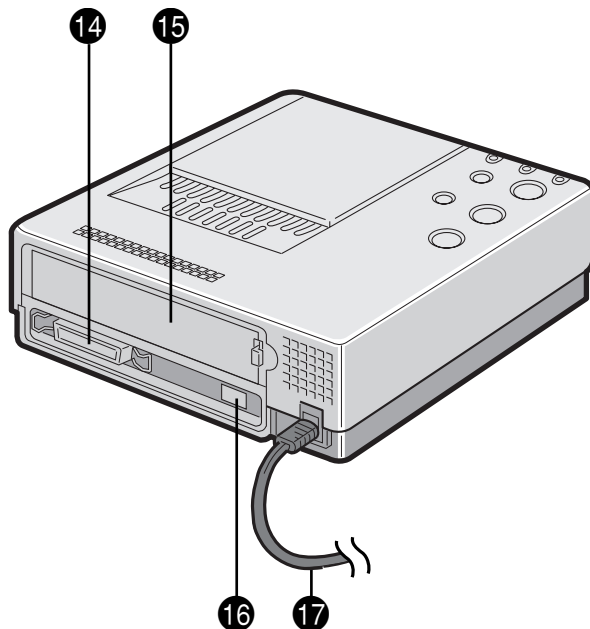**14 PARALLEL Connector**

- Connect to the parallel (printer) terminal of a computer using a commercially available printer cable.

15 Service Door for Jammed Paper Removal

- Open this door when paper is jammed.
- * Do not open this door unless paper is jammed. Be sure to close this after clearing the paper jam.

16 DV connector

- Used to receive a video data from a digital camcorder with a DV connector.


17 Power Cord

- Plug into an AC outlet (AC 220 – 240 V).

10_{EN} HOW TO MAKE CONNECTIONS (DV CONNECTION)

Some televisions and video cassette recorders require a specific type of output cable. Refer to their instruction manuals for details on television and VCR connections to the GV-DT1.


WHEN PRINTING FROM A DIGITAL CAMCORDER WITH A DV CONNECTOR

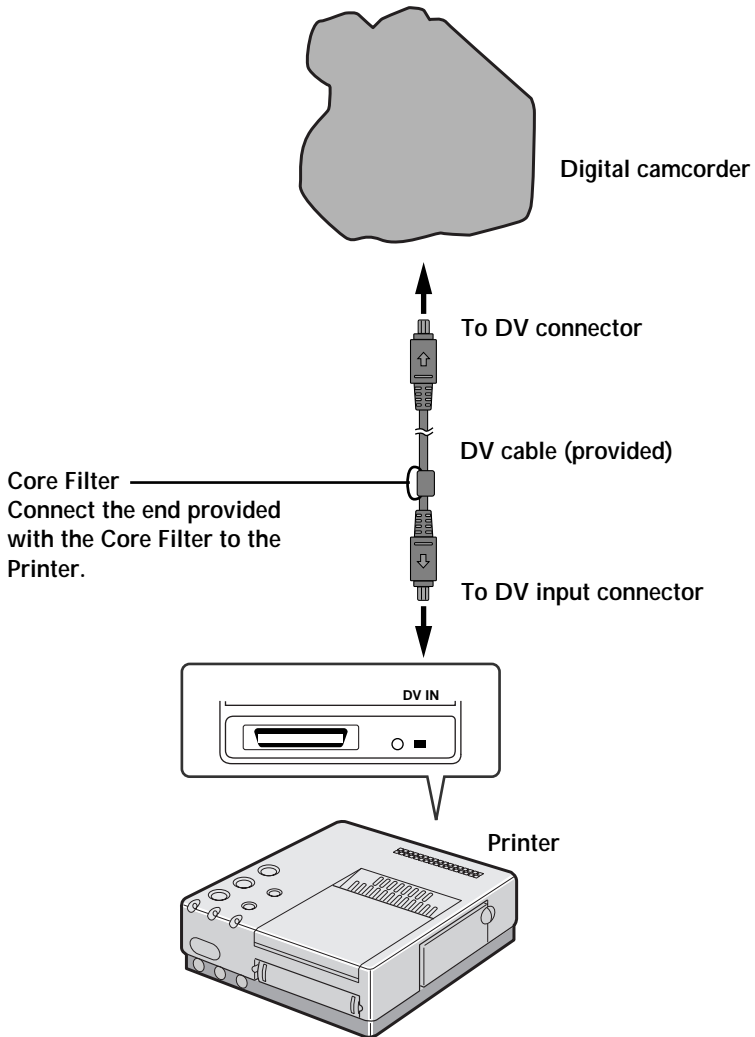

WHEN PRINTING FROM AN IrTran-P COMPATIBLE DIGITAL STILL CAMERA

IrTran-P (Infrared Transfer Picture):


An infrared video data communications format which enables infrared communications of video data between compatible units of different manufacturers.

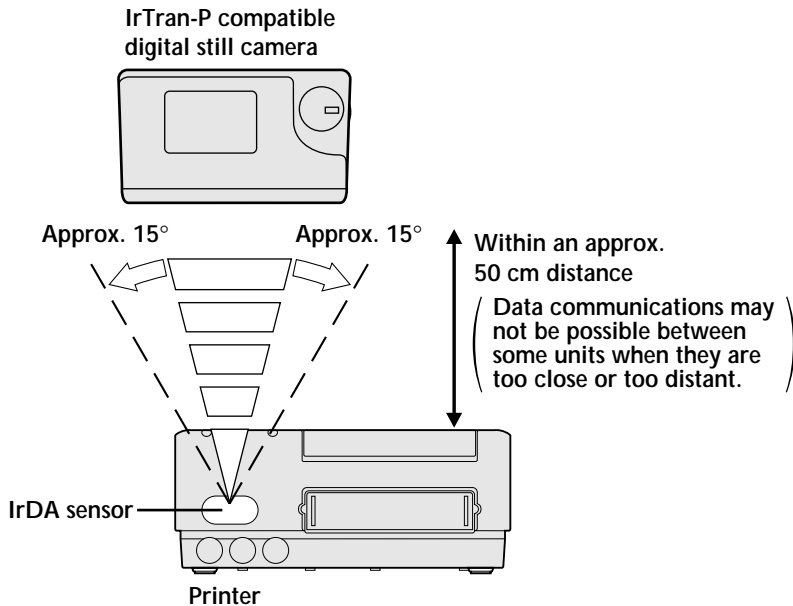


Video data communications with the IrDA infrared communications system can be accomplished only between one transmitter and one receiver.

If a picture is sent from one digital still camera to more than one printer, the picture can be received and printed only by the printer that has first responded to the transmission.


1

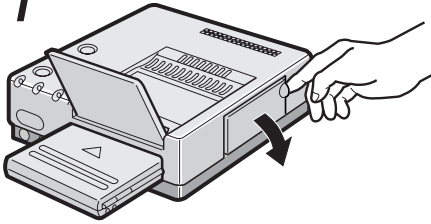



2

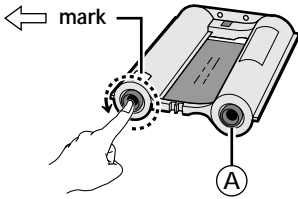

3

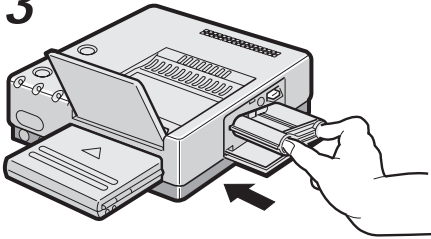

4

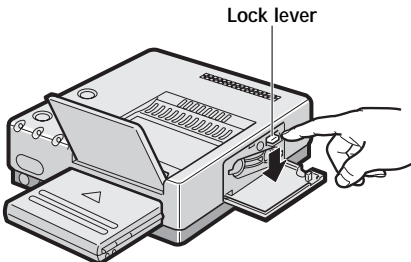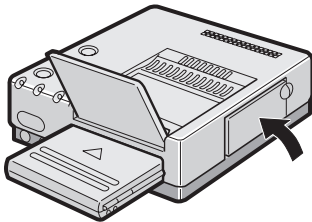

Lock lever

Install the ink cassette included with the available blank paper sheet set.

1 OPEN CASSETTE DOOR

Pull the right top of the door in the direction indicated by the arrow to open it.

2 TAKE UP SLACK

Turn the roller on the side with the "↔" mark in the direction of the arrow.

Do not turn the part marked with Ⓐ.

3 INSTALL INK CASSETTE

Insert the cassette label-side up from the end marked. Push it until you hear a click.

4 CLOSE CASSETTE DOOR

Push the right side of the door.

•The door clicks when it is fully closed.

When removing ink cassette

Push the lock lever in the direction of arrow.

The ink cassette is unlocked and can be removed.

CAUTION

Do not stick your fingers into the ink cassette storage space. You may be burned or injured.

About Blank Paper Sheet Sets (optional)

You must use one of the sets shown in the following chart:

SET	CONTENTS	USES
PV-50SFAE (Standard type)	<ul style="list-style-type: none"> • Standard Print Paper (50 Sheets) • Ink Cassette (50 Prints) 	Print your favorite images, just like snapshots.
*PV-25SFAE (Sticker type)	<ul style="list-style-type: none"> • 1-Picture Single-Print Sticker Paper (15 Sheets) • 16-Picture Multi-Print Sticker Paper (10 Sheets) • Ink Cassette (25 Prints) 	Make customized seals and stick them on greeting cards, envelopes, letters, etc.
PV-25UFAU (Super Fine HG type)	<ul style="list-style-type: none"> • Standard Print Paper (25 Sheets) • Ink Cassette (25 Prints) 	Suitable for storing Print paper.

* This unit does not incorporate a function for splitting the screen into 16 pictures. Printing on 16-picture multi-print sticker paper is impossible unless the digital still camera or the application software has a 16-picture splitting function.

When multiple pictures are printed on a sheet, the print positions may vary from the intended positions.

Before Printing


- Do not touch printing side of the paper.
- Do not use paper that is torn or curled, as this can result in paper jamming.
- Do not use paper that is wet or damp. Printing may not be possible and paper jamming may occur.
- Do not touch or pull out the ink cassette's ink sheet.
- Keep young children away from the ink cassette's ink sheet.
- When the ink cassette is empty, replace it with a new one. An empty ink cassette cannot be used. Do not try to rewind and re-use cassette.
- Do not expose the paper to high temperatures, high humidity and/or direct sunlight.
- You can write on one side of a PV-50SFAE print sheet.
- If you want to write something or stick a stamp on a PV-50SFAE sheet, wait until printing is finished. If you write something or stick something on before printing, the printer may not work properly.
- Carefully read the precautions in the blank paper sheet set box and on the back of the blank sheet set before using.

After Printing

- If you touch a fresh print with wet hands, the print image may be discolored.
- If a print absorbs organic cleaning solvents (alcohol, ester, keton, etc.), the colours will fade.
- If cellophane tape or soft PVC are affixed to a print, the chemical reaction will cause accelerated colour fading.
- When writing on a PV-50SFAE print sheet, be sure to use a pencil or an oil-based writing utensil. If you apply too much pressure, you'll leave imprints on the print sheet.


Storage

- Avoid storing prints in areas subject to high temperatures or humidity, or near a heater or heat-generating device.
- Do not store prints in a soft plastic folder. Accelerated colour fading may result due to the chemical reaction, or the print(s) may stick to the file.
- Do not store 2 prints with the printed sides touching, as the sheets may stick together.
- Store print paper in its box, on a level surface. Failure to do so may cause the print paper to curl or bend, which can result in a paper jam within the unit.

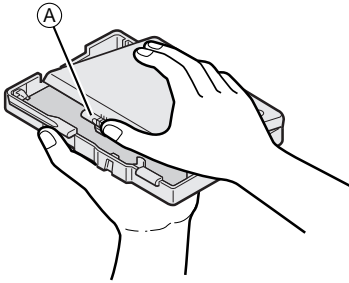

Opening the paper tray


- Open the lid while pushing ①.

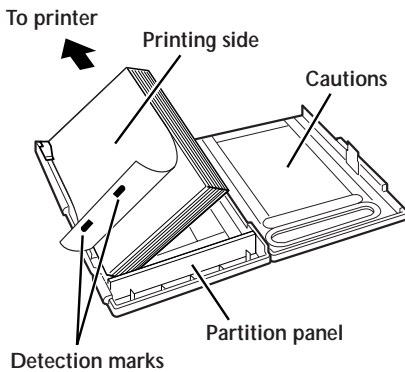

Inserting blank paper sheets in the paper tray

1. Keep the partition panel upright. If it is tilted, get it upright by pushing the back of the paper tray.
2. Load print sheets in the tray, placing the side with the detection marks toward you, face down.
 - Sticker sheets are not provided with detection marks. Simply load them so that the printing side faces upward.
 - The tray can hold up to 25 sheets at one time.

Be sure to read "Precautions when inserting printing paper" on the back of the paper tray lid.

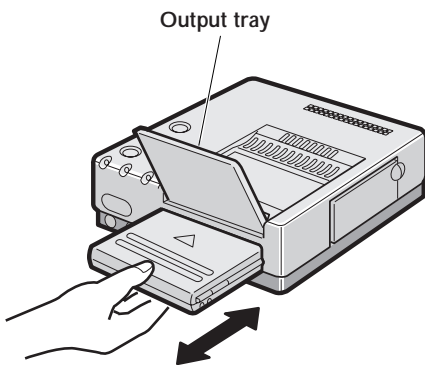

Loading/unloading the paper tray

- When loading, push the tray until it clicks.
- When unloading, push the tray slightly to unlock the latch, then pull it out.

- Before printing, make sure everything is set up and ready.

1 Have a Blank Paper Sheet Set ready. (page 13)



2 Install the ink cassette in the printer (page 12)



3 Place the blank paper sheets in the paper tray and load the tray (page 14).

- Use print sheets and ink cassette from the same kit.





4 Open the output tray.



5 Connect image source to the printer (page 10).



6 Plug the printer's power cable into an AC outlet and press the  button.



- Power comes on and the  indicator lights.



You are now ready to print. For specific printing instructions, read the page corresponding to the type of printing you want to do (pages 16 through 19).

Preparation

- See page 10 for connection.

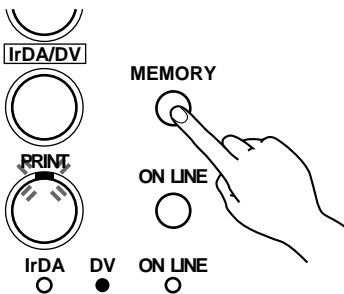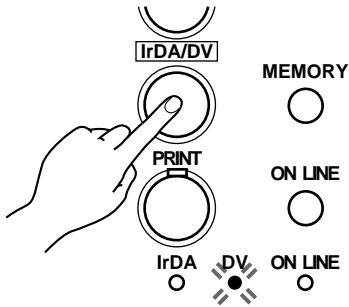

1 SET THE CAMCORDER TO PLAY

- Refer to the instruction manual of your camcorder.

2 PRESS THE IrDA/DV BUTTON OF THE PRINTER


- When the DV lamp is
 - Blinking : Video data is being received by the printer.
 - Lighting : Video data is not under reception. Check for proper connection referring to page 10.

3 WHEN YOU HAVE REACHED THE SCENE YOU WANT TO PRINT, SET THE CAMCORDER TO STILL PICTURE

4 PRESS THE PRINTER MEMORY BUTTON

- The picture you want to print is stored in memory.
- The PRINT lamp is blinking during video data conversion (for about 40 seconds).

When you want to transmit the stored picture to your PC, see "Capturing a Picture into the PC" on page 32.

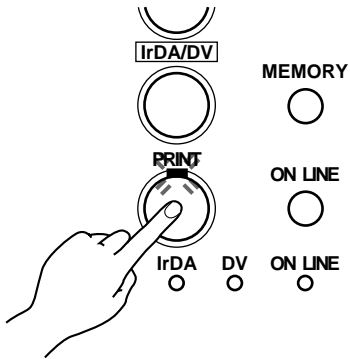

5 WHEN THE PRINT LAMP STOPS BLINKING AND LIGHTS, PRESS THE PRINT BUTTON

- The PRINT lamp blinks and printing starts.
- Printing is finished when the print paper is discharged with the PRINT lamp lit.



- If you want to print the same picture again, press the PRINT button again after printing has once finished. Every pressing of the PRINT button produces one print copy.
- If you want to print another picture, repeat the steps 3 to 5.

18_{EN} PRINTING FROM A DIGITAL STILL CAMERA (IrDA RECEPTION)

When using a digital still camera compatible with IrTran-P, please refer also to the instruction manual provided with the camera.

Preparation

When only storing a picture	When storing and printing a picture
Remove the paper tray from the printer.	Load the paper tray containing print sheets. When picture data is sent from the digital still camera, a copy is automatically printed.

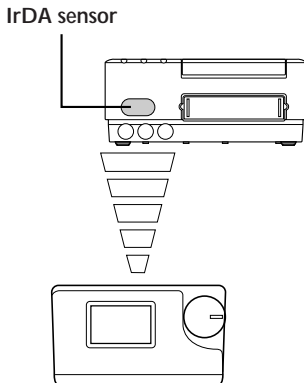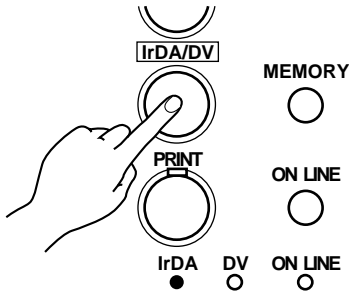

1 PRESS THE PRINTER IrDA/DV BUTTON TO START THE IrDA LAMP LIGHTS

2 STORE THE PICTURE YOU WANT TO PRINT IN THE DIGITAL STILL CAMERA

- Refer to the instruction manual provided with the camera for details.

3 TRANSMIT THE PICTURE IN THE CAMERA TO THE PRINTER

- Aim the IrDA transmitter of the digital still camera at the IrDA sensor of the printer.
- The picture data is sent from the digital still camera to the printer.


- Refer to the instruction manuals provided with the machines in use for details of their operation.
- The DV and ON LINE lamps blink with the paper tray removed. Press the ON LINE button to light the ON LINE lamp, so as to cancel blinking.
- If you want to transmit the stored picture to your PC, refer to "Capturing a Picture into the PC" on page 32.

● The picture is automatically transmitted to the printer. A copy is then automatically printed.

- When transmission is finished, the IrDA lamp changes from blinking to lighting.
- Printing is finished when the print sheets are discharged and the PRINT lamp lights.

● Procedure from Picture Data Transmission to Printing

The picture data sent from the digital still camera is automatically printed. The PRINT lamp lights and blinks as indicated below until printing is finished.

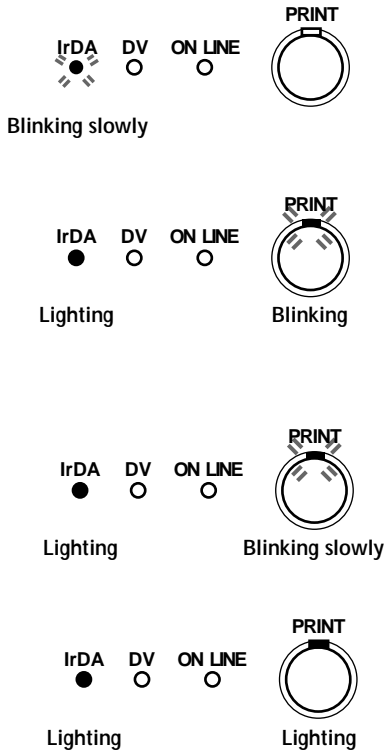

1 PICTURE DATA BEING TRANSMITTED FROM CAMERA TO PRINTER

2 PRINTER CONVERTING THE PICTURE DATA AFTER TRANSMISSION

- This may take several minutes depending on the machines in use or the volume of data transmission.

3 DATA CONVERSION FINISHED

- Printing automatically starts with the paper tray loaded.


4 PRINTING FINISHED

- The picture data is being stored in memory as long as the PRINT lamp is lit. Every pressing of the PRINT button produces a print copy of the same picture.
- When you want to print another picture, repeat the steps 2 and 3 on the previous page.
- Data communications may be variable or impossible depending on the lighting condition, battery consumption, communications distance and sending and receiving angles.

Lined writing area with horizontal lines.

PERSONAL COMPUTER PRINTER SECTION

- The Readme.TXT file provides additional information for setup and information that is not included in the instruction manual. Please read the file before installing the provided software program.
- You can find the latest information (in English) on the provided software program at our www server:
<www><http://www.jvc-victor.co.jp/>
- If you want to process the picture, see the Idea Guide of the MGI PhotoSuite included in the CD-ROM.

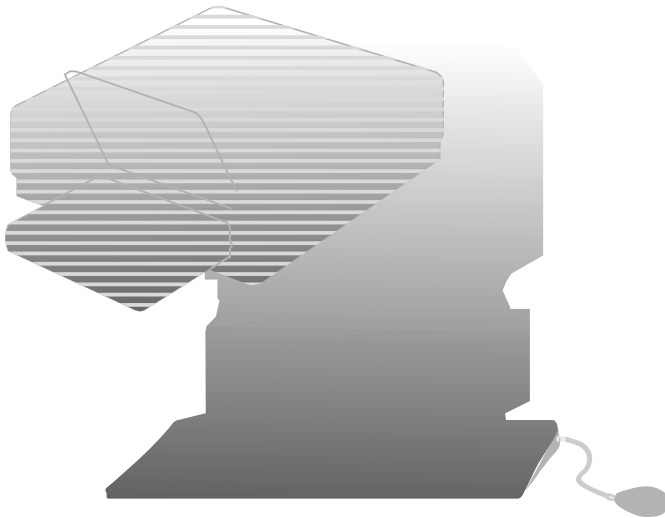

REQUIRED HARDWARE

- Bi-Directional 25-pin printer interface
- 486DX2 or higher CPU

OPERATING ENVIRONMENT


- Personal computer with Microsoft®* Windows®* Operating System Version 3.1 (also verified to run with Microsoft® Windows® 95)
* Microsoft® and Windows® are trademarks of the Microsoft Corporation registered in the United States and other countries.
- 16 MB RAM or more
- At least 8 MB available hard disk space
- Colour display capable of handling at least 640 x 480 dots and 256 colours (Recommended: true colour 24-bit)
- Windows®-compatible mouse connected to PC
- 3.5" 1.44MB floppy disk drive
- CD-ROM drive

THINGS YOU'LL NEED IN ADDITION THE PROVIDED ACCESSORIES

A commercially available printer cable (3 m or shorter). Use one capable of all-pin wiring. Some PCs are compatible only with a particular design of printer cable. Consult your dealer before purchasing a cable.

When using a printer cable which is over 3 m long, a transmission error may occur.

(Example)

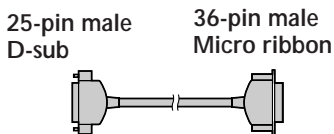

SOFTWARE FEATURES

DRIVER WINDOW

Print orientation, number of prints and image adjustment can be selected in this window.

- Print orientation : Portrait/Landscape
- No. of prints : 1 to 25
- Image adjustment
 - Contrast : Low — High (11 grades from -5 — +5)
 - Brightness : Dark — Bright (11 grades from -5 — +5)

CAPTURE UTILITY WINDOW FOR IMAGE CAPTURING

Images stored in the GV-DT1 can be processed and stored in your computer in the bitmap (BMP) format.


Storage format	Extension: *.BMP format (full colour / 256 tone / gray scale) Image size 640 x 480 / 320 x 240 / 160 x 120	Edit	Undo / Copy / Rotate 90° / Resize / Change colour mode
		Image	Enlarge / Reduce
		Window	Tile / Cascade / Arrange icons / Select file
File	Image capture / Save / Save as / Exit	Help	Help menu / Version

The GV-DT1 "Driver and capture utility software" is not operable as a network printer.

Some televisions and video cassette recorders require a specific type of output cable. Refer to their instruction manuals for details on television and VCR connections to the GV-DT1.

When Printing from PC

- When connecting components, make sure all units are turned off.

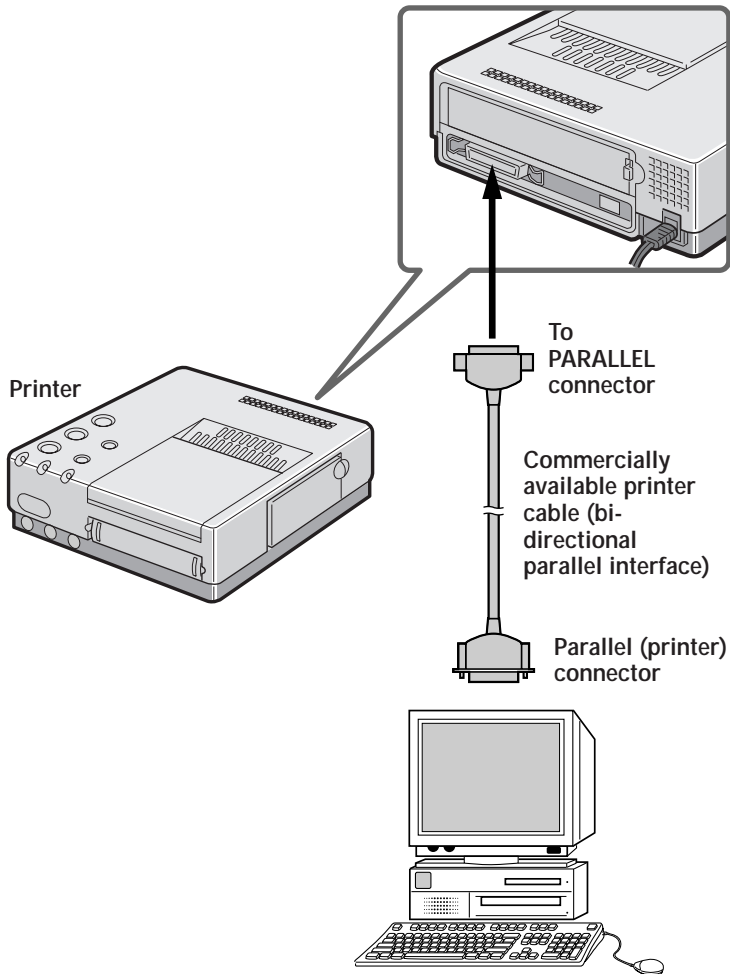

INSTALLING IN A WINDOWS® COMPATIBLE PC

See the instruction manual of Windows® or the PC in use for the basic operation of Windows®.

In the case of Windows® 95

- 1 Start up Windows® 95.**
 - If you have any other applications open, close them all.
- 2 Insert the “Driver & Capture Utility Software” into the floppy disk drive.**
- 3 Double-click the My Computer icon on the desktop.**
- 4 Double-click the floppy disk icon.**
 - The SETUP icon appears on the display.
- 5 Double-click the SETUP icon.**
 - Installation begins.
 - Follow the instruction messages on the display.
 - If you agree to the Software Licensing Agreement, press [Yes]. If not, press [No], and the processing is closed.
- 6 Click the [Reboot] button.**
 - Windows® is once closed and then opened again.
 - This completes the installation procedure.

In the case of Windows® 3.1

- 1 Start up Windows® 3.1.**
 - If you have any other applications open, close them all.
- 2 Insert the “Driver & Capture Utility Software” into the floppy disk drive.**
- 3 Select [File Manager] from the [Main] group on the Windows® display.**
- 4 Select a floppy disk drive.**
 - The setup. exe file appears on the display.
- 5 Double-click the setup. exe file.**
 - Installation begins.
 - Follow the instruction messages on the display.
 - If you agree to the Software Licensing Agreement, press [Yes]. If not, press [No], and the processing is closed.
- 6 Click the [Reboot] button.**
 - Windows® is once closed and then opened again.
 - This completes the installation procedure.

The provided software is capable of displaying 6 languages including English, German, French, Spanish, Italian and Dutch.

The language used by the software is selected automatically at the time of installation according to the language setup of your personal computer.


English is used when your personal computer is set to a language other than one listed above.

GETTING STARTED


You can launch this program using the standard procedure for Windows®. There are some differences between Windows® 3.1 and Windows® 95.

Windows® 3.1 offers a number of ways to launch an application.

1. Open the group of application icons on the program manager and double-click the application you want to open.
2. Select Run in the program manger, select the file name of the application and click the RUN button.
3. Double-click the application name in the File Manager menu.

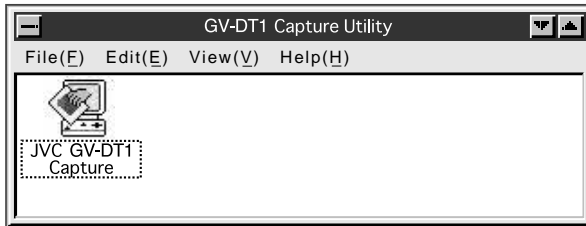

With Windows® 95, click the [START] button on the taskbar, and the program menu appears on the screen. Move the cursor to the program you want to run and click to start the program.

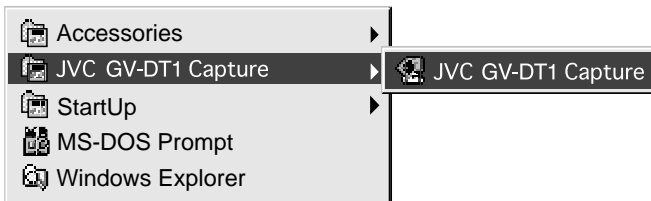


Now let's actually launch the program.


If you're using Windows® 3.1, open the JVC GV-DT1 Capture group on the program manager and double-click the JVC GV-DT1 Capture icon.

If you're using Windows® 95, select JVC GV-DT1 Capture on the start menu and start it.

Once the program has loaded, Windows® 3.1 displays the screen shown below.

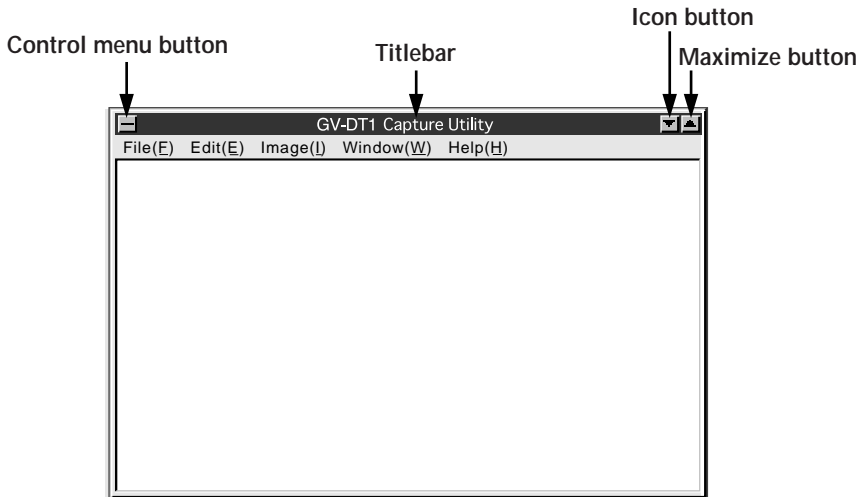

The titlebar and menubar look different on Windows® 95.

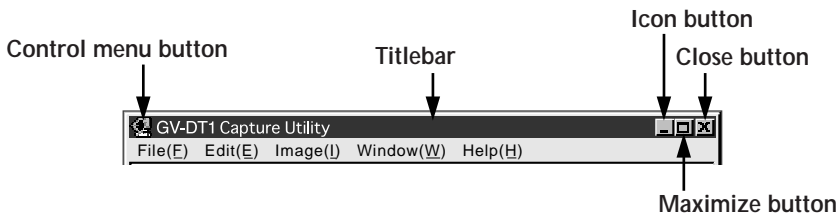


CLOSING THE PROGRAM

Double-click the control menu button in Windows® 3.1 or click Close GV-DT1 Capture Utility (X) on the [File (F)] menu.

With Windows® 95, simply click the Close button.

MENUBAR

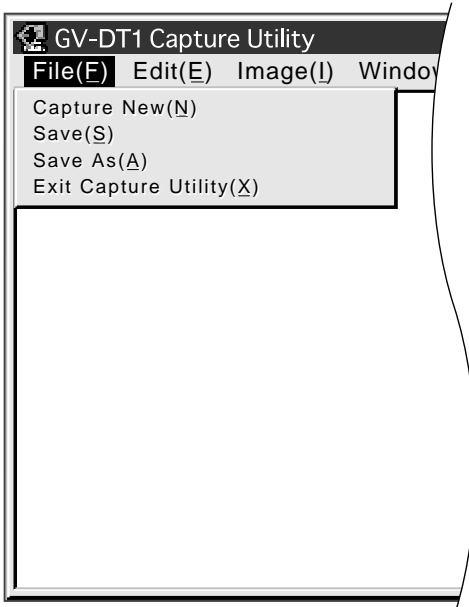


The menubar provides several menus with lists of commands that enable you to execute various program functions.

Click the desired item on the menubar to pull down the menu. Then click on the desired command in the pulldown menu.

Some commands may not be executable depending on where you are in the program. Disabled functions look lighter than other items.


Each menu is configured as shown below

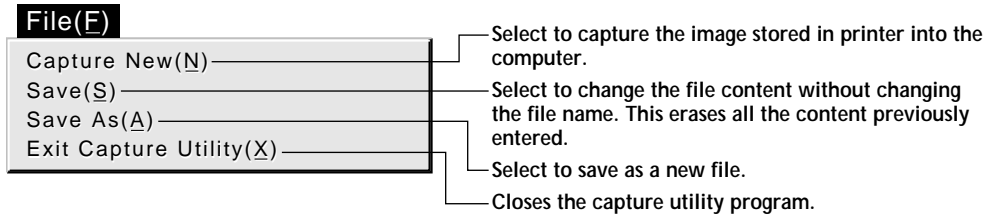


Edit(E)

Undo(Z)	→	Select to undo the most recent work done.
Copy(C)	→	Select to copy to the clipboard. The copy is displayed in colour according to the monitor setup.
Rotate 90° Clockwise(9)	→	Select to rotate through 90° clockwise.
Rotate 90° Counterclockwise(0)	→	Select to rotate through 90° counterclockwise.
Resize(S)	→	Select to reduce the captured image to 1/4 or 1/16.
Change Colour Mode(C)	→	Select to change the number of colours (colour grade scale) of the capture image.


Captured image

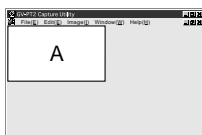

Rotate 90° clockwise

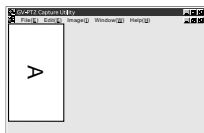

Rotate 90° counterclockwise

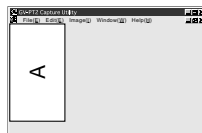


Click Undo when you want to restore the previous image.


Edit(E)

Undo(Z)		If you want to restore the previous size after resizing, click Undo. If you resized the image more than once, you cannot restore the original size.	
Copy(C)			
Rotate 90° Clockwise(9)			
Rotate 90° Counterclockwise(0)			
Resize(S)	→	640x480->320x240	Reduces the current image to 1/4.
Change Colour Mode(C)	→	640x480->160x120	Reduces the current image to 1/16.


Captured image

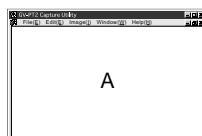

1/4

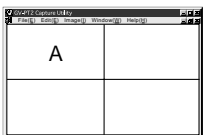

1/16

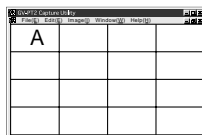**Edit(E)**

Undo(Z)			
Copy(C)			
Rotate 90° Clockwise(9)			
Rotate 90° Counterclockwise(0)			
Resize(S)	→		
Change Colour Mode(C)	→	256-Tone Index Colour Grey Scale	Switches between full-colour mode, 256-tone index colour mode and Grey Scale mode.

Image(I)


800%	Displays the captured image at the desired magnification.
400%	
200%	
✓ 100%	
50%	
25%	

Window(W)


- Title(T)
- Cascade(C)
- Arrange Icons
- 1 Capture1
- 2 Capture2
- 3 Capture3
- ✓ 4 Capture4

- Arranges the captured images side by side and stacked one upon another. A maximum of four tiles are visible at one time.
- Arranges the captured images in cascade. Shows a maximum of four images overlapping one another.
- Arranges the minimized images side by side.
- Temporary file names for the captured images.


• Tile

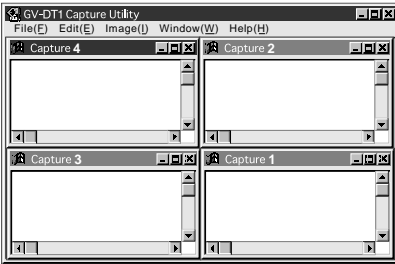

• Cascade

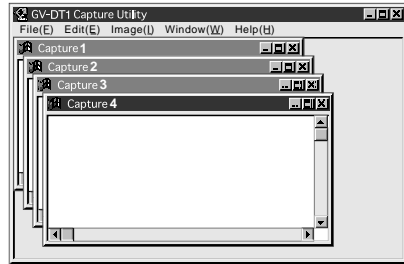

• Arrange Icons

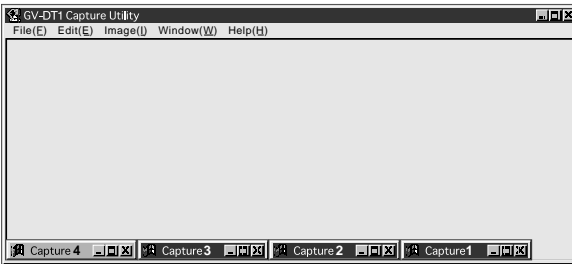


Help(H)

- Contents(I)
- About GV-DT1 Capture Utility(A)

- Displays contents of the help file.
- Displays the software version information.

1 Store the picture you want to transmit to the PC in the printer.

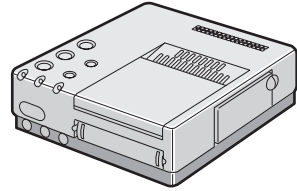

TRANSMITTING

2 Capture the picture you want to print into the PC.

3 Work on the characters and other data with the MGI PhotoSuite provided or other optional software programs.


4 Start printing.

This is to capture a picture into the PC and display it on the monitor.

Preparation:


- Capture a picture from a digital camcorder or a digital still camera into the printer in advance.
- See "Printing from a Digital Camcorder" (page 16) or "Printing from a Digital Still Camera" (page 18) for details of capturing.
- The PRINT lamp lights when capturing into the printer is finished.

1. Press the printer ON LINE button to bring the on LINE lamp into lighting.

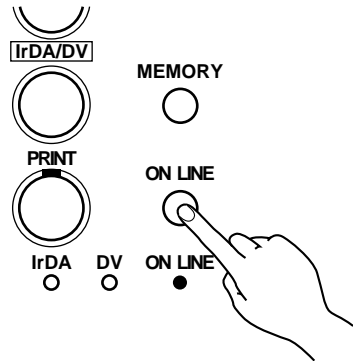

2. Capture the image

- Select [Capture New (N)] in the File menu to transfer the image data from printer to PC.
- The printer ON LINE lamp blinks during capturing the picture.
- The captured image from the DV connection is framed in white.

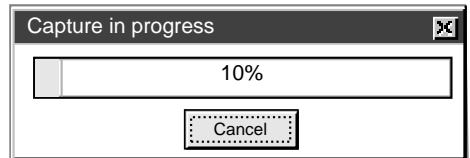

3. Capturing is finished

- The picture captured is shown on the PC display.

If you want to keep the picture in the PC, store it in the hard disk or similar by selecting [File] - [Save As].

You cannot print the captured image with the provided Driver & Capture Utility Software. Use a commercially available Paint or other photo editing software program to print the image.

Preparation:

Capture the picture referring to "Capturing a Picture into the PC" on the previous page.

1. Work on the characters and other data with the MGI PhotoSuite provided or other commercially available painting software.

- See the instruction manual provided with the software for details.

2. Press the printer ON LINE button to bring the ON LINE lamp into lighting.

3. Set up the printer.

(Example)

- *Windows® 95*

Select [Print (P)] of the File menu to call up the print display. Select [JVC GV-DT1] in the printer name box.

- *Windows® 3.1*

Select [Printer Setup (R)] of the File menu to call up the printer setup display. Select [JVC GV-DT1] as the printer name.

Operations and displays may be different than described above in some applications. Refer to the application's instruction manual for details.

4. Call up the printer setup display (setup dialog).

(Example)

- *Windows® 95*

Click (Properties (P)) on the print display and the (Setup Dialog) box appears. (See page 34)

- *Windows® 3.1*

Click [Option (O)] on the printer setup display, and the [Setup Dialog] box appears. (See page 34)

- *Select print orientation, number of prints and image adjustment.*

- *When this is done, click OK. The new settings are saved and the Setup Dialog box closes.*

5. To start printing ...


- *Click (OK) on the print display to open the (Spooler) window. (See page 35)*

When the all the print data is transferred to the printer (the spooler bar reaches the end), printing starts.

NOTE : *Printing may not work properly with some software programs.*

Do not give a printing instruction to the PC while the printer is printing with the PRINT button pressed, as this may result in the picture printed being abnormal.

HOW THE SETUP DIALOG WORKS

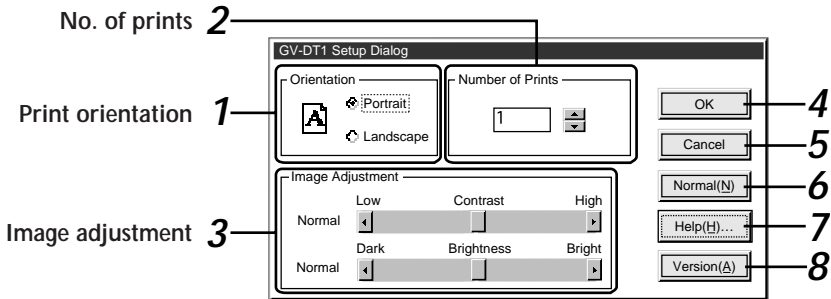**1. Print orientation**

Select when printing.

Portrait : Select when printing a vertical image layout.
(Maximum size: H 480 dots x V 640 dots)

Landscape : Select when printing a horizontal image layout.
(Maximum size: H 640 dots x V 480 dots)

2. Number of prints

Enter a number when you want to make multiple prints of the same image. Up to 25 prints possible.

3. Image adjustment

Select when you want to adjust how the image looks.

Contrast (Low/High adjustment):
Adjustable between -5 (min.) and +5 (max.).

Brightness:
Adjustable between -5 (min.) and +5 (max.).

4. [OK]

Click to validate the change you have made.

5. [Cancel]

Click to cancel the change you have made and close this window.

6. [Normal (N)]

Click to set contrast and brightness to normal.

7. [Help (H)]

Click to call up help information.

8. [Version (A)]

Click to display the GV-DT1 printer driver version.

HOW THE SPOOLER WINDOW WORKS

**1. Signal indicator box**

Red : Print data capture in pause.
Blue : Print data capture in progress.





2. File name box

Displays the name of the file or the application which you have specified for printing.

3. Message box

Displays the current status.

4. Control button

-  : Click to pause the spooler.
-  : Click to re-open the spooler. When an error message appears, click [Close] and then .
-  : Click to delete the spooler bar.

5. Spooler bar box

Displays progress of the data transfer from PC to printer. Print starts when the bar is fully down.

6. Help button

Click to call up help information for the spooler window. Same as [Help] on the menu bar.

7. Printer icon

Displays the current printer status. See Help for details.

8. Information button





Displays the spooler version.

9. Setup button

Spooler setup can be changed depending on how Windows® is used.

- Shape when opening the spooler
 - State when opening the spooler
 - How to open the spooler
 - How to close the spooler
- See Help for details.

Lamp Indications

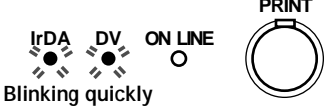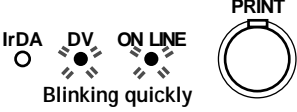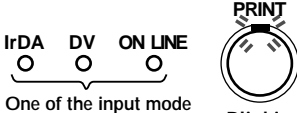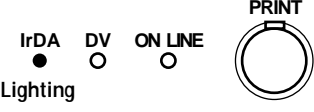Lamp indication	<ul style="list-style-type: none"> ● Appears when: ■ Recommended actions: 	Reference pages
 <p>Blinking quickly</p>	<ul style="list-style-type: none"> ● Ink running out or ink cassette not loaded. ■ Replace with new one or insert ink cassette. 	12
 <p>Blinking quickly</p>	<p>One of the following items applies.</p> <ol style="list-style-type: none"> 1) ● Rear door is open. ■ Close the rear door. 2) ● Output tray is closed. ■ Open the output tray. 3) ● Paper tray not loaded. ■ Fill the paper sheets and load the tray. 4) ● Print paper running out or jammed. ■ Refill print sheets or remove the sheet jammed. 5) ● Print paper is not compatible with the ink cassette type or the direction of print paper is wrong. ■ Open the rear door and remove the jammed paper. Make sure that the print paper is compatible with the ink cassette. 	12 14 43
 <p>One of the input mode lamps lights during the blinking of the PRINT lamp.</p> <p>Blinking quickly</p>	<ul style="list-style-type: none"> ● Temperature within the printer is high. PRINT lamp may blink quickly also during printing. ■ Wait while until PRINT lamp stops blinking. 	—
 <p>Lighting</p>	<ul style="list-style-type: none"> ● IrDA mode selected, with no picture stored in memory. 	18

Lamp indication	<ul style="list-style-type: none"> ● Appears when: ■ Recommended actions: 	Reference pages
<p style="text-align: center;">IrDA DV ON LINE PRINT</p> <p>Blinking</p>	<ul style="list-style-type: none"> ● IrDA data being received. 	18 19
<p style="text-align: center;">IrDA DV ON LINE PRINT</p> <p>Lighting</p> <p style="text-align: center;">Blinking</p>	<ul style="list-style-type: none"> ● IrDA data being converted. 	18 19
<p style="text-align: center;">IrDA DV ON LINE PRINT</p> <p>Lighting</p> <p style="text-align: center;">Lighting</p>	<ul style="list-style-type: none"> ● Printing with IrDA reception finished. ■ Every pressing of the PRINT button after finishing printing produces another copy of the same picture. 	18 19
<p style="text-align: center;">IrDA DV ON LINE PRINT</p> <p>Lighting</p>	<ul style="list-style-type: none"> ● DV mode selected, with no picture stored in memory. 	16
<p style="text-align: center;">IrDA DV ON LINE PRINT</p> <p>Blinking</p>	<ul style="list-style-type: none"> ● DV data being received. 	16
<p style="text-align: center;">IrDA DV ON LINE PRINT</p> <p>Lighting</p> <p style="text-align: center;">Blinking</p>	<ul style="list-style-type: none"> ● DV data being converted. 	16 17

Lamp Indications (cont.)

Lamp indication	<ul style="list-style-type: none"> ● Appears when: ■ Recommended actions: 	Reference pages
<p>IrDA ○ DV ● ON LINE ○</p> <p>Lighting</p> <p>PRINT ○</p> <p>Lighting</p>	<ul style="list-style-type: none"> ● DV data converted. ■ Pressing the PRINT button allows printing of the stored picture. Every pressing of the PRINT button produces another copy of the same picture. 	<p>16 17</p>
<p>IrDA ○ DV ○ ON LINE ●</p> <p>Lighting</p> <p>PRINT ○</p>	<ul style="list-style-type: none"> ● Ready to receive picture data from PC. 	<p>32</p>
<p>IrDA ○ DV ○ ON LINE ●</p> <p>Blinking</p> <p>PRINT ○</p> <p>Lighting</p>	<ul style="list-style-type: none"> ● Picture data being captured from printer to PC. 	<p>32</p>
<p>IrDA ○ DV ○ ON LINE ●</p> <p>Blinking</p> <p>PRINT ○</p>	<ul style="list-style-type: none"> ● Picture data being received from PC. 	<p>32</p>
<p>IrDA ○ DV ○ ON LINE ●</p> <p>Lighting</p> <p>PRINT ○</p> <p>Lighting</p>	<ul style="list-style-type: none"> ● Picture data communications with the PC has finished. 	<p>32</p>

PRINTER SECTION

If	Check to see if	Reference pages
Picture data cannot be transmitted through the DV connection	<ul style="list-style-type: none"> ● Printer is in DV mode. ■ Press IrDA/DV button to light the DV lamp. ● Cable is in correct connection. ■ Make sure of proper connection. ● Picture is recorded on the DV tape. ■ Use a tape with picture data recorded. 	10 16
Picture blurred when printed from the camcorder with the DV connector	<ul style="list-style-type: none"> ● Camcorder with the DV connector is in Still Picture mode. ■ When installing a picture from the camcorder by the DV connector to the printer, set the camcorder with the DV connector in Still Picture. 	16
Picture data cannot be transmitted through IrDA reception	<ul style="list-style-type: none"> ● Printer is in IrDA mode. ■ Press IrDA/DV button to light the IrDA lamp. ● Picture data is being transmitted at a correct distance and angle. ■ Aim the transmitter right in front of the IrDA sensor of printer and transmit within an approx. 50 cm distance. Data communications may be difficult at a too close or too remote distance depending on the machines in use. 	11 18

IF YOU HAVE THE FOLLOWING MESSAGES ON THE DISPLAY

PC PRINTER SECTION

Message	<ul style="list-style-type: none"> ● Appears when: ■ Recommended actions 	Reference pages
Printer is internally overheated. Please wait.	<ul style="list-style-type: none"> ● Temperature in the printer rises too high for the installation environment, continuous printing and other reasons. ■ Wait a while until the message disappears. 	—
No ink cassette loaded. Set ink cassette and close cover.	<ul style="list-style-type: none"> ● The ink cassette is not installed or is improperly installed. ■ Insert the ink cassette and close the door. 	12
Check the back door or the paper/output trays.	<ul style="list-style-type: none"> ● Paper tray is running out of paper; rear door is open; output tray is closed; and paper tray is not loaded. ■ Make sure that there is paper in the paper tray and check for the items mentioned above. 	8 9 14
IrDA mode or DV mode is selected. Switch to the PC mode.	<ul style="list-style-type: none"> ● Picture is captured or printed from a PC with the printer ON LINE lamp kept off. ■ Let the ON LINE lamp light by pressing the ON LINE button. 	32
Paper is not compatible with ink cassette. Open back door and remove paper.	<ul style="list-style-type: none"> ● Print sheets are not compatible with the ink cassette model or the paper orientation is wrong. ■ Open the jammed paper removing door and remove the jammed paper. Make sure that the print paper is compatible with the ink cassette model. 	43 13
Ink cassette is empty. Replace ink cassette. Pull out paper tray and check paper.	<ul style="list-style-type: none"> ● Ink cassette is running out. ■ Replace with a new one. ■ When the ink cassette has been consumed, remove the paper tray and check for jammed paper. If paper is jammed, place the jammed paper in the tray and load it on the printer. ■ Make sure that the print paper is compatible with the ink cassette model. 	12 14
Paper jammed. Remove paper.	<ul style="list-style-type: none"> ● Paper jams during printing. ■ Remove jammed paper referring to page 43. 	43

IF YOU HAVE THE FOLLOWING MESSAGES ON THE DISPLAY

Message	<ul style="list-style-type: none"> ● Appears when: ■ Recommended actions 	Reference pages
Pull out paper tray and check paper.	<ul style="list-style-type: none"> ● The paper tray is running out of paper or paper feeding is not working. ■ Remove the paper tray and set print sheets correctly. 	14
Printer has malfunctioned unexpectedly. Printing will be cancelled.	<ul style="list-style-type: none"> ● Any abnormality occurs during printing. ■ Turn the power off, unplug the power cord, then plug the cord back in and turn the power on again. If the message remains, consult your dealer or your local JVC service center. 	-
Failed in connecting with a printer. Check printer type, cable connection, and power.	<ul style="list-style-type: none"> ● PC is connected with any other printer; printer power is not turned on; or cable is not in correct connection. ■ Turn the printer power on after checking to make sure connections are correct. 	24
Now Printing. Please wait until printing is over.	<ul style="list-style-type: none"> ● Another operation is done during printing. ■ Do not do another operation during printing. 	-


OTHER PROBLEMS:

This unit is a precision machine which includes a microprocessor. Its operational performance may be influenced by external noise or disturbance. If a normal operation cannot be achieved even after taking appropriate actions as defined below, the power should be turned off by unplugging the power cable. Then reconnect the power by plugging it in again and recheck for proper operation.

If	Check to see if	Reference pages
Power won't turn on	<ul style="list-style-type: none"> ● Power cord is unplugged. 	—
Lamp lights (or blinks)	<ul style="list-style-type: none"> ● Take the appropriate action referring to "Lamp Indications" on pages 36-38. If such an action fails to solve the problem, turn the power off, unplug the power cable and wait for a few minutes. Then plug the cable and turn the power on again. 	36 38
Paper is jammed	<ul style="list-style-type: none"> ● Paper jam may be due to: <ul style="list-style-type: none"> • Incompatibility of paper with ink cassette • Wrong paper orientation • The printer set upright or tilted ● Remove paper as directed on page 43. 	43
Ink cassette is empty	<ul style="list-style-type: none"> ● Remove the paper tray and check for jammed paper. If paper is jammed, place the jammed paper in the tray and load it in the printer. 	14 43
Two or more stacked sheets have printed	<ul style="list-style-type: none"> ● Blank paper sheets have been properly shuffled. If not, shuffle them thoroughly to separate each sheet before placing them on the paper tray. 	14
The stored image has disappeared	<ul style="list-style-type: none"> ● The picture stored is erased when you turn the printer power off or switches between IrDA and DV modes. Carry out the storing procedure again. 	—
Colour is weak or wrong	<ul style="list-style-type: none"> ● Colours are generally acceptable. The colours on the TV screen may be somewhat different from those actually printed, which is normal with this Printer. 	—
The image you want to print from the playback unit cannot be called up on screen	<ul style="list-style-type: none"> ● Printing results may not be normal when you play the tape recorded with another camcorder or store an image on a tape section with any scratches or noise. Try storing it on a different section. ● Also, when you print a picture with special effects (such as Wide or Cinema), you may not obtain a normal print. 	—



WHEN PAPER JAMS

1. Unplug the power cord.
• The stored image disappears.
2. Remove the jammed sheet from the output tray.

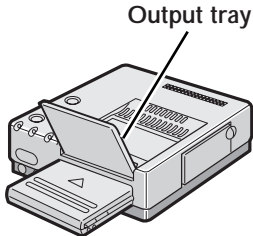




If no paper is jammed in the output tray

3. Remove the paper tray and remove the jammed sheet.

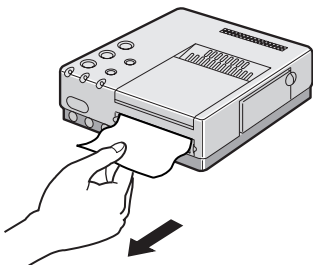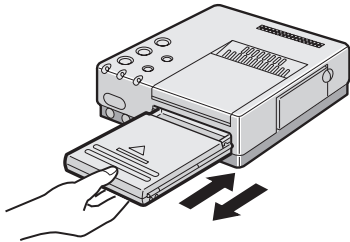

If no paper is jammed in the slot of the paper tray

4. Remove the jammed paper removing door and remove the paper.

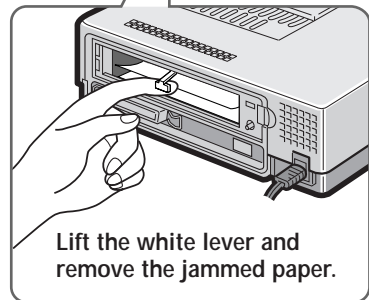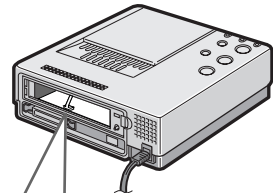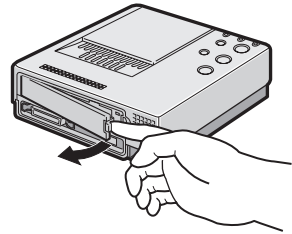

5. After removing the paper, insert the paper tray and re-place the jammed paper removing door.
6. Plug in the power cord and turn on the power.

Power	AC 220 — 240 V ~, 50 Hz
Power consumption	During printing : Approx. 65 W, 0.5 A When idle : Approx. 4 W
Print format	Sublimation dye thermal transfer line printing
Print quality	Resolution : 640 (horiz.) x 480 (vert.) dots Gradation : 256 tones
Print medium	Ink sheet : Cartridge (dedicated) 3-colour consecutive printing (yellow, magenta, cyan) Print sheet : Paper size 144 x 100 mm (dedicated) Maximum print area 112 x 84 mm
Connectors	DV input : DV connector IrDA input : IrDA sensor (Conforms to the IrTran-P standard and corresponds to the IrDA Ver 1.0) Parallel : Amphenol 36 pin
Operating temperature	+5 — +35°C
Operating humidity	35 — 80%
Storage temperature	-20 — +60°C
Operating position	Level (horizontal) ±5°
Dimensions	213 W x 90 H x 213 D mm
Weight	Approx. 2.3 kg

Design and specifications subject to change without notice.

EN

GV-DT1

JVC

VICTOR COMPANY OF JAPAN, LIMITED

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>