



JVC

SPEAKER SYSTEM

XS-SR3/XS-SR4

INSTRUCTIONS



Thank you for purchasing a JVC product.

0809WMKMDWJMM

GVT0291-004B

[B/US/UN/UX/A/UW/UJ]

© 2009 Victor Company of Japan, Limited



Warnings, Cautions and Others

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

CAUTION

The button in any position does not disconnect the mains line.

Disconnect the mains plug to shut the power off completely (the STANDBY lamp goes off).

The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

- When the System is on standby, the STANDBY lamp lights red.
- When the System is turned on, the STANDBY lamp turns green.

The power can be remote controlled.

CAUTION

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Rating label is placed on the exterior of the bottom.

For European Union

Dear Customer,

This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is:

JVC Technical Services Europe GmbH

Postfach 10 05 04

61145 Friedberg

Germany

Information for Users on Disposal of Old Equipment and Batteries

[European Union]



Products

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your national legislation and the Directive 2002/96/EC and 2006/66/EC.



Battery

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

Notice:

The sign Pb below the symbol for batteries indicates that this battery contains lead.

For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

[Business users]

If you wish to dispose of this product, please visit our web page <http://www.jvc.eu/> to obtain information about the take-back of the product.

[Other Countries outside the European Union]

These symbols are only valid in the European Union.

If you wish to dispose of these items, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment and batteries.

- *Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.*
- *"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.*
- *Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.*
- *iPod is a trademark of Apple Inc., registered in the U.S. and other countries.*

Download from www.Somanuals.com. All Manuals Search And Download.

IMPORTANT for the U.K.

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

BE SURE to replace the fuse only with an identical approved type, as originally fitted.

If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied fitted with a mains plug then follow the instructions given below:

IMPORTANT:

DO NOT make any connection to the terminal which is marked with the letter E or by the safety earth symbol or coloured green or green-and-yellow.

The wires in the mains lead on this product are coloured in accordance with the following code:

Blue: Neutral
Brown: Live

As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

IF IN DOUBT - CONSULT A COMPETENT ELECTRICIAN.

SAFETY INSTRUCTIONS

"SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT"

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.



Do read the operating instructions before you attempt to use the equipment.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

Do be careful with glass panels or doors on equipment.



DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way—switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure that your family know how to do this.

Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and **NEVER** fix legs with wood screws—to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL

- **NEVER** let anyone, especially children, push anything into holes, slots or any other opening in the case. — this could result in a fatal electrical shock.
- **NEVER** guess or take chances with electrical equipment of any kind—it is better to be safe than sorry!

Specifications

Output power:	5 W (2.5 W + 2.5 W) at 4 Ω (10% THD)	Dimensions (W × H × D):	390 mm × 103 mm × 136 mm
Speaker Type:	Full-Range Bass-Reflex Type (Magnetically-Shielded Type)	Mass:	0.55 kg
Speaker:	4 cm cone × 2	Accessories	
Speaker Impedance:	4 Ω	• Remote control (× 1)	
Analog Input (ANALOG IN):	125 mV/50 kΩ	• Lithium coin battery CR2025 (× 1); Installed in the remote control when shipped.	
Digital Input (DIGITAL IN):	−21 dBm to −15 dBm (660 nm ±30 nm)	• AC adaptor (AA-R607) (× 1)	
iPod Dock Output:	DC 5 V === 500 mA	• AC power cord (× 1)	
Power Source:	DC 6 V === 1 A (DC IN)	• Core filter (× 1)	
AC Adaptor (AA-R607)		• Brackets for iPod (× 3)	
• INPUT:	AC 100 V – 240 V ~, 50 Hz/60 Hz, 1.0 A		
• OUTPUT:	DC 6 V === 1 A		

Precautions

- Install the System on a place which is level, dry, and neither too hot nor too cold; between 5°C and 35°C.
- Do not use the System in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or vibration.
- Leave sufficient distance between the System and the TV.
- Do not insert any metallic objects or liquids into the System.
- Do not handle the power cord with wet hands.
- A small amount of power is always consumed while the power cord is connected to the wall outlet.
- Do not pull on the cord to unplug the power cord. When unplugging the power cord, always grasp and pull the plug so as not to damage the cord.
- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- When away on holiday or for other reasons for an extended period of time, disconnect the power cord from the wall outlet.
- Stains on the System should be wiped off with a soft cloth. If the System is heavily stained, wipe it with a cloth soaked in water diluted neutral detergent and wrung well, then wipe clean with a dry cloth.

- If water gets inside the System, turn the power off and disconnect the power cord from the wall outlet, then call the store where you purchased this System. Using the System in this condition may cause a fire or electrical shock.
- Since the System may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following:
 - DO NOT wipe it forcefully.
 - DO NOT wipe it with thinners, benzines or other organic solvents including disinfectants.
 - DO NOT apply any volatile substances such as insecticides to it.
 - DO NOT allow any rubber or plastic to remain in contact with it for a long time.

 
About the built-in speakers

The speakers are magnetically shielded to avoid color distortions on TVs. If the color on a TV is distorted, perform the following procedure:

- Turn off the TV's main power switch or unplug it before installing the System. Then wait at least 30 minutes before turning on the TV's main power switch again.

Some TVs may still be affected even though you have followed the above procedure. If this happens, move the System away from the TV.

Connection

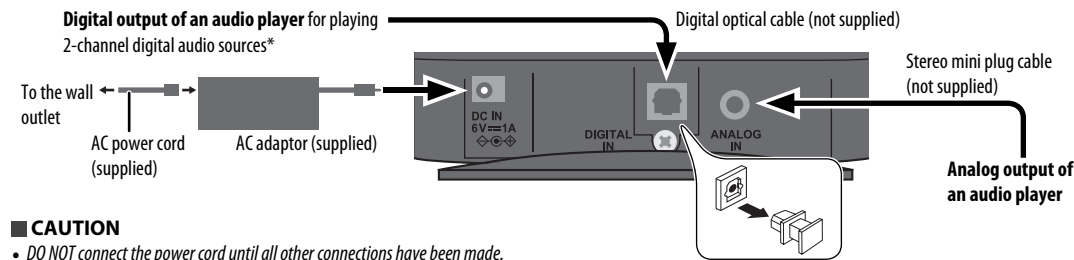

CAUTION

- DO NOT connect the power cord until all other connections have been made.
- To avoid the risk of fire and to prevent damage,
 - Do not use any AC adaptors other than the one supplied.
 - Do not use the supplied AC adaptor for other equipment.

* Compatible signal: 2-channel linear PCM (32 kHz, 44.1 kHz, and 48 kHz sampling frequency). No multi-channel signal is playable.

 
Using the core filter

Attach the provided core filter to the power cord to reduce interference.

1 Release the stopper of the core filter.



2 Run the cable through the core filter, and wind the cable firmly once inside the cutout of the core filter as shown in the illustration.

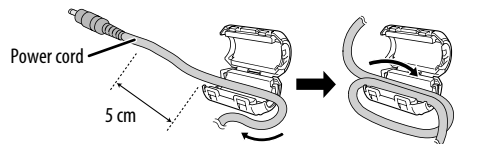

3 Close the core filter until it clicks shut.

CAUTION

 
Do not damage the cord by applying excessive force when winding.

Preparing the remote control

When using the remote control for the first time, pull out the insulation sheet.

- To replace the battery, be sure to insert the battery into the remote control by matching the polarities (+ and -) correctly.
- If the range or effectiveness of the remote control decreases, replace the battery.

Lithium coin battery (product number: CR2025)

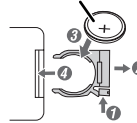

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNINGS

- Store the battery in a place where children cannot reach. If a child accidentally swallows the battery, consult a doctor immediately.
- Do not recharge, short, disassemble or heat the battery or dispose of it in a fire. Doing any of these things may cause the battery to give off heat, crack, or start a fire.
- Do not leave the battery with other metallic materials. Doing this may cause the battery to give off heat, crack, or start a fire.

- When throwing away or saving the battery, wrap it in tape and insulate; otherwise, the battery may start to give off heat, crack, or start a fire.
- Do not poke the battery with tweezers or similar tools. Doing this may cause the battery to give off heat, crack, or start a fire.
- Dispose of battery in the proper manner, according to federal, state, and local regulations.

Basic Operation



1 Press **⏻/⏮** to turn on the power.

The standby lamp turns green.

2 Press **AUDIO IN DIGITAL, AUDIO IN ANALOG, or iPod ▶/⏮** to select the source.

iPod starts playing back. Go to step 4.

For other equipment, go to step 3.

3 Start playing back the connected equipment.

4 Press **VOL +/-** to adjust the volume.

- To turn off the sound temporarily, press **FADE MUTING**.
 - To restore the sound, press the button again or adjust the volume.
- To turn off the operation sounds, press **BEEP SOUND**.

CAUTION

Set the volume to the minimum level before starting playback. If the volume is set to a high level, the sudden blast of sound may damage your hearing and blow out the speakers.

Enjoying Surround Mode

This System is equipped with Virtual Dolby Surround. In Surround Mode, it creates a rich surround sound effect with two speakers.

To activate Surround Mode, press **SURROUND MODE 1/2**.

Pressing the button beeps...

- Once when **SURROUND MODE 1** is selected, or
- Twice when **SURROUND MODE 2** is selected.

- **SURROUND MODE 1:** Creates a surround sound effect.
- **SURROUND MODE 2:** Creates a richer surround sound effect than **SURROUND MODE 1**.

– To cancel, press **SURROUND OFF**.

Operating iPod device

- To select a track, press **◀◀/▶▶**.
- For forward search/reverse search, press and hold **◀◀/▶▶**.
- For Shuffle play, press **SHUFFLE**.
- For Repeat play, press **REPEAT**.
- To put iPod into sleep mode, press and hold **iPod ▶/⏮**.

iPod menu operation

1 Press **MENU** to display the menu.

 
2 Press **UP** or **DOWN**, then **SELECT** to select a menu item.

Refer also to the instruction manual for the iPod for details.

- To go back to the previous menu, press **MENU**.

Rotating the dock

You can rotate the dock for iPod touch/iPod nano (4th Generation). To hold the iPod in place, attach the bracket (supplied) which fits your iPod to the dock.

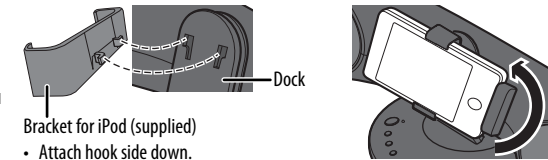

Bracket for iPod (supplied)

- Attach hook side down.

NOTE

- While inserted into the dock, the battery of iPod is always charged through the System.
- Do not carry the System with iPod connected. You might drop the iPod or it might cause damage to the iPod or the System.
- Do not touch or hit the iPod terminal pins or connector pins in the dock directly. It might cause damage to the pins.
- Do not rotate the dock with excessive force.

Compatible iPod models

iPod nano 1GB/2GB/4GB	iPod classic 80GB/120GB/160GB
iPod nano (2nd Generation) 2GB/4GB/8GB	iPod photo (4th Generation) 20GB/30GB/40GB/60GB
iPod nano (3rd Generation) 4GB/8GB	iPod video (5th Generation) 30GB/60GB/80GB
iPod nano (4th Generation) 8GB/16GB	iPod touch 8GB/16GB
iPod mini 4GB/6GB	iPod touch (2nd Generation) 8GB/16GB/32GB
iPod mini (2nd Generation) 4GB/6GB	
iPod (4th Generation) 20GB/40GB	

If iPod does not play correctly, update iPod software to the latest version.

- For details about updating iPod, check on the Apple web site <<http://www.apple.com>>.
- **JVC does not assure the compatibility of iPod released after April 2009 with this System.**
- **JVC is not responsible for any loss of or damage to iPod that might result from the use of this product.**

Troubleshooting

If you have a problem with this System, check this list for a possible solution before calling for service.

Power does not come on.

→ Plug in the power cord securely.

No sound comes out of the speakers.

→ Adjust the volume level.

→ The sound has been turned off temporarily. Press **FADE MUTING**.

The remote control does not work.

→ Pull out the insulation sheet.

→ Replace the battery if exhausted.

→ Avoid sunlight shining directly on the remote sensor.

→ Do not block the path between the remote control and the remote sensor on the System.

→ Point the remote control at the remote sensor on the System.

→ Move closer to the System.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>